



PORTFOLIO® and PORTFOLIO & Design™ are trademarks or registered trademarks of LF, LLC. All rights reserved.


ITEM #0398483
0398486

WALL LANTERN

MODEL #WL127BK
WL127WW

Français p. 11

Español p. 21

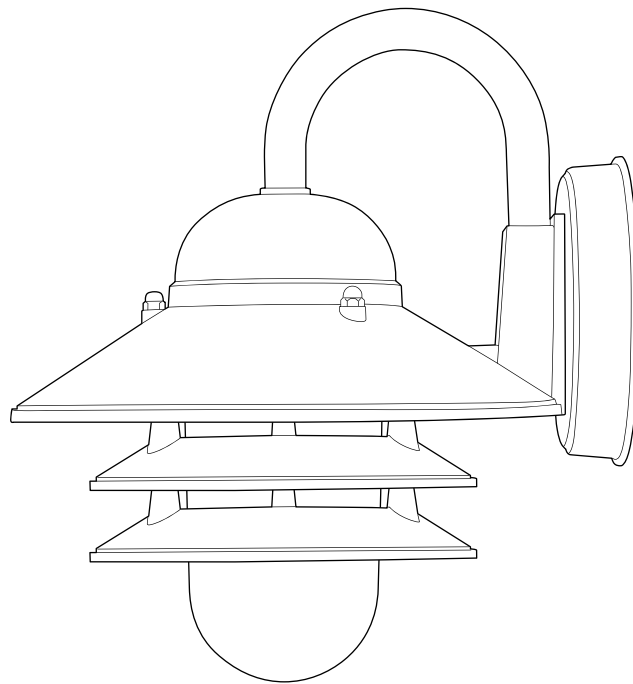

ATTACH YOUR RECEIPT HERE


Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **1-800-643-0067**, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Mounting Strap	1
C	Backplate	1
D	Small Decorative Nut (preassembled to Mounting Screw (G))	2
E	Hex Nut (preassembled to Mounting Screw (G))	2
F	Set Screw (preassembled to Mounting Strap (B))	1
G	Mounting Screw (preassembled to Mounting Strap (B))	2
H	Shade	1
I	Spacer	2

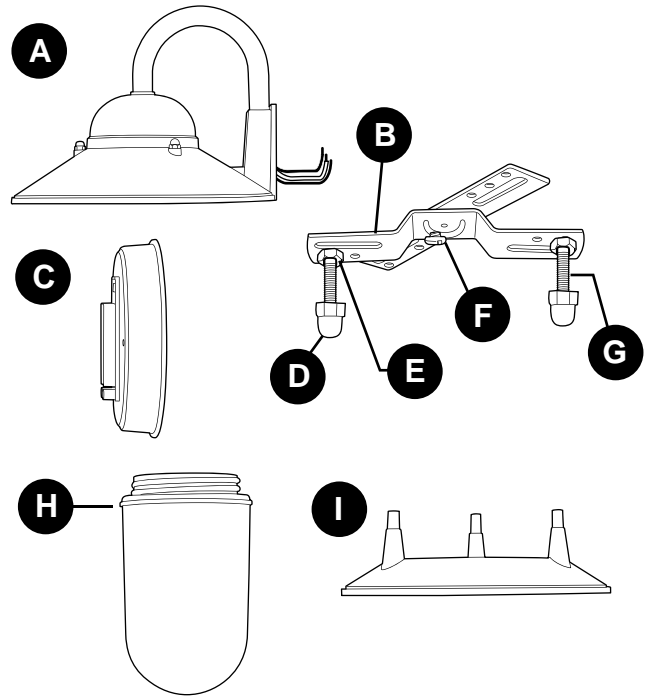

HARDWARE CONTENTS (shown actual size)

 
AA



E3 Wire
Connector

Qty. 3

 BB



Machine
Screw

Qty. 2


CC



Backplate
Screw

Qty. 2

 
DD



Fixture
Screw

Qty. 3


EE

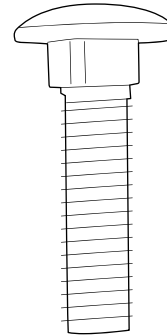

Bolt

Qty. 1

 FF



Large
Decorative
Nut
(preassembled
to Bolt (EE))

Qty. 1



SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.



DANGER

- For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.
- If using this light fixture in a WET location, this light fixture must be connected to a supply circuit that is protected by a Ground Fault Circuit Interrupter (GFCI) to reduce the risk of personal injury, electrical shock or death.
- DO NOT connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding means could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections or splices were to become broken, cut or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- DO NOT connect the bare or green insulation fixture ground wire to the black (HOT) current-carrying wire or the white neutral house wire. Connection of the bare or green fixture ground wire to the black or white house wires may cause metal parts of the fixture to carry electrical currents. Under this condition, anyone coming in contact with the fixture will receive electrical shock, which could cause serious injury or death.
- DO NOT damage or cut the wire insulation (covering) during installation of fixture. DO NOT permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electrical shock.



WARNING

- All electrical connections must be in agreement with local codes and ordinances, the National Electric Code (NEC) and ANSI/NFPA 70-1999. Contact your municipal building department to learn about your local codes, permits and/or inspections. Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F. Consult a qualified electrician before installation.
- To avoid personal injury, the use of gloves may be necessary while handling fixture parts with sharp edges.
- Do NOT suspend any fixture by the house wires. A fixture must always be mounted directly to a mounting strap which is first attached to the outlet box. Wire connectors will not support the weight of a fixture. Suspending a fixture by the house wires and wire connectors will result in the fixture falling, with the possibility of personal injury and the danger of electrical shock or fire.
- To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.
- Failure to caulk fixture mounting surface with silicone weather sealant may result in water damage in outlet box, which may cause electrical malfunction or electrical shock.

SAFETY INFORMATION

CAUTION

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing the fuse (or switching the circuit breaker off).
- If you are not sure the lighting system has a grounding means, DO NOT attempt to install this fixture. Contact a qualified, licensed electrician for information regarding the proper grounding methods as required by the local electrical code in your area.
- All fixtures must be mounted to an outlet box that is supported by the building structure.
- DO NOT use bulbs having a wattage greater than the maximum value stated on the fixture. The use of bulbs with higher wattage than specified will increase temperatures and risk of fire.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type to use as well as the electrical rating required.
- To avoid water damage to fixture or possible electrical malfunction, install fixture at least 4 ft. above the ground/floor.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 45 minutes


Tools Required for Assembly (not included): Flathead Screwdriver, Phillips Screwdriver, Wire Strippers, Pliers, Wire Cutters, Safety Glasses, Stepladder, Electrical Tape, Silicone Weather Sealant

Helpful Tools (not included): A/C Tester Light, Do-It-Yourself Wiring Handbook, Soft Cloth, Level

ASSEMBLY INSTRUCTIONS


1. Turn off circuit breakers and wall switch to the fixture supply line leads.

 **DANGER:** Failure to disconnect power supply prior to installation may result in serious injury or death.

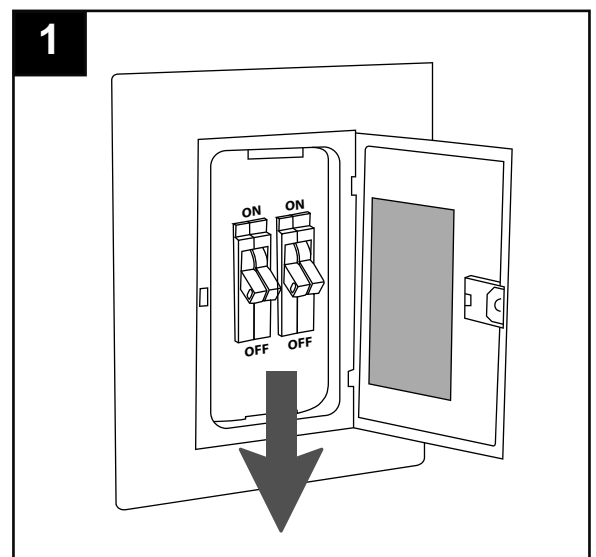

ASSEMBLY INSTRUCTIONS

2. Remove existing fixture and disconnect all electrical wiring.

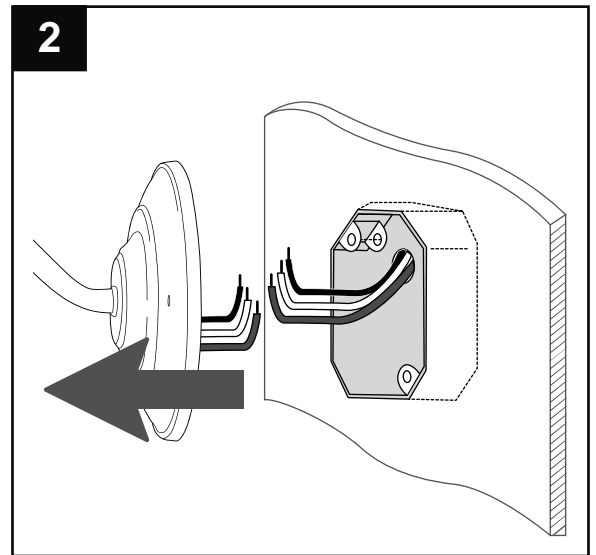


3. Attach mounting strap (B) to outlet box (not included) using the existing washers and outlet box screws or the machine screws (BB).
NOTE: If the outlet box screws required for your outlet box are of a different size than the machine screws (BB), consult with a licensed electrician before proceeding.

Turn crossbar on mounting strap (B) so mounting screws (G) are level horizontally. Use a level (not included) to adjust mounting screws (G) parallel with floor and ceiling as needed. Tighten set screw (F), located in the middle of the mounting strap (B), to secure crossbar.

Tighten machine screws (BB) completely to secure mounting strap (B) to outlet box.

⚠ CAUTION: Make sure the outlet box can support 35 lbs. hanging weight. Use *metal* outlet box; plastic outlet boxes are not recommended.

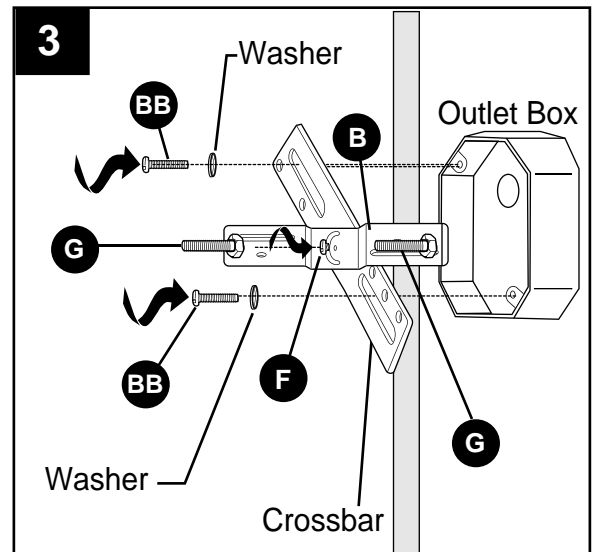

Hardware Used

BB

Machine Screw



x 2

ASSEMBLY INSTRUCTIONS

4. Remove small decorative nuts (D) from mounting screws (G). Make sure mounting screws (G) are screwed completely into mounting strap (B), then temporarily place backplate (C) over mounting strap (B) to determine amount of adjustment necessary for mounting screws (G). **NOTE:** Mounting screws (G) should come through holes in backplate (C) just enough so small decorative nuts (D) will fit flush against backplate (C) when mounted.



Once mounting screws (G) are adjusted, use pliers (not included) to tighten hex nuts (E) on mounting screws (G) until hex nuts (E) touch mounting strap (B).

Set backplate (C) aside.


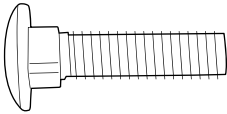
 
5. Unwrap BARE wire from BLACK and WHITE wires on fixture (A). Feed wires from fixture (A) through round hole in center of backplate (C).

Remove large decorative nut (FF) from bolt (EE). Insert bolt (EE) firmly in square hole in backplate (C). Secure backplate (C) to fixture (A) with large decorative nut (FF).

Then, insert backplate screws (CC) in two small holes located just under the round hole in center of backplate (C). Tighten backplate screws (CC) with Phillips screwdriver (not included).

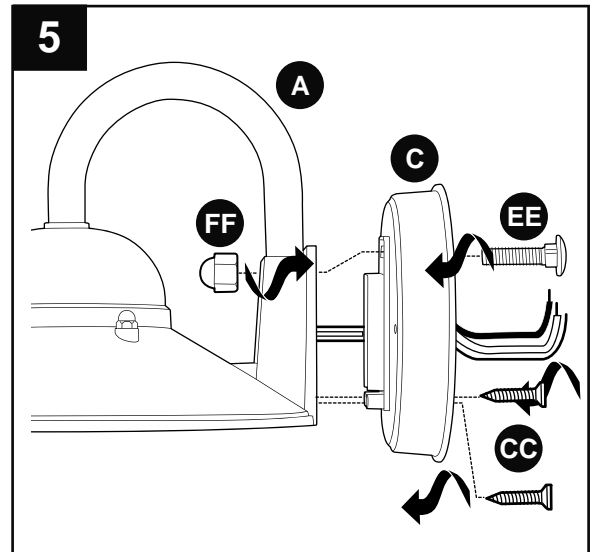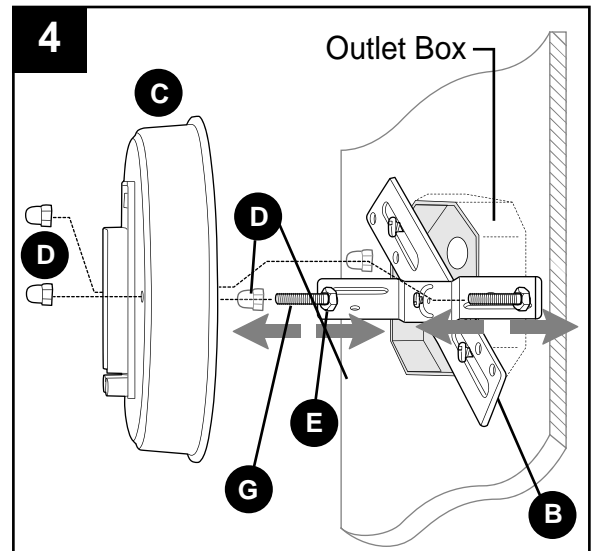


Hardware Used


CC	Backplate Screw		x 2
EE	Bolt		x 1
FF	Large Decorative Nut		x 1

ASSEMBLY INSTRUCTIONS

6. Align posts in spacer (I) with corresponding holes on underside of fixture (A) and push up. Align posts in remaining spacer (I) with holes on underside of first spacer (I) and push up. Use fixture screws (DD) to secure spacers (I) to fixture (A). Securely tighten fixture screws (DD) but do **NOT** overtighten.

Hardware Used

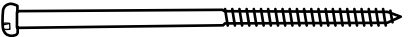DD Fixture Screw  x 3

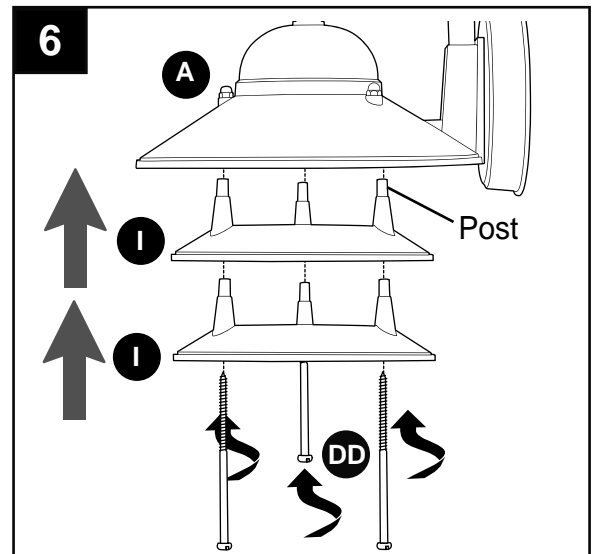


- 7a. Prepare wire by stripping 3/4 inch of insulation from wire ends using wire strippers (not included).
- 7b. Connect **WHITE** wire from fixture (A) to **WHITE** wire from outlet box using existing wire connector or wire connector (AA). Connect **BLACK** wire from fixture (A) to **BLACK** wire from outlet box using existing wire connector or wire connector (AA). Connect **BARE/GREEN** ground wire from outlet box to **BARE** ground wire from fixture (A) using wire connector (AA).



NOTE: Screw wire connectors (AA) on in a clockwise direction.

! WARNING: Never connect ground wire to white or black power supply wires.

! WARNING: To reduce the risk of fire, electrical shock, or personal injury, wire connectors (AA) provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.

Hardware Used

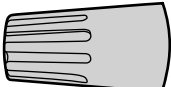AA E3 Wire Connector  x 3

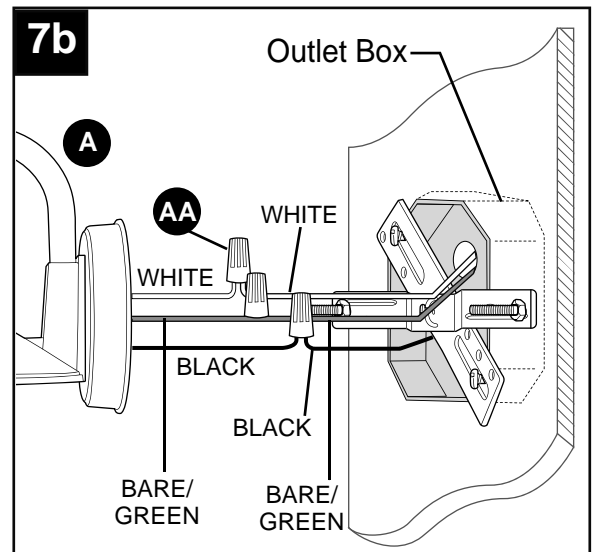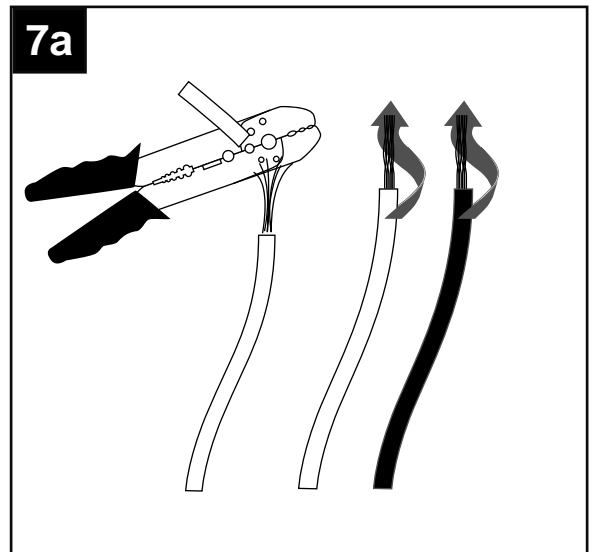


ASSEMBLY INSTRUCTIONS


8. Wrap electrical tape (not included) around each individual wire connector (AA) down to the wire.

Gently push wire connectors (AA) back into outlet box. Carefully push excess wiring into outlet box.

⚠ WARNING: Make sure no bare wire or wire strands are visible after making connections.

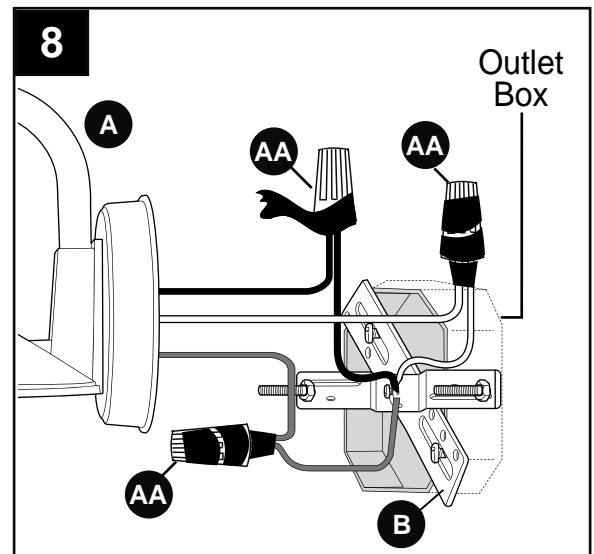

9. Align holes in backplate (C) with mounting screws (G) on mounting strap (B) and push fixture (A) toward wall. Attach fixture (A) to mounting strap (B) using the small decorative nuts (D) previously removed (Step 4, page 6).

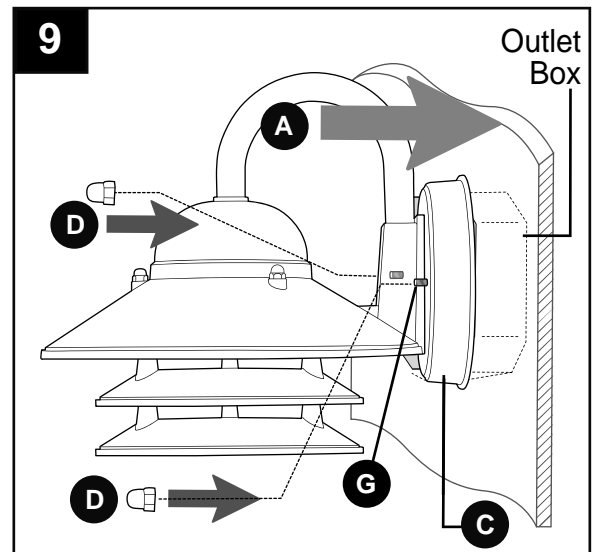


10. Install one standard-base bulb (not included). Use 60-watt max. incandescent bulb or CFL/LED equivalent.

Install shade (H), turning it clockwise to tighten.

Restore power and test fixture (A).

If light does not function, please refer to TROUBLESHOOTING on the next page.


⚠ WARNING: When replacing bulb, please allow bulb and shade to cool down before touching.

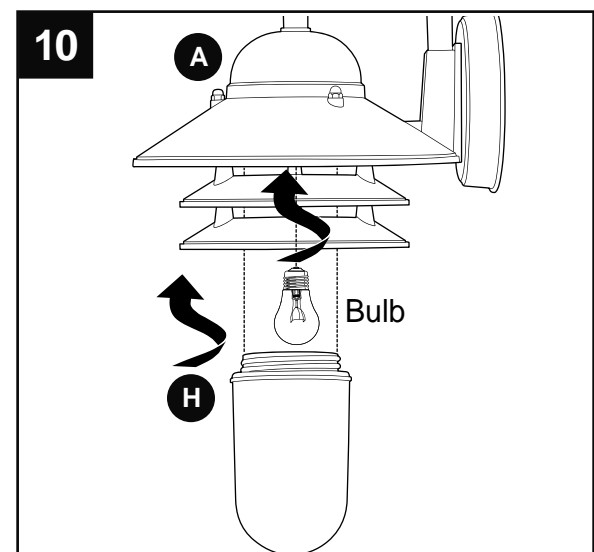

ASSEMBLY INSTRUCTIONS

11. After completing installation, caulk fixture (A) mounting surface with silicone weather sealant (not included).

! WARNING: Failure to caulk fixture mounting surface with silicone weather sealant may result in water damage in outlet box, which may cause electrical malfunction or electrical shock.

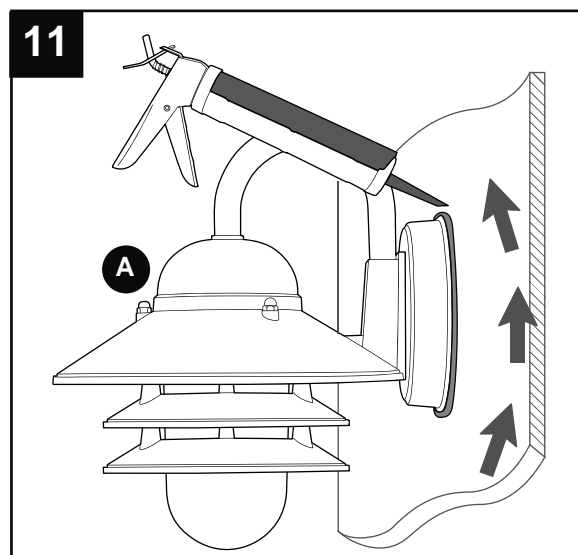

CARE AND MAINTENANCE

- Shut off main power supply. Wipe fixture with soft, damp cloth. Use window cleaner to clean shade. Do not use an abrasive cleaner on shade or fixture.

TROUBLESHOOTING

! WARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb will not light.	1. Bulb is burned out. 2. Power is OFF. 3. Faulty connection.	1. Replace bulb. 2. Make sure power supply is ON. 3. Check wiring and all connections.
Fuse blows out or circuit breaker trips.	1. Crossed wires. 2. Power wire is grounding out.	1. Check wiring. 2. Check all connections.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for five (5) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages, improper packaging of returned products and acts of God. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.