 
 


Item No. TVS110-VN

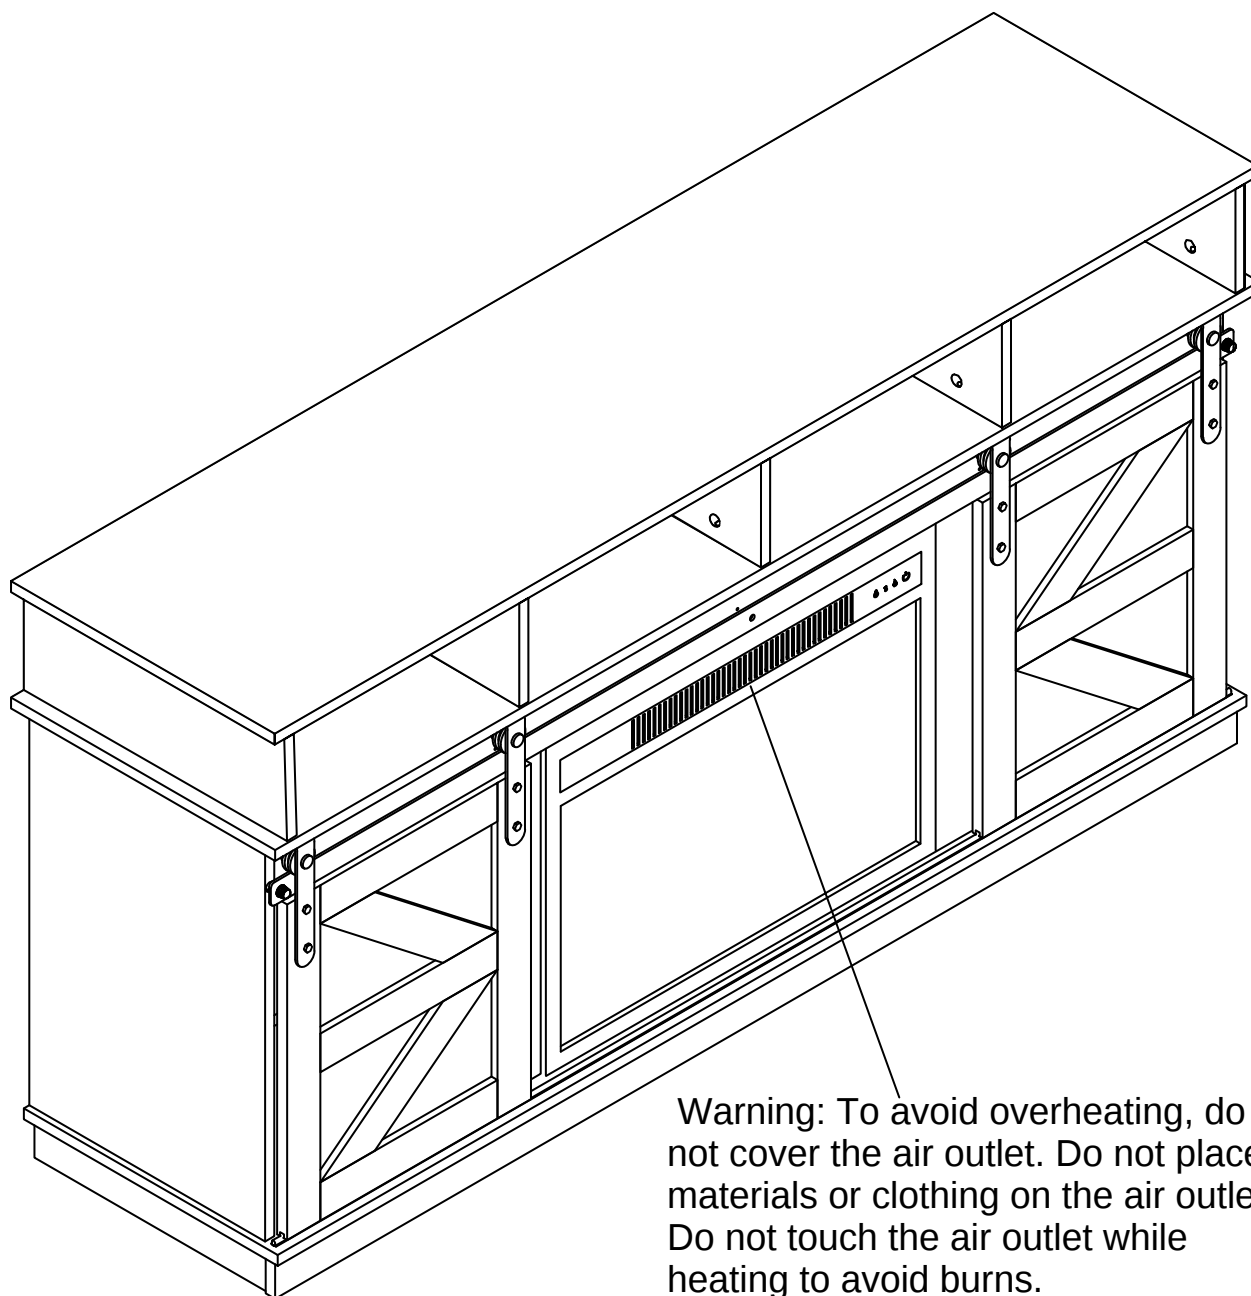

Warning: To avoid overheating, do not cover the air outlet. Do not place materials or clothing on the air outlet. Do not touch the air outlet while heating to avoid burns.

WARNING!

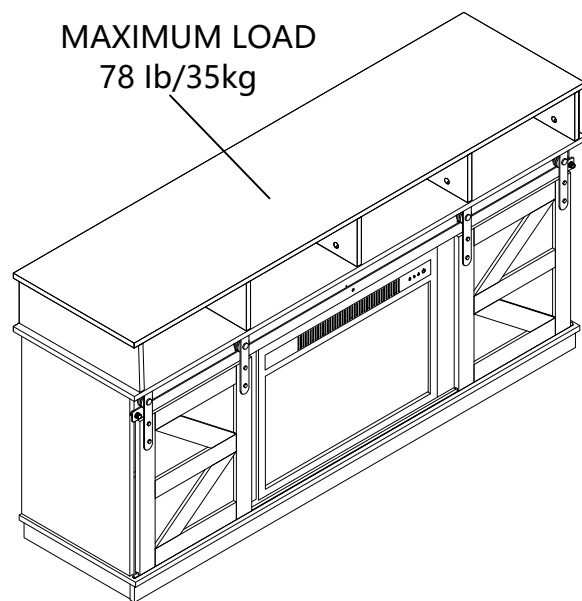

 
Estimated Time for Assembly

90 mins




Weight Limitation

78 lb oTp

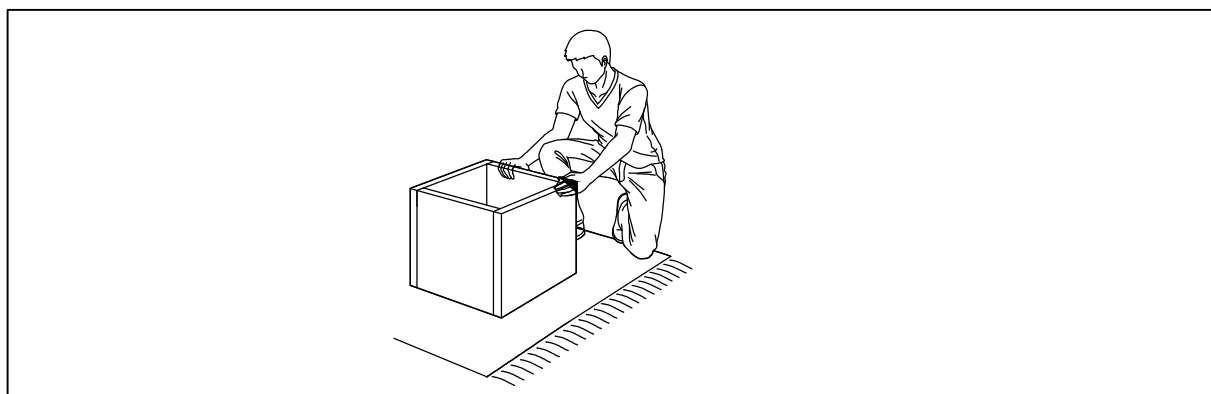


 Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

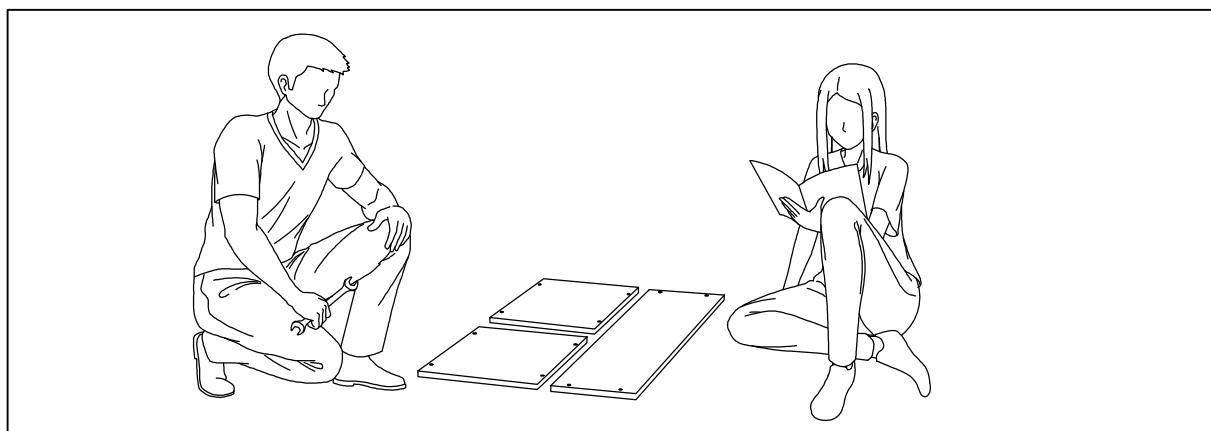


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.

 
Not actual size

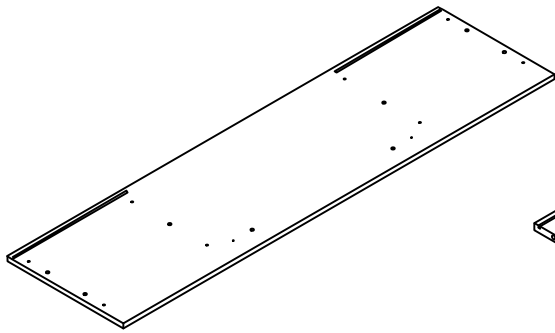


Ⓢ1 X1

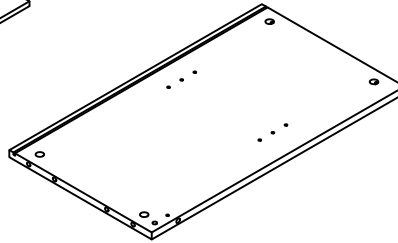 


Ⓢ2 X1

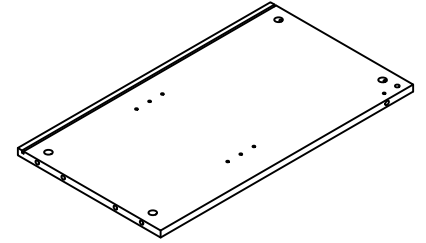 


Ⓢ3 X1

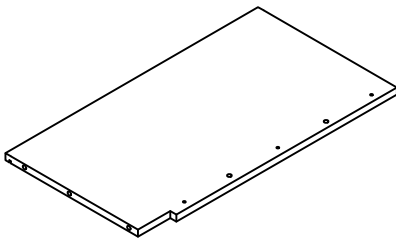 


Ⓢ4 X1

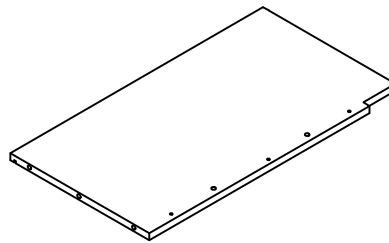 


Ⓢ5 X1

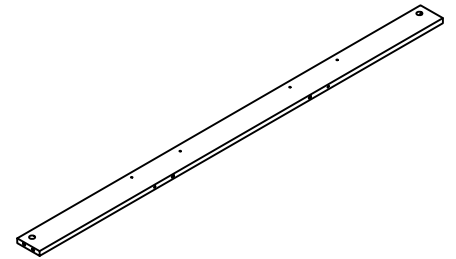 


Ⓢ6 X1

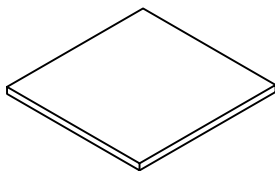 


Ⓢ7 X2

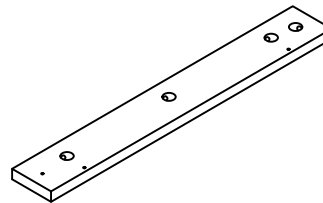 


Ⓢ8 X1

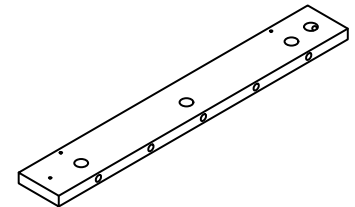 


Ⓢ9 X1

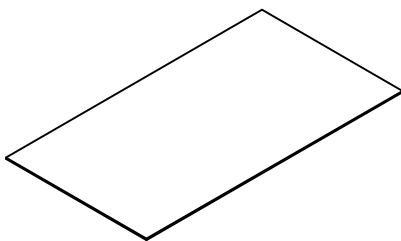 

Ⓢ10 X2

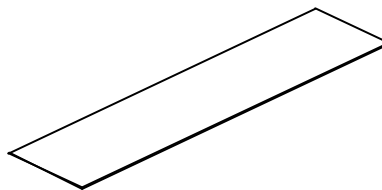 


Ⓢ11 X1

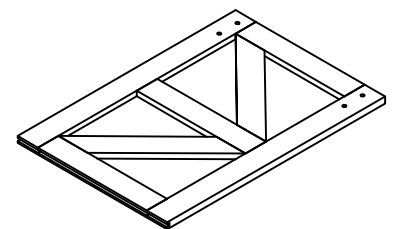 


Ⓢ12 X1

BOARD IDENTIFICATION

 
Not actual size

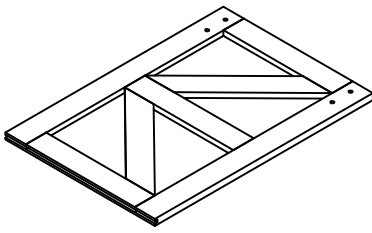


Ⓢ13 X1

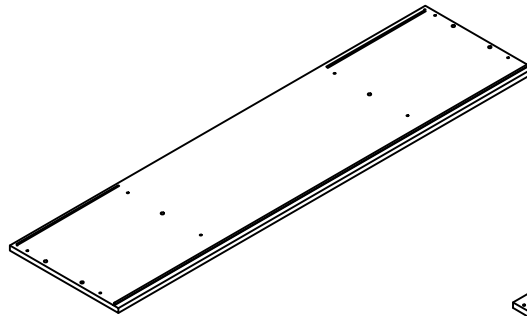 


Ⓢ14 X1

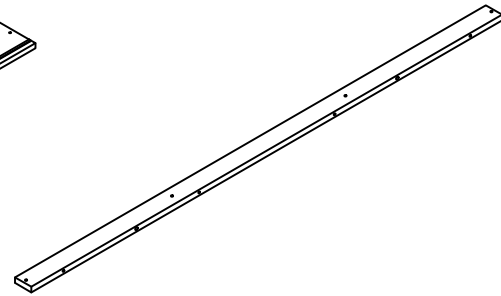 


Ⓢ15 X1

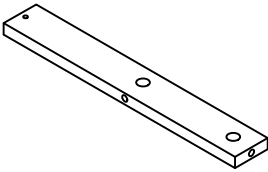 


Ⓢ16 X1

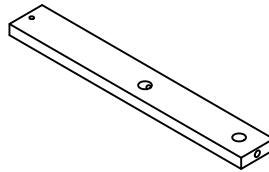 


Ⓢ17 X1

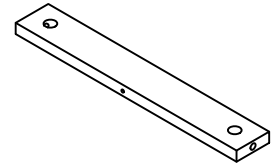 


Ⓢ18 X2

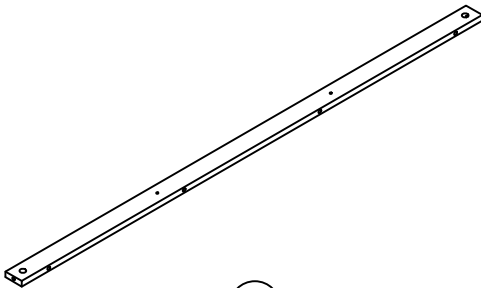 

Ⓢ19 X1

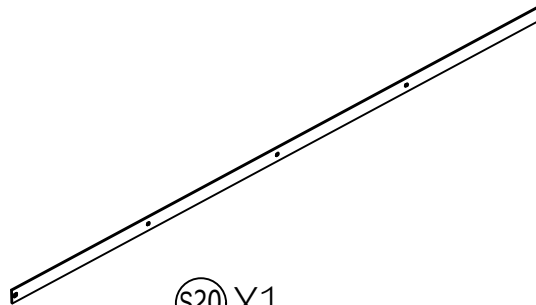 





Ⓢ20 X1

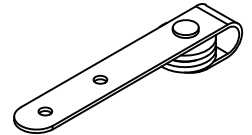 


Ⓢ21 X4

Cam Lock Fastening System




 
 
 
 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

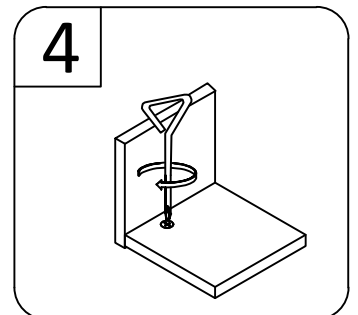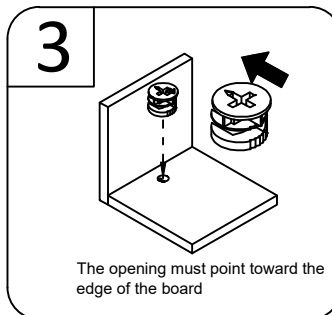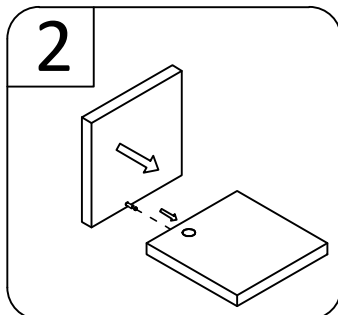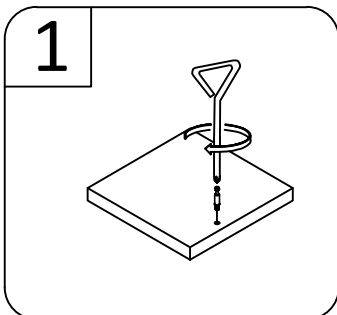

PACKAGE CONTENT







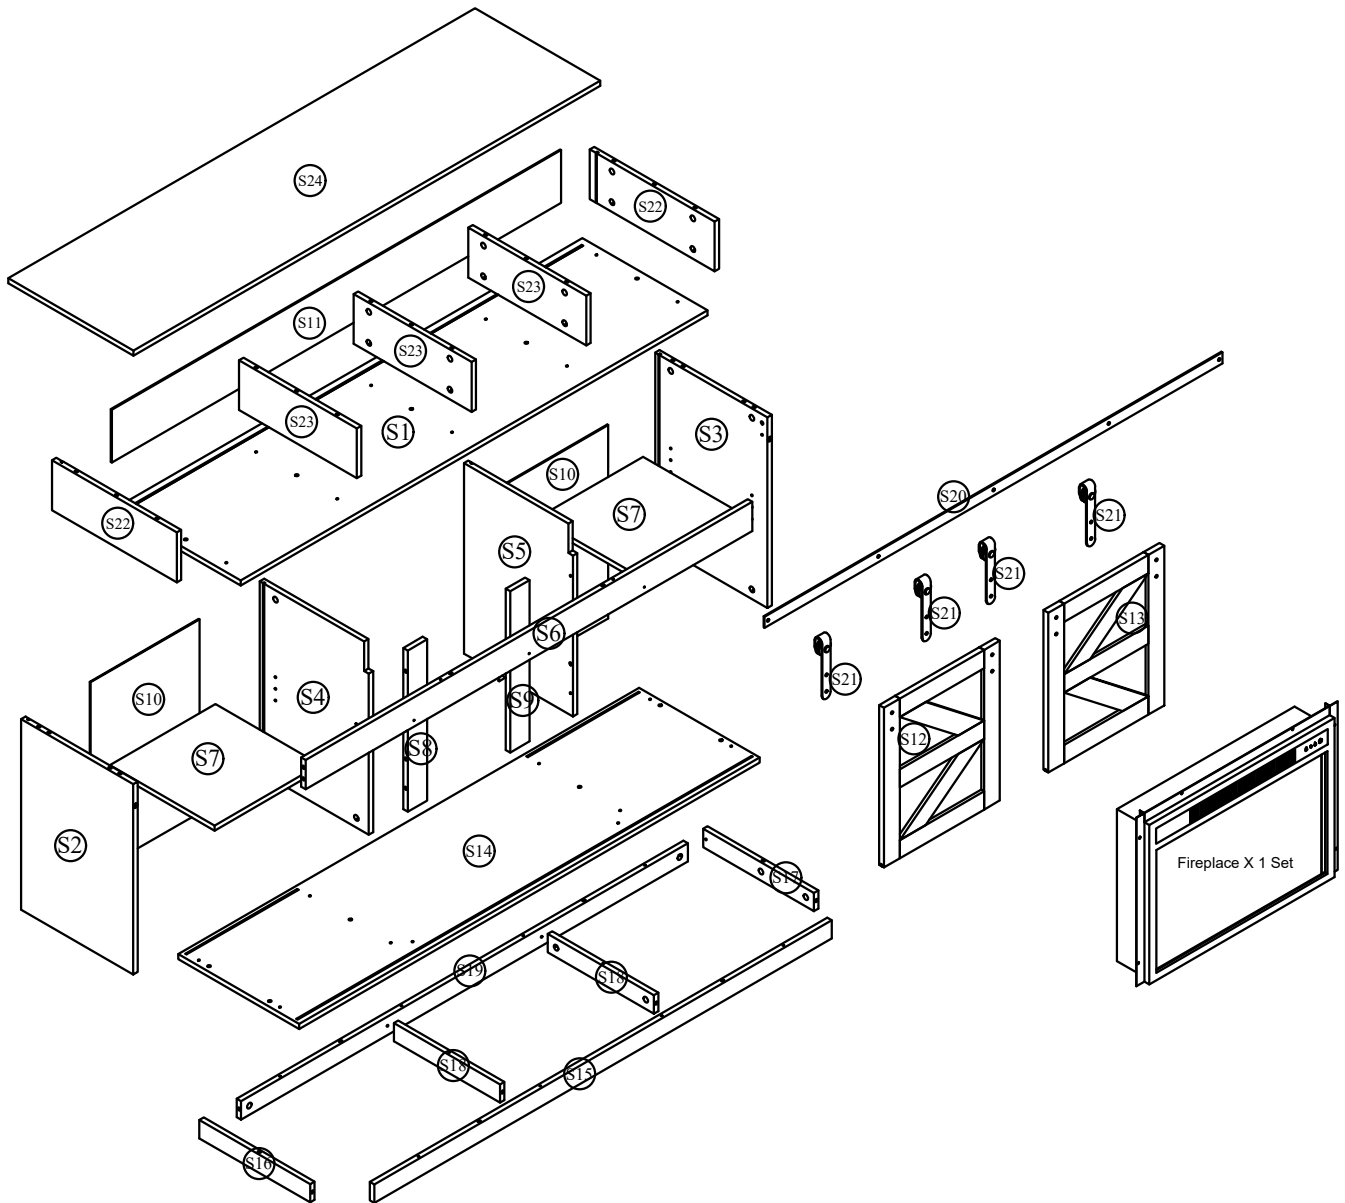 


HARDWARE PART LIST

      
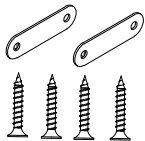 
Ⓐ X56  ø6*35	Ⓑ X56  ø15*11.5	Ⓒ X34  ø8*30	Ⓓ X12  ø4*50
Ⓔ X8  ø3.5*16	Ⓕ X8  M6*22	Ⓖ X8  M6*10	Ⓗ X2 
Ⓘ X3  ø4*35	Ⓙ X2  M6*37	Ⓚ X3  ø10*19.5	Ⓛ X2  ø16*10
Ⓜ X8  ø5*16	Ⓝ X1  90*30*5	Ⓞ X8 	Ⓟ X1 Set  ø3.5*12

STEP 1







Ⓐ	X26
	
ø6*35	

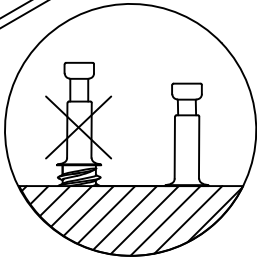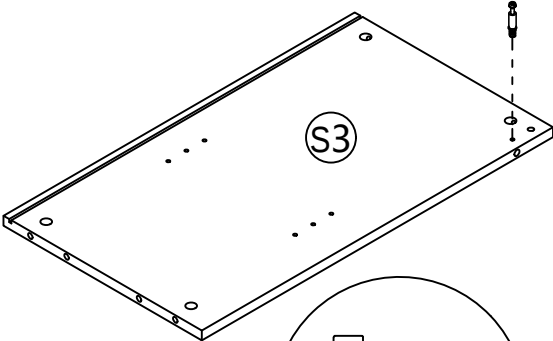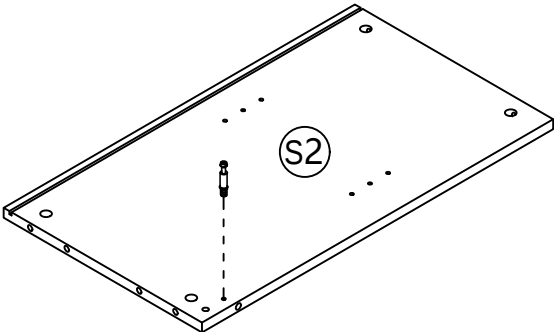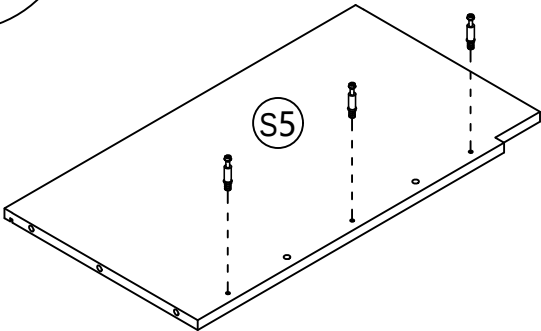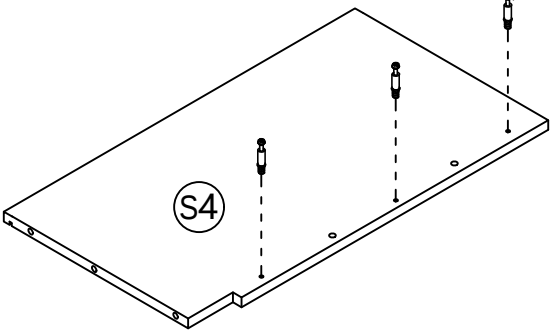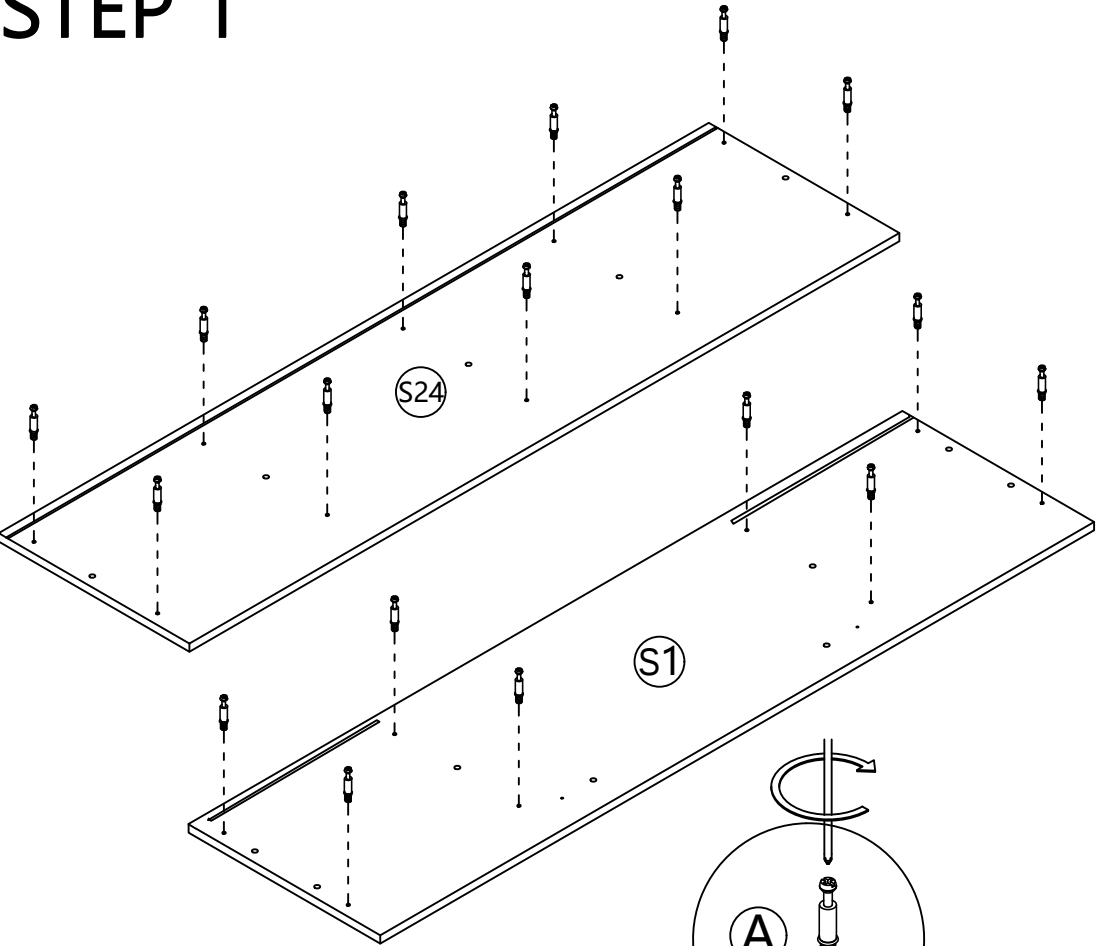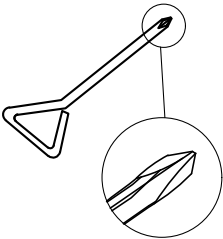       

  
STEP 2

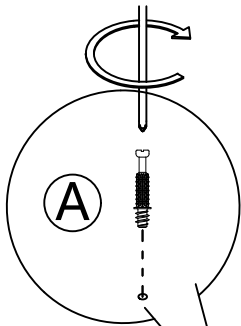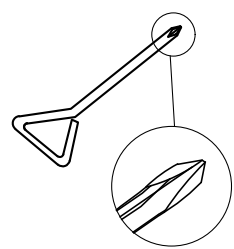



A	X10
	
ø6*35	

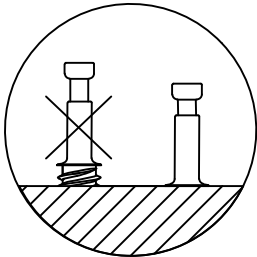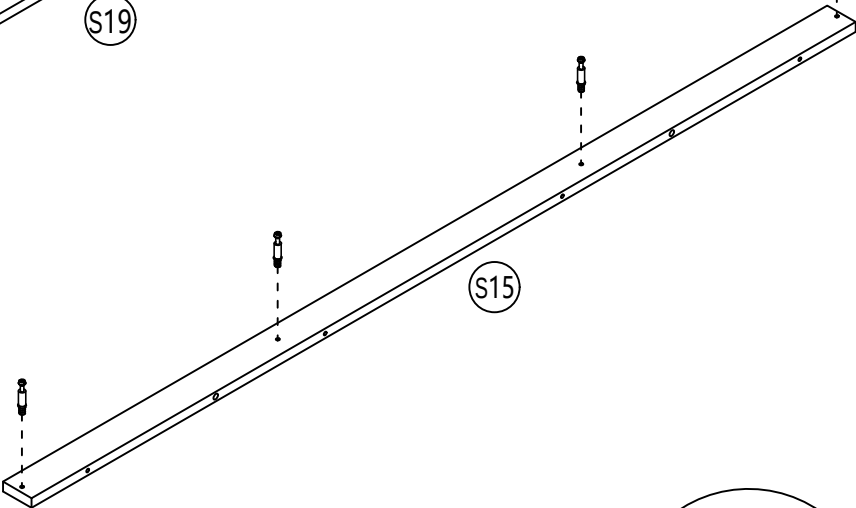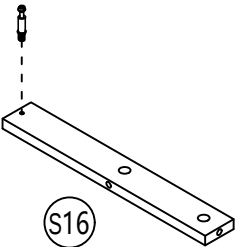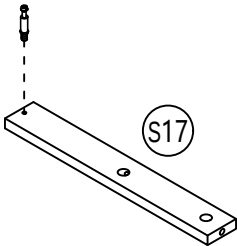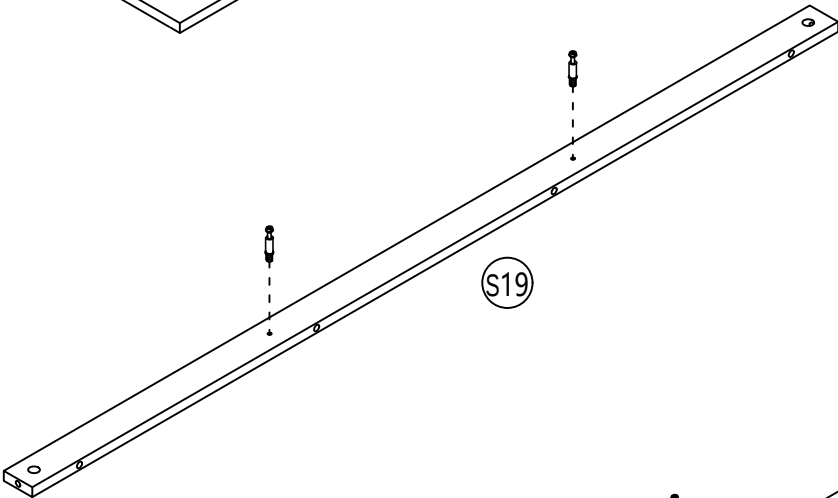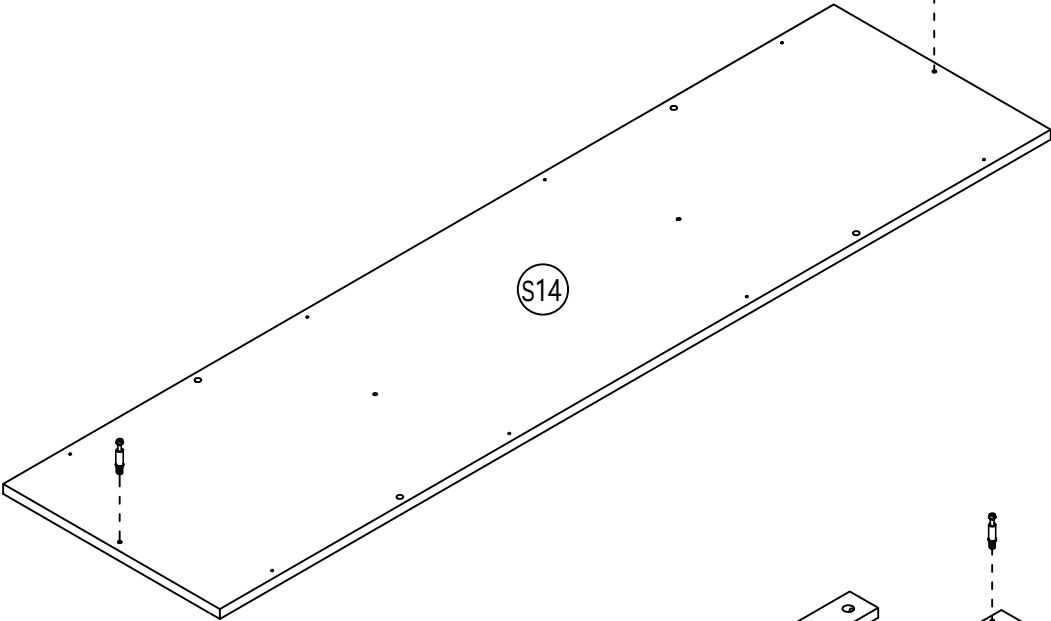      

 STEP 3

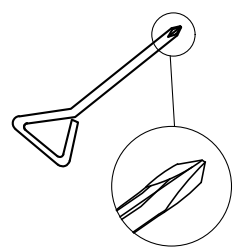





(B)	X8
ø15*11.5	

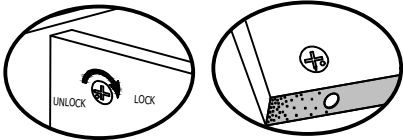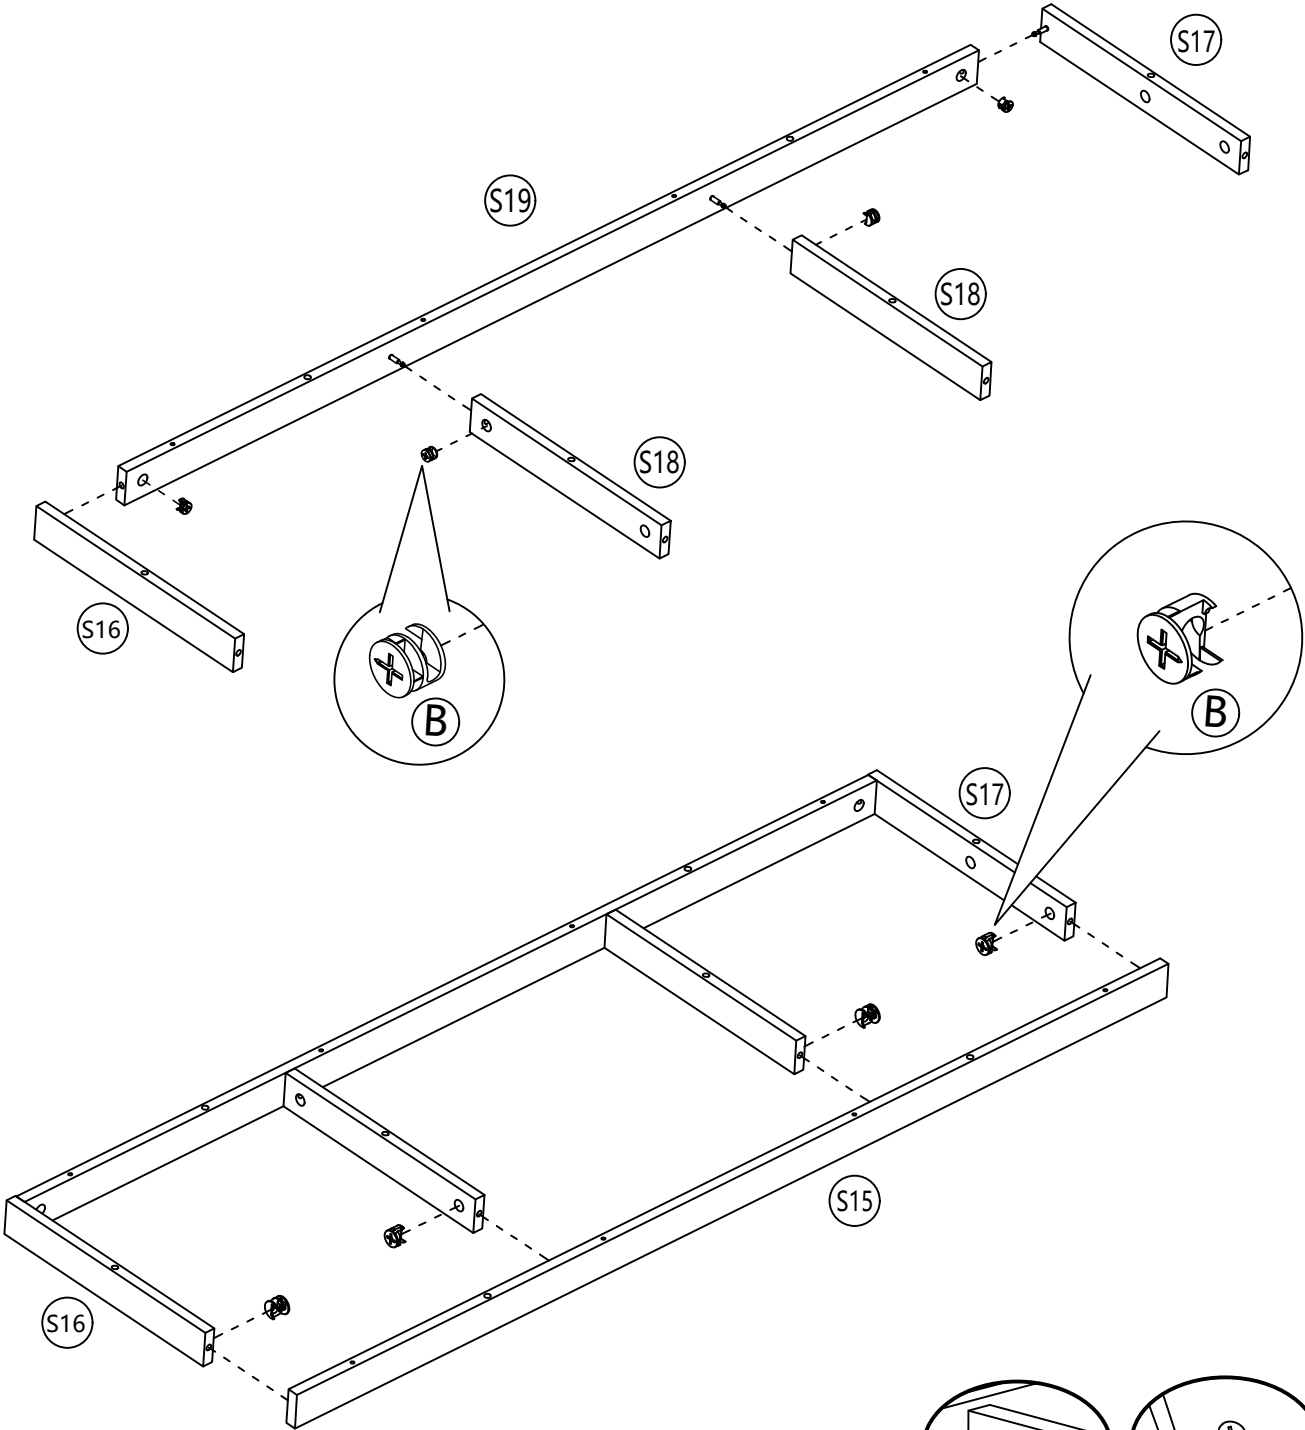  


Proper orientation of CAM LOCK

STEP 4

    
Place two items underneath the product to make the product stable and easy to install

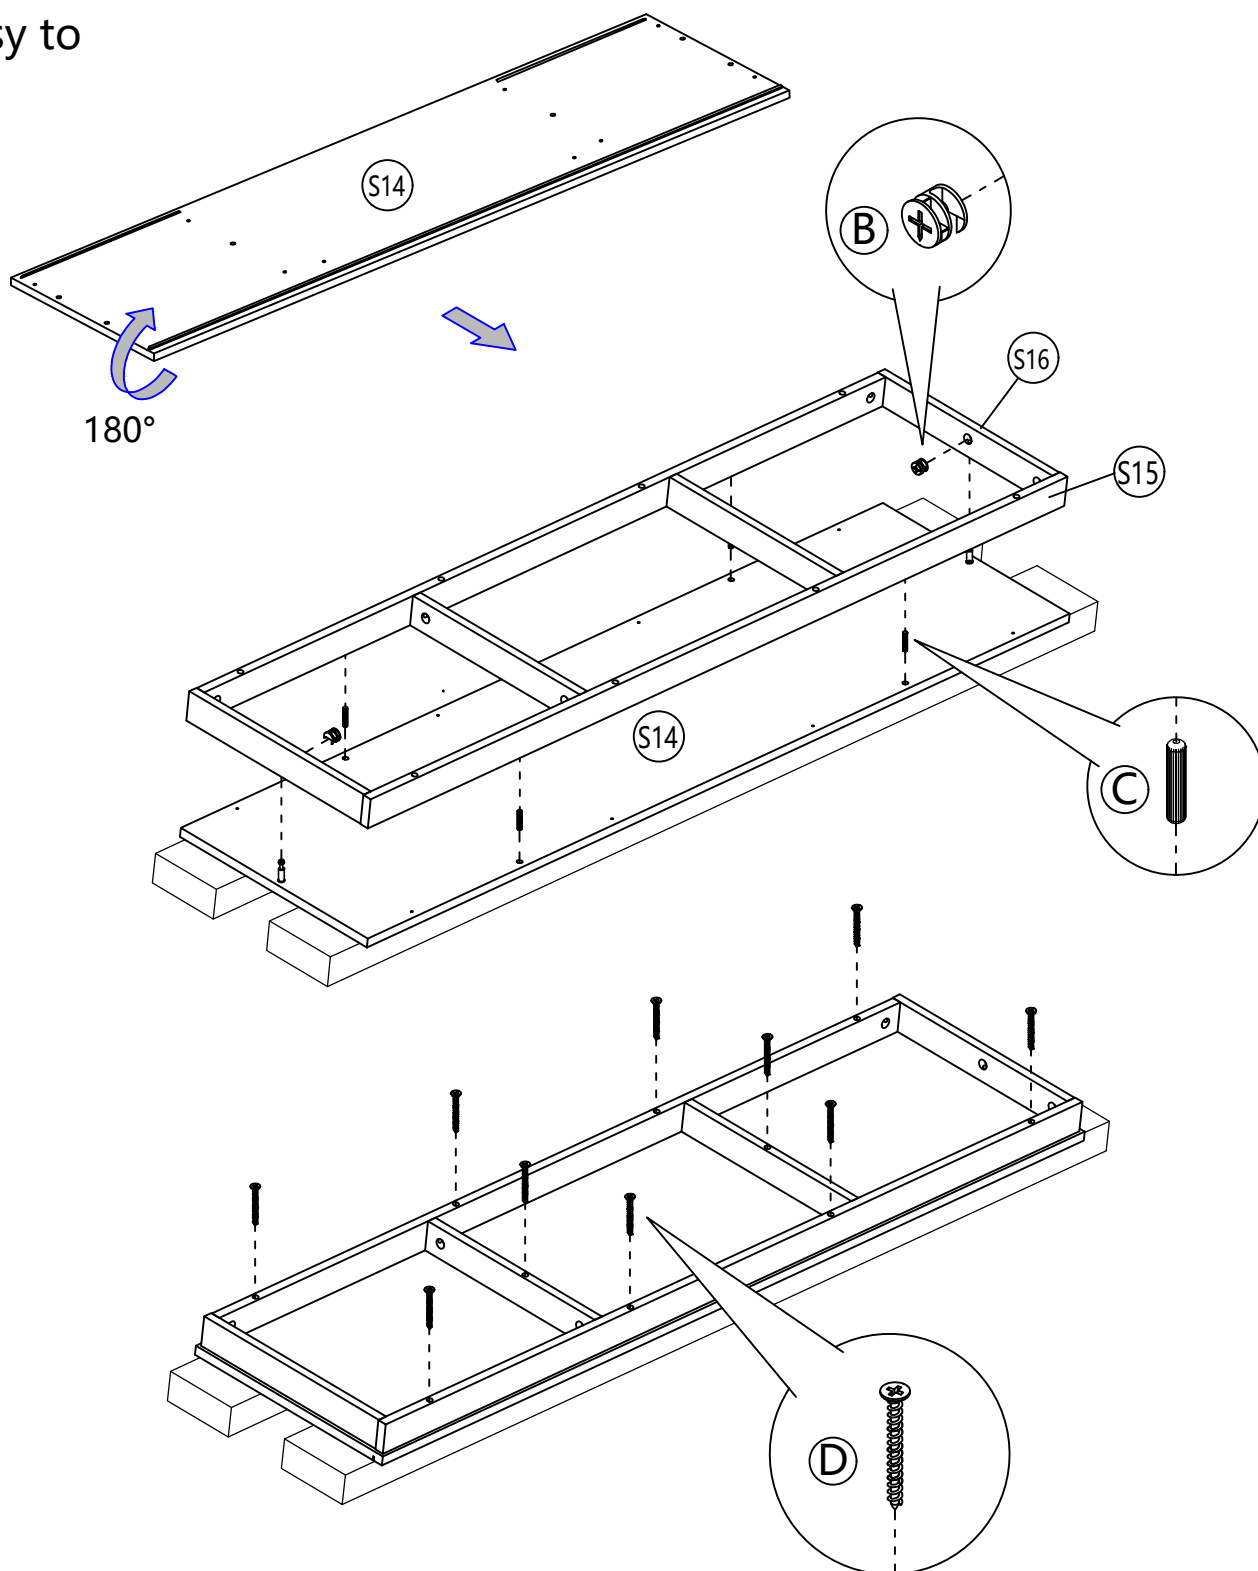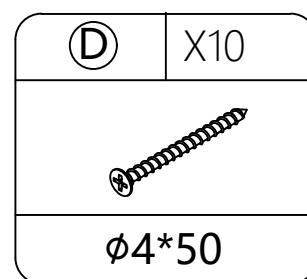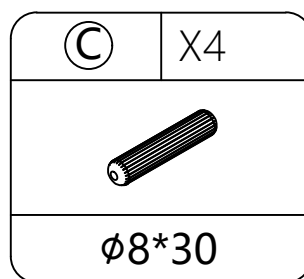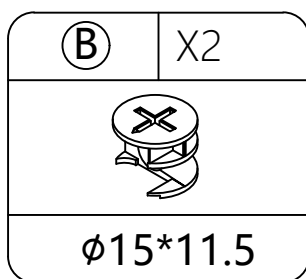

 STEP 5











Ⓐ	X10
	
ø6*35	

Ⓒ	X2
	
ø8*30	

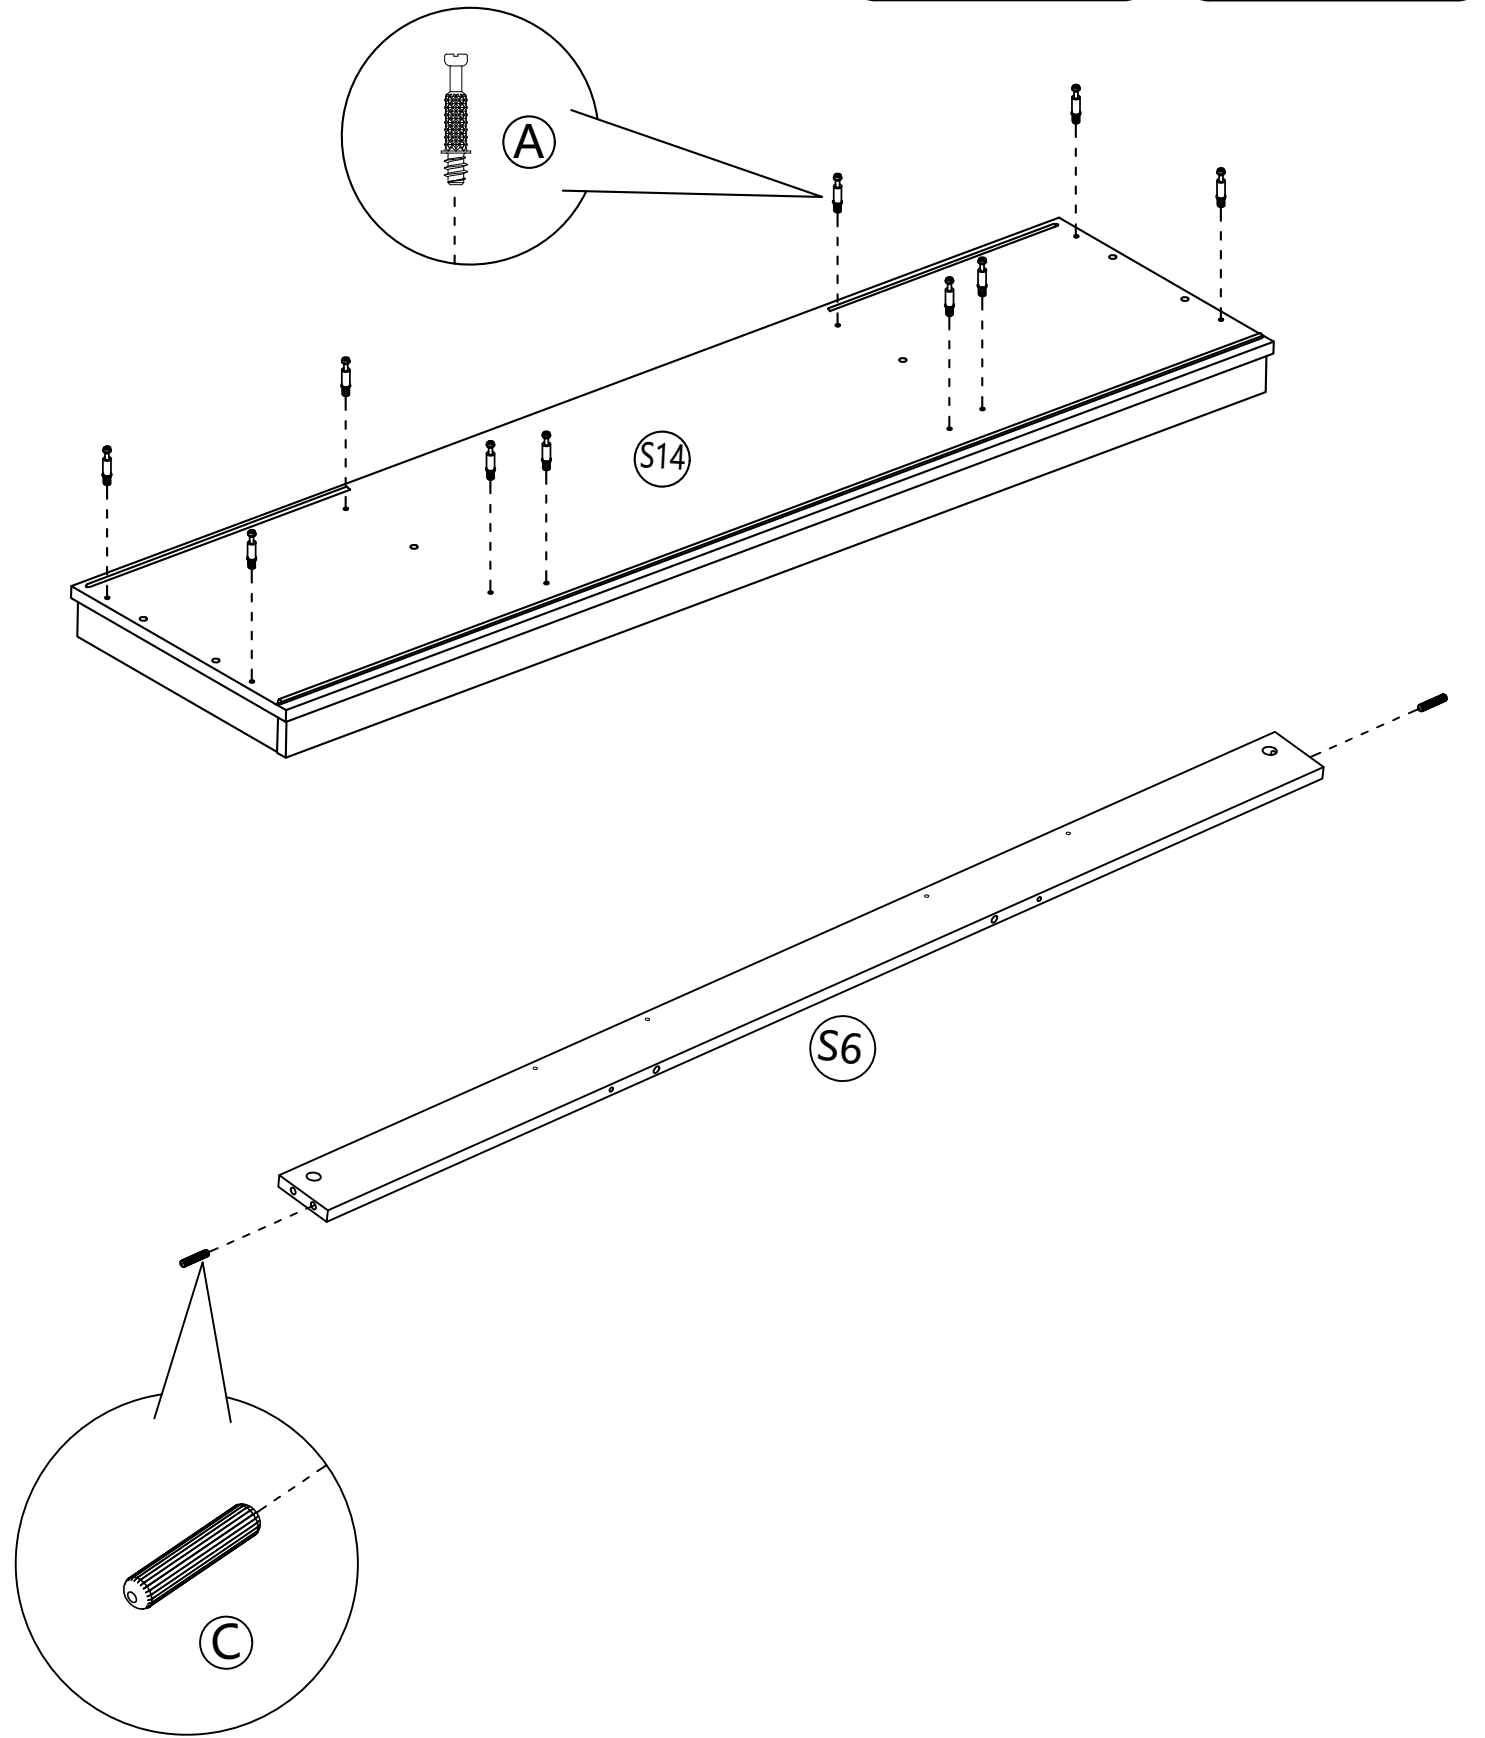 


STEP 6

          Push a CAM LOCK into the part
The arrow in the CAM LOCK must
point toward the hole on the edge
of the board

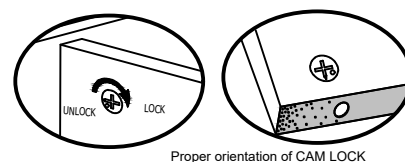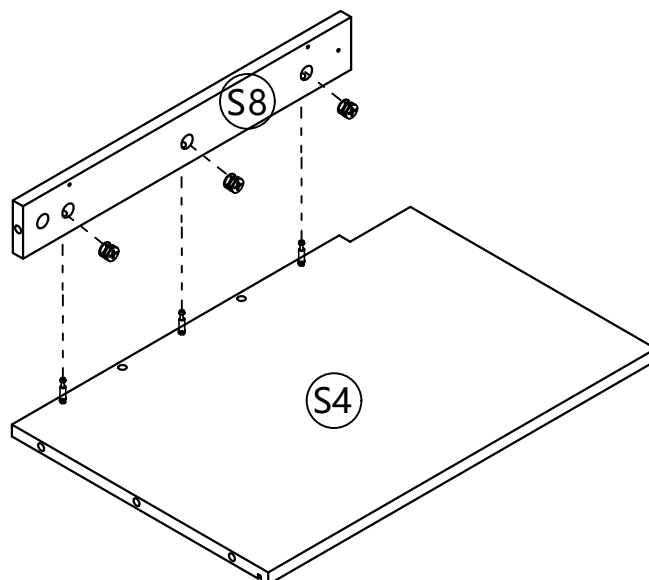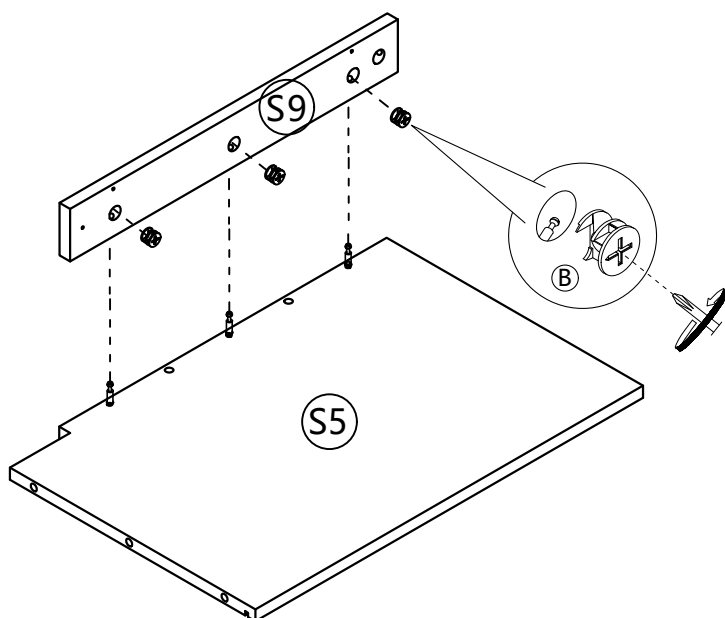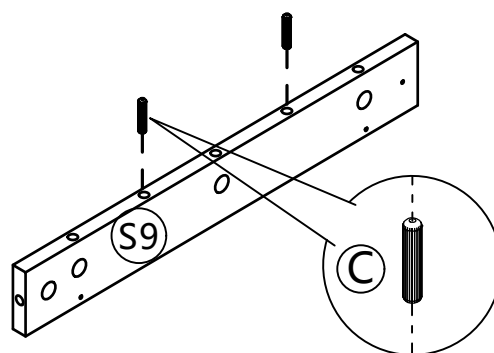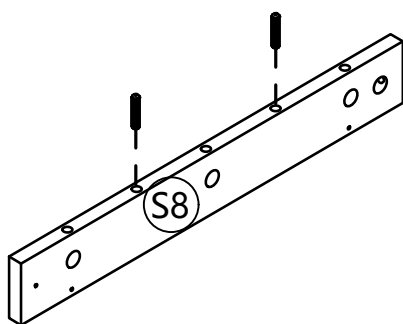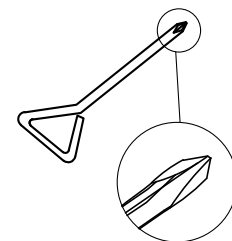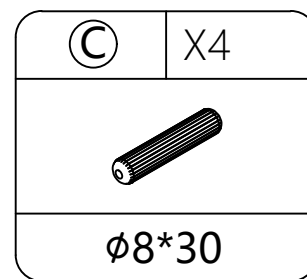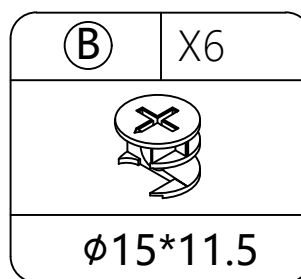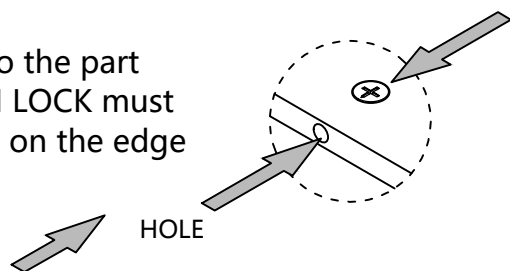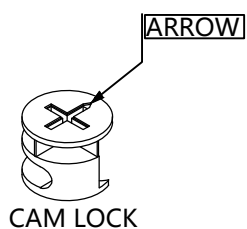


Proper orientation of CAM LOCK

 STEP 7

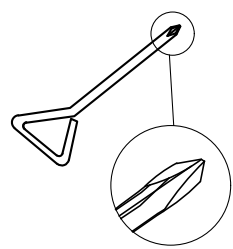


(B)	X6
	
ø15*11.5	

(C)	X2
	
ø8*30	

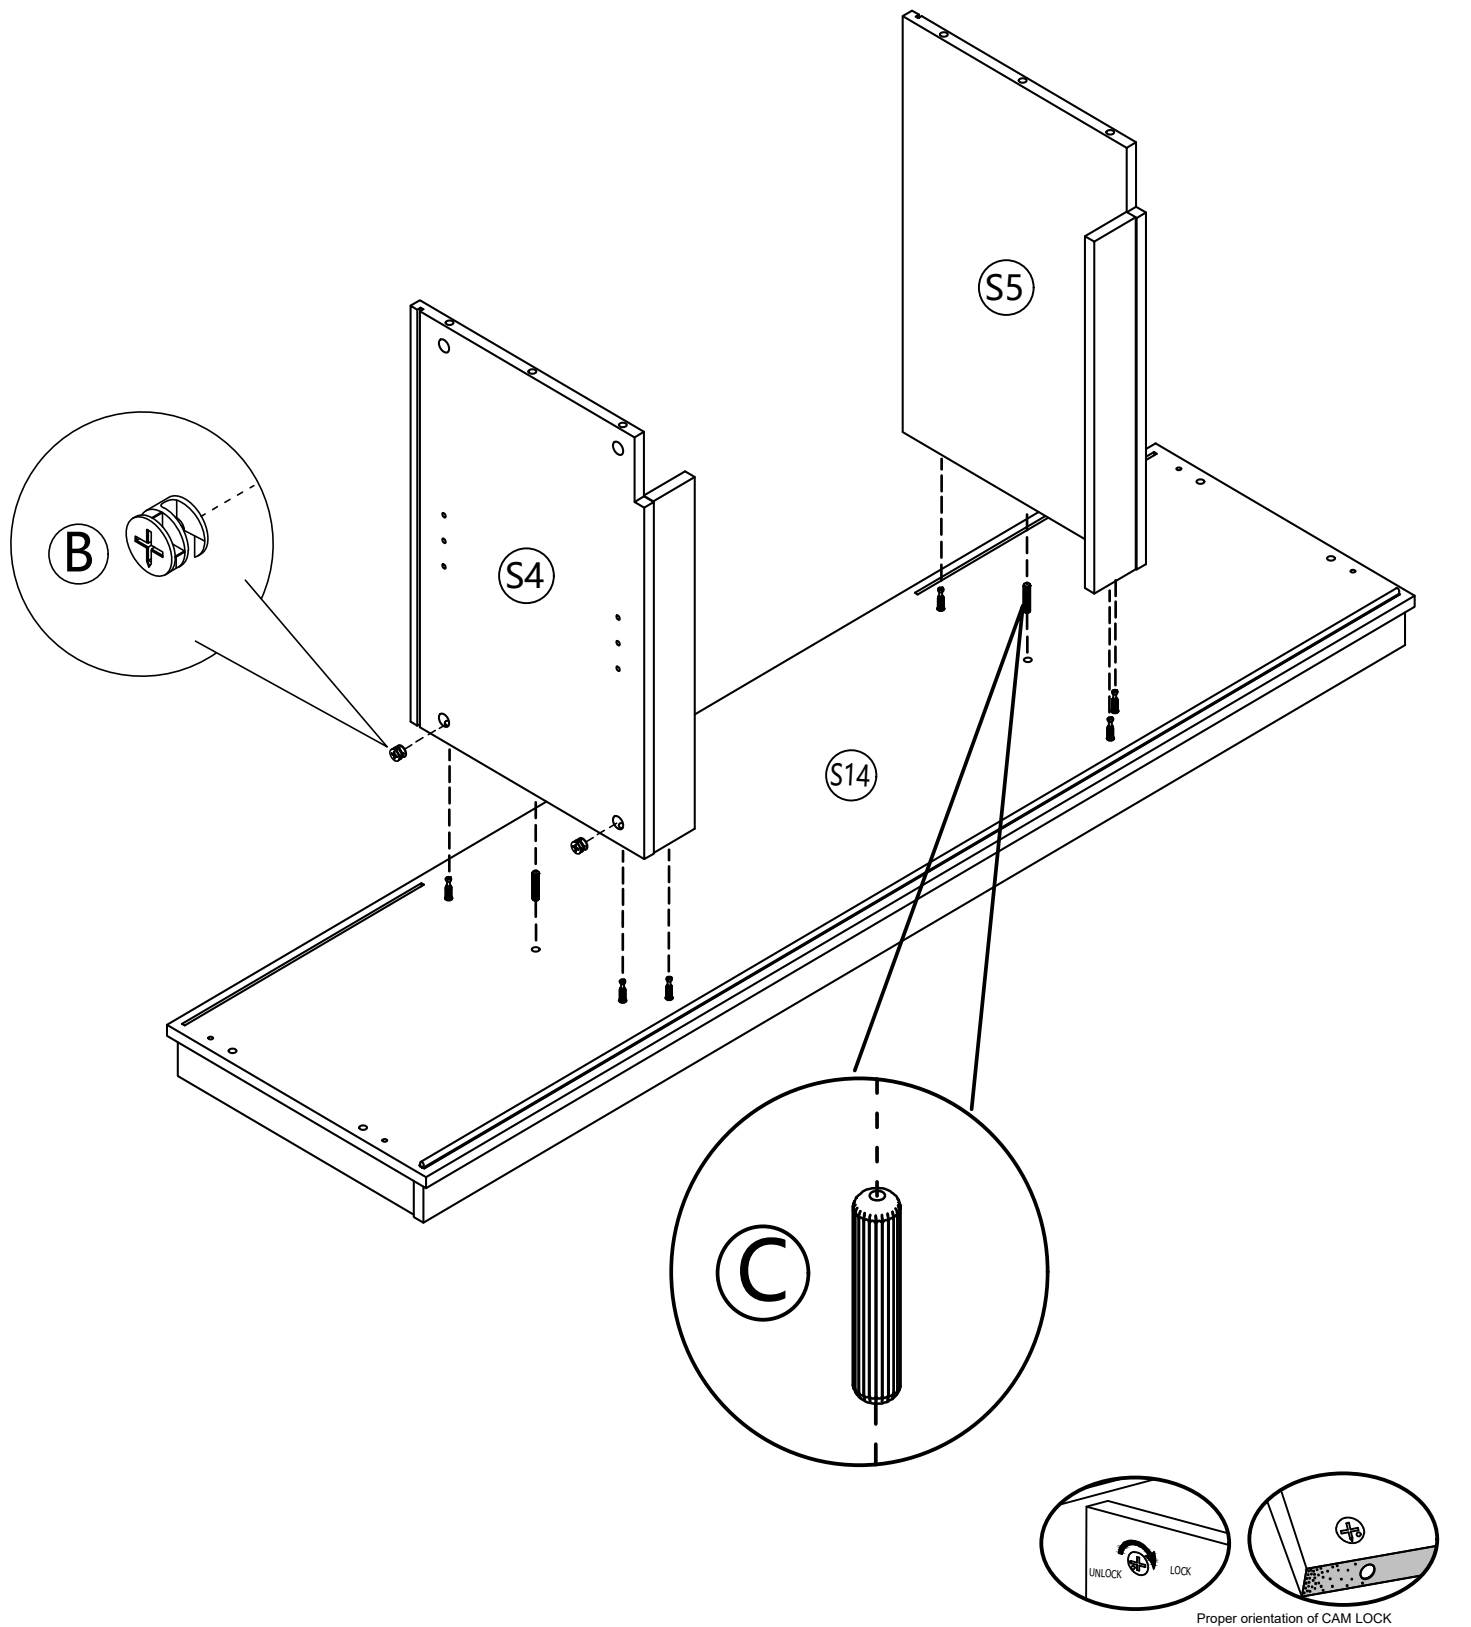 





Proper orientation of CAM LOCK

 STEP 8

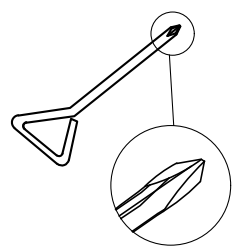


(B)	X6
	
ø15*11.5	

 (C)	X4
	
ø8*30	

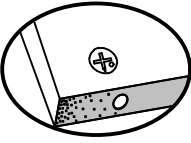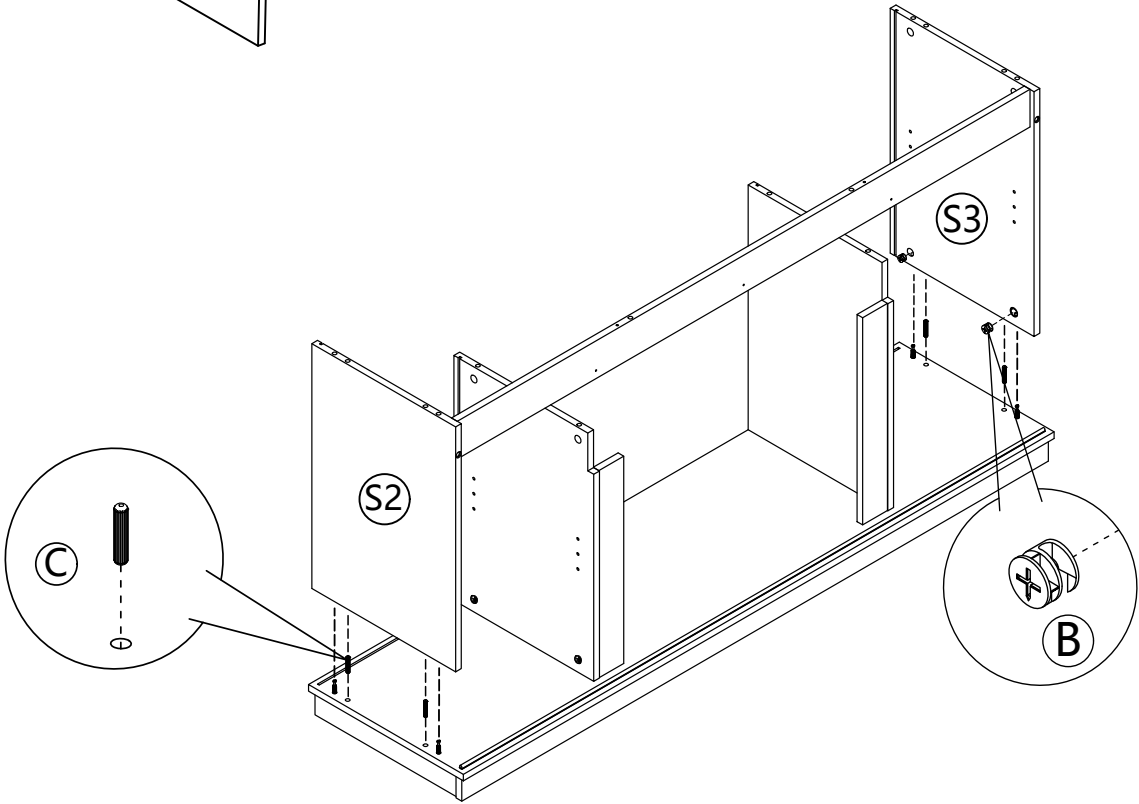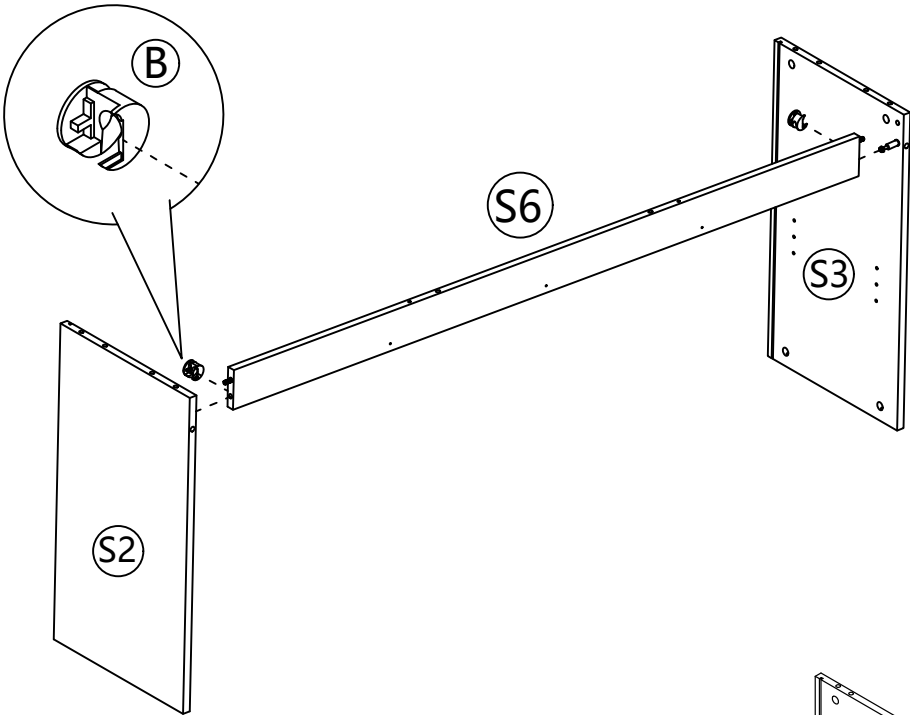   

Proper orientation of CAM LOCK

 
STEP 9

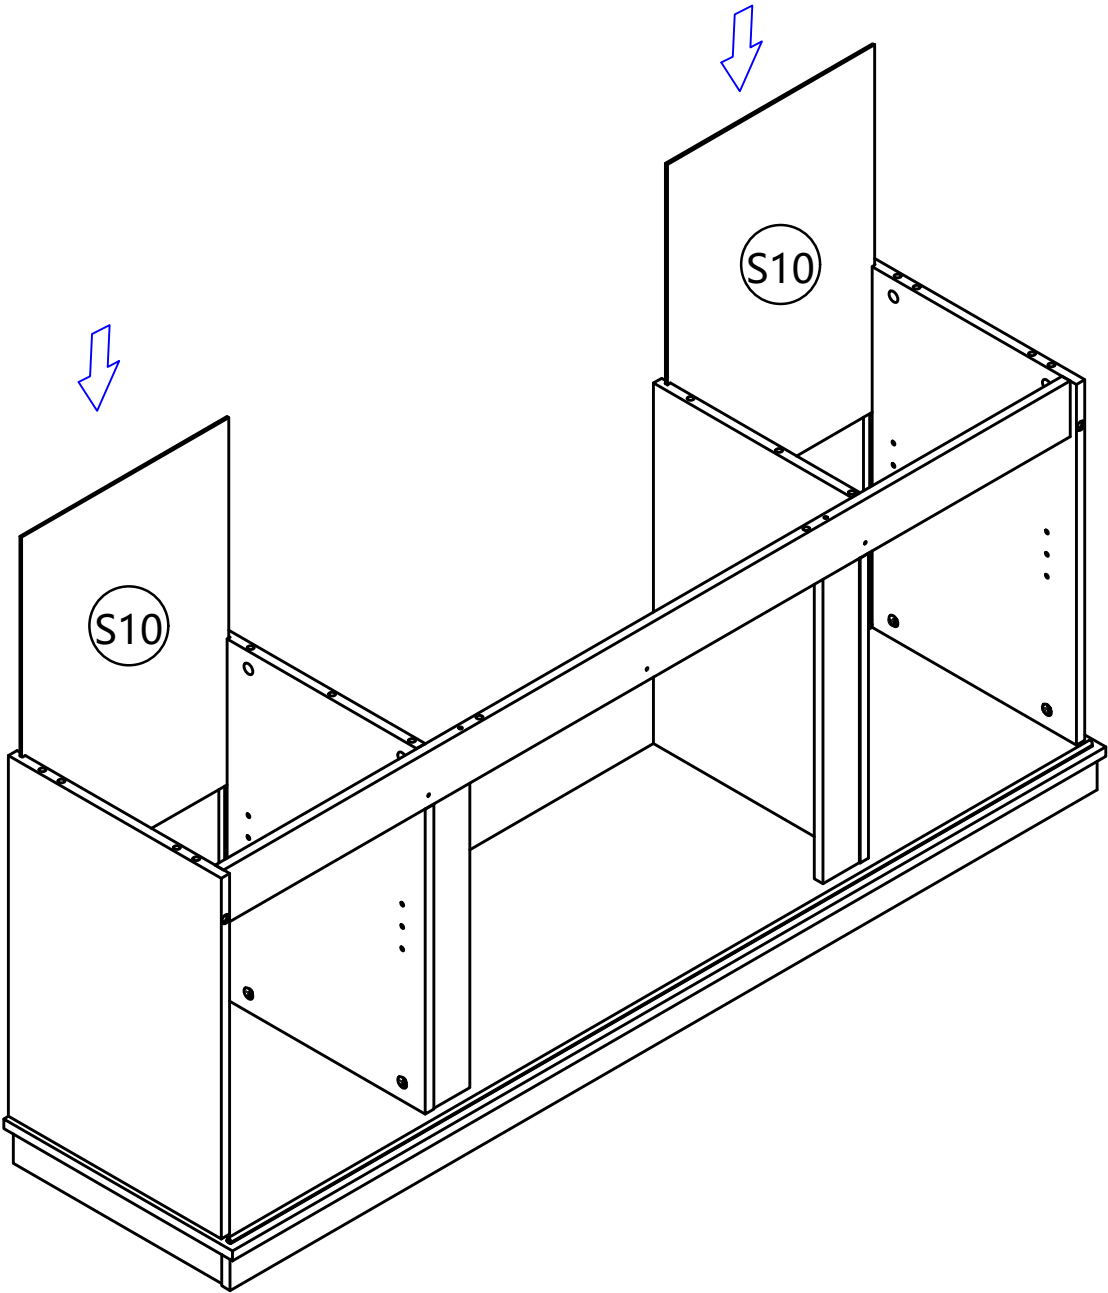


STEP 10


Ⓘ	X3	Ⓙ	X1	Ⓚ	X3	Ⓛ	X1
							
ø4*35		M6*37		ø10*19.5		ø16*10	

 Put the I and J screws in the holes, tighten the screws, but not too tight. 70% is OK.

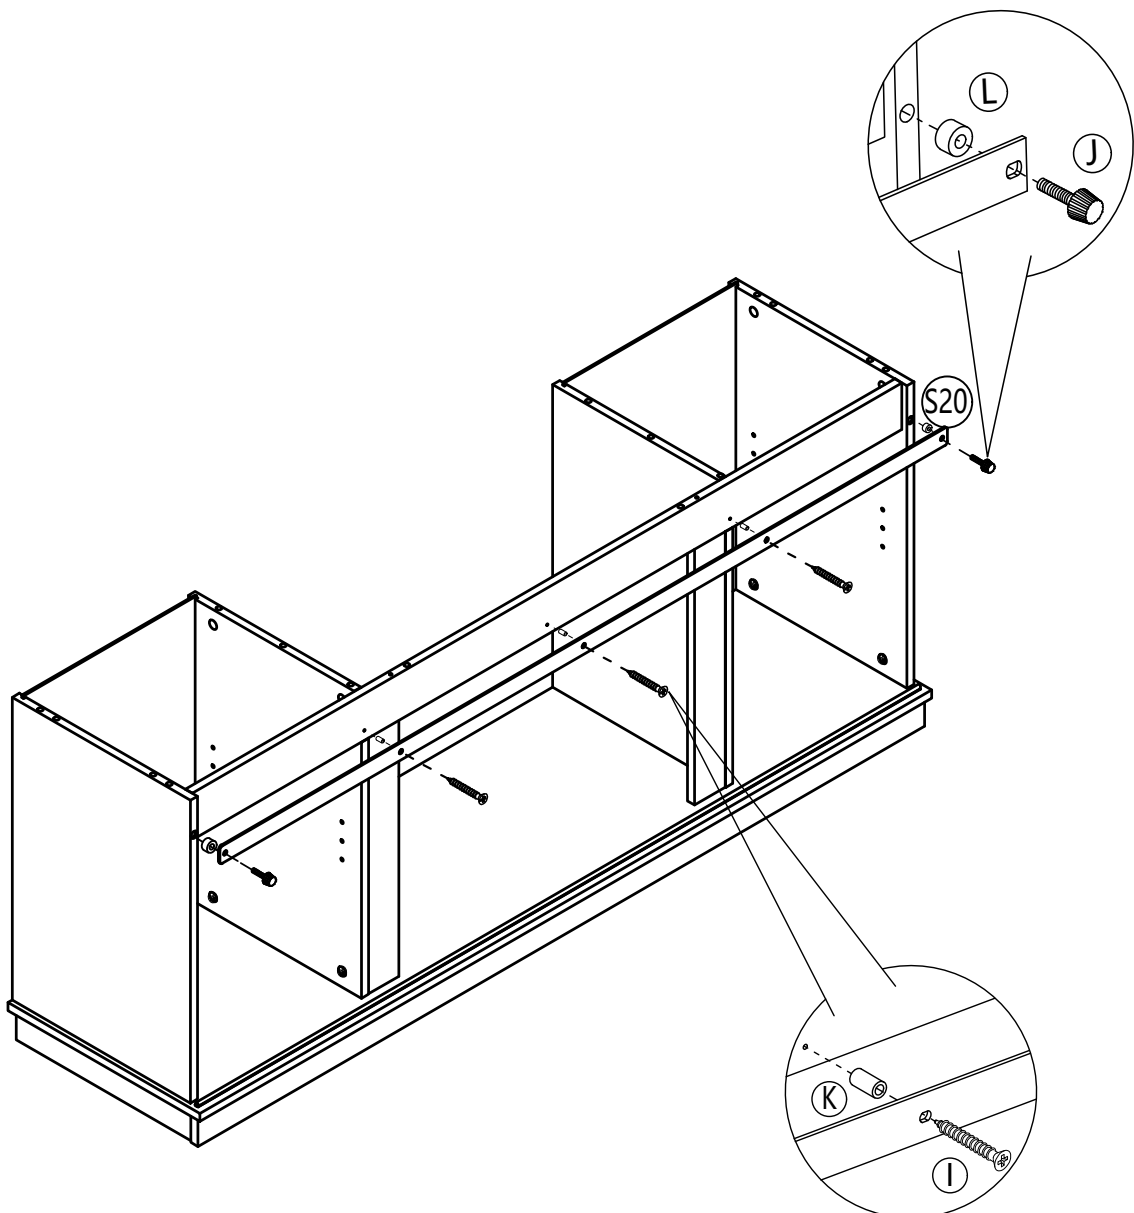


 STEP 11

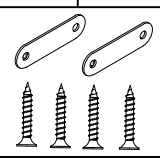
(P)	X1 Set
	
ø3.5*12	

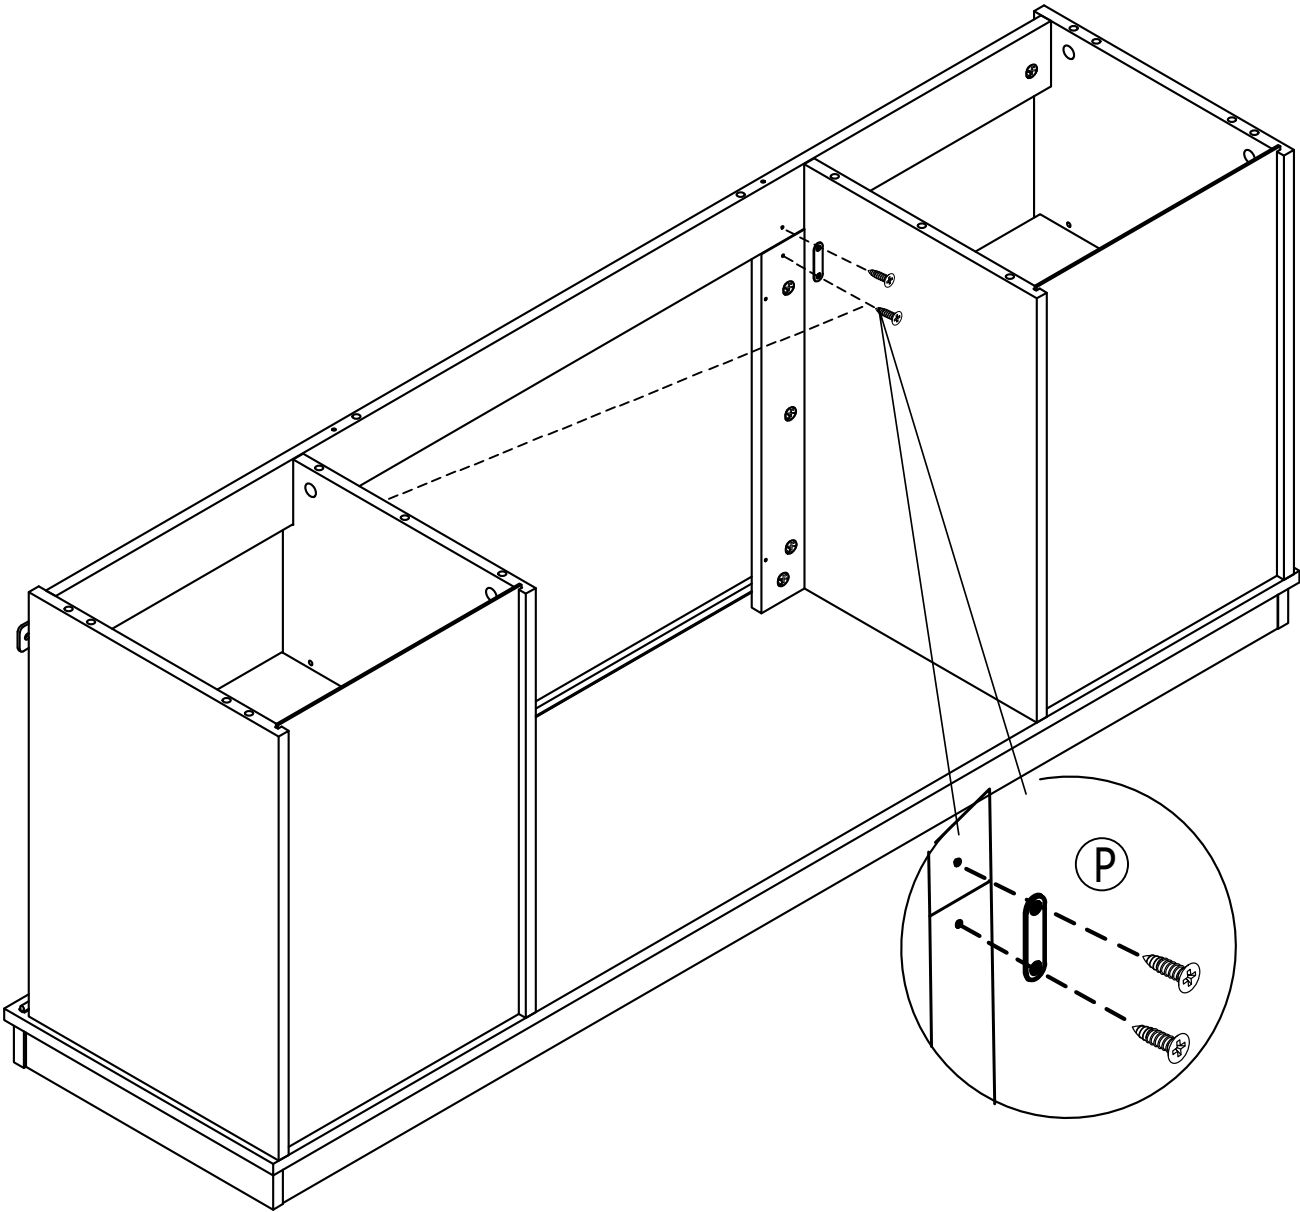 


 
STEP 12

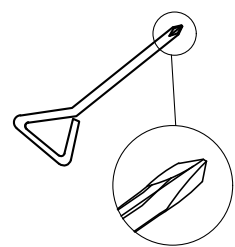

(B)	X8
	
$\phi 15 \times 11.5$	

 
(C)	X8
	
$\phi 8 \times 30$	

(D)	X2
	
$\phi 4 \times 50$	

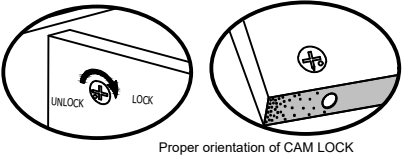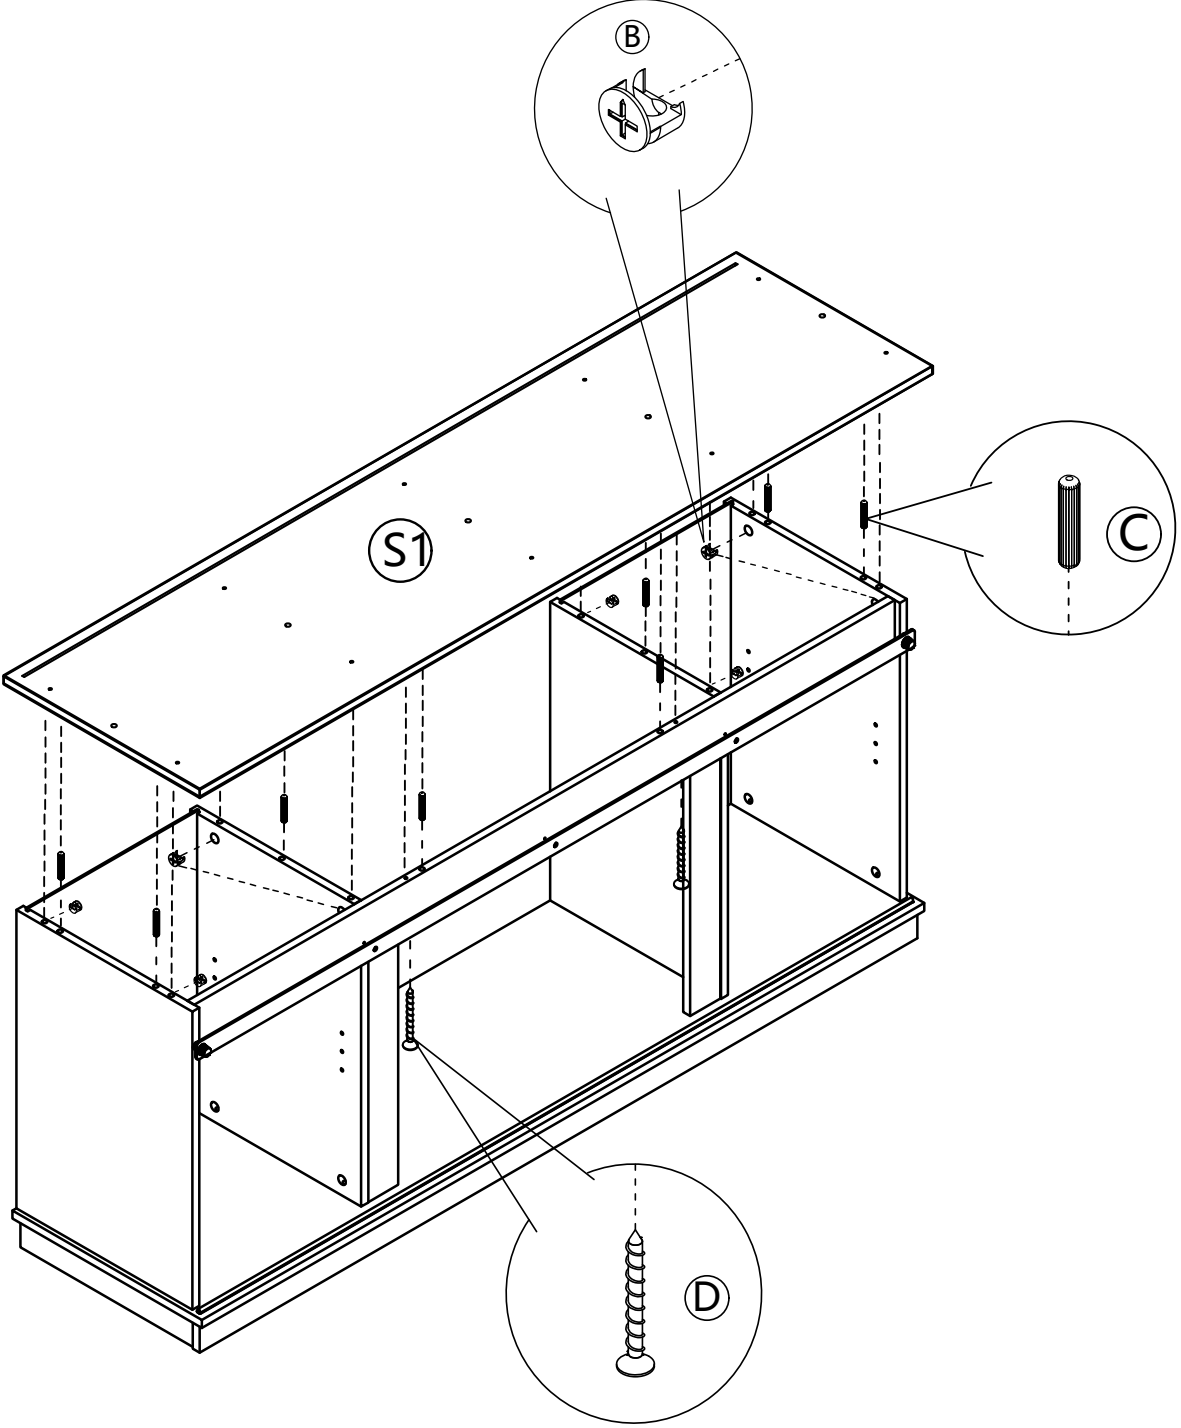  






STEP 13

(M)	X8
	
ø5*16	



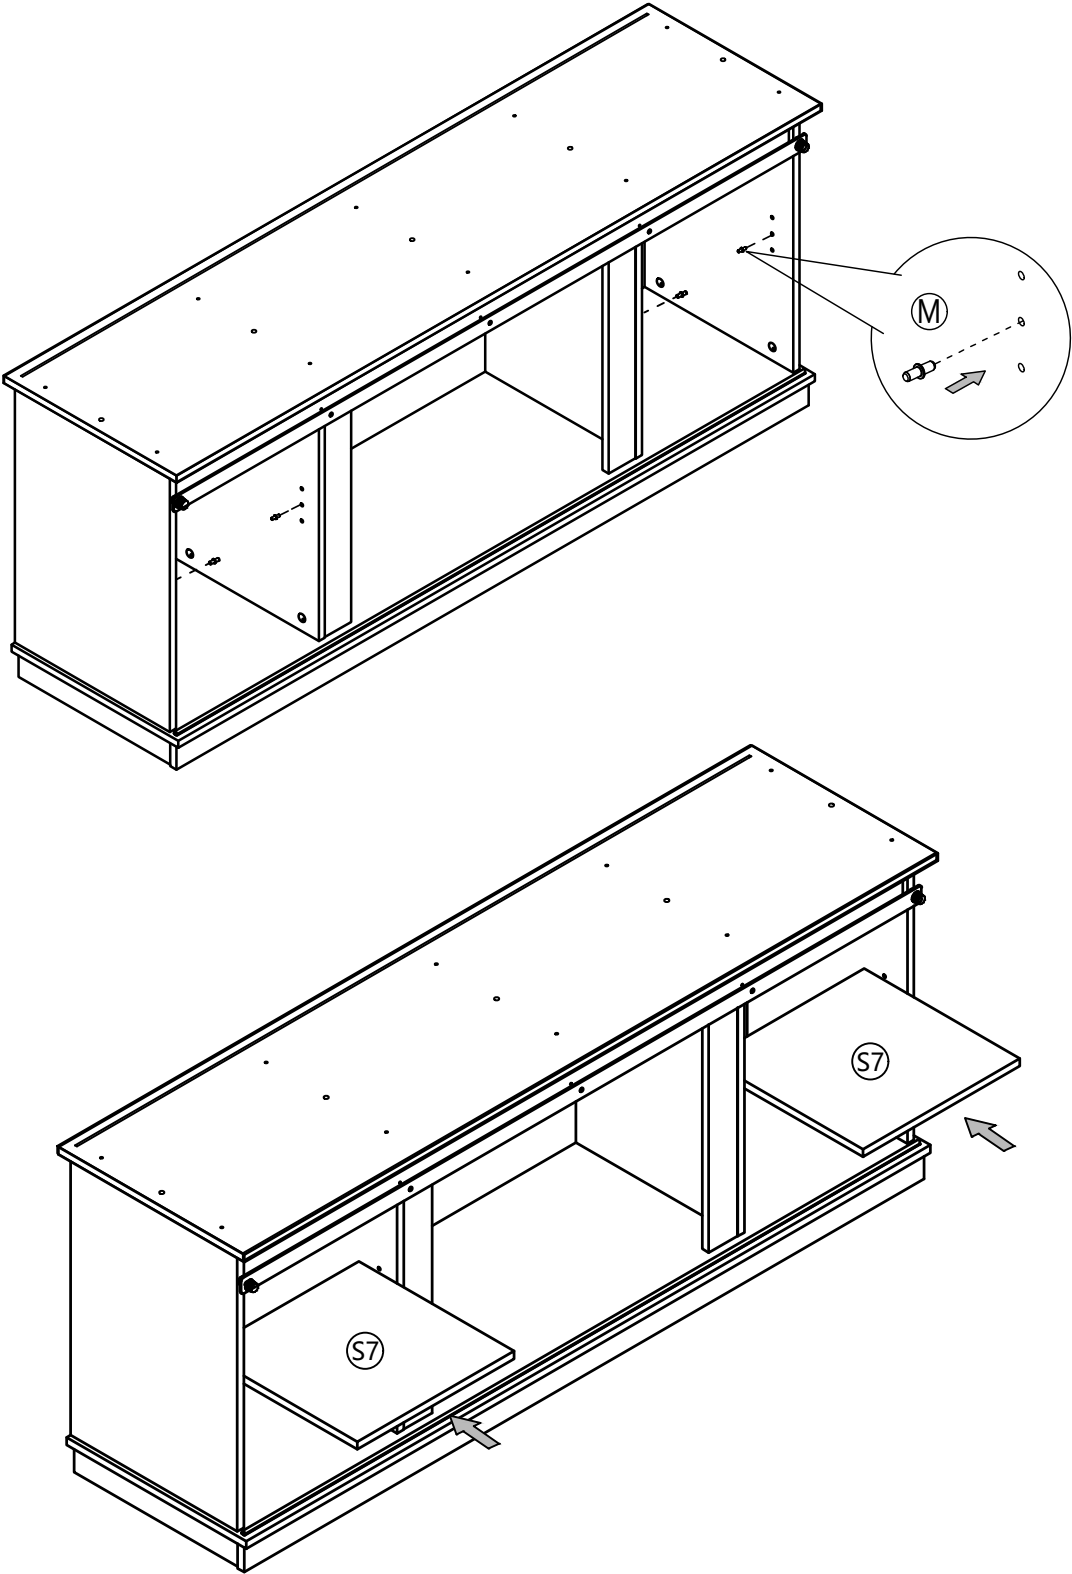 


STEP 14

     
The screws F on the door can be adjusted up and down

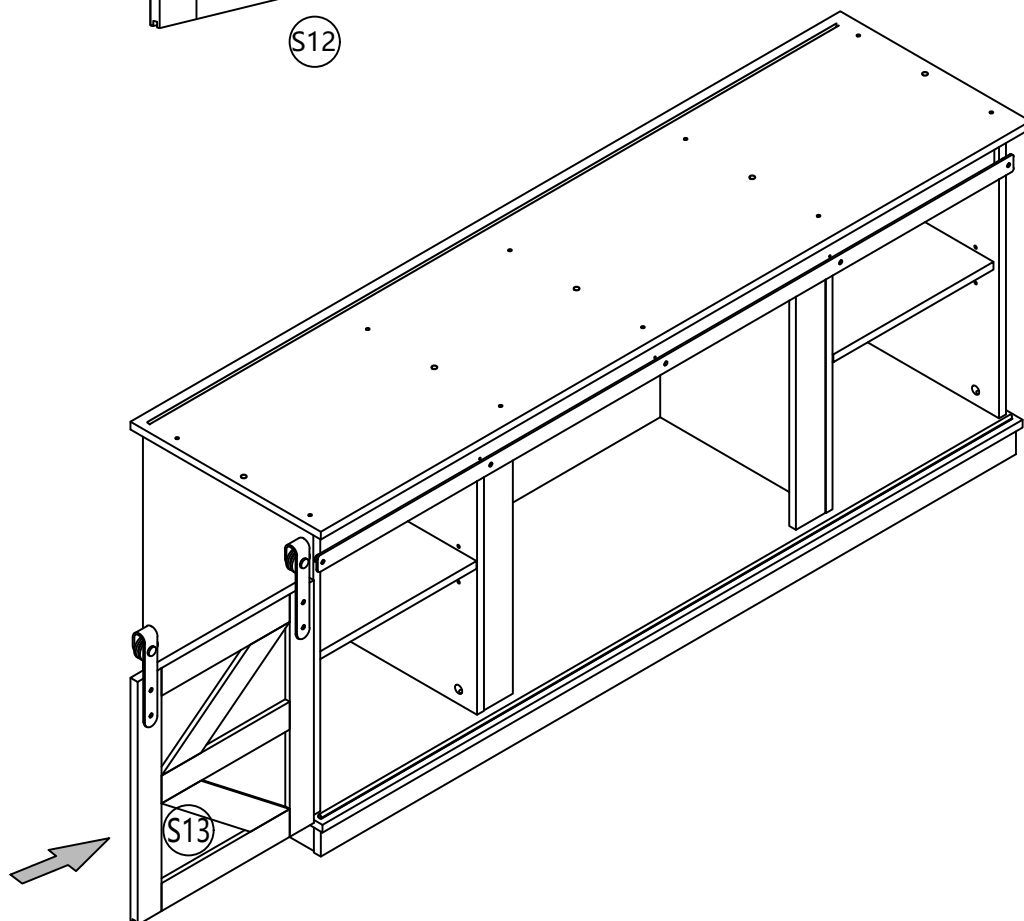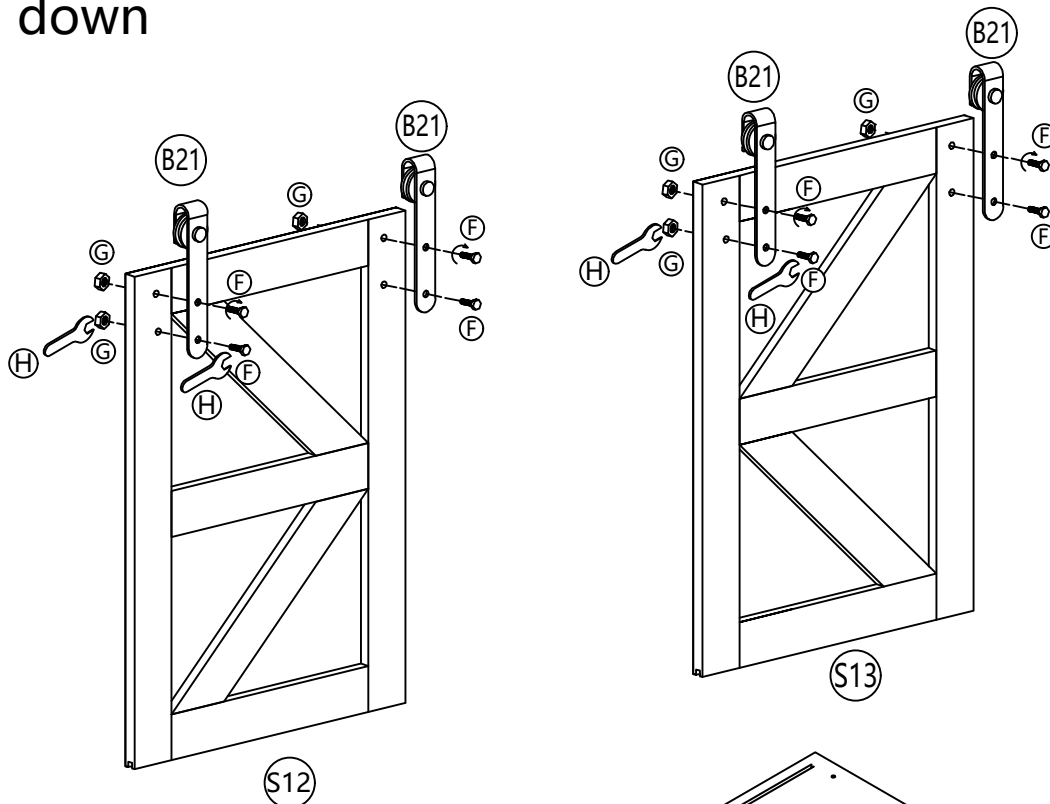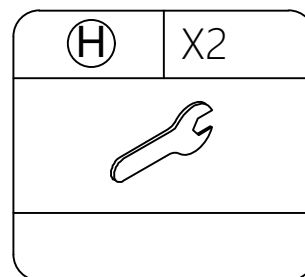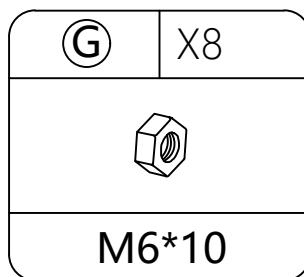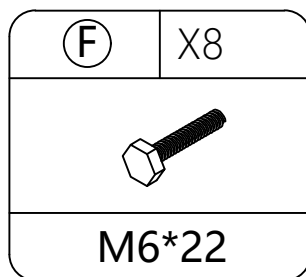

   STEP 15

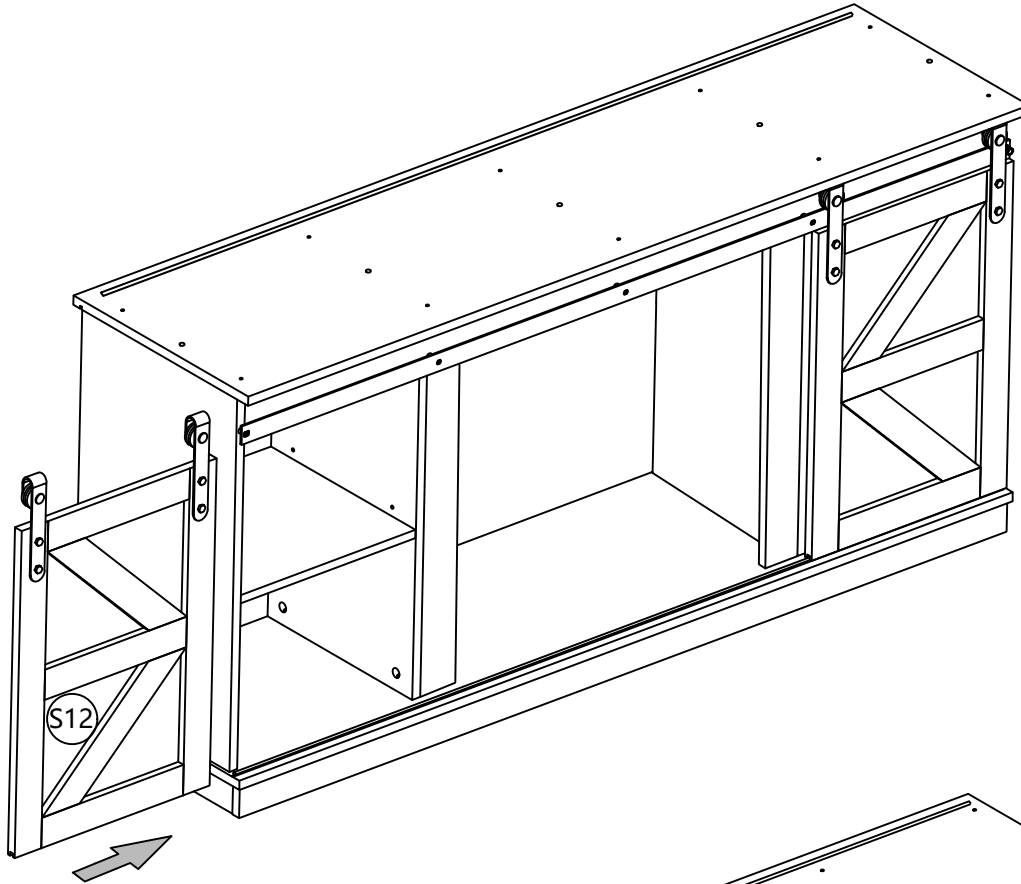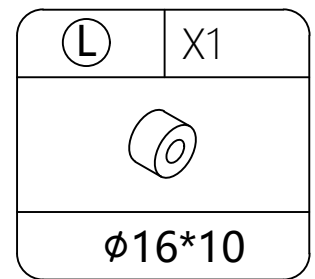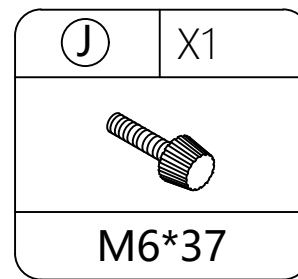


Tighten all the screws
to 100%

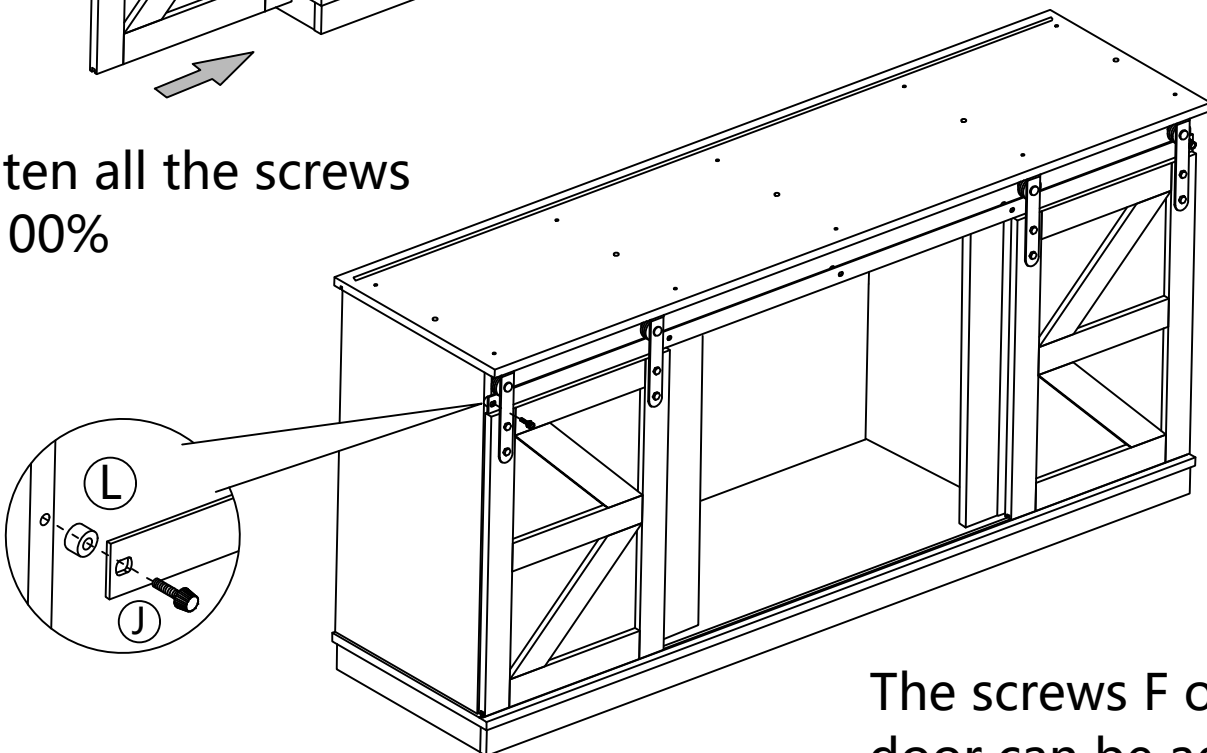 






The screws F on the
door can be adjusted
up and down

STEP 16


Ⓔ	X8
	
ø3.5*16	

 ⓪	X8
	

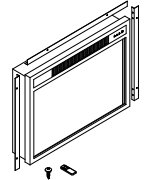 
Fireplace X 1 Set	
	

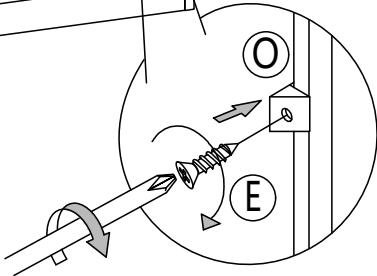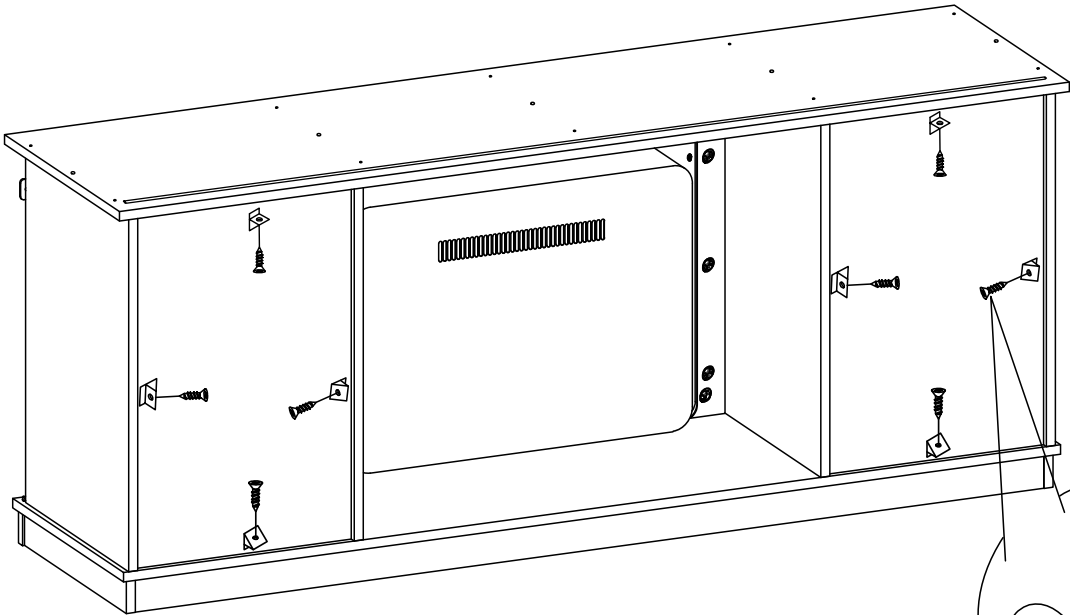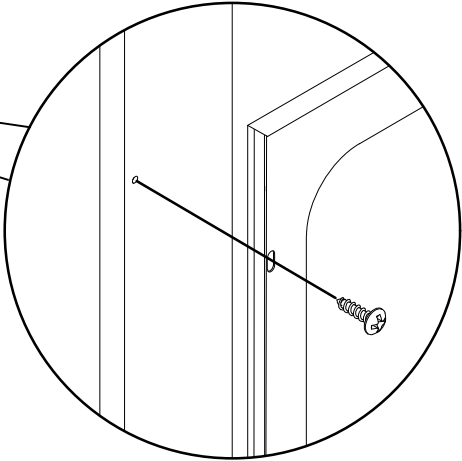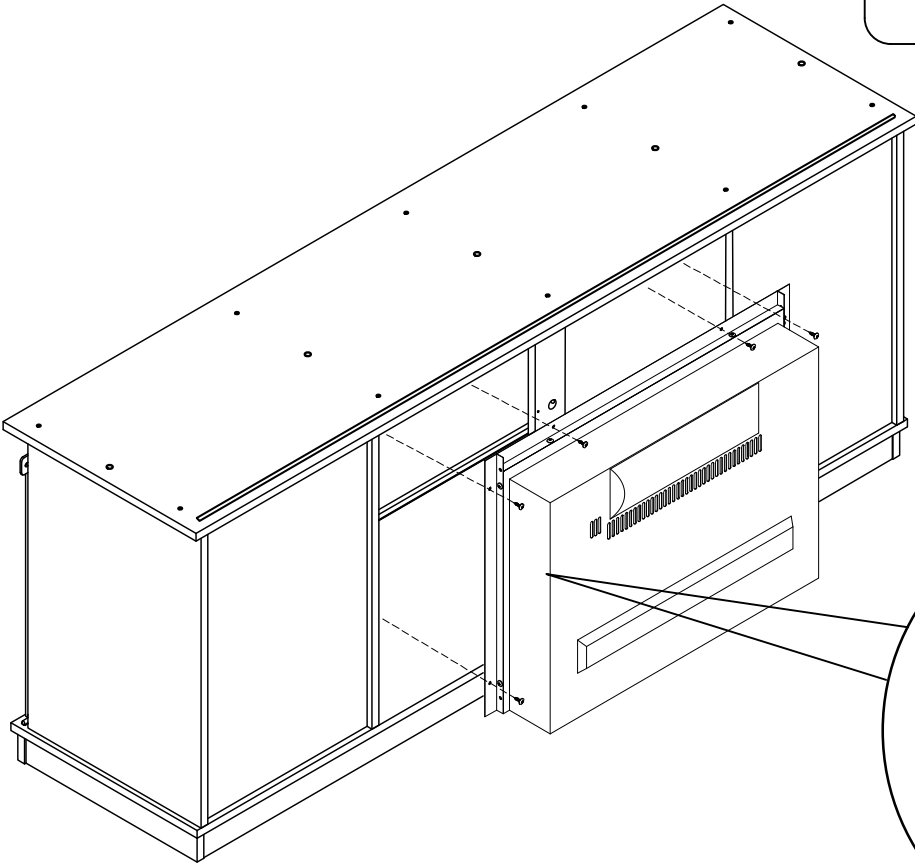    

 STEP 17




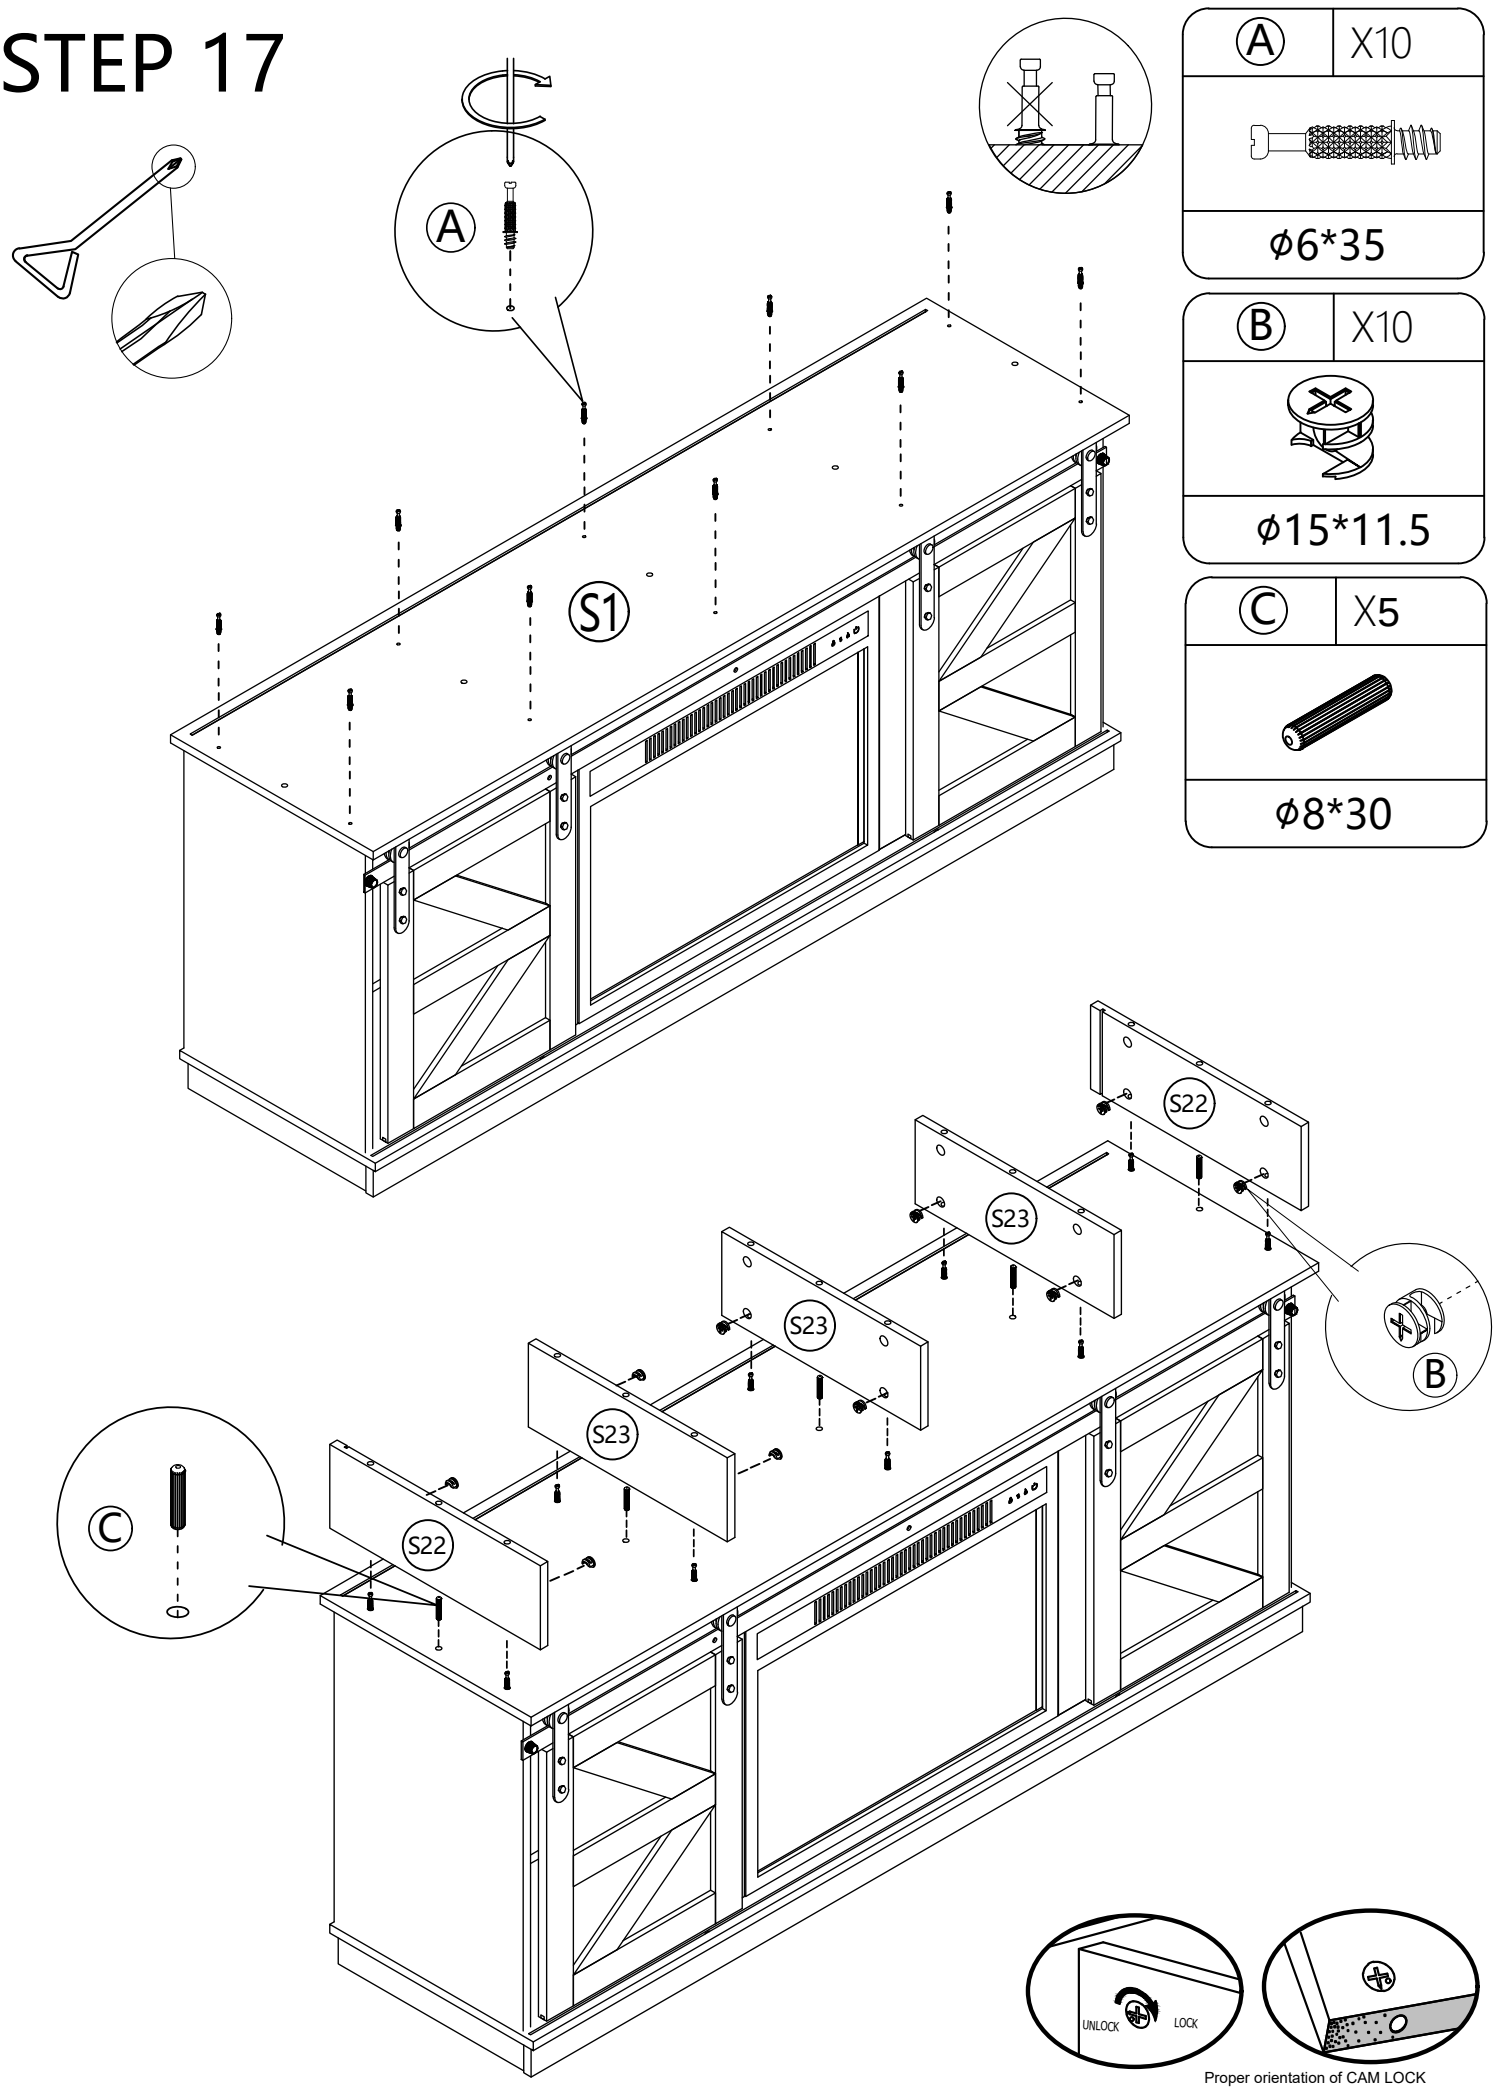


 STEP 18

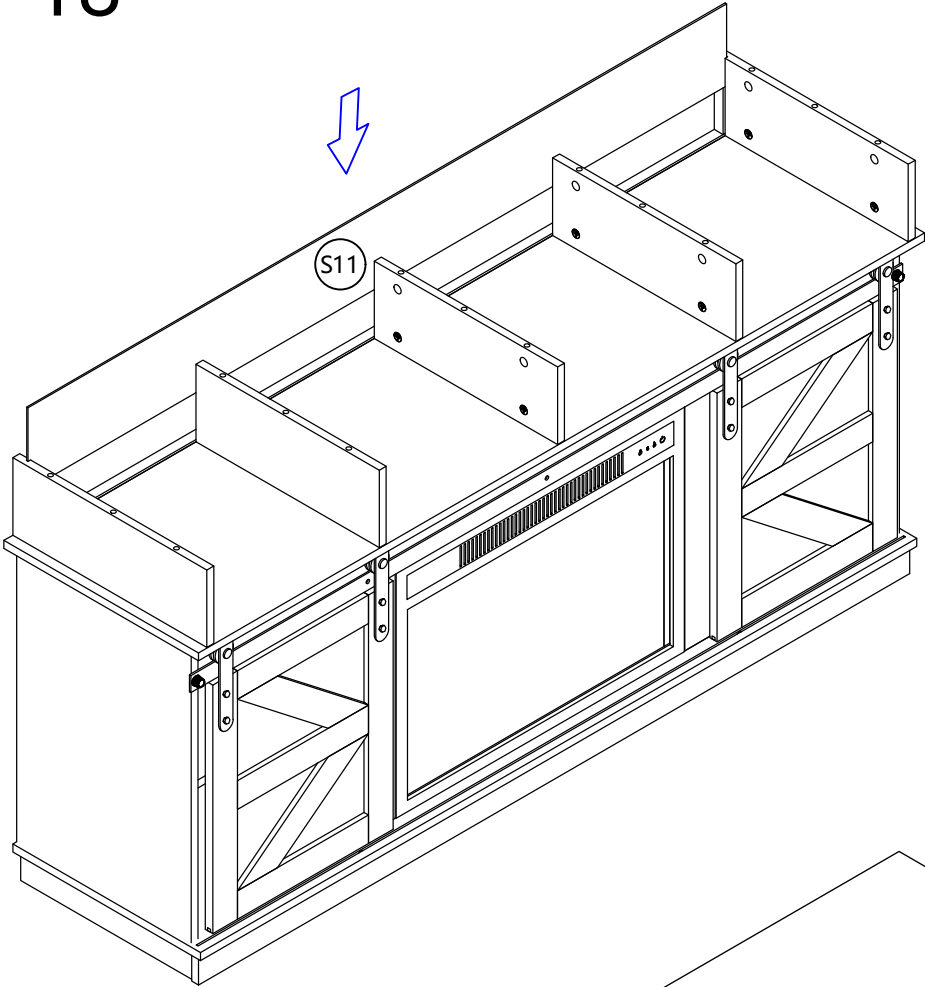


(B)	X10
ø15*11.5	

(C)	X5
ø8*30	

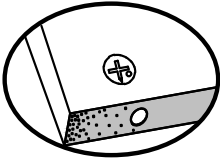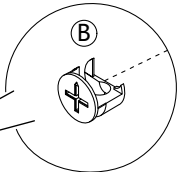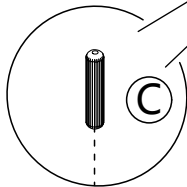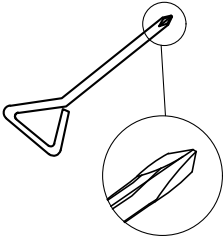    

Proper orientation of CAM LOCK

 STEP 19

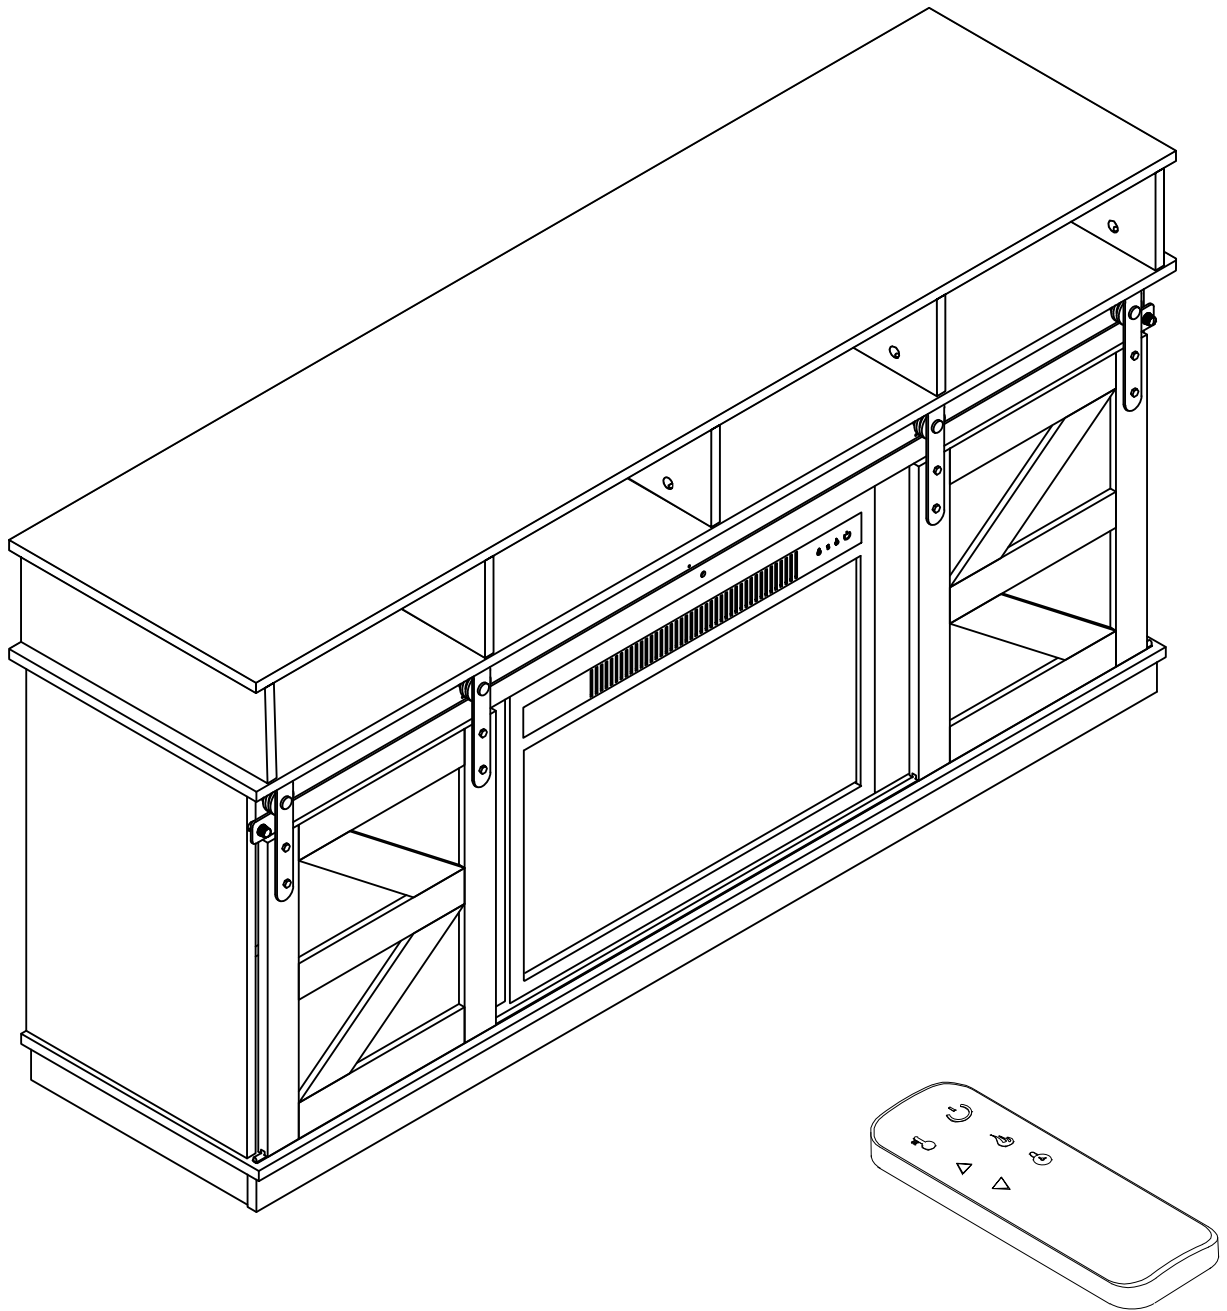

Use the remote control to control the fireplace. For specific instructions, please read the fireplace instruction manual.

FINISH!

FURNITURE CARE AND MAINTENANCE

Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- . Tighten all bolts and screws again within the first 2 weeks of assembly
- . Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- . Clean the surface of the particleboard with a lightly dampened cloth
- . Small amount of mild soap can be used if necessary
- . Dry the surface immediately after cleaning.
- . DO NOT use bleach or alcohol detergent to clean the surface.
- . DO NOT apply wood treatment on parts made with particleboard.

Particleboard will swell and distort when suffer damage.
Make sure to dry the furniture immediately after cleaning