

Swing Set-Swn0403

FOR AGES:

3-12

WEIGHT LIMIT:



35KG
/per seat

TO BUILD:




TIME:

1-2H





HOW-TO
Paper
instructions

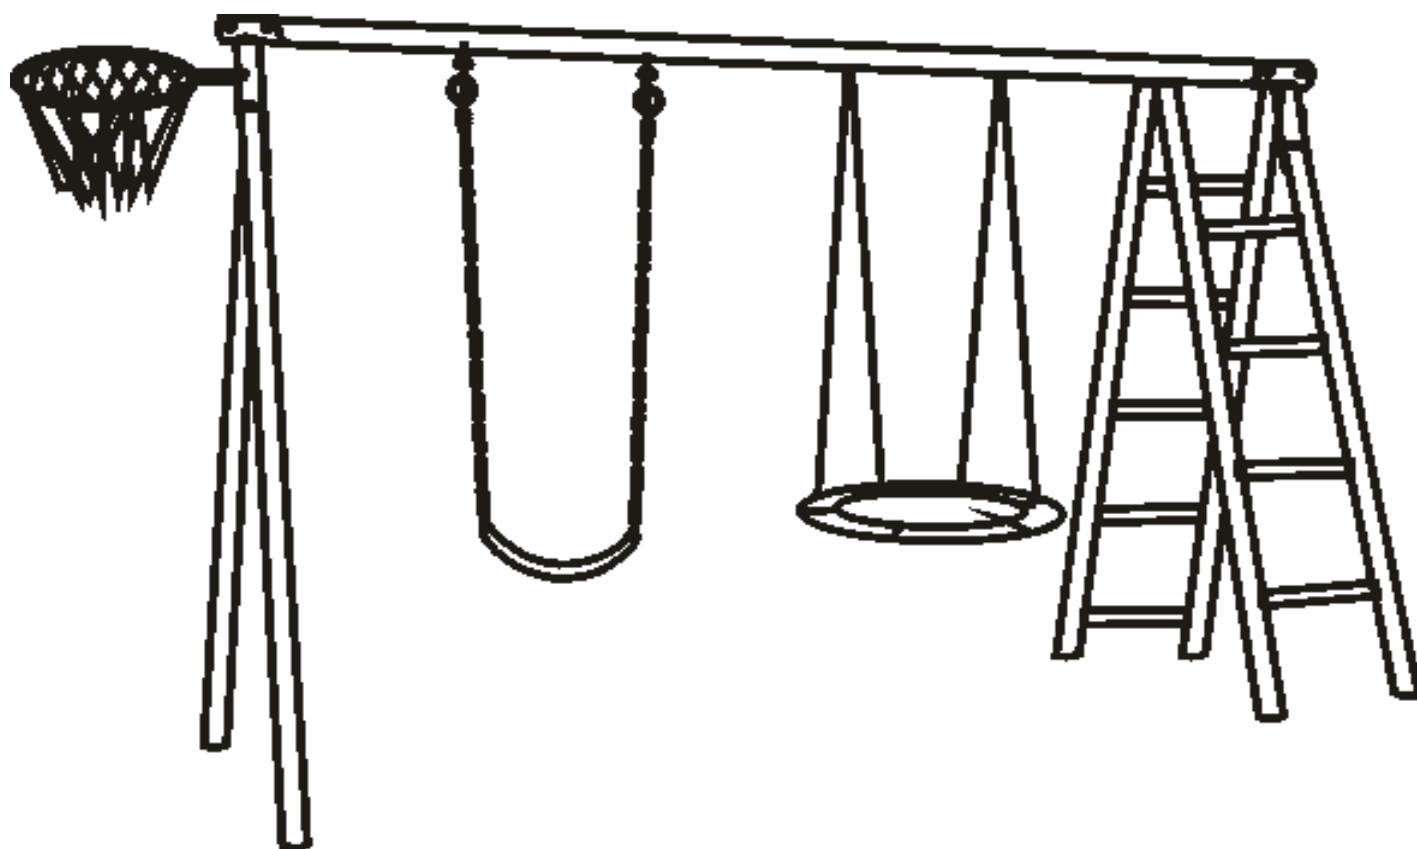

WARNING: ONLY FOR DOMESTIC OUTDOOR USE

To guarantee safety. Please give special attention to the assembly, safety, and care instructions detailed in this document.

PARTS LIST

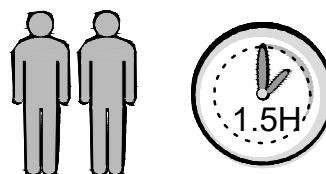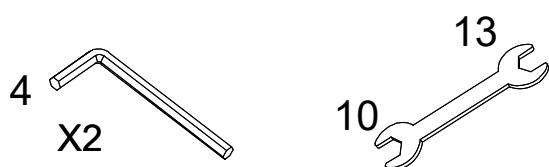


YC40x1



YC50 x2



 
P/QK-1 x1




YB418 x1



 YB414 x1



YB415x1

 

P/PT x1



YC51x2



 
YD1 x2



YB211x4



YBB4 x4



YC52 x2

 
YD3 x6



YBB5 x2



YB19 x2



YD2 x4



YB20 x2



YB22 x2



YC3 x8



YN1 x4



Ø 8/M6x50

YN2 x12



Ø 8/M6x45

YN4 x4



Ø 8/M6x20

YF2 x2



M 8x50

YF11 x8



M 6x25

YE1 x2



 
M 6x35

YE5 x2



M 8x78

YG2 x10



M 8

YE12 x8



 
M 6x40

YG13x36



M 6x20

YG1 x2



M 6

YD10x8



Ø 6

YD11 x28



Ø 8

YD12x2



Ø 10

YL1 x28



Ø 8

YL2 x8




Ø 6

ASSEMBLY INSTRUCTIONS

STEP 1


YBB4 x4
 YB211 x4
 P/QK-1 x1
 YB418 x1
 YB414 x1
 YB415 x1
 YN1 x4
 YN2 x12
 YG13 x16
 YD1 x2
 YL1 x16
 YD11 x16

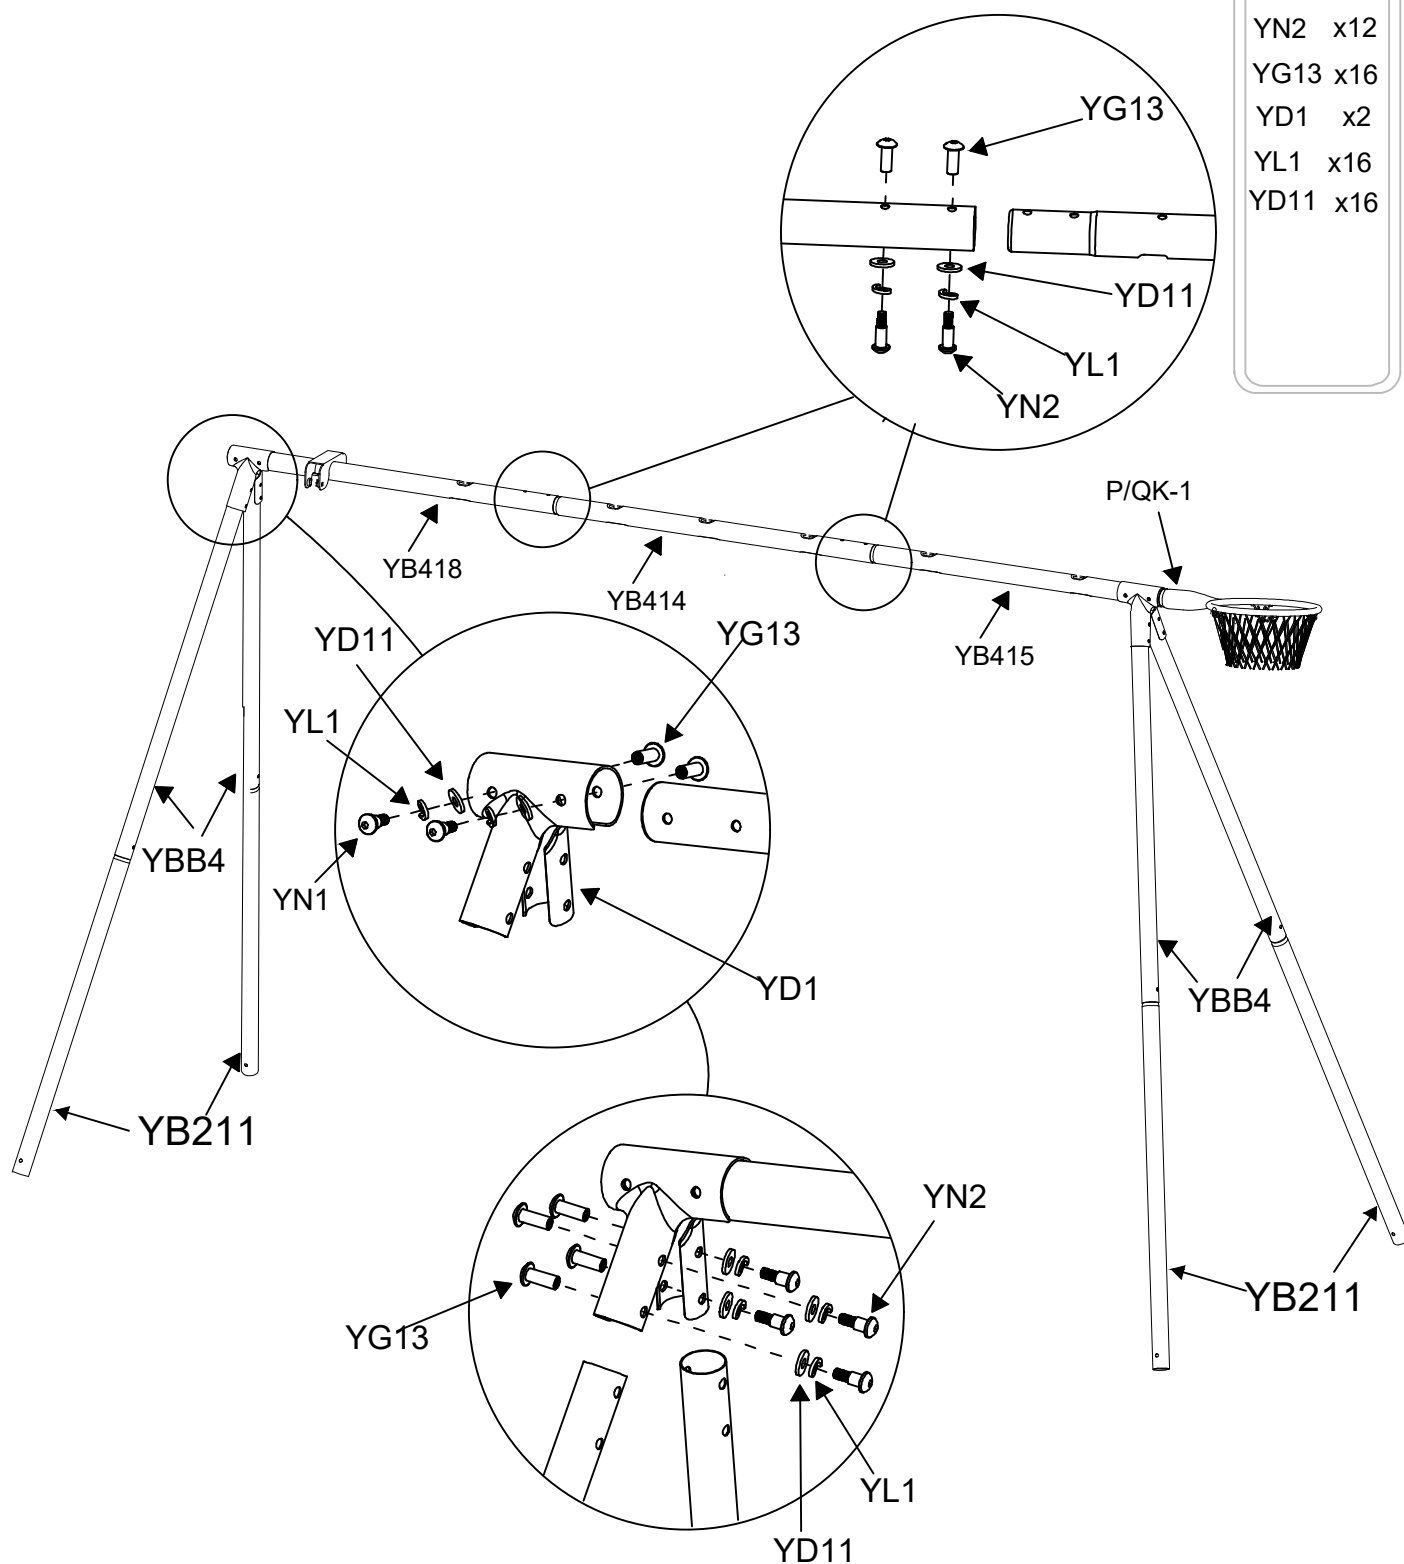

ASSEMBLY INSTRUCTIONS


STEP 2

YBB5 x2
P-PT x1
YC34 x1
YC40 x1
YD10 x4
YL2 x4
YD3 x6
YG2 x6
YE12 x4
YG13 x4
P/DB x1

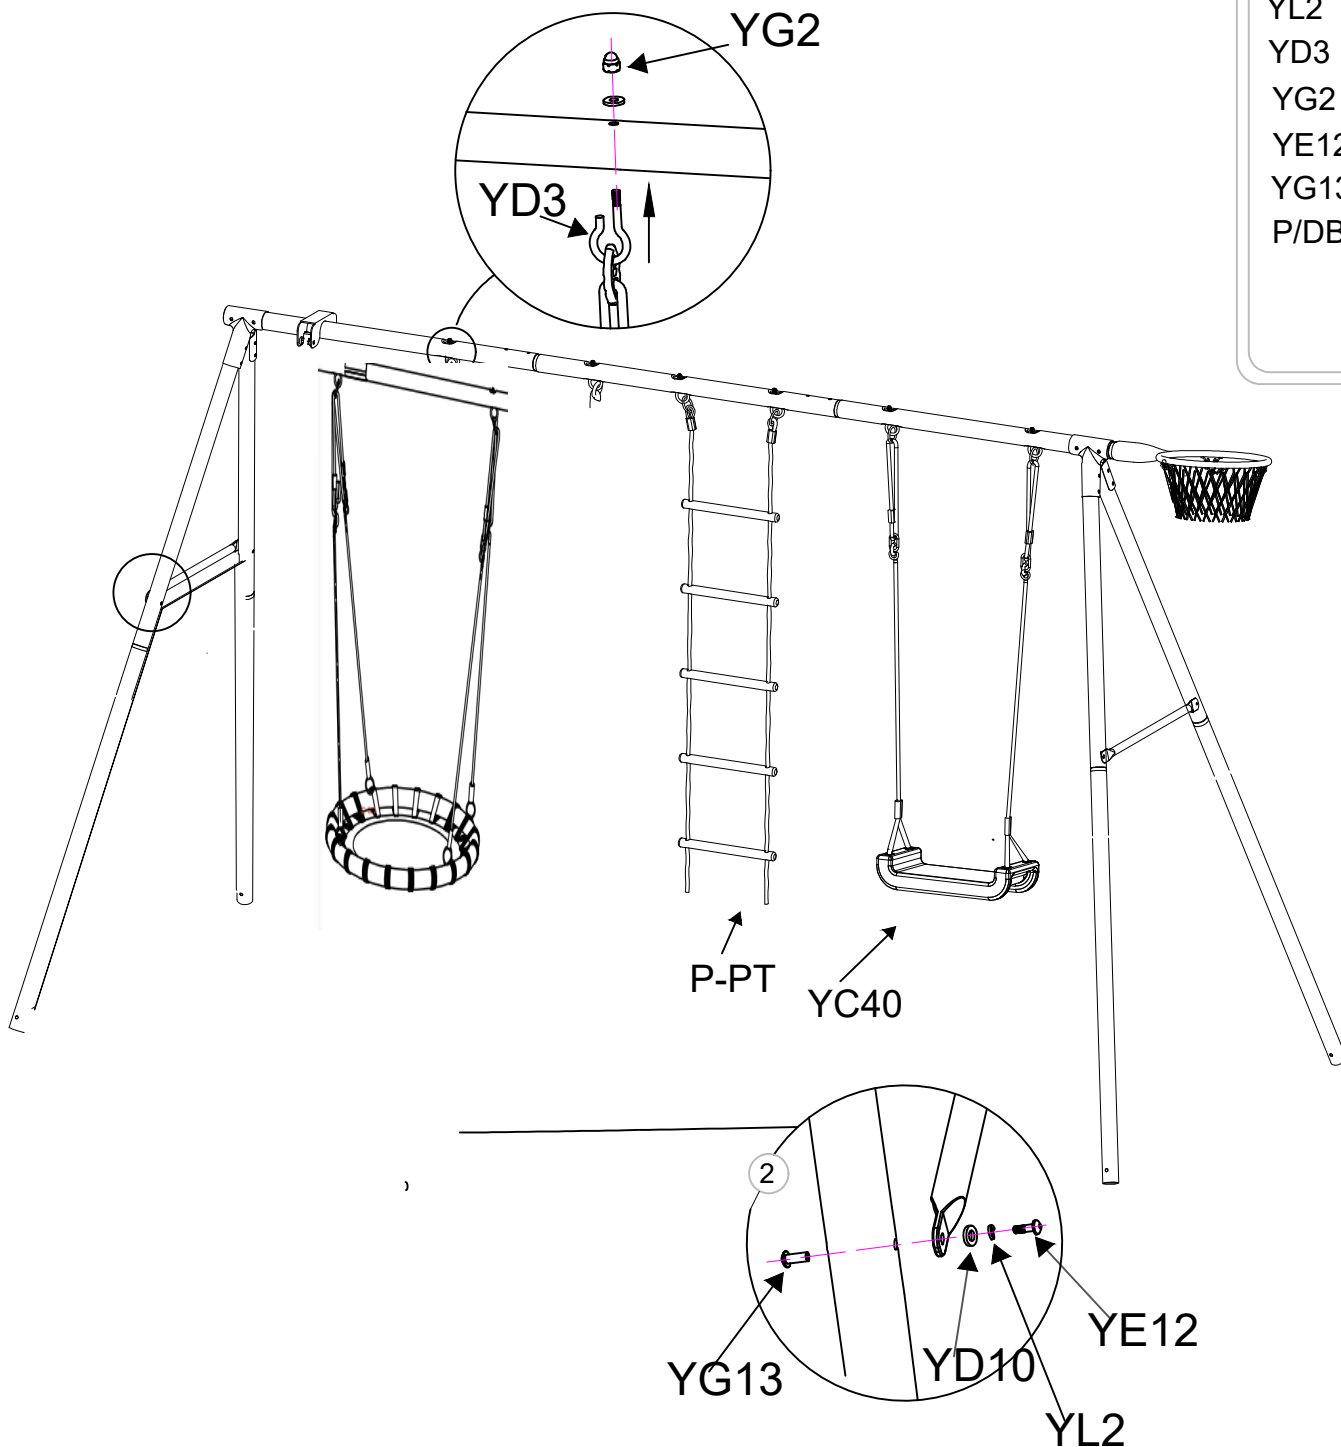


ASSEMBLY INSTRUCTIONS

STEP 3

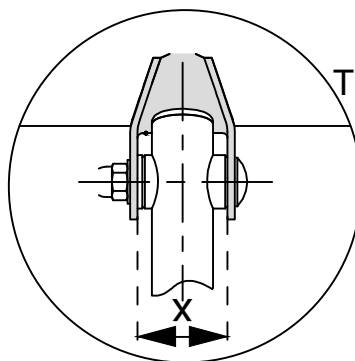

Tighten YG2 nut,
until $x = 34\text{mm}$

YD11 x4
YG2 x4
YF2 x2
YD12 x2
YC3 x8
YG13 x4
YL1 x4
YB19X x2
YB20 x2
YB22 x2
YN4 x4
YE5 x2

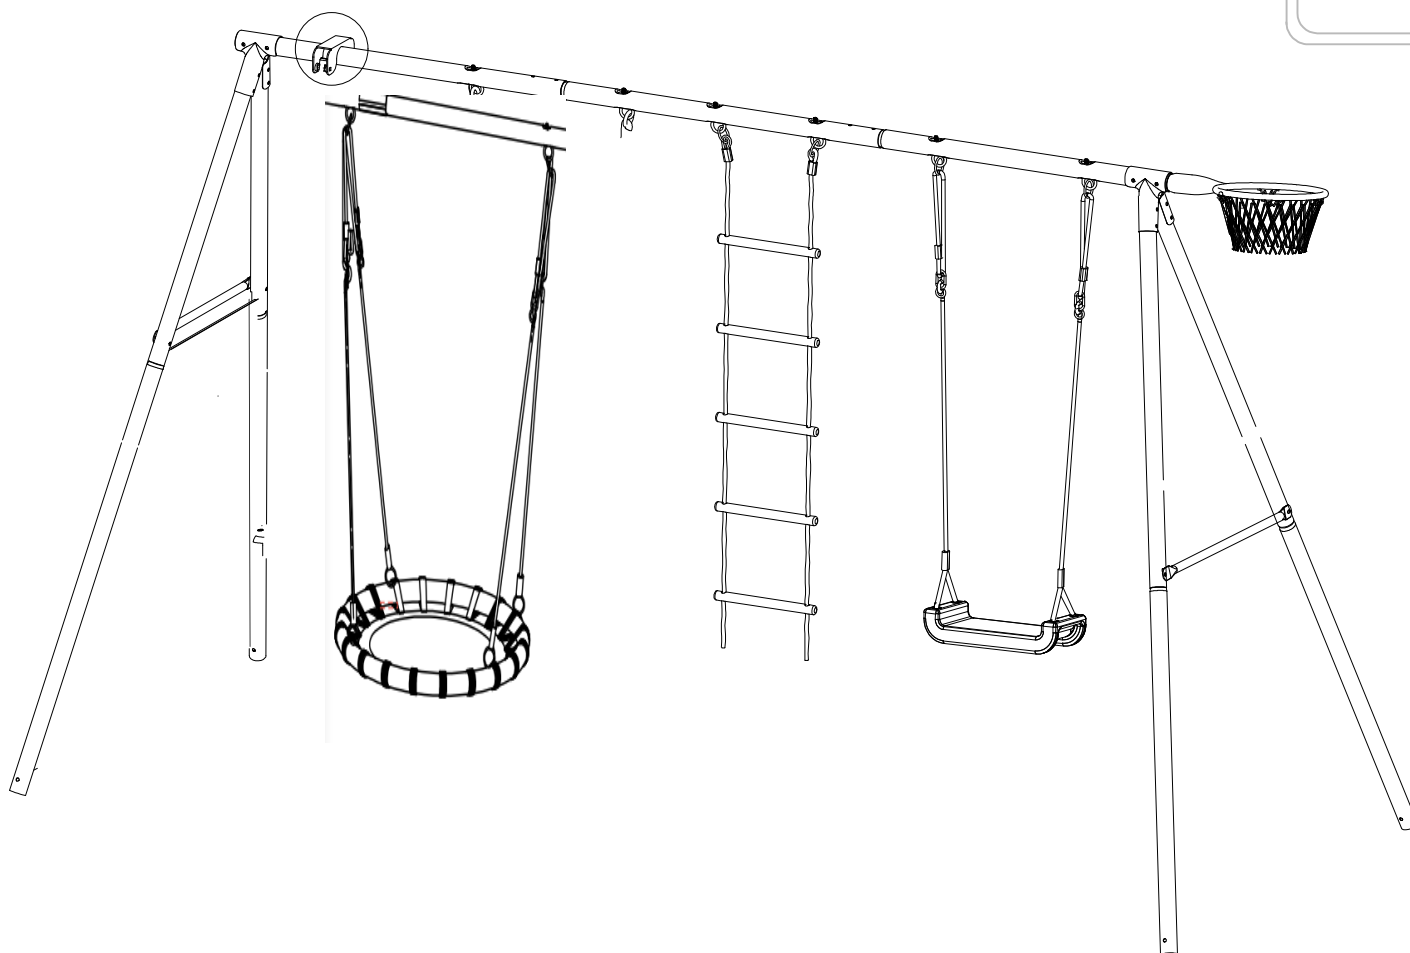

ASSEMBLY INSTRUCTIONS

STEP 5



YL2 x4

YD10 x4

YE12 x4

YD2 x4

YG13 x4

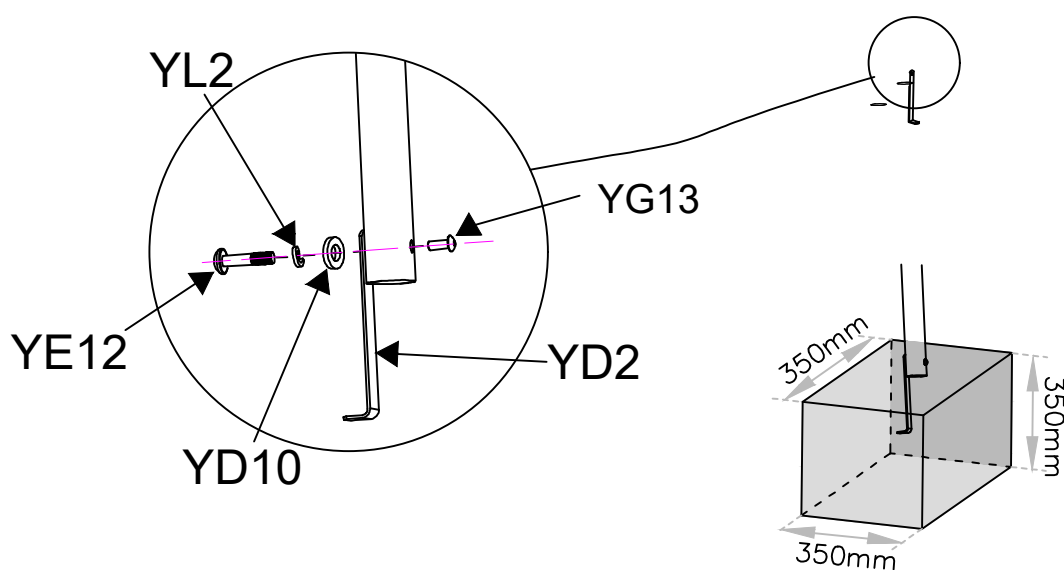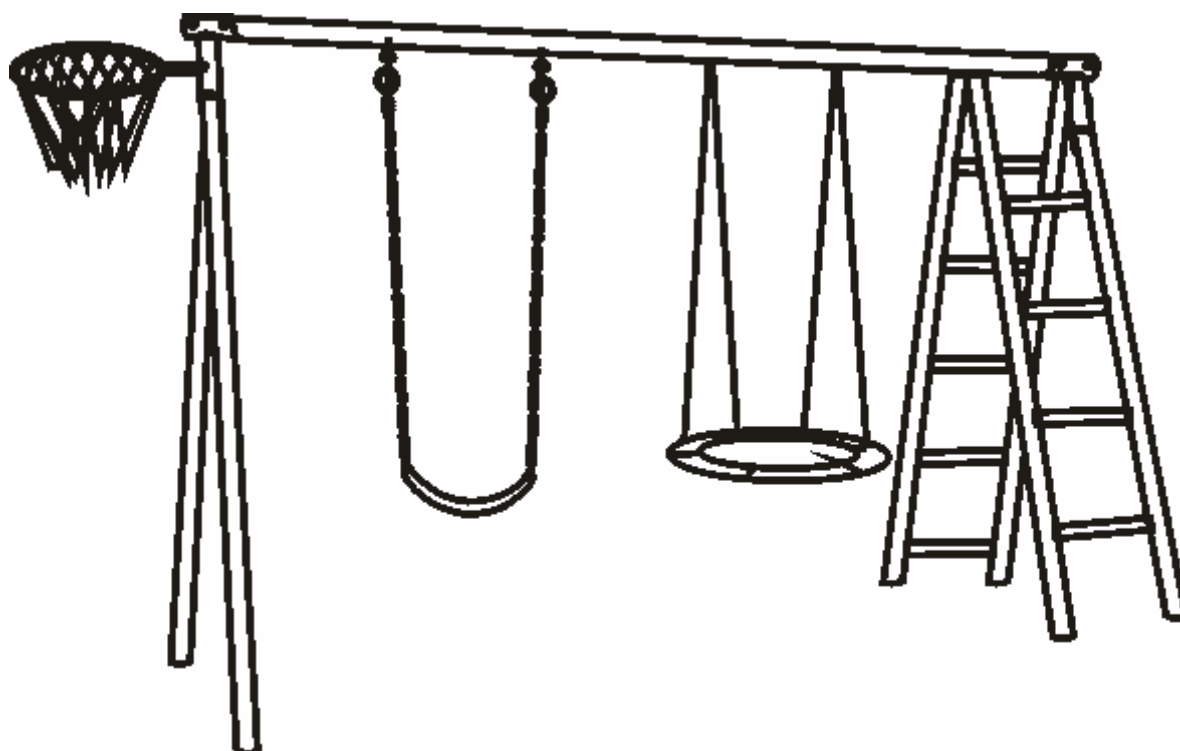

WARNING: The anchors must be placed under the ground in order to reduce tipping hazards

WARNINGS

ASSEMBLY INSTRUCTIONS

To be retained for future reference.

WARNING: *Only for domestic outdoor use.*

Dear Customer,

To guarantee safety, please give special attention to the assembly, safety, and care instructions detailed in this document.

ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.

- 1) This product must be assembled by an adult.
- 2) Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.
- 3) The EN 71-8, chapter 4.6 standard requires a 40cm minimum distance between the ground and a 2 person swing and a 35cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after-sales service.
- 4) We advise that the swing set is not faced towards the sun
- 5) Before commencing, check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.
- 6) Dispose of packaging thoughtfully.
- 7) Do not allow children to play with packaging.

SAFETY ADVICE

- 1) This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 12 years with a maximum weight of 35kg. It must be used under adult supervision.
- 2) Only 4 children may safely use the equipment simultaneously
- 3) As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.
- 4) This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.
- 5) The swing set should be set up on a flat surface 2 meters away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.
- 6) This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.
- 7) This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.
- 8) Anchors should be placed level with or below ground level in order to reduce tripping hazards
- 9) The anchorage must be checked regularly, in addition to the hooks and fixtures.
- 10) Dispose of packaging thoughtfully.
- 11) Do not allow children to play with packaging.
- 12) During the assembly, keep children away from the toy to avoid child swallowing the small accessories.

FIXING INTO THE GROUND

- 1) Assemble the swing set completely and place it in the desired place.
- 2) Locate and mark the position for the sealing legs.
- 3) Check the dimensions showed on the diagram, and correct if necessary.
- 4) Under the four feet, mark a square of 350 X 350 mm and dig a 350 mm deep hole.
- 5) Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.
- 6) Place the sealing legs in the concrete in the located place (see point 2). Make sure the drilled end of the sealing legs is above the level of the concrete.
- 7) Once the concrete is set, screw the feet into the sealing legs.
- 8) Ensure that the concrete is completely dry before using the swing.
- 9) Cover the concrete with soil. We strongly advise checking this anchoring periodically

MAINTENANCE

- 1) All metal parts are galvanized steel and powder coated for rust protection; however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.
- 2) The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.
- 3) To check all nuts and bolts for tightness and tighten when required.
- 4) To check all coverings for bolts and sharp edges and replace when required.
- 5) Toys may collapse or be dangerous if they don't check regularly.
- 6) All parts that are under constant friction should be oiled regularly with a suitable lubricant.
- 7) The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed. It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.
- 8) Check for signs of wear, especially where swinging apparatus' plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the apparatus should be replaced.
- 9) All used apparatuses and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.
- 10) If any modifications made by consumer to the original activity toy shall be carried out according to the instructions of the manufacturer.
- 11) Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- 12) Check swing seats, chains, ropes and other means of attachment for evidence of deterioration;

PRACTICAL ADVICE

Frequent questions and observations

SAFETY

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

Comfort

- 1) If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus. The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

- 2) This Swing Set must be used under adult supervision. Keep any additional components, they may be useful for later operation of maintenance.
- 3) When a child is playing on the device, other children can not run in the area of movements of elements to impact.

CAUTION !Fall danger

IMPORTANT! Wait until the concrete is set before using your slide and check anchorages regularly.



