

BON-AIRE OWNERS MANUAL

MODEL T504LAE

90 PSI 12 VOLT HIGH SPEED TIRE INFLATOR



CAUTION: Please read this Owner's Manual before operating to ensure safe use. Please save and refer to this manual for future use of your AIR XPRESS High Speed Tire Inflator



Parts Description:

<u>Item #</u>	<u>Name</u>
1	12 Volt Plug
2	Valve/ Tire Chuck
3	ON/OFF Power Switch
4	Pressure Gauge
5	Pressure Release Button
6	Ball Adaptor
7	Mattress Adaptor
8	Nylon Carrying Case

Important Safety Information:

1. Inflator: Use 12 volt DC only. Make sure that your vehicle 12 volt power outlet is free of any ash residue or debris. A dirty 12 volt power outlet can cause the Inflator and/or power cord to overheat. Overheating can cause damage to your inflator/vehicle which could cause bodily harm or injury. Disconnect power when not in use.
2. This Inflator is designed to inflate car tires, bike tires, ATV tires, sports equipment, air mattresses, beach toys and other inflatables. Do not use for any purpose other than inflating. If you do so, bodily harm or personal injury may occur.
3. When operating your Inflator, do not run more than 10 minutes continuous use. Allow Inflator to cool down 10 minutes before re-using.
4. After using, turn off power switch (3) and disconnect from vehicle 12 volt power outlet.
5. The Inflator is not a toy. Keep away from children at all times.
6. Do not carry Inflator by air hose or power cord, damage may occur.
7. Do not leave the Inflator unattended while in operation.
8. Do not over inflate. Be sure to follow the manufacturer's instructions for the item you are inflating.
9. Keep the Inflator away from flammable areas/liquids at all times.
10. Do not operate the Inflator in wet or damp areas.
11. Operate the Inflator only with the accessories that are included.

NOTE: THIS INFLATOR OPERATES ONLY ON 12 VOLT DC. DO NOT ATTEMPT TO OPERATE THIS INFLATOR WITH ANY OTHER SOURCE OR VOLTAGE. DO NOT REWIRE OR RECONFIGURE INFLATOR FROM ITS ORIGINAL DESIGN OR PERSONAL INJURY OR BODILY HARM MAY OCCUR.

To Operate Inflator:

CAUTION: DO NOT OVER INFLATE. A Pressure Release Button (5) is provided to easily release air/pressure from the item when needed by pressing and holding the Pressure Release Button until the desired amount of air/pressure is released from your tire or desired item.

Vehicle/Bike Tire:

1. Connect the 12 Volt Plug (1) into the Vehicle 12 Volt Power Outlet.
2. Connect the Valve/Tire Chuck (2) to Tire Air Valve and push down the Valve Lever Lock (2) to secure the connection.
3. Slide the ON/OFF Switch (3) to the ON Position and the Inflator will begin to operate. Inflate your tire or desired item to the correct pressure and shut off the Inflator by sliding the ON/OFF switch (3) to the OFF Position.

Ball:

1. Insert Ball Adaptor (6) in to the Valve/Tire Chuck (2) and push down the Valve Lock Lever (2) to secure the connection.
2. Press Adaptor's needle (6) into ball carefully.
3. Follow Step 3 above.

Mattress/Raft:

1. Insert Mattress Adaptor (7) in to the Valve/Tire Chuck (2) and push down the Valve Lock Lever (2) to secure the connection.
2. Press Mattress Adaptor (7) into mattress/raft carefully.
3. Follow step 3 above.

Specifications:

Voltage: 12V DC

Amperage: 12 Amp Max

PSI Rating: 90 Max

**BON-AIRE INDUSTRIES, INC.
873 EAST CITATION COURT
BOISE, IDAHO 83716
(800) 874-5771**