



ITEM #6030391
MODEL #93139

ANIMATED RUDOLPH®

ATTACH YOUR RECEIPT HERE



Rudolph the Red-Nosed Reindeer © & ®/™ The Rudolph Co., L.P. All elements under license to Character Arts, LLC. All rights reserved.

TEKKY and the logo design are trademarks of JCW Investments, Inc., d/b/a Tekky, and used under license.



Serial Number _____

Purchase Date _____



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

TABLE OF CONTENTS

Package Contents..... 2

Safety Information..... 3

Warning..... 3

Preparation..... 3

Assembly Instructions..... 4

Operating Instructions..... 7


Optional Demo/External Speaker Setup..... 8

Care and Maintenance 8

Troubleshooting..... 8

FCC Regulations..... 9

PACKAGE CONTENTS

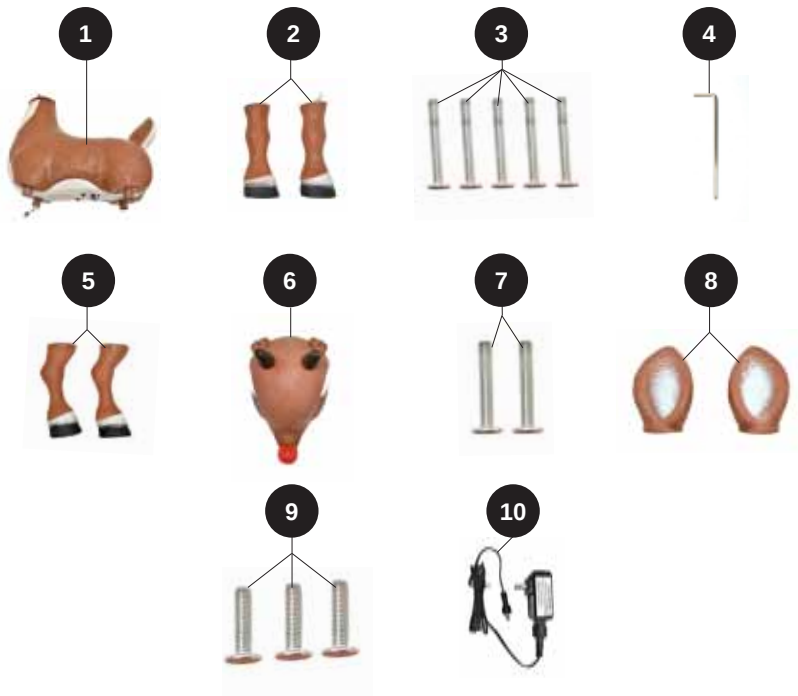

PART	DESCRIPTION	QUANTITY
1	Body & Control Box	1
2	Left & Right Front Legs	2
3	Large Screws	4 (+1 extra)
4	Hex Key	1
5	Left & Right Back Legs	2
6	Head	1
7	Medium Screws	1 (+1 extra)
8	Left & Right Ears	2
9	Small Screws	2 (+1 extra)
10	5.9V 2A DC Adapter	1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

1. This item is not a toy and should be used for decoration only.
2. This item contains small parts that can be a choking hazard.
3. Keep all plastic and wire parts away from children. Recommended for ages 15 and up.
4. Please use the adapter supplied by manufacturer.
5. Please assemble item according to instructions. Connect all wires according to matching letters.
6. Children should be supervised by adults around this item. Item should not be grabbed during operation, as it may cause a tipping hazard. Keep flammable materials away from the adapter as it produces heat during operation.
7. Item appearance may vary slightly from that shown on the package.

WARNING

- **Warning: Risk of injury to persons. Read and understand instruction manual before use.**
- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place additional weight on item while in operation.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Hex Key (included) required for assembly.

Estimated Assembly Time: 8 minutes

ASSEMBLY INSTRUCTIONS

1. Insert the LEFT FRONT LEG into the BODY & CONTROL BOX.

(Match A to A)

Secure the LEFT FRONT LEG to the BODY & CONTROL BOX by screwing in one of the LARGE SCREWS into the LEFT FRONT LEG clockwise using the HEX KEY. Do not overtighten.

IMPORTANT: LEGS are secured when the LARGE SCREW is seated flush with the LEG surface.



2. Insert the LEFT BACK LEG into the BODY & CONTROL BOX.

(Match B to B)

Secure the LEFT BACK LEG to the BODY & CONTROL BOX by screwing in one of the LARGE SCREWS into the LEFT BACK LEG clockwise using the HEX KEY. Do not overtighten.

IMPORTANT: LEGS are secured when the LARGE SCREW is seated flush with the LEG surface.



3. Connect the front right wire of the BODY & CONTROL BOX to the RIGHT FRONT LEG wire. (Match I to I)(Human Sensor)

Insert the RIGHT FRONT LEG into the BODY & CONTROL BOX. (Match C to C)

Secure the RIGHT FRONT LEG to the BODY & CONTROL BOX by screwing in one of the LARGE SCREWS into the RIGHT FRONT LEG clockwise using the HEX KEY. Do not overtighten.

IMPORTANT: LEGS are secured when the LARGE SCREW is seated flush with the LEG surface.



ASSEMBLY INSTRUCTIONS

4. Insert the RIGHT BACK LEG into the BODY & CONTROL BOX.

(Match D to D)

Secure the RIGHT BACK LEG to the BODY & CONTROL BOX by screwing in one of the LARGE SCREWS into the RIGHT BACK LEG clockwise using the HEX KEY. Do not overtighten.

IMPORTANT: LEGS are secured when the LARGE SCREW is seated flush with the LEG surface.



5. Connect the wire from the HEAD to the wire located on the neck of the BODY & CONTROL BOX.

(Match E to E)(HEAD Motion & LED Nose)

Insert the HEAD into the BODY & CONTROL BOX.

(Match F to F)


Secure the HEAD to the BODY & CONTROL BOX by screwing in a MEDIUM SCREW into the back of the HEAD clockwise using the HEX KEY. Do not overtighten.



6. Insert the RIGHT EAR into the HEAD.

(Match G to G)

Secure the RIGHT EAR to the HEAD by screwing in the SMALL SCREW into the EAR canal clockwise using the HEX KEY. Do not overtighten.

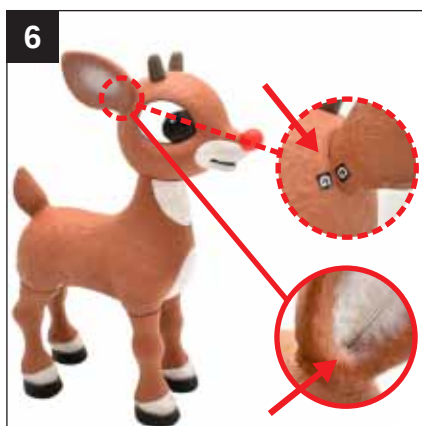

ASSEMBLY INSTRUCTIONS

7. Insert the LEFT EAR into the HEAD.

(Match H to H)

Secure the LEFT EAR to the HEAD by screwing in the SMALL SCREW into the EAR canal clockwise using the HEX KEY. Do not overtighten.



8. Plug the 5.9V 2A DC ADAPTER into the BODY & CONTROL BOX. Secure the ADAPTER wire in the hooks located on the inner side of the LEFT BACK LEG.



OPERATING INSTRUCTIONS

1. Check that the 5.9V 2A DC ADAPTER located on the BODY & CONTROL BOX is fully secured by twisting it tight. Do not overtighten.



2. Turn the power switch located on the BODY & CONTROL BOX to the ON position (marked in red). Make a loud sound (clap) or move in front of the item to activate.

OR

Turn the switch located on the BODY & CONTROL BOX to the HUMAN ONLY position (marked in blue) to activate the item with motion only. Move in front of the item to activate.

Turn the switch to the OFF (DEMO) position when not in use.



OPTIONAL DEMO/EXTERNAL SPEAKER SETUP

OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from optional footpad into the jack labeled DEMO JACK located on the CONTROL BOX.
 - 2. Place the power switch to the OFF(DEMO) position to enable demo activation.
 - 3. Step on the footpad to activate the scary sequence!
- * Footpads are sold separately and can be purchased at www.tekkyaccessories.com.



OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- 2. Turn the volume control knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- DESIGNED FOR SEASONAL OPERATION ONLY.
- NOT INTENDED FOR CONSTANT OR LONG-TERM USE.
- PROPER STORAGE AND USE ARE ESSENTIAL TO THIS ITEM'S LONGEVITY.
- IN INCLEMENT WEATHER, BRING ITEM INDOORS.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	• 5.9V 2A DC ADAPTER is not plugged in. • Switch on CONTROL BOX is not in the ON position. • Human sensor on the RIGHT FRONT LEG hoof is blocked.	• Check 5.9V 2A DC ADAPTER is plugged in and securely inserted into the CONTROL BOX. • Move the switch to the ON position. • Move any obstructions away from the RIGHT FRONT LEG.
You only hear item sound but no item activation.	• BODY & CONTROL BOX wires I and E are not properly connected.	• Make sure the BODY & CONTROL BOX wires labeled I and E are securely connected.
Item has no sound while operating.	• Volume knob is turned all the way down.	• Adjust volume knob to desired volume.

FCC REGULATIONS

FCC STATEMENT

FCC RULES: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.