



**PROJECT
SOURCE.**

Project Source® is a registered trademark
of LF, LLC. All rights reserved.


ITEM #0280039
0280102

FLUSHMOUNT CEILING FIXTURE

MODEL #FJ12-163-1
FJ12-163-2

Français p. 8

Español p. 15

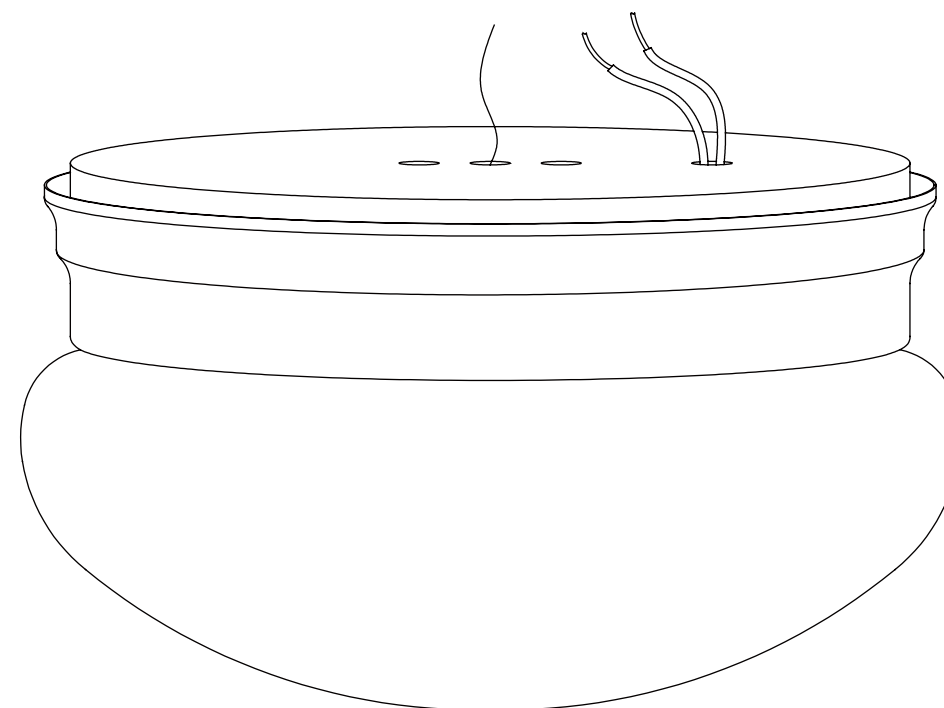

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Intertek




Questions, problems, missing parts? Before returning to your retailer, call our customer
service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday,
8 a.m. - 5 p.m., EST, Friday.

AB12306

Lowes.com




PACKAGE CONTENTS

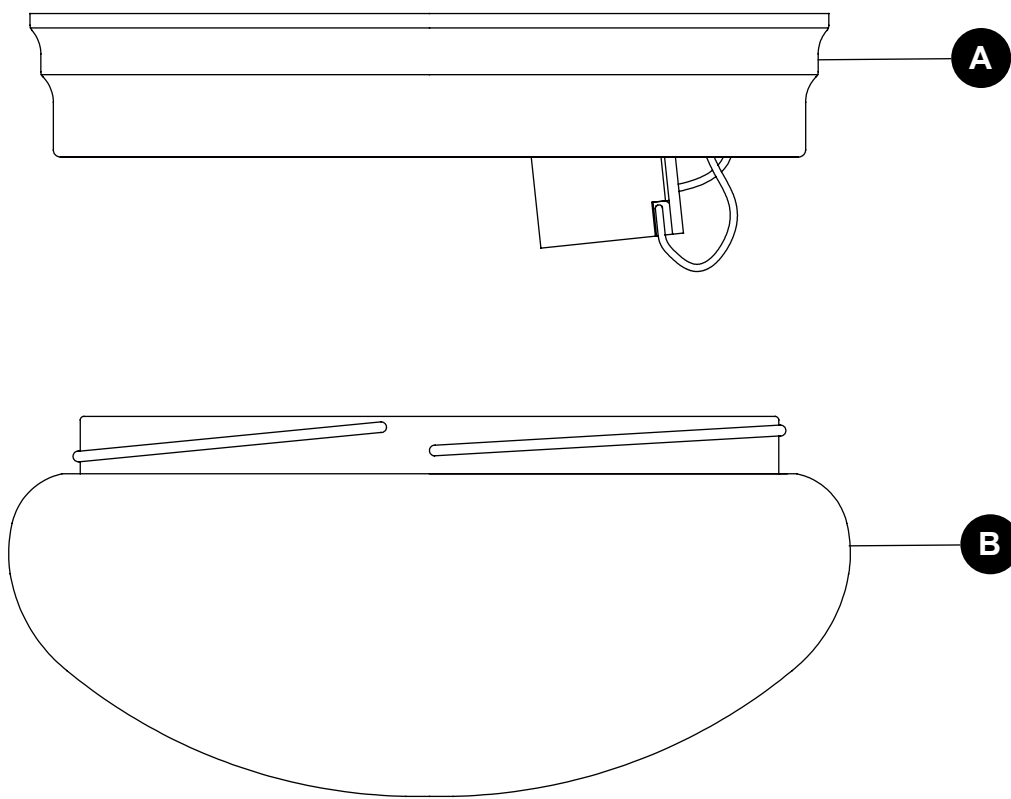

| PART | DESCRIPTION | QUANTITY |
|------|-------------|----------|
| A | Fixture | 1 |
| B | Glass Shade | 1 |

HARDWARE CONTENTS (shown actual size)

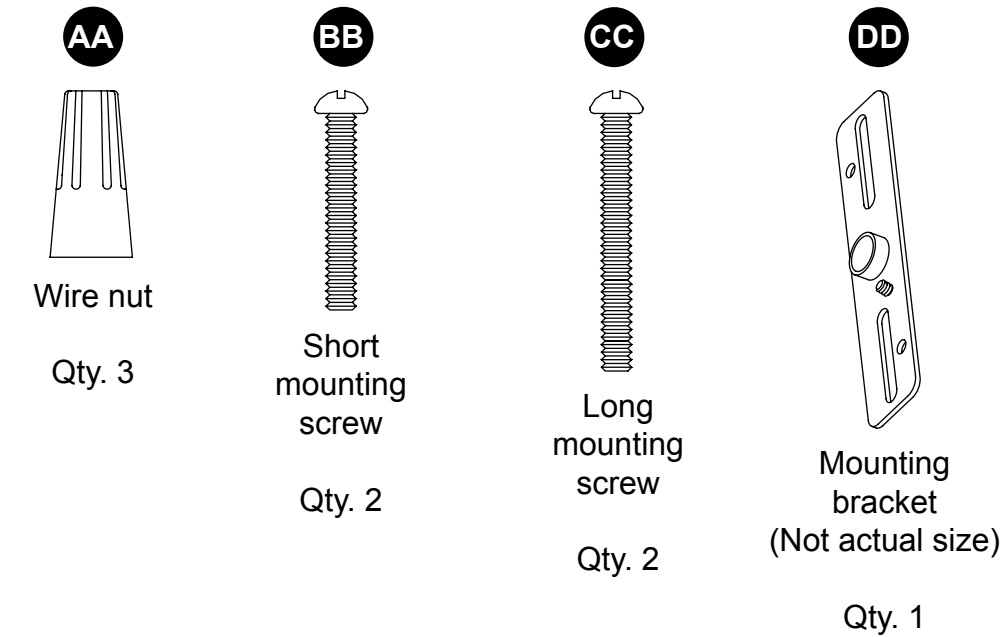

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

! WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes



 
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.

ASSEMBLY INSTRUCTIONS

1. Tighten the long mounting screws (CC) 2 full turns into the holes in the mounting bracket (DD). Then fasten mounting bracket (DD) onto the ceiling outlet box (not included) using short mounting screws (BB).

Hardware Used




- BB** Short mounting screw  x 2
- CC** Long mounting screw  x 2
- DD** Mounting bracket  x 1

2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded junction box.

3. Attach wire nuts (AA). Tape wire nuts (AA) and wires together.

Hardware Used

- AA** Wire nut  x 3

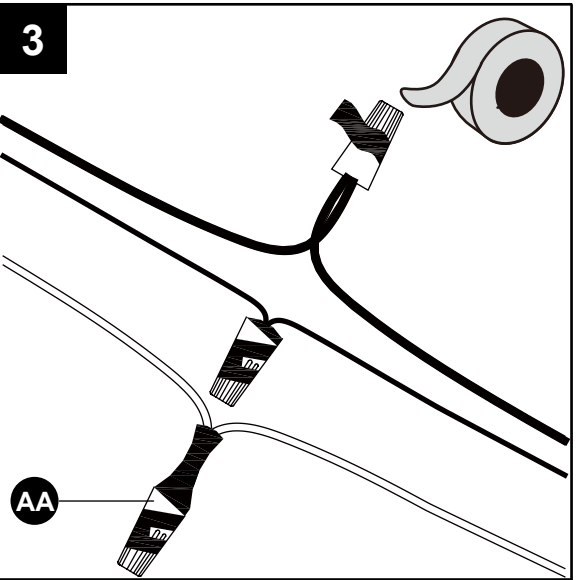
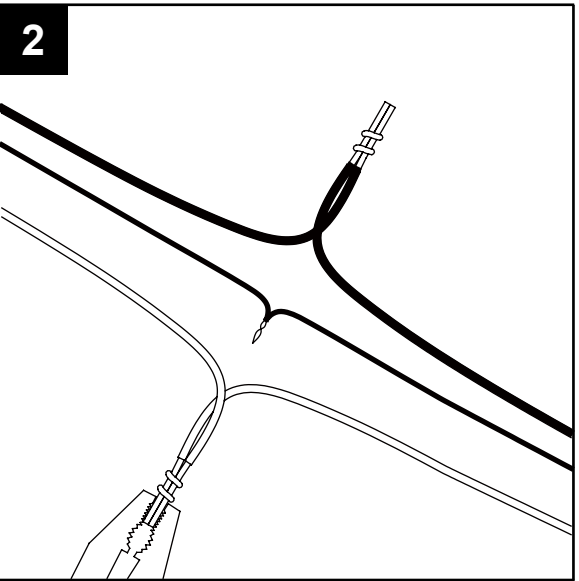
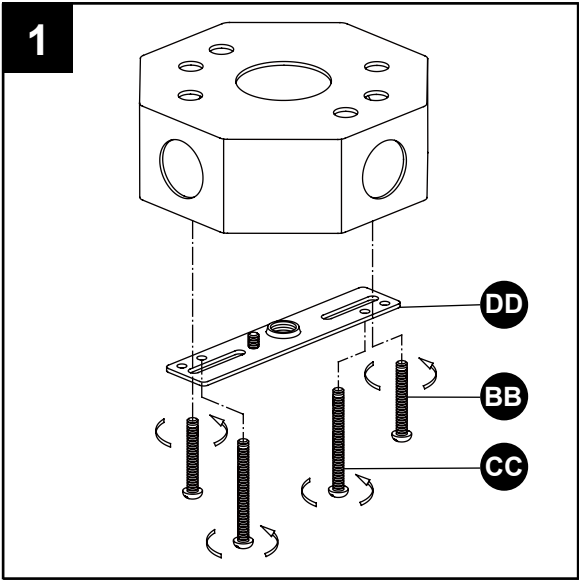


ASSEMBLY INSTRUCTIONS

4. Place the fixture (A) over the outlet box. Allow heads of long mounting screws (CC) to come out through the large ends of the key holes. Twist fixture (A) until heads of long mounting screws (CC) slide into narrow end of key holes. Tighten long mounting screws (CC) to secure fixture (A).

5. Install light bulb (not included). Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL bulb.

6. Install glass shade (B) onto the fixture (A) by twisting the glass shade (B) clockwise.

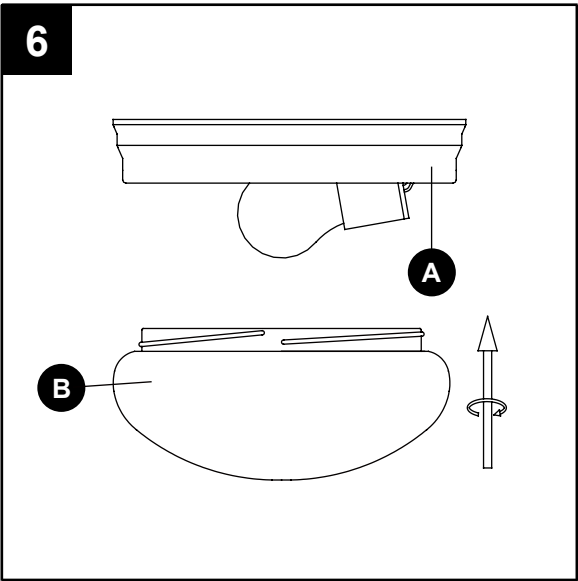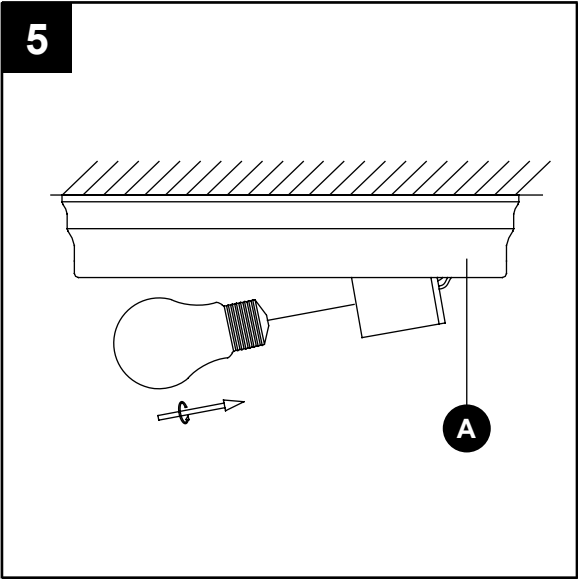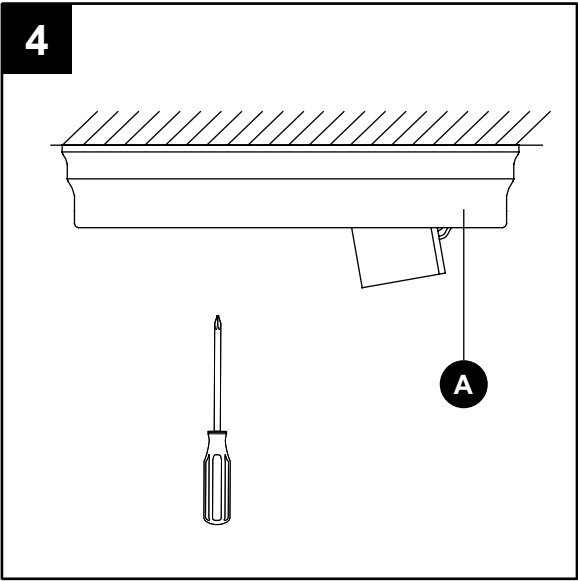

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.
- Bulb replacement: Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL bulb.

TROUBLESHOOTING

If you have any questions regarding the product, please call customer service at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|---|--|
| Bulb won't light. | 1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch. | 1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch. |
| Fuse blows or circuit breaker trips when light is turned on. | Crossed wires or power wire is grounding out. | Check wire connections. |

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

| PART | DESCRIPTION | PART # |
|------|----------------------|------------|
| AA | Wire nut | 375-022000 |
| BB | Short mounting screw | 109-042600 |
| CC | Long mounting screw | 109-043500 |
| DD | Mounting bracket | 139-103000 |

