


52-INCH DEROCATE CEILING FAN

USE AND CARE GUIDE


NOTE	Hardware not shown to actual size.
------	------------------------------------

Install remote control

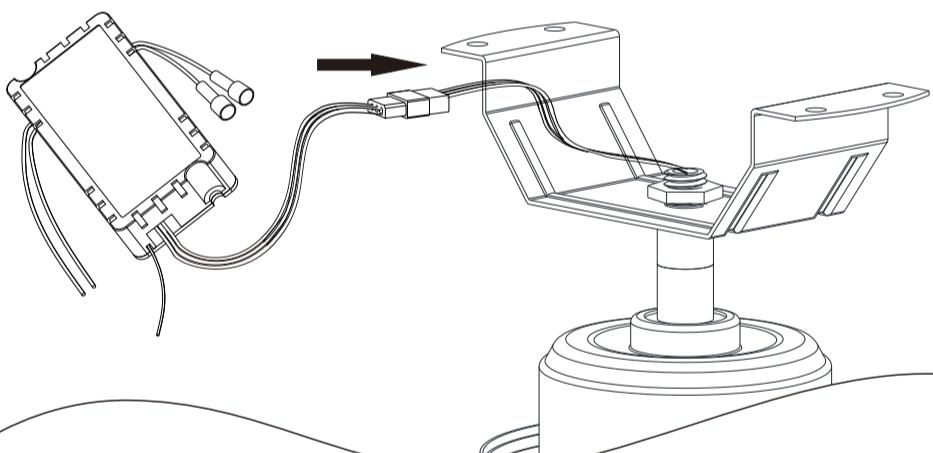

1. Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

Preparing for mounting

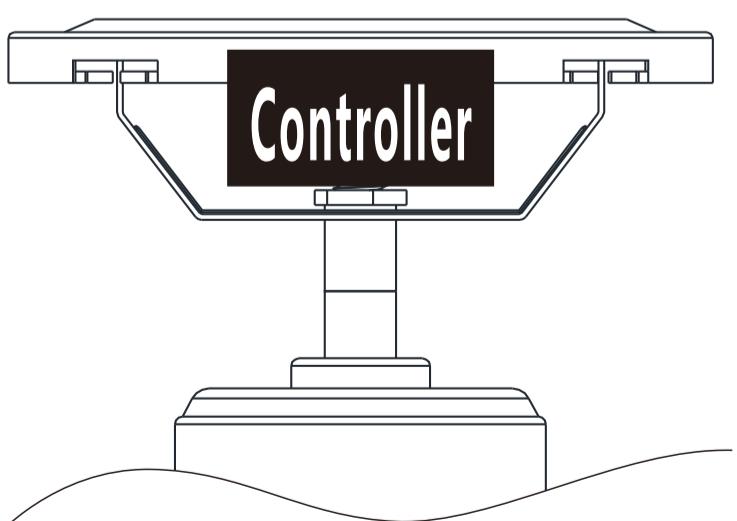


1. Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
2. Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket.

LIGHT MUST BE KEPT AT THE ON POSITION

FAN MUST BE KEPT AT THE HIGH SPEED


Pre-Installation

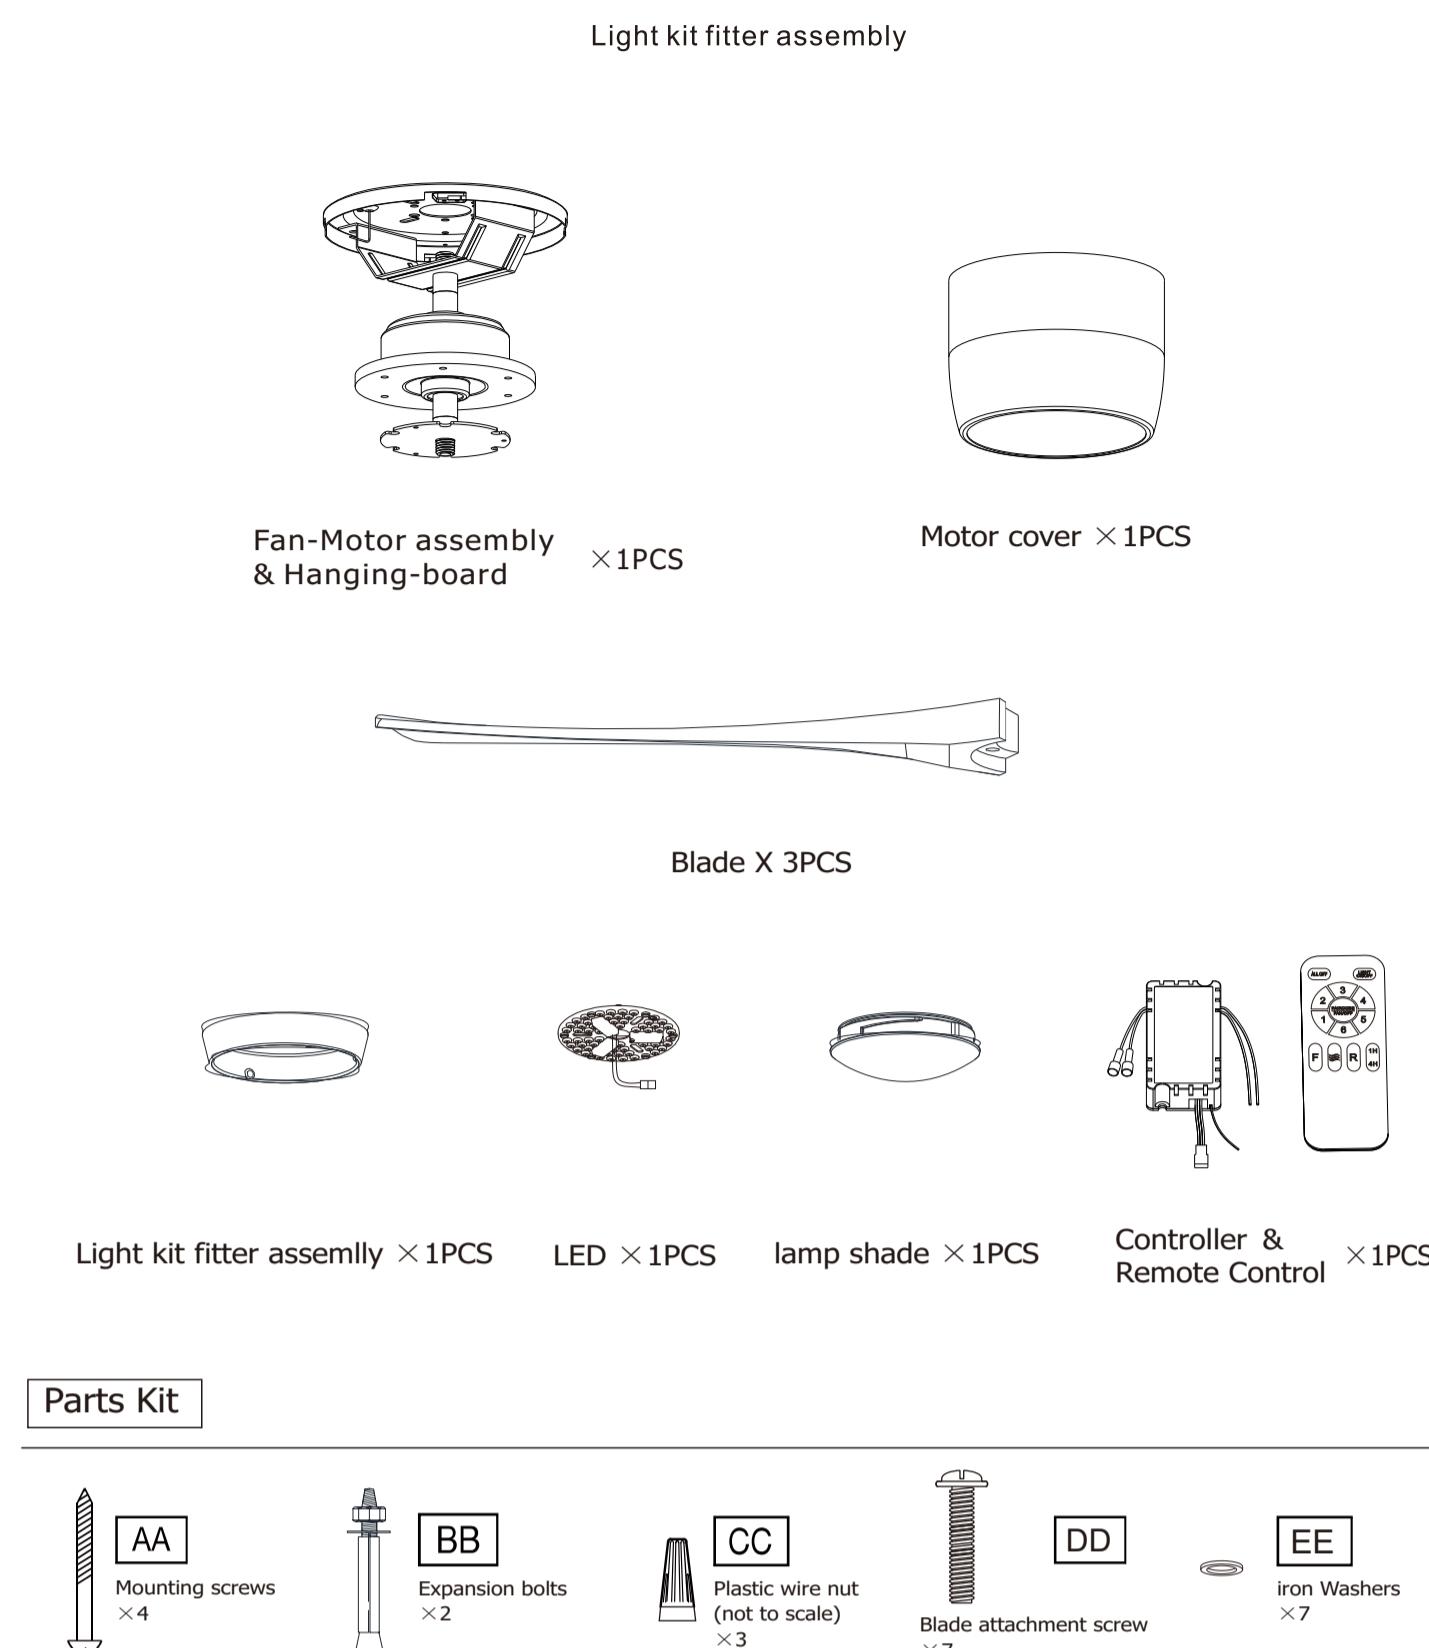

NOTE

Hardware not shown to actual size.

Installation of the hanging bracket

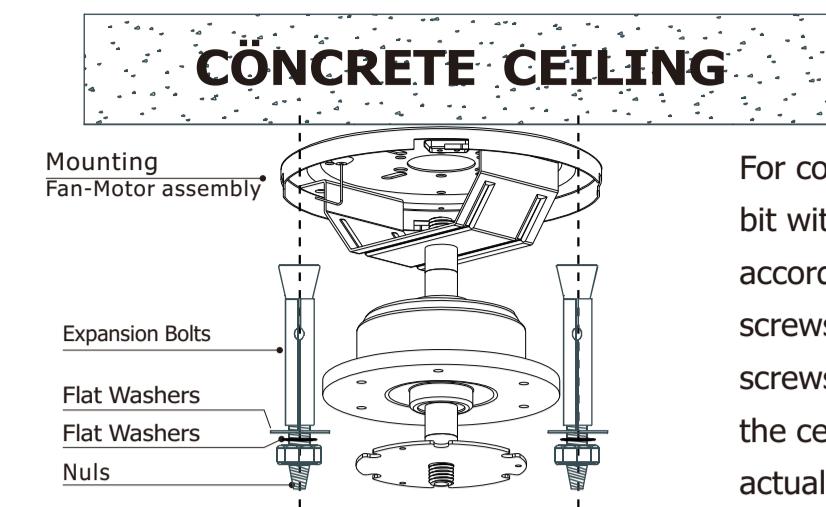


For concrete ceiling, use the percusion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
- 2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.

IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

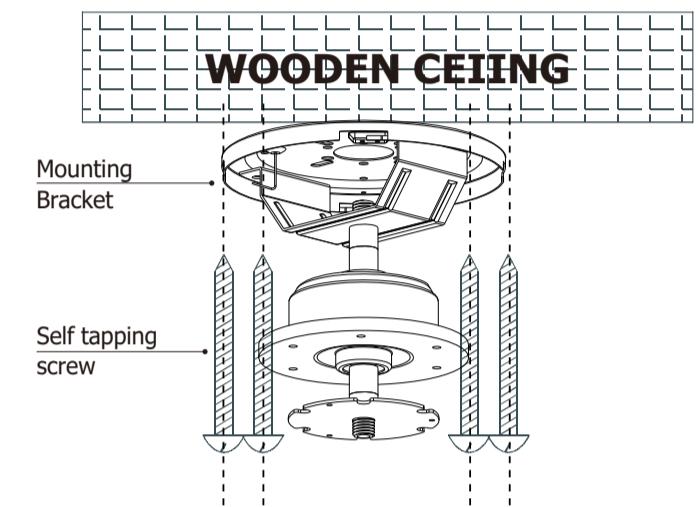

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket (selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
- 2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

Making the electrical connections


WARNING: Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.


WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.

WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.


IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

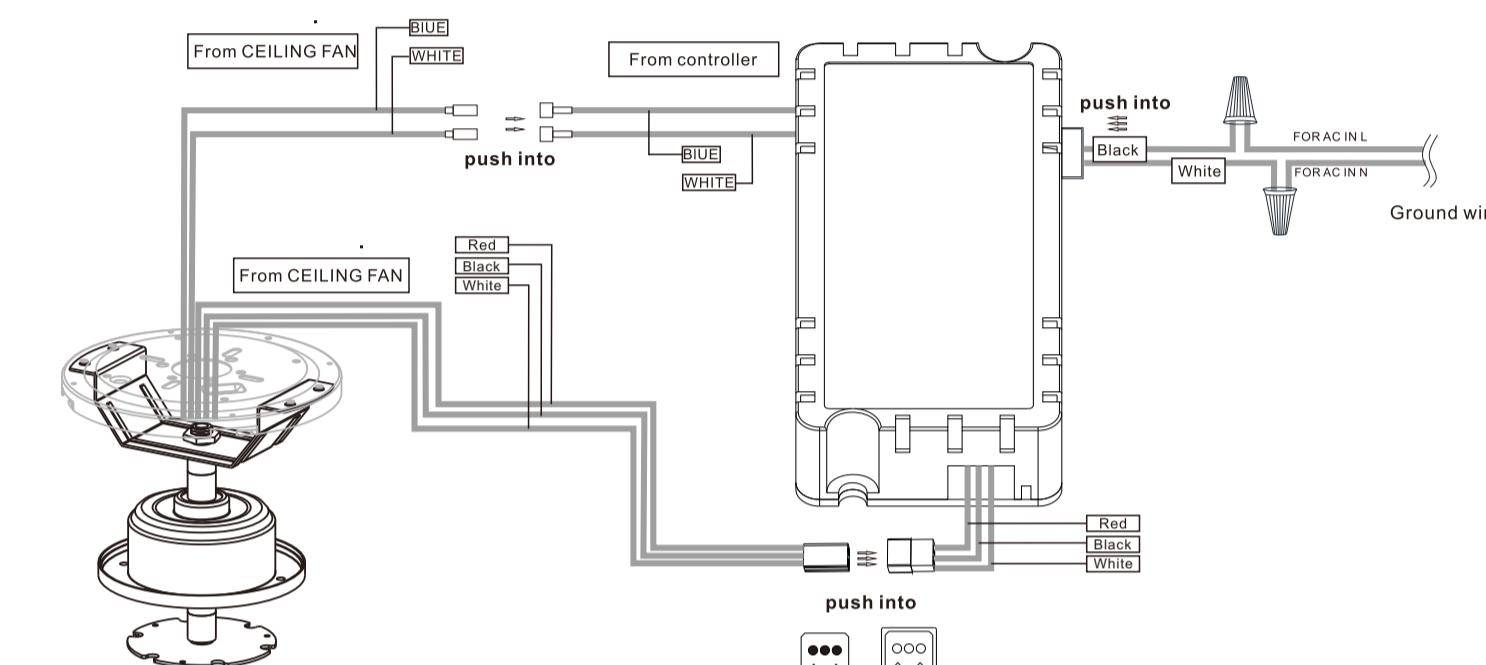

Fastening the blade arms to the motor

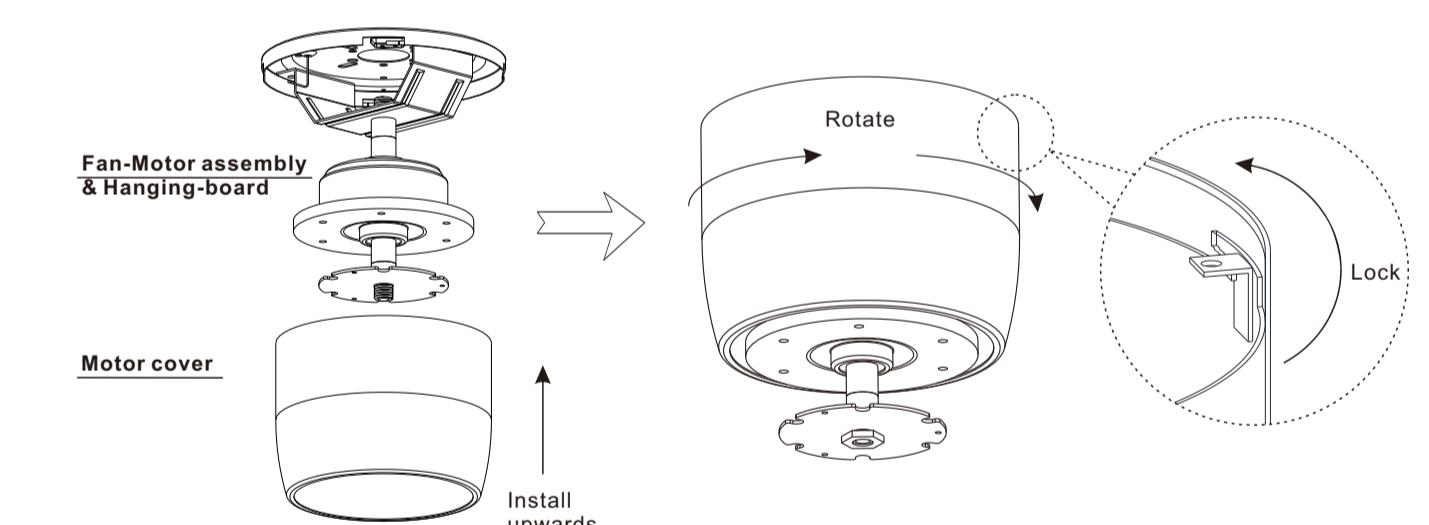


1. Lift the motor cover up to the ceiling plate
2. Make the L-shaped connector contact the notch recess and rotate it to the right
3. Secure the connectors and clips in place

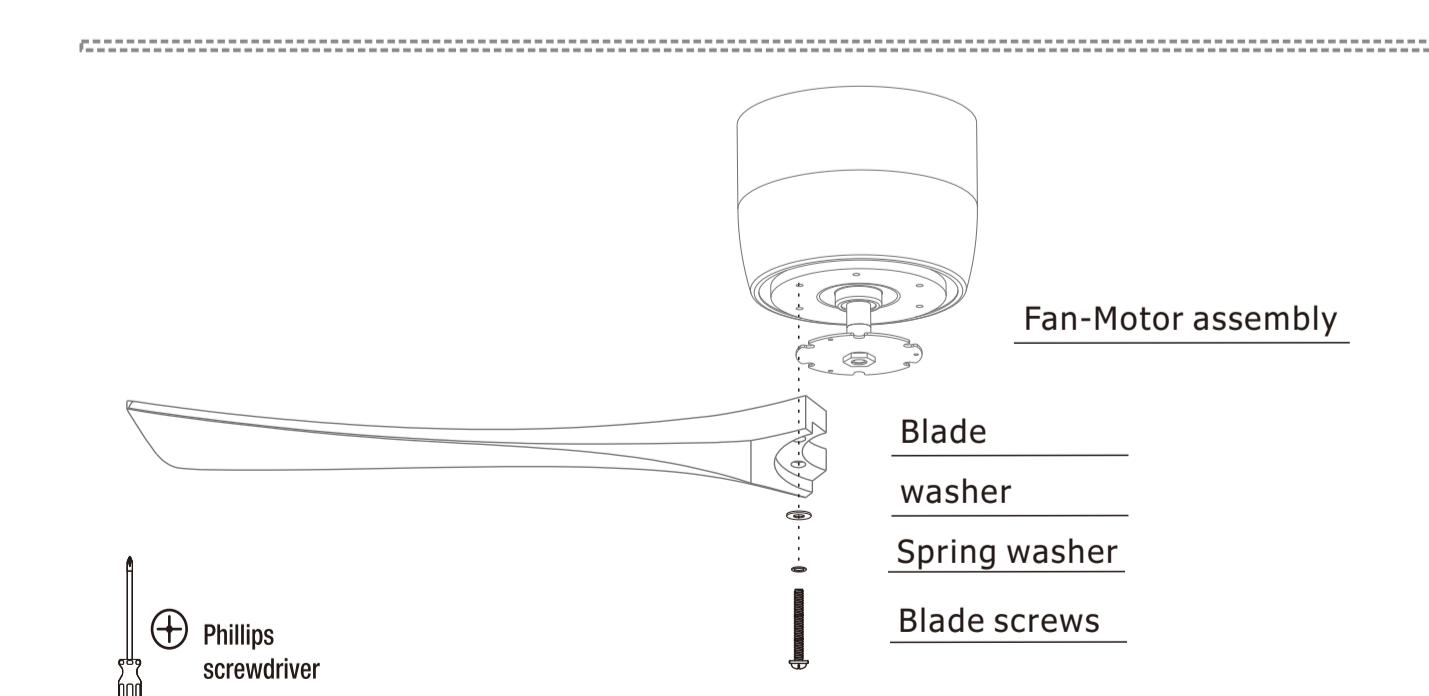



1. Remove the pre installed screws
2. Install the fan blade on the corresponding screw hole, and then install and fix it with the removed screws.
3. Fasten the arm to the fan-motor assembly by inserting the alignment post in the slot on the bottom of the motor and tightening the pre-installed armscrews.

Repeat this step for the remaining blade assemblies.

Fastening the blade arms to the motor

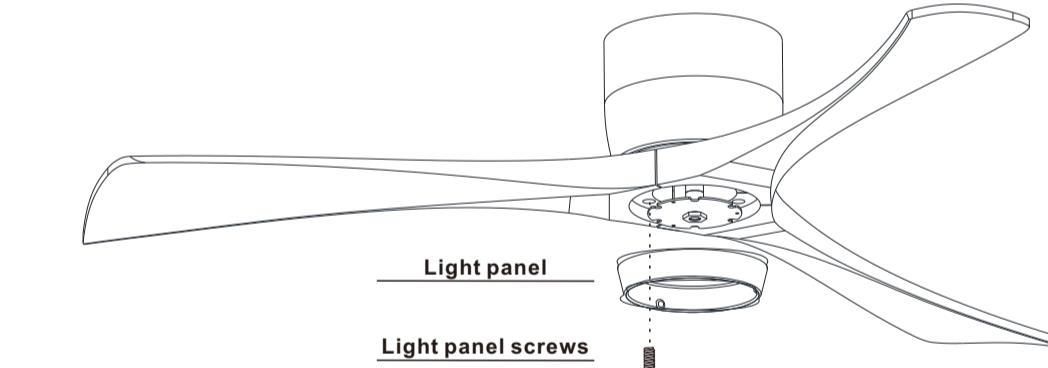


1. Remove the pre installed screws and install the lamp at the specified position

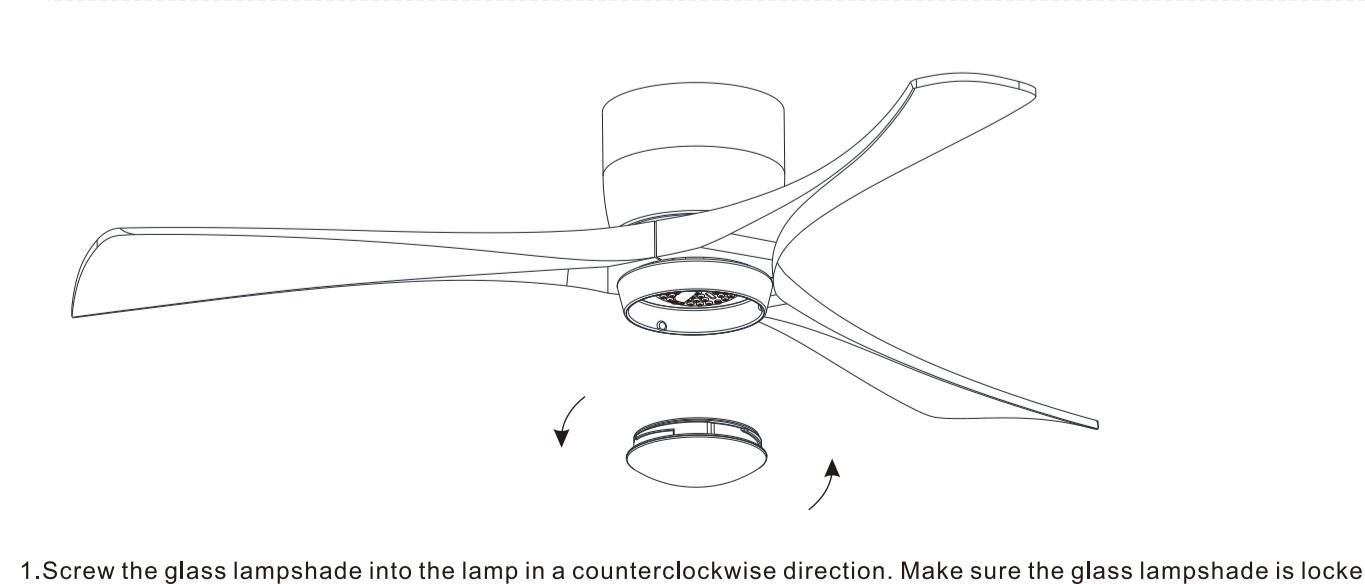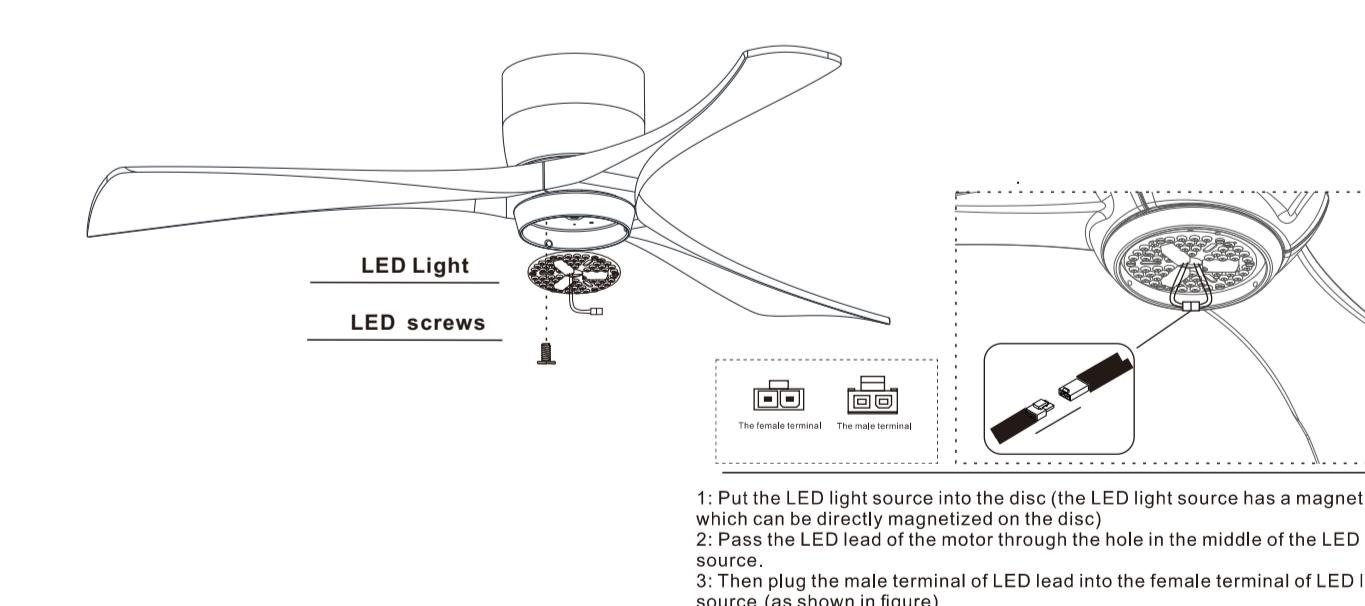

1. Screw the glass lampshade into the lamp in a counterclockwise direction. Make sure the glass lampshade is locked.

Use of remote control

VARIABLE FREQUENCY FAN LAMP REMOTE CONTROL MANUAL

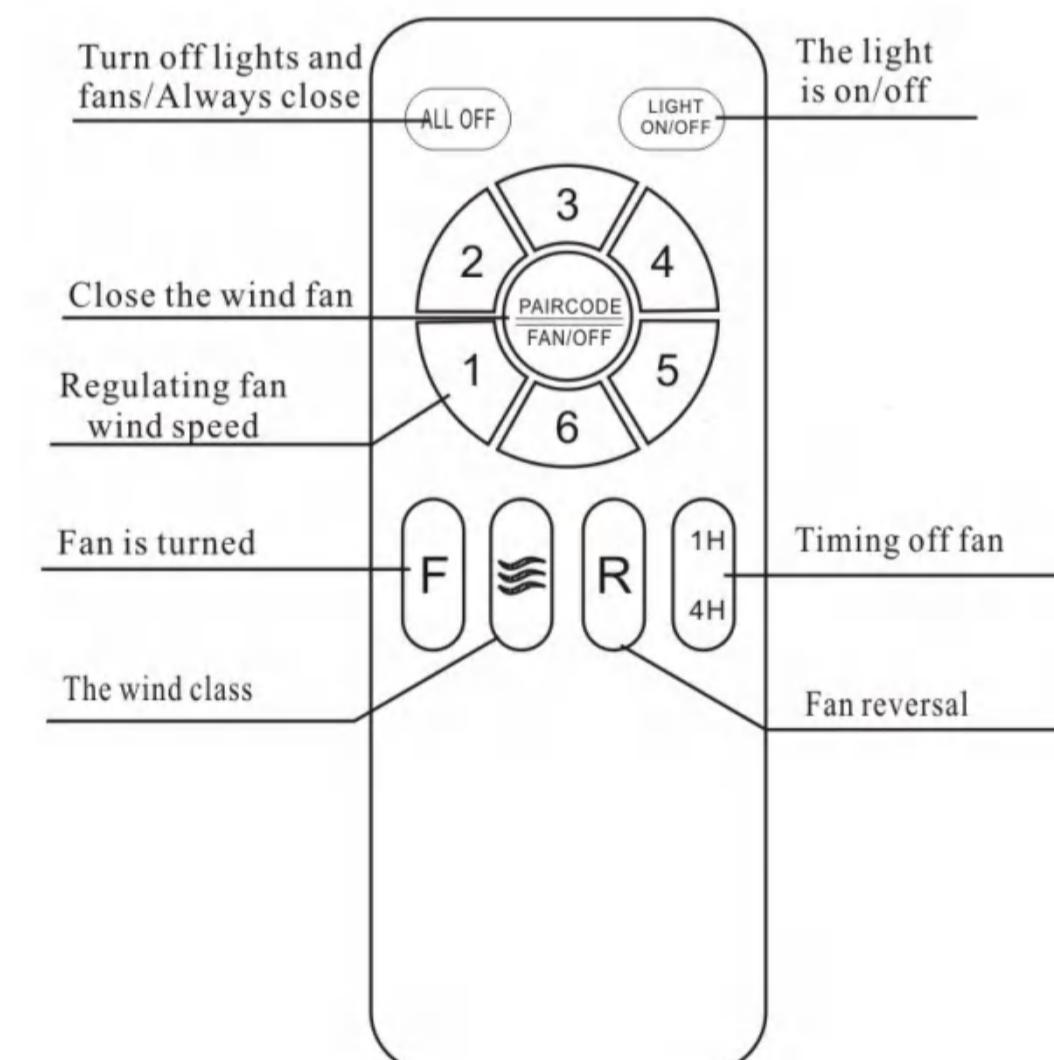

Turn on the controller, then you will hear a sound "Di". Press "FAN" within 2 minutes till you hear the sound "DiDi". Check code is done. If not, turn off the controller, and repeat it after 1 minute.

Code Clear: Within 5 seconds upon turning on, long press "ALL OFF" button, the light flashes 2 times, then the action is done.

IF THE REMOTE CONTROL CANNOT BE EFFECTIVELY CONTROLLED, PLEASE CHECK THE BATTERY, AND REMOVE THE BATTERY IF NOT IN USE FOR A LONG TIME.