

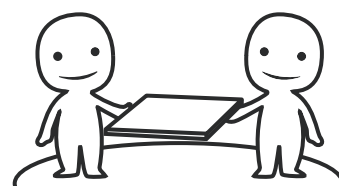


Vanity


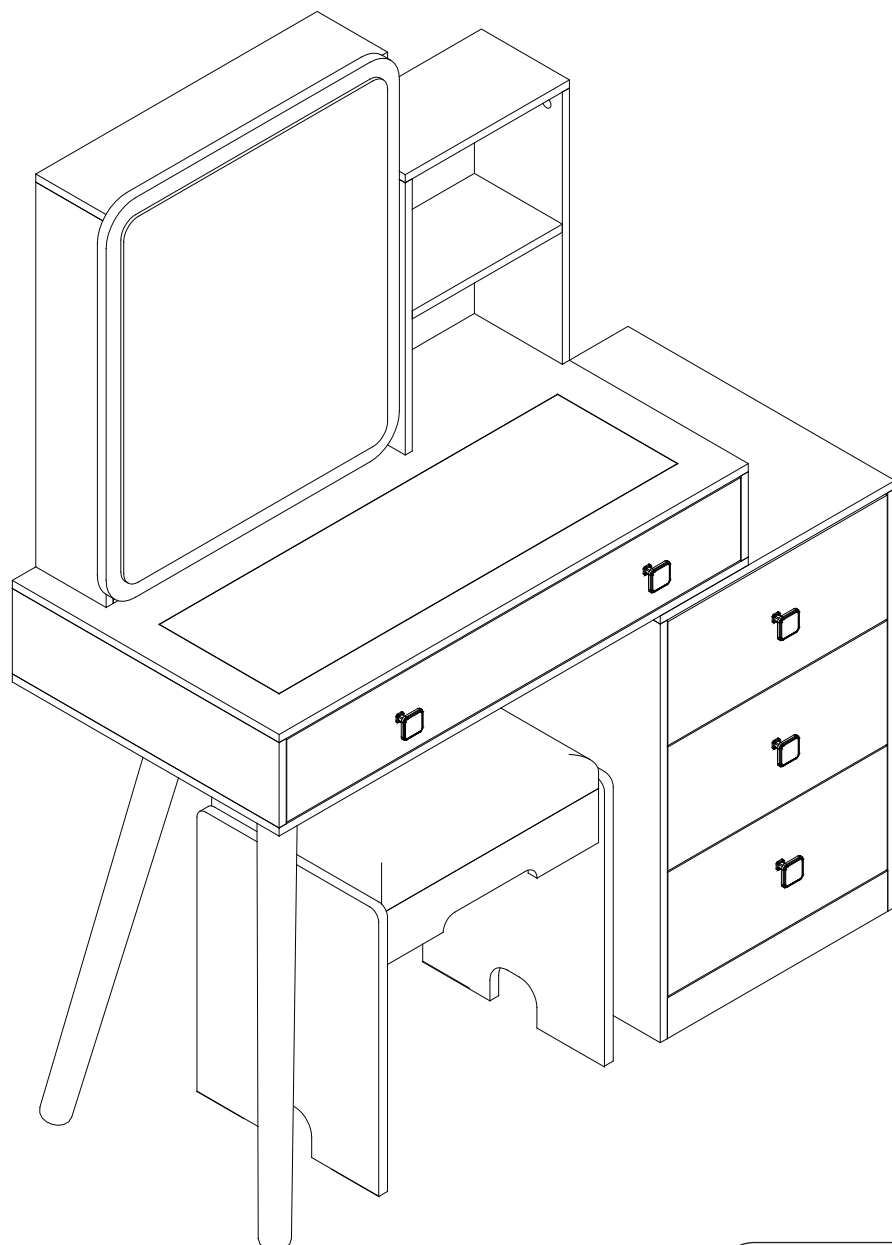


ASSEMBLED BY 2 ADULTS

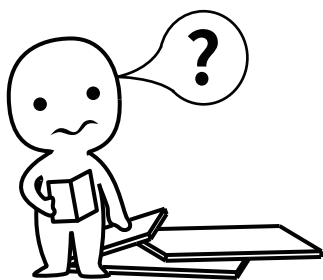


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

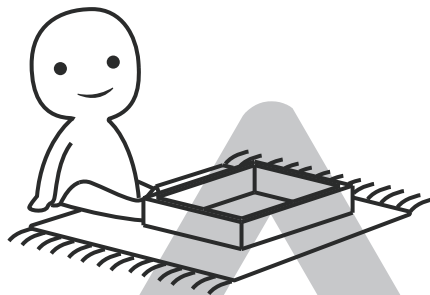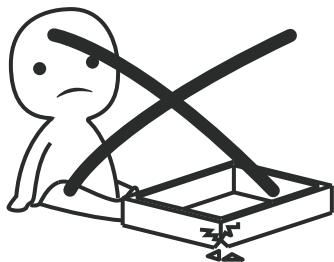



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

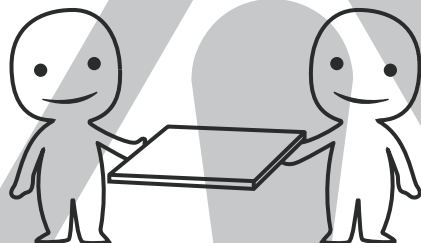

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

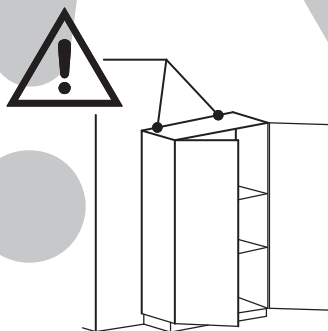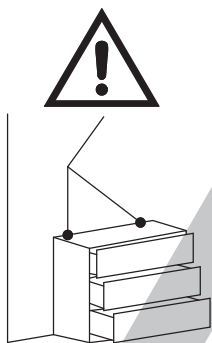

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.



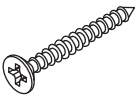

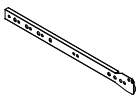
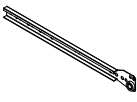

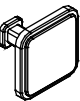

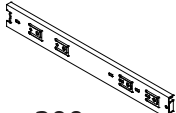


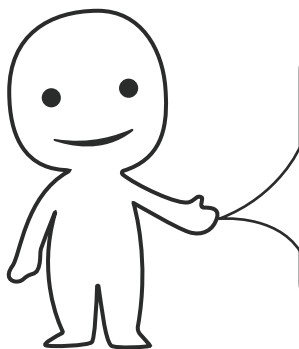

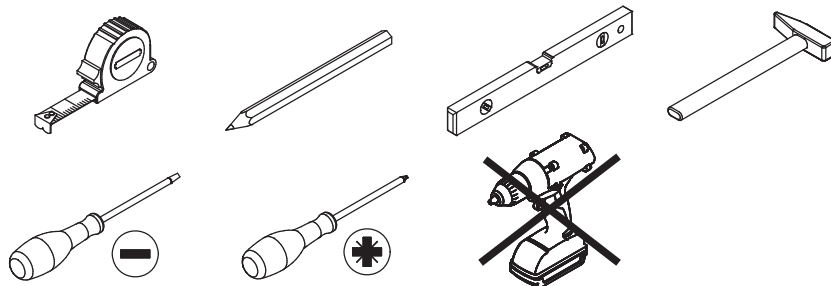




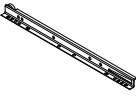
Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

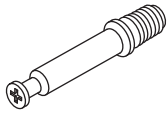


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
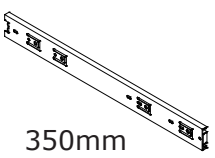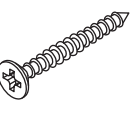
<p>A x 70</p>  <p>Ø 6 x 35 mm</p>	<p>B x 48</p>  <p>Ø 6 x 30 mm</p>	<p>C x 14</p>  <p>Ø 4 x 35 mm</p>	<p>D x 70</p>  <p>Ø 15 x 9 mm</p>
<p>CL x 3</p> 	<p>CR x 3</p> 	<p>G x 50</p>  <p>Ø 3 x 12 mm</p>	<p>H x 5</p> 
<p>J x 5</p> 	<p>K x 2</p>  <p>300mm</p>	<p>L x 12</p> 	<p>M x 10</p> 
<p>N x 2</p> 	<p>P x 36</p>  <p>Ø 3 x 12 mm</p>	<p>Q x 4</p>  <p>Ø 4 x 25 mm</p>	<p>R x 1</p>  <p>Ø 4 x 20 mm</p>
<p>S x 2</p>  <p>350mm</p>	<p>T x 18</p>  <p>Ø 4 x 30 mm</p>	<p>DL x 3</p> 	<p>DR x 3</p> 

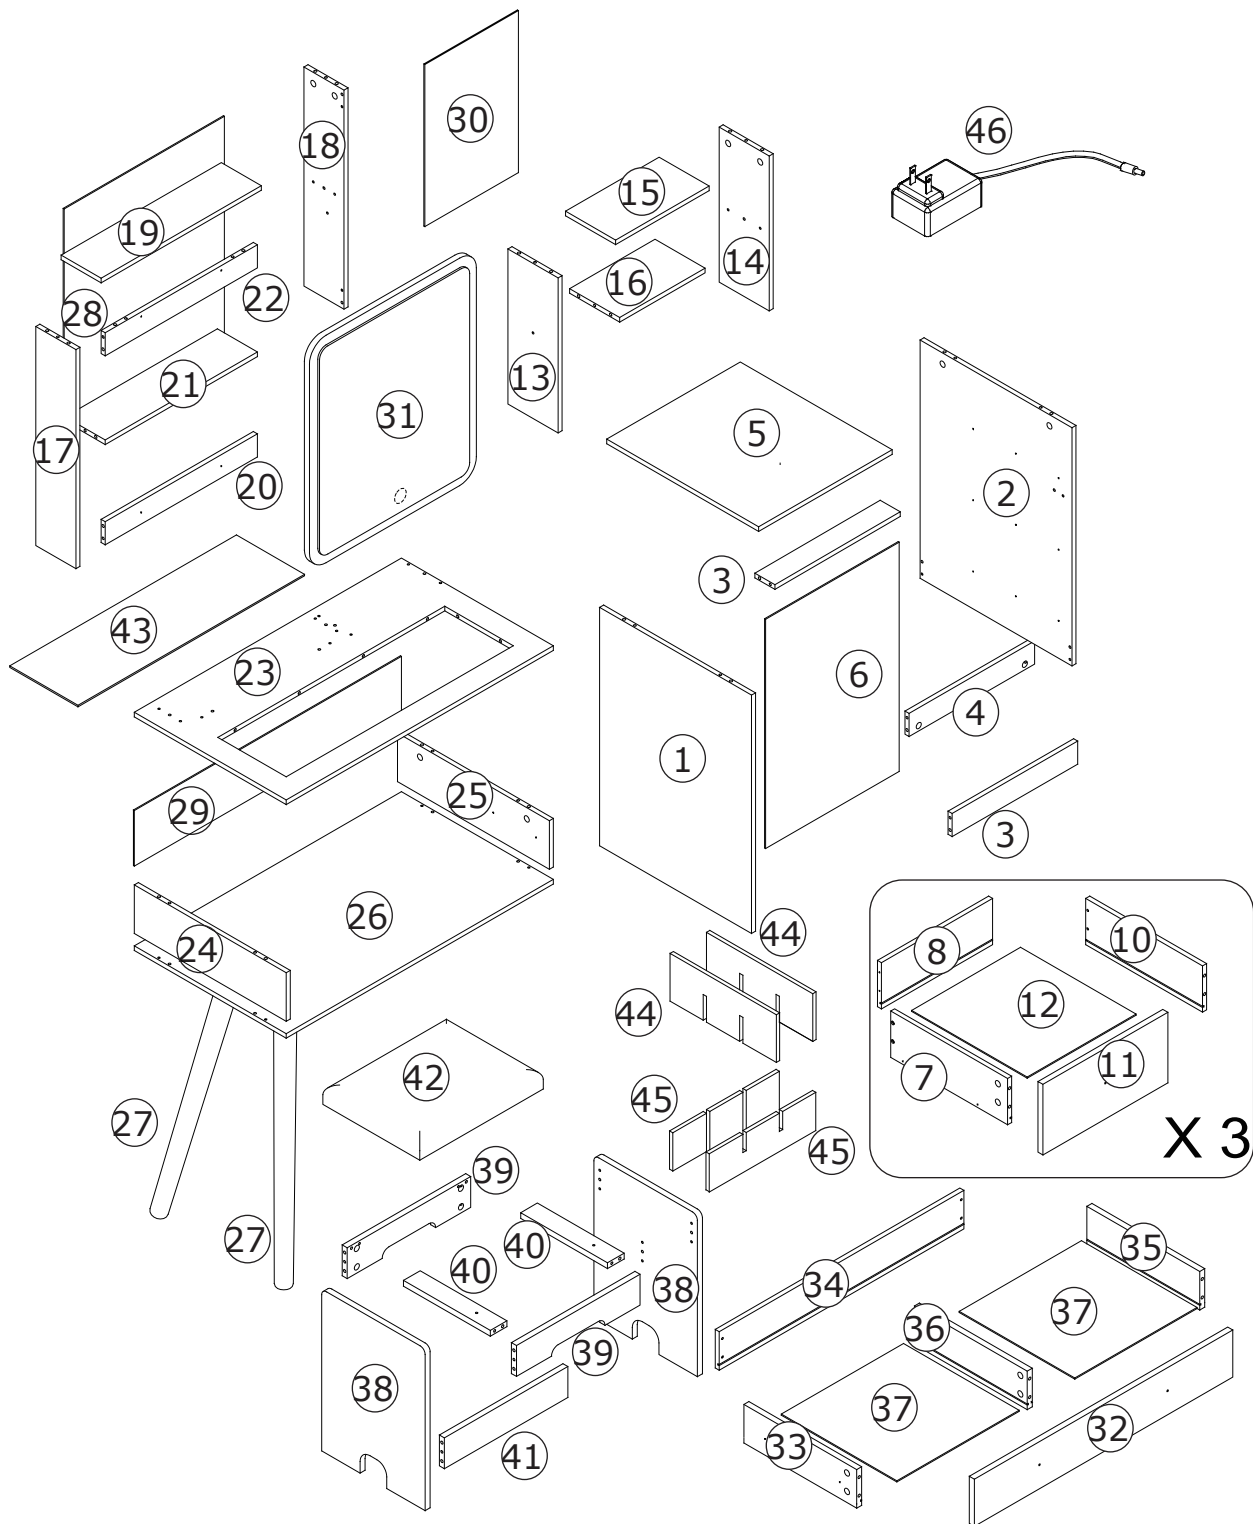

⚠ WARNING



 






Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*




1

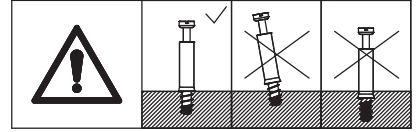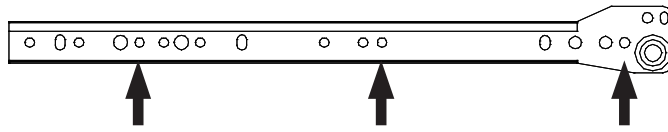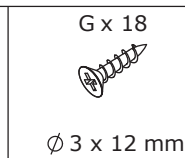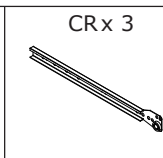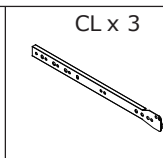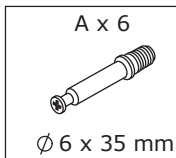



Insert quickfit screw(A) into plate 1 and 2 with a screw-driver as shown. Fix slide rail(CL) and (CR) to plate 1 and 2 with screw(G) as shown.

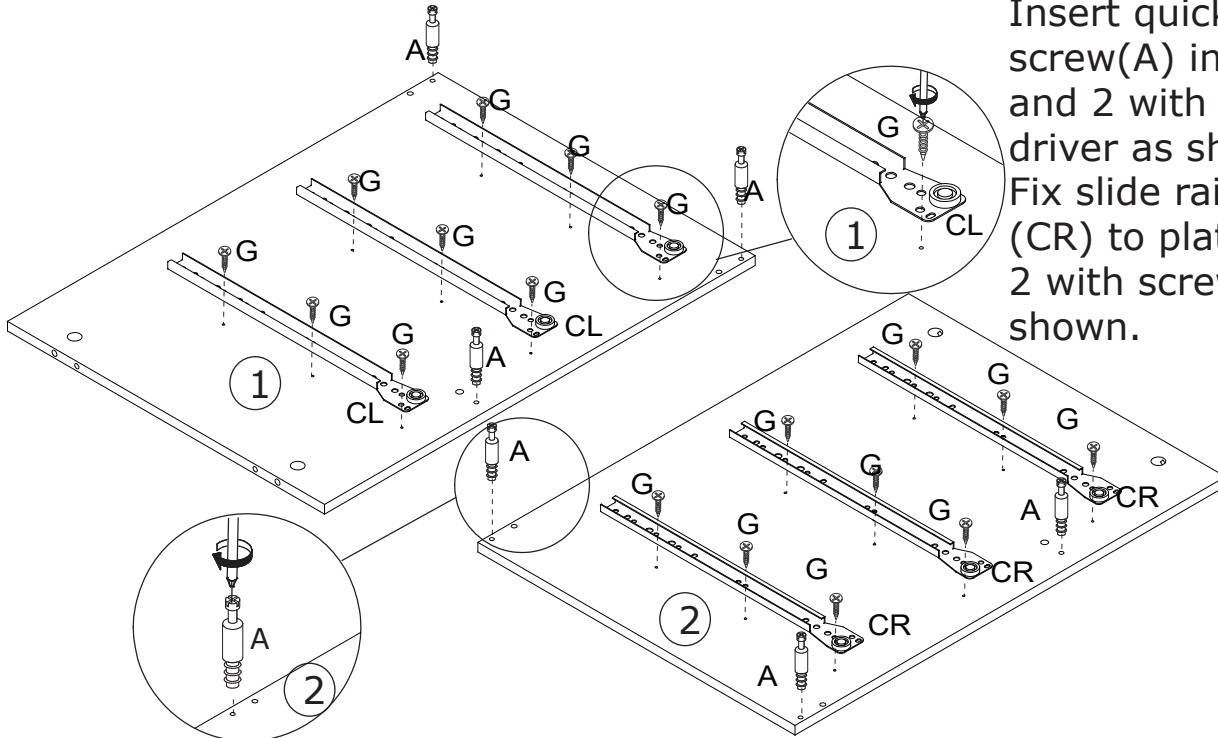

2

 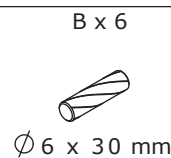
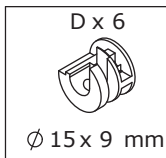


Insert wooden dowel(B) into plate 3 and 4 at first.

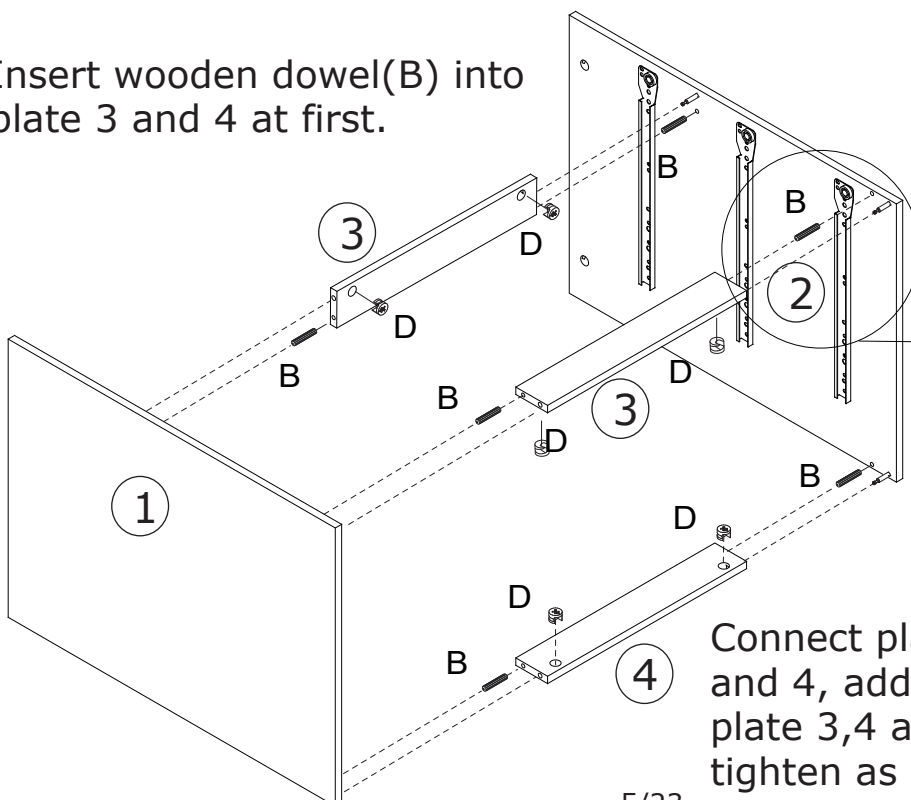
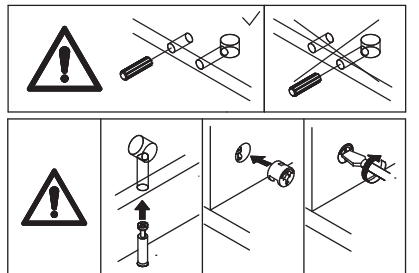


Connect plate 1 and 2 with plate 3 and 4, add cam lock(D) into plate 3,4 and turn clockwise to tighten as shown.




 

3

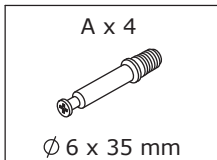


Insert quickfit screw(A) into plate 5 with a screwdriver as shown.

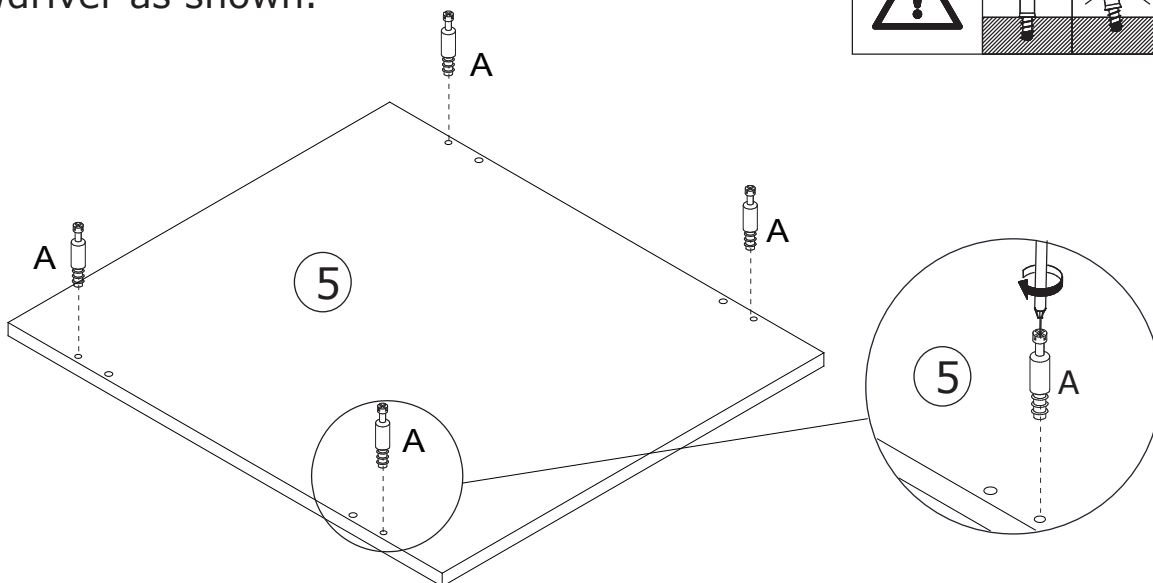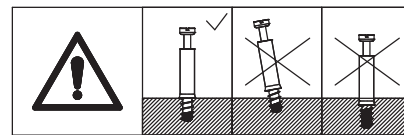

4

 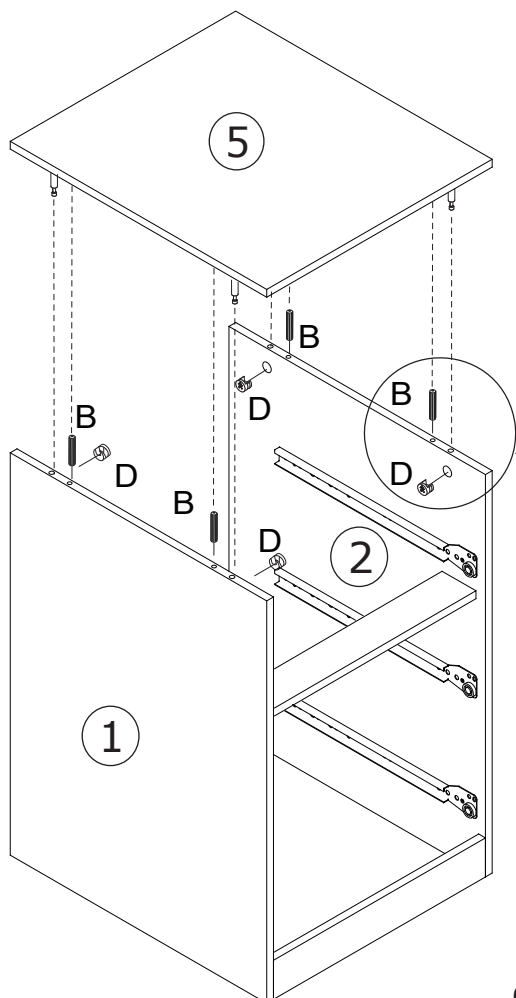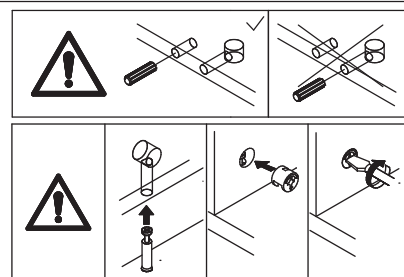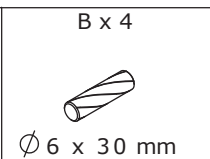
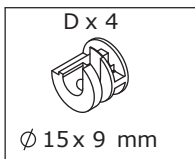


Insert wooden dowel(B) into plate 1 and 2 at first.
Cover plate 5 to plate 1 and 2, add cam lock(D) into plate 1,2 and turn clockwise to tighten as shown.

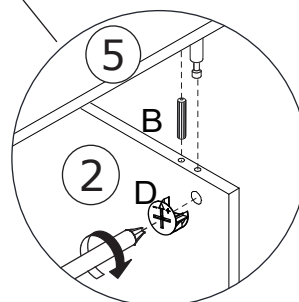


5

  P x 12





Fix back plate 6 to the component with screw(P) as shown.

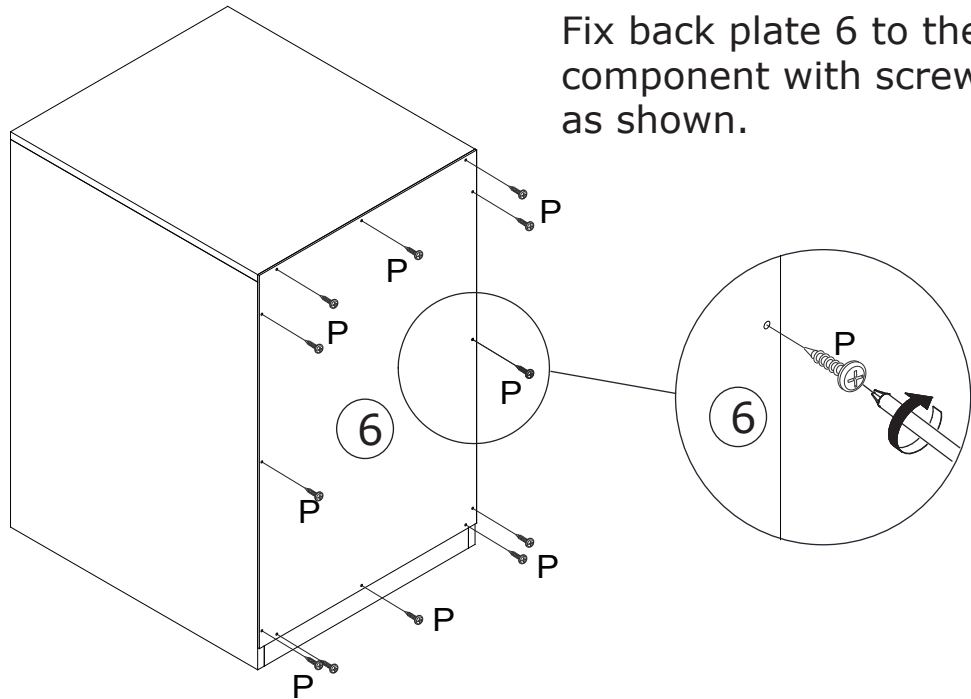


6

  T x 12




Fix plate 7 and 10 to plate 8 with screw(T) as shown.


X 3

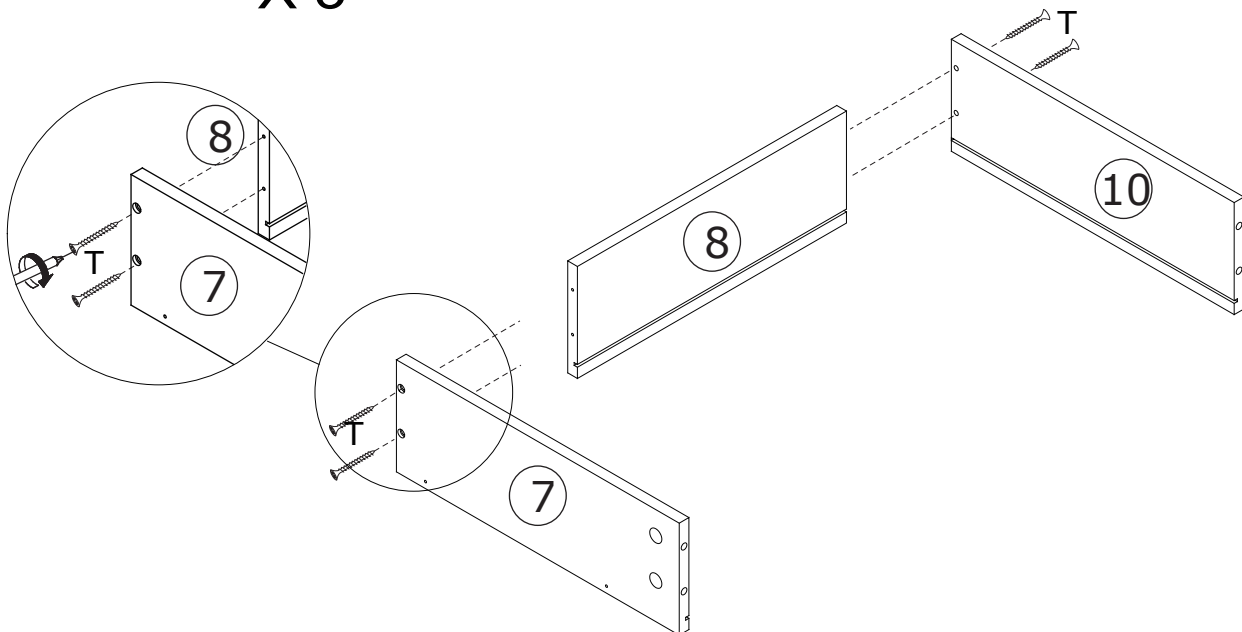


7

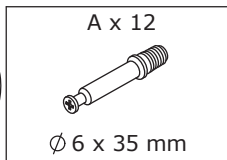



Insert quickfit screw(A) into plate 11 with a screwdriver as shown.

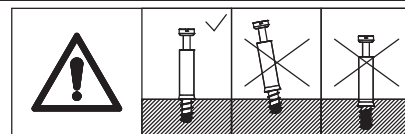


X 3

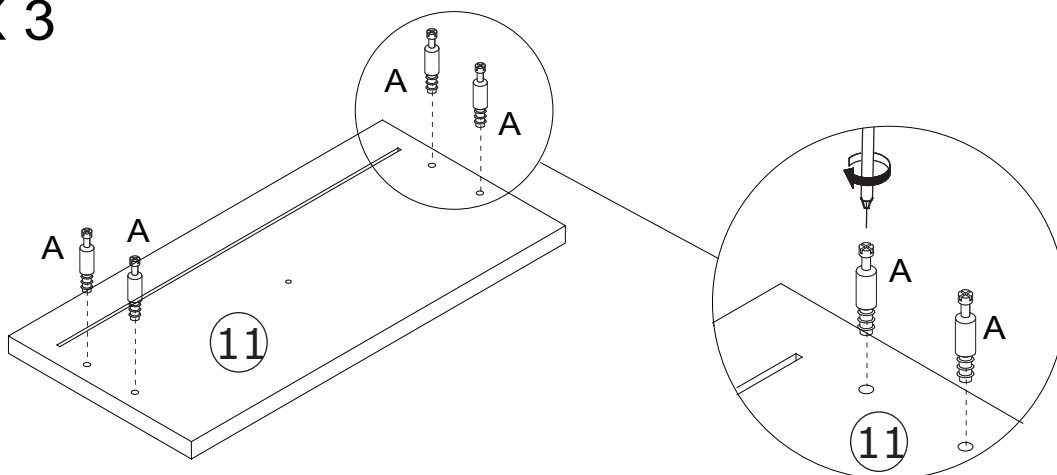


8

 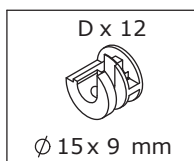

Slide plate 12 along grooves as shown. Attach plate 11 to plate 7 and 10, turn cam lock(D) clockwise to tighten as shown.

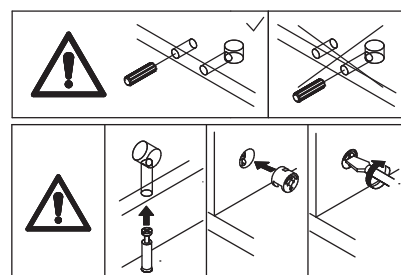


X 3

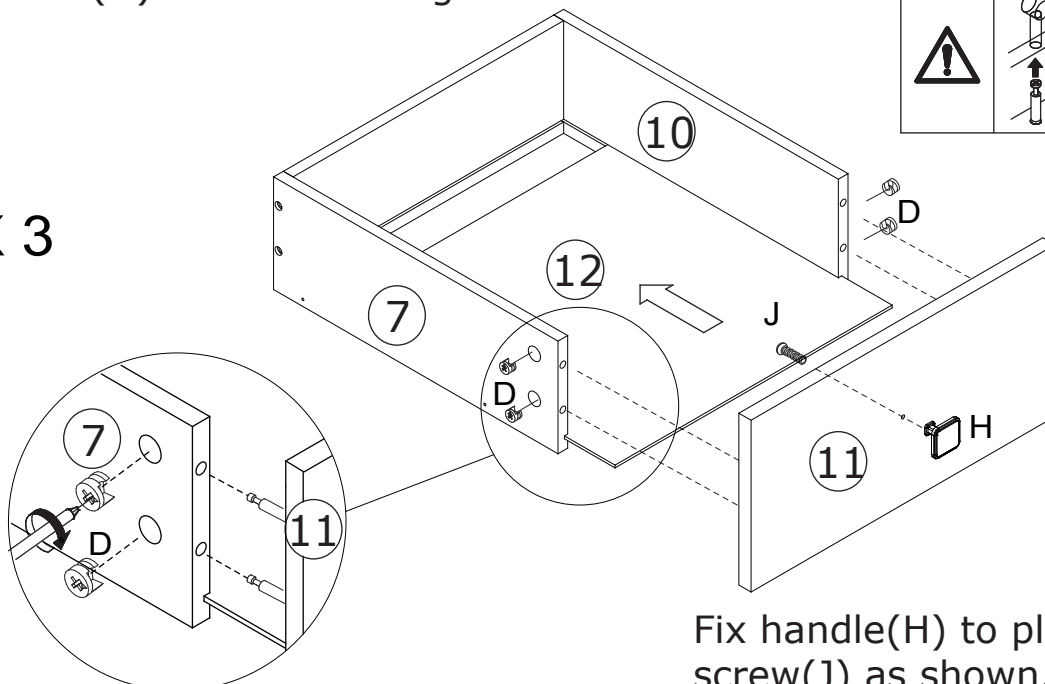


Fix handle(H) to plate 11 with screw(J) as shown.

9

 DL x 3




DR x 3

 

G x 12




 Ø 3 x 12 mm





X 3

Fix runner(DL) and (DR) to plate 7 and 10 with screw(G) as shown.

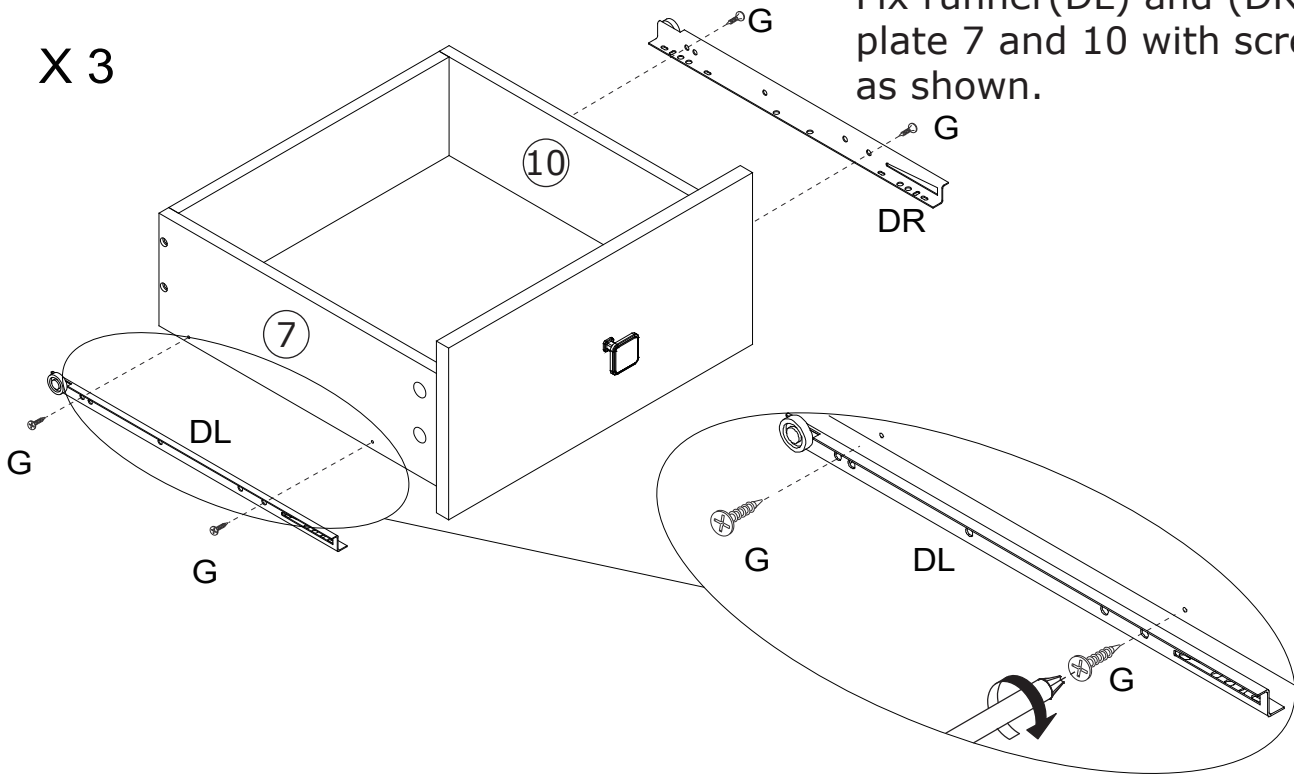


10

Align rails, slide all drawers in.

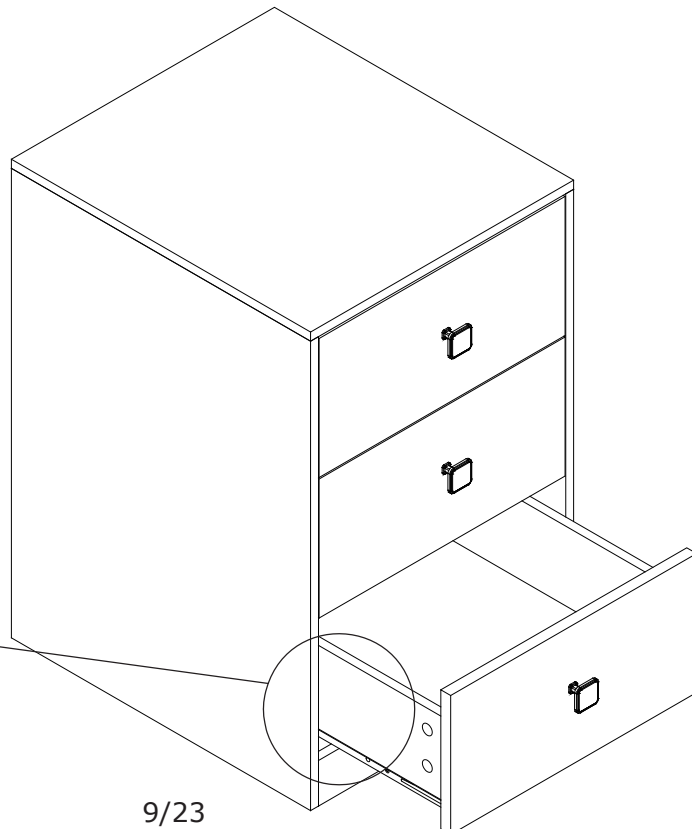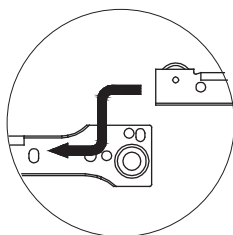


11


 
A x 8



Ø 6 x 35 mm

 

Insert quickfit screw(A) into plate 13, 14 and 15 with a screwdriver as shown.

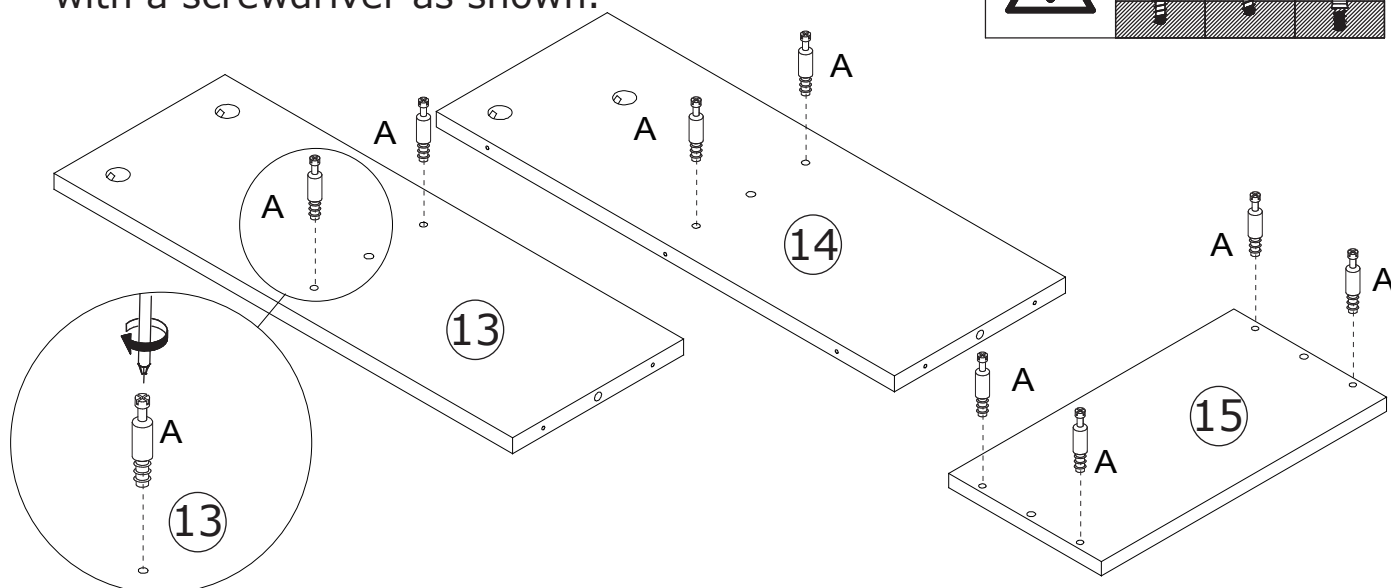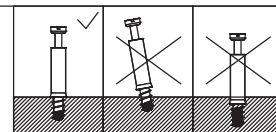

12

D x 4



Ø 15 x 9 mm

B x 2



 


Ø 6 x 30 mm



Insert wooden dowel(B) into plate 13 and 14 at first.

Connect plate 13 and 14 with plate 16, add cam lock(D) into plate 16 and turn clockwise to tighten as shown.

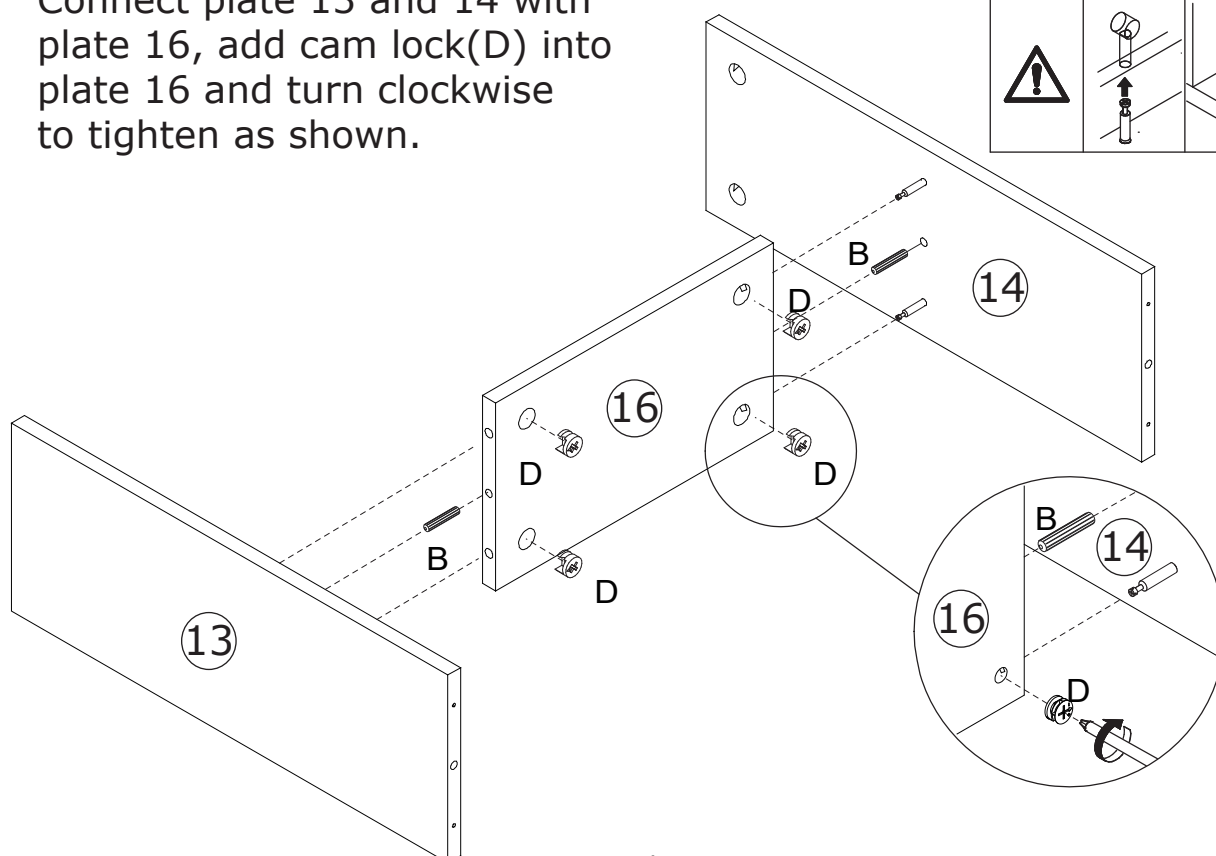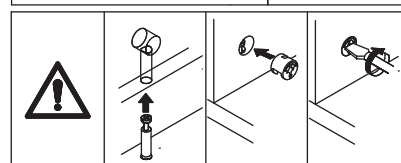

13

D x 4



 


Ø 15 x 9 mm

B x 2



Ø 6 x 30 mm

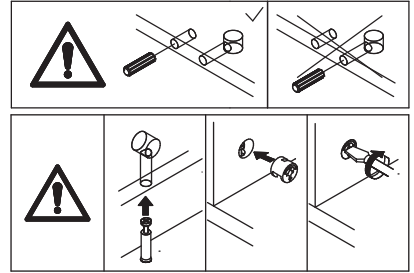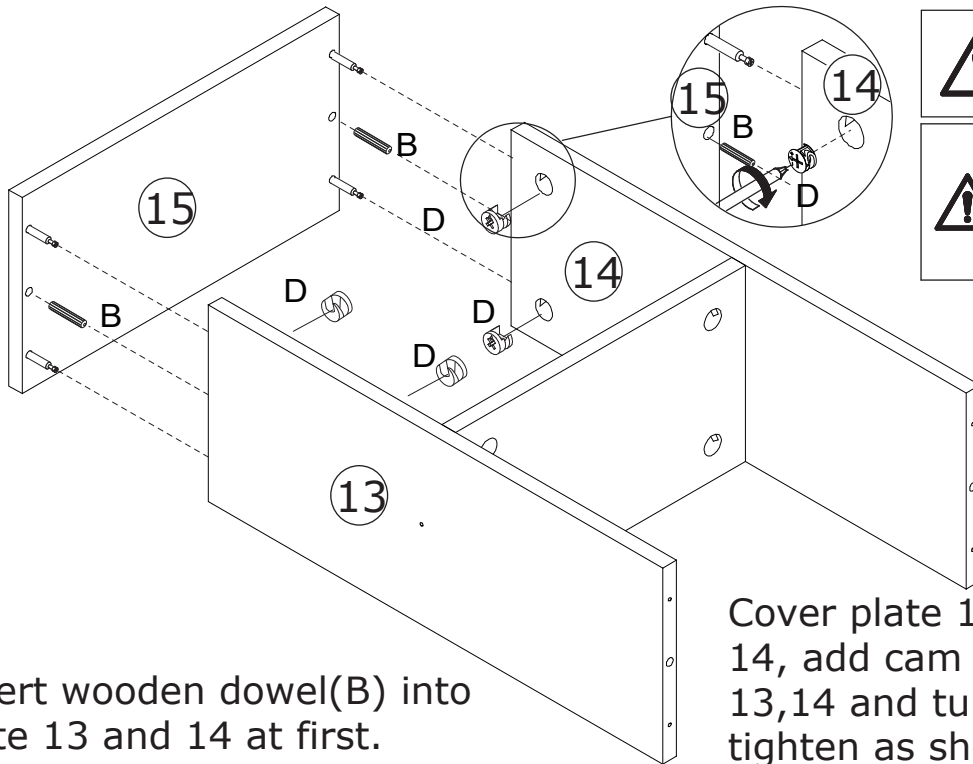


Insert wooden dowel(B) into plate 13 and 14 at first.




Cover plate 15 to plate 13 and 14, add cam lock(D) into plate 13,14 and turn clockwise to tighten as shown.

14

 A x 14




Ø 6 x 35 mm

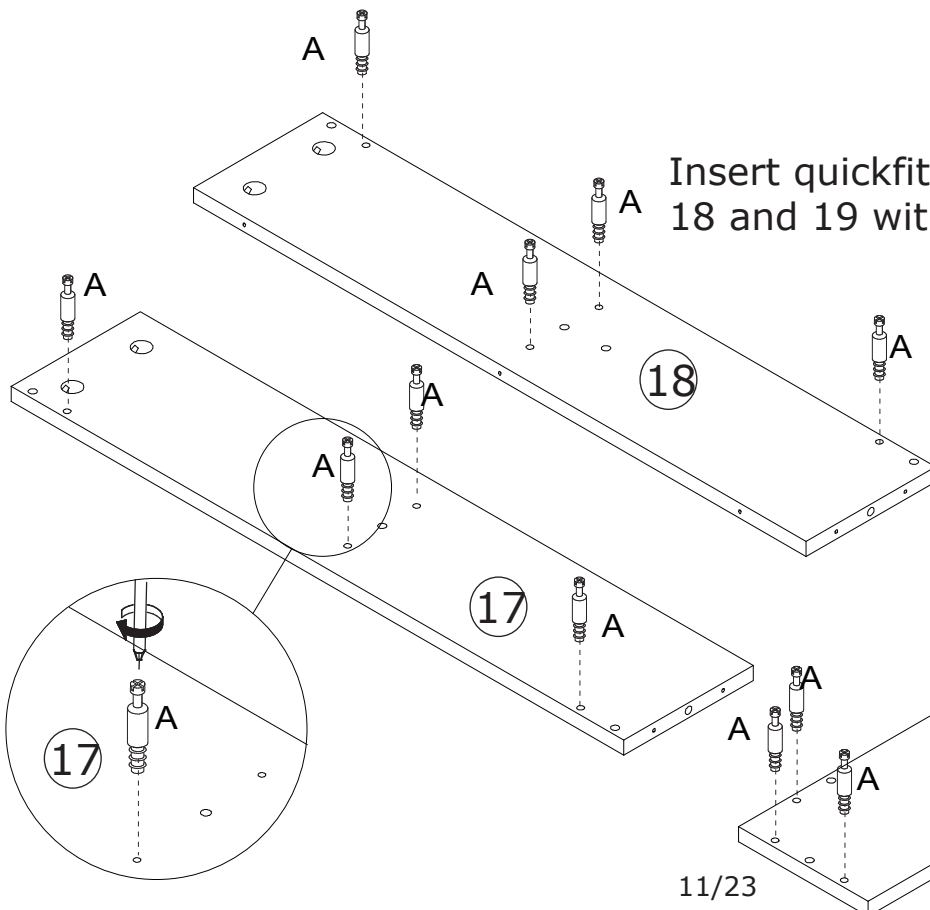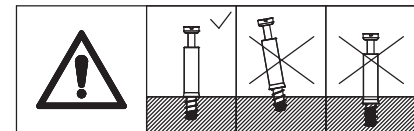
 


Insert quickfit screw(A) into plate 17, 18 and 19 with a screwdriver as shown.

15

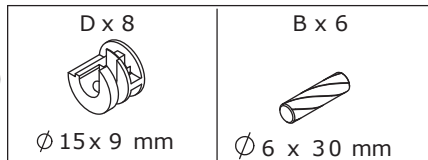


Insert wooden dowel(B) into plate 20, 21 and 22 at first.

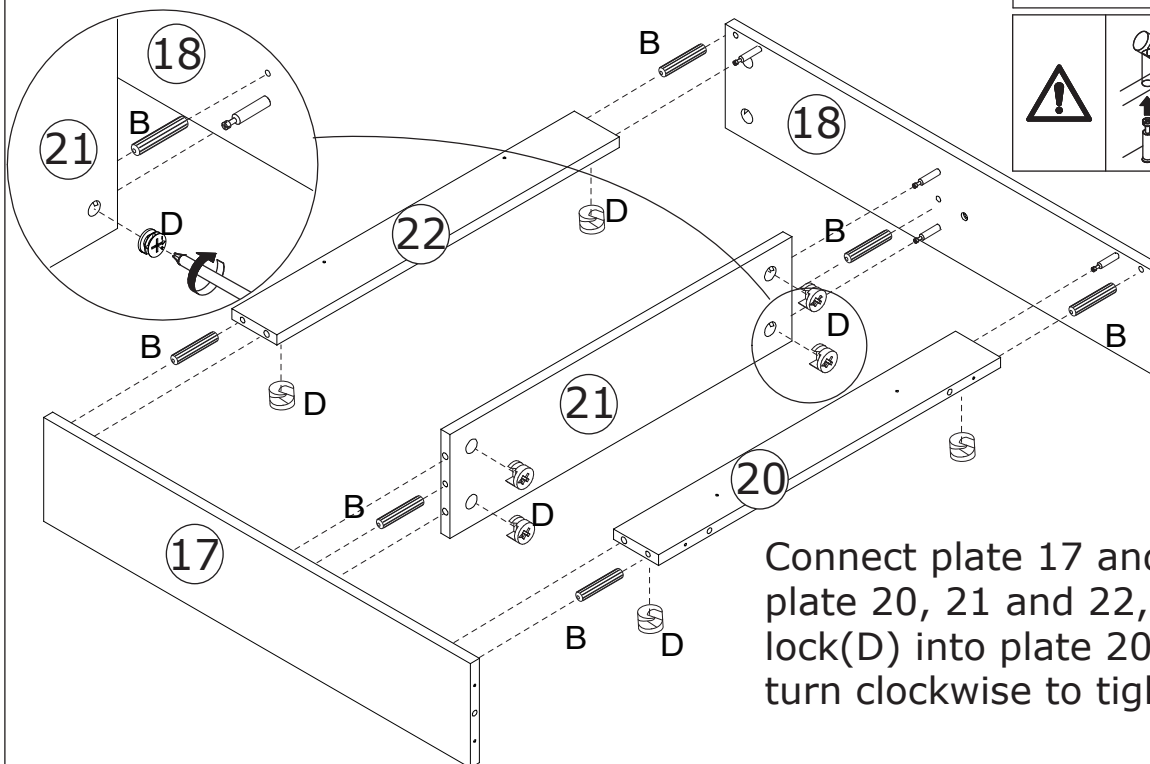
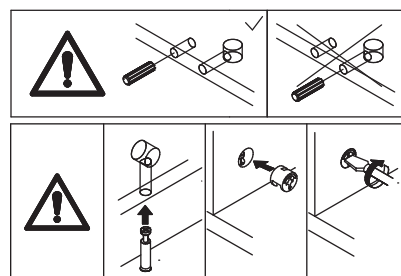


Connect plate 17 and 18 with plate 20, 21 and 22, add cam lock(D) into plate 20,21,22 and turn clockwise to tighten as shown.

16

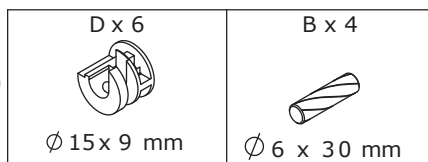


Insert wooden dowel(B) into plate 19 at first.

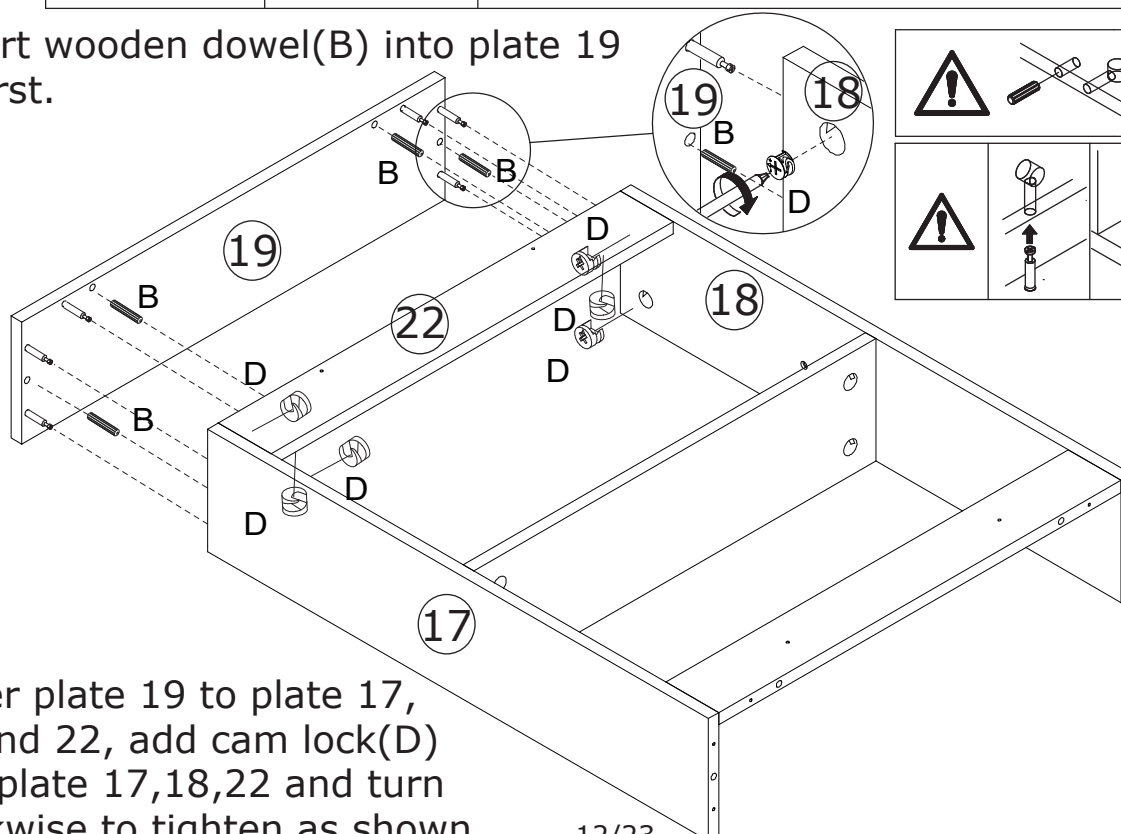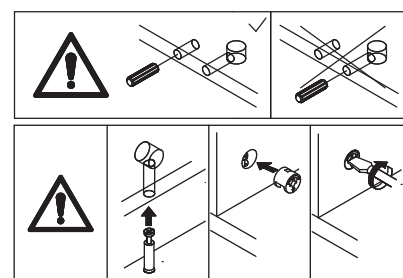




Cover plate 19 to plate 17, 18 and 22, add cam lock(D) into plate 17,18,22 and turn clockwise to tighten as shown.

17

 A x 4



Ø 6 x 35 mm

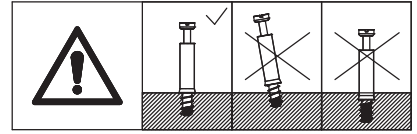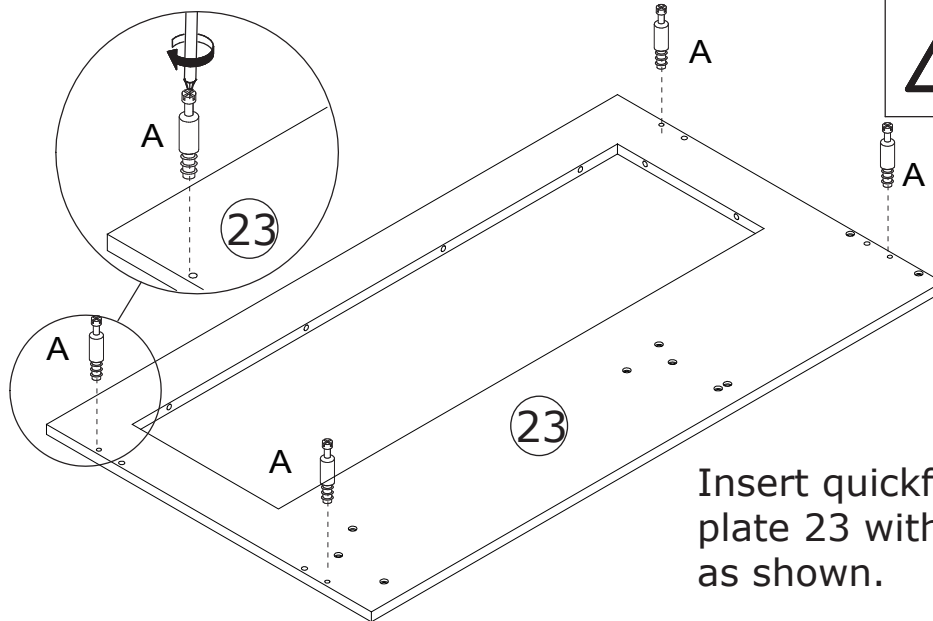 

Insert quickfit screw(A) into plate 23 with a screwdriver as shown.

18

C x 10



 
Ø 4 x 35 mm

B x 6




Ø 6 x 30 mm



R x 1



Ø 4 x 20 mm

 


 Insert wooden dowel(B) into plate 23 at first. Attach plate 23 to the two components, and fix with screw(C) as shown.

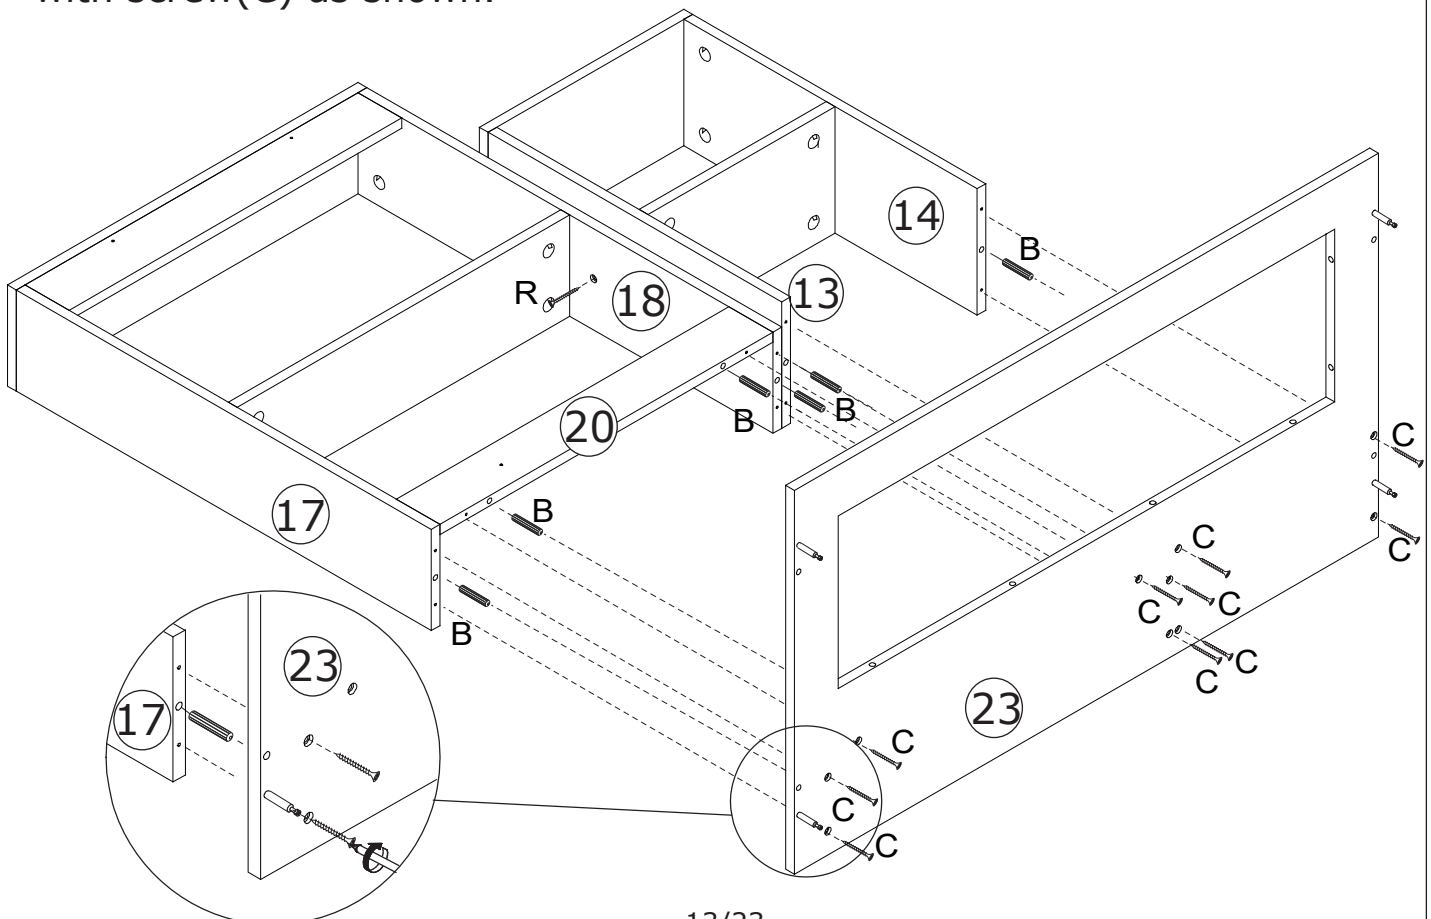

19

 
S x 2





G x 6



 Ø 3 x 12 mm



Separate glide into two parts at first.
Fix slide rail(S) to plate 24 and
25 with screw(G) as shown.

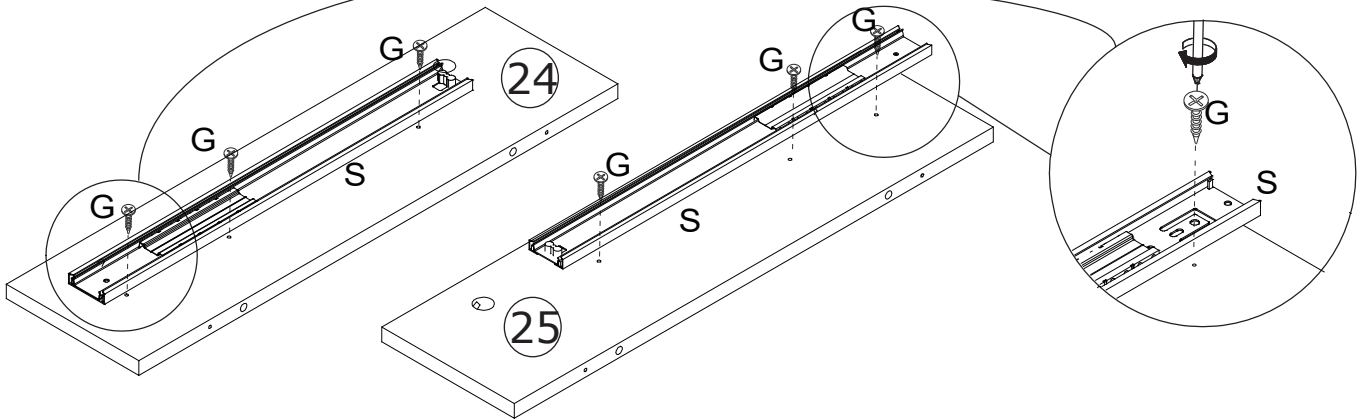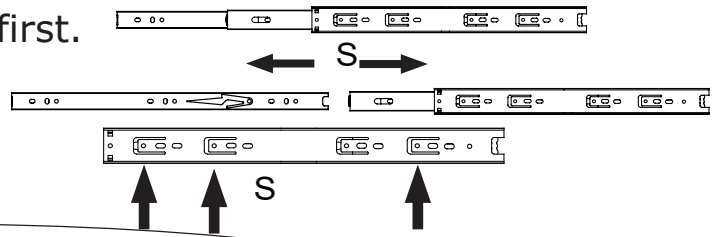

20

D x 4

 


Ø 15 x 9 mm



B x 4



Ø 6 x 30 mm



Insert wooden dowel(B) into plate 23 at first.
Attach plate 24 and 25 to plate 23, turn cam
lock(D) clockwise to tighten as shown.

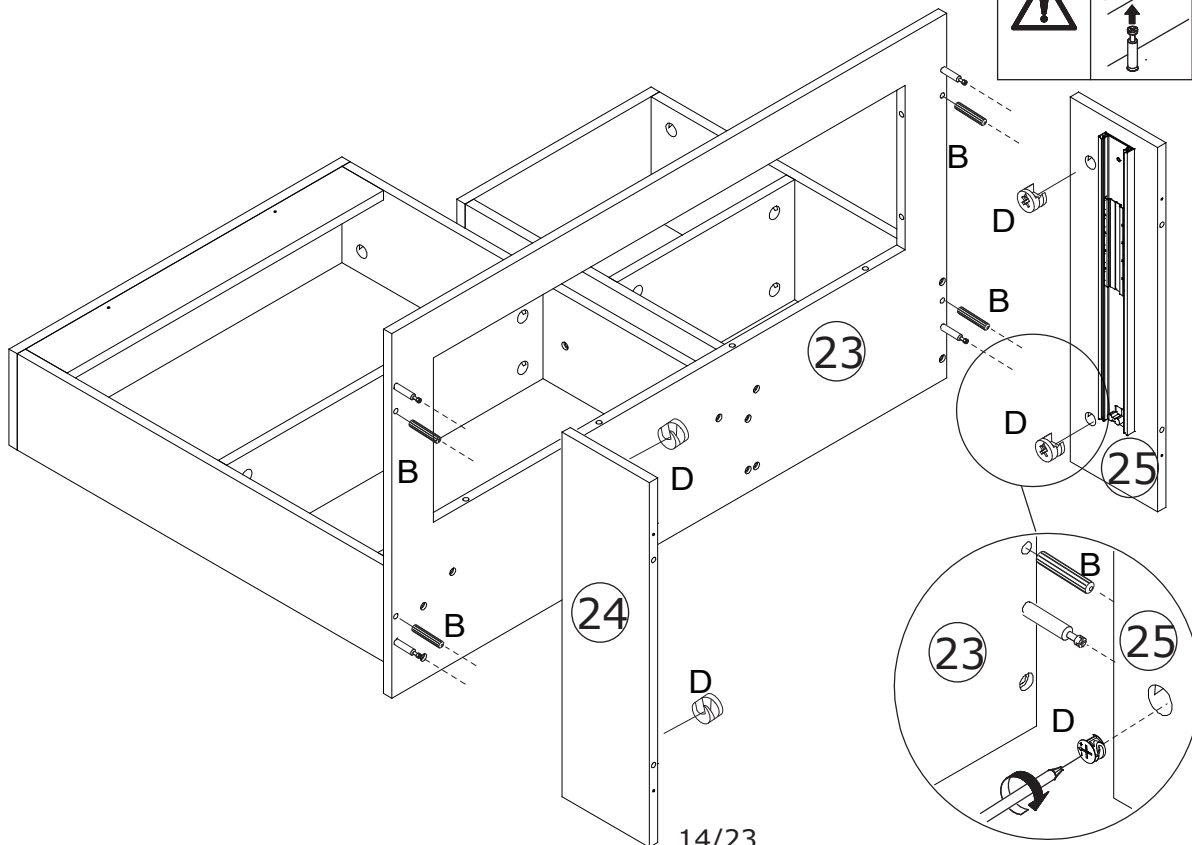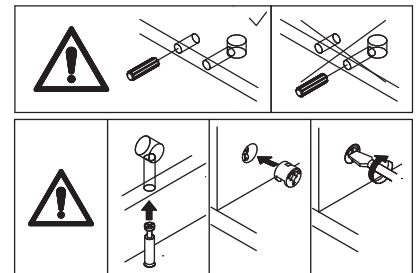

21


M x 10



N x 2




Fix part(N) to plate 26 with screw(M) as shown.

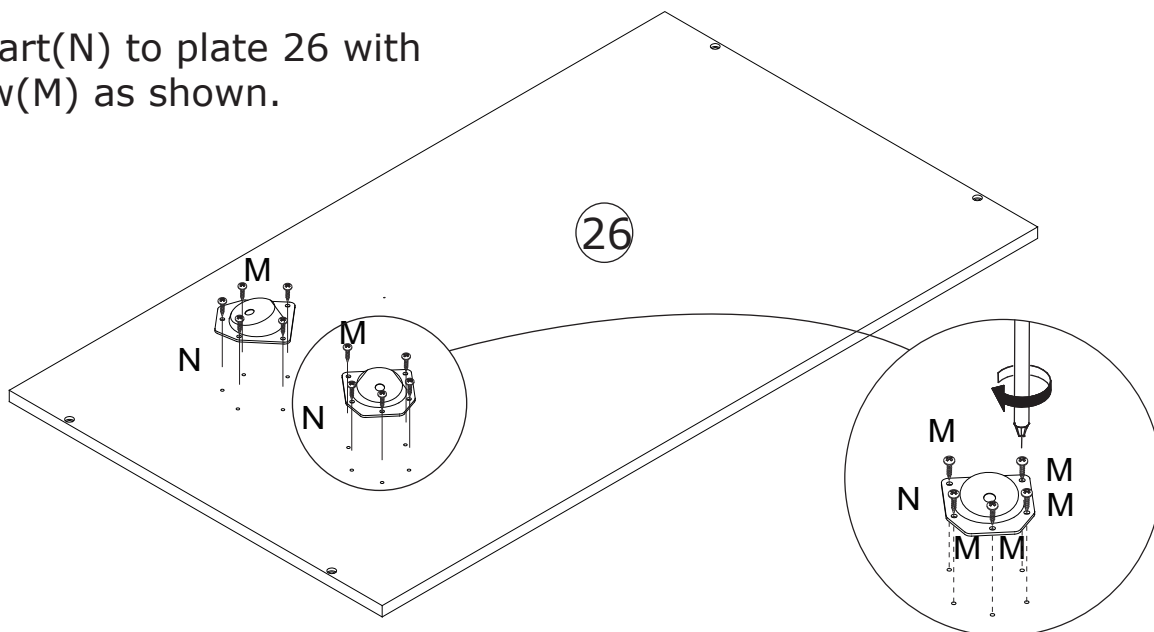

22

 C x 4





B x 4



Ø 4 x 35 mm


Ø 6 x 30 mm

 Insert wooden dowel(B) into plate 24 and 25 at first. Attach plate 26 to plate 24 and 25, and fix with screw(C) as shown.

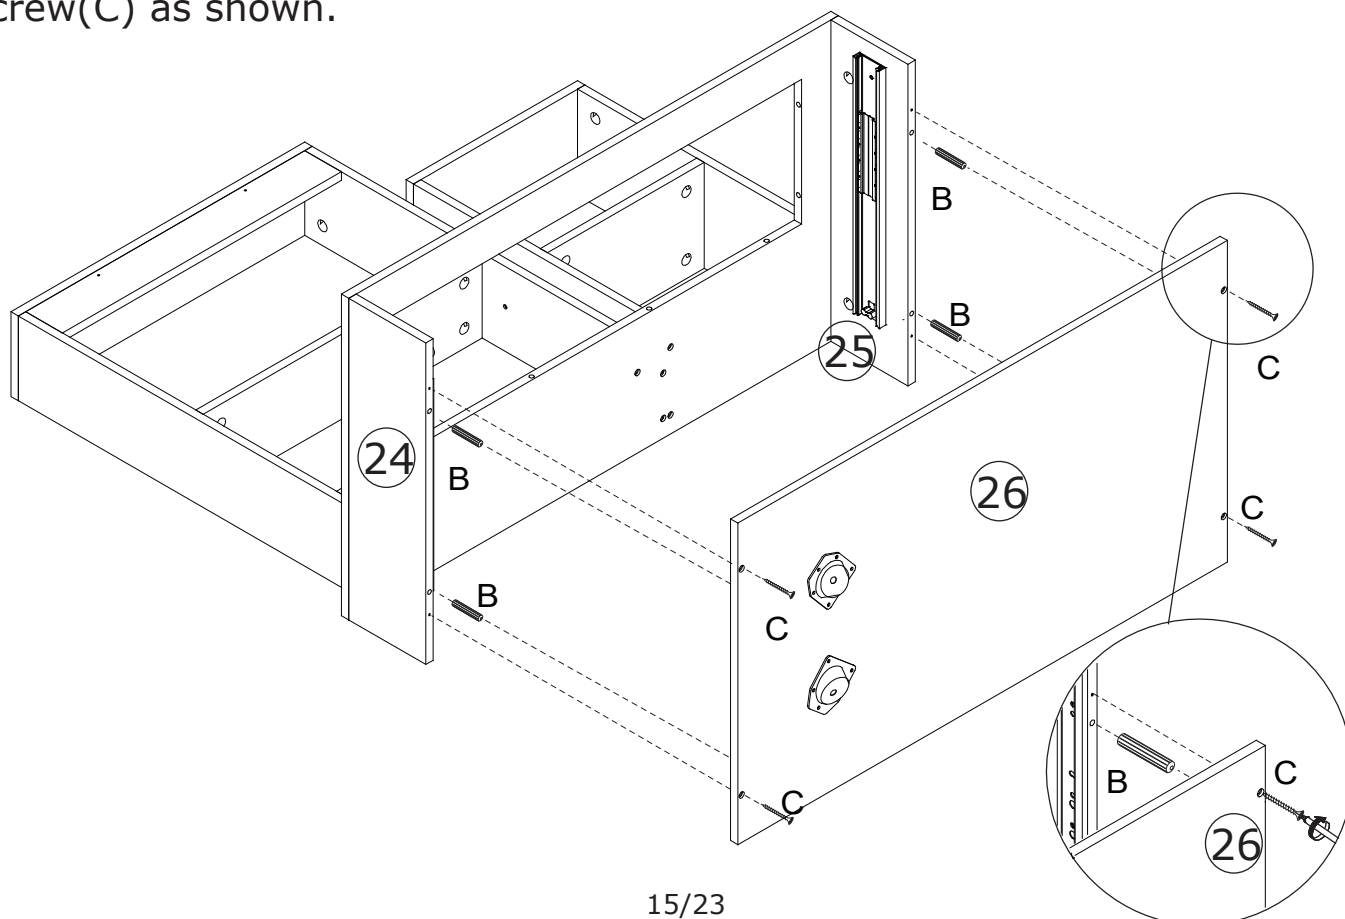

23



 
K x 2



G x 4




Ø 3 x 12 mm

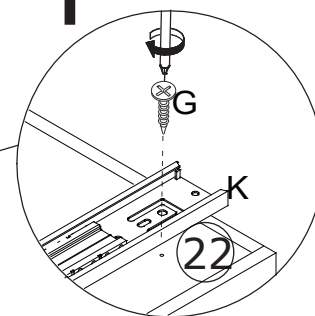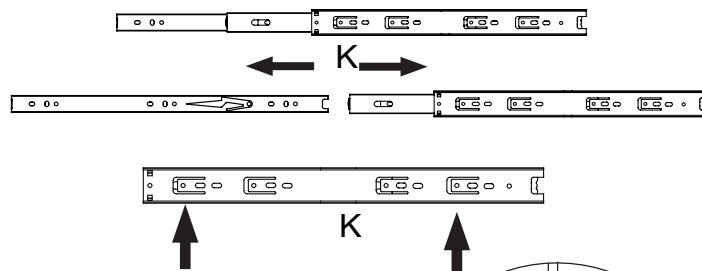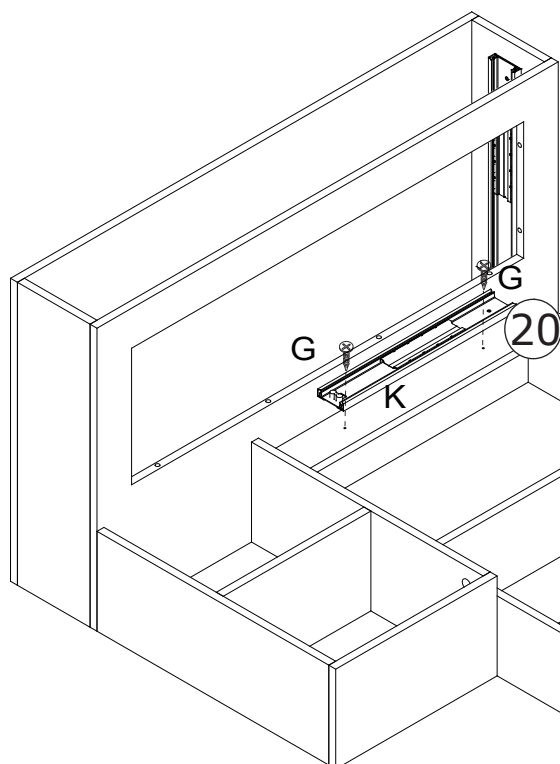

Separate glide into two parts at first.
Fix slide rail(K) to plate 20 and 22 with screw(G) as shown.

24

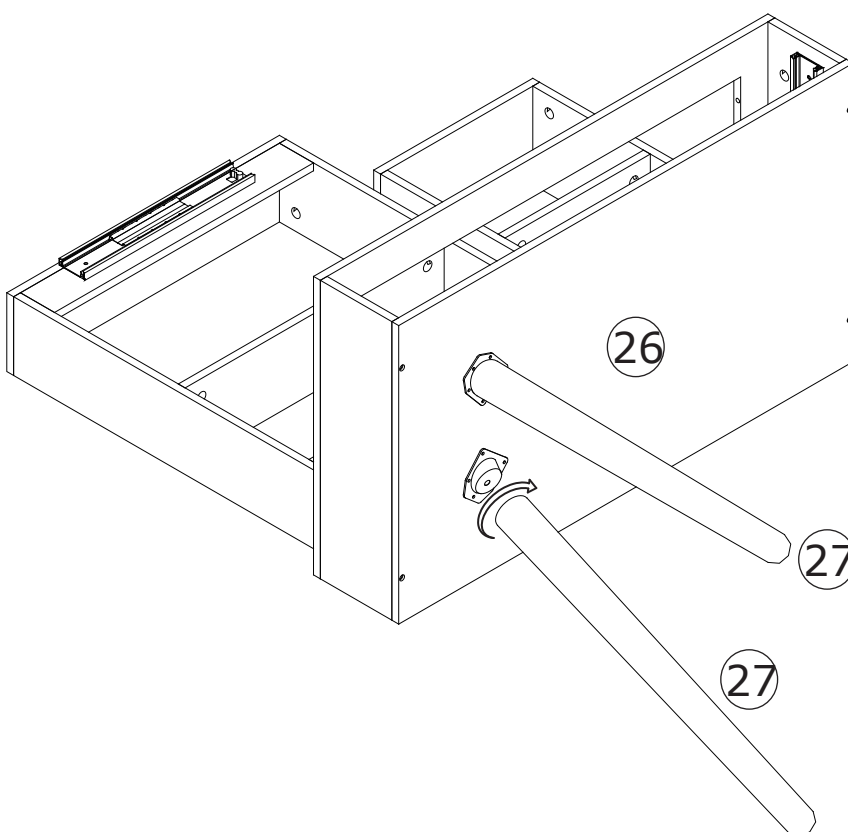



Rotate leg 27 into plate 26 as shown.

25

P x 24



 Ø 3 x 12 mm

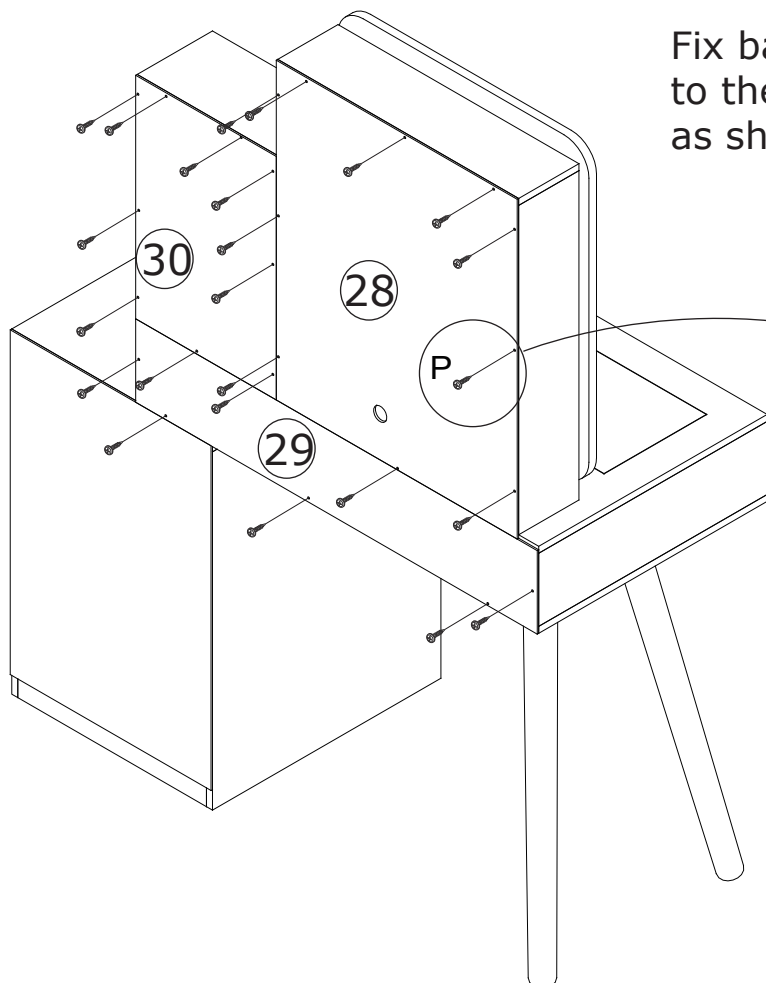

Fix back plate 28, 29 and 30 to the component with screw(P) as shown.


26

G x 4




Ø 3 x 12 mm

K x 2

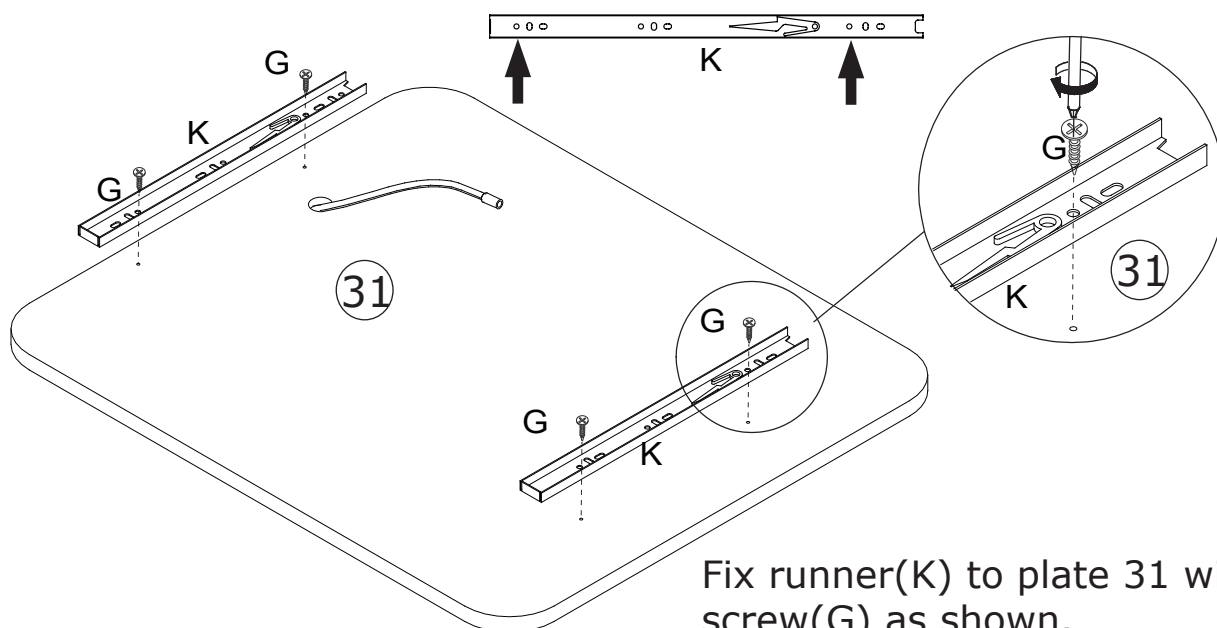

Fix runner(K) to plate 31 with screw(G) as shown.


27

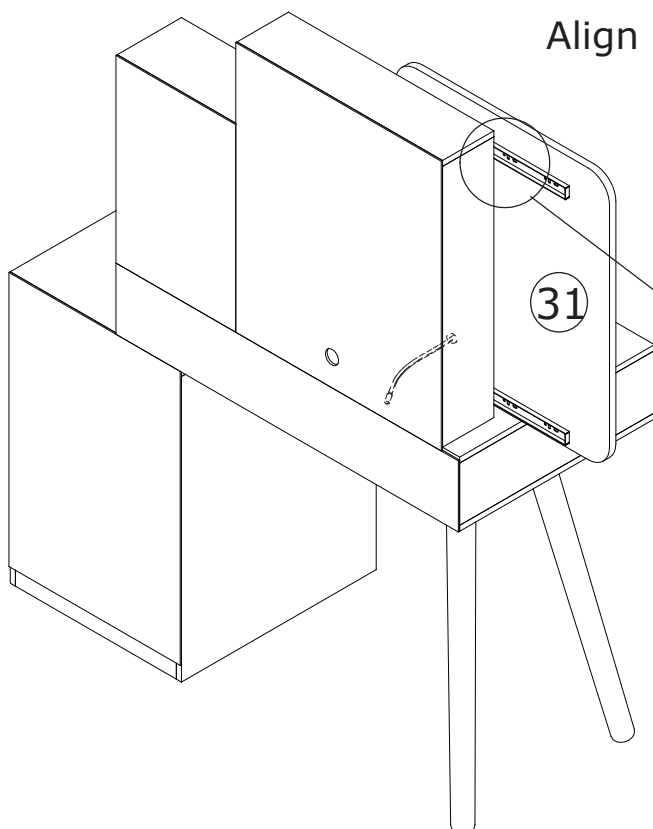

Align rails, slide the mirror plate.

28


 
A x 6




Ø 6 x 35 mm





Insert quickfit screw(A) into plate 32 with a screwdriver as shown.

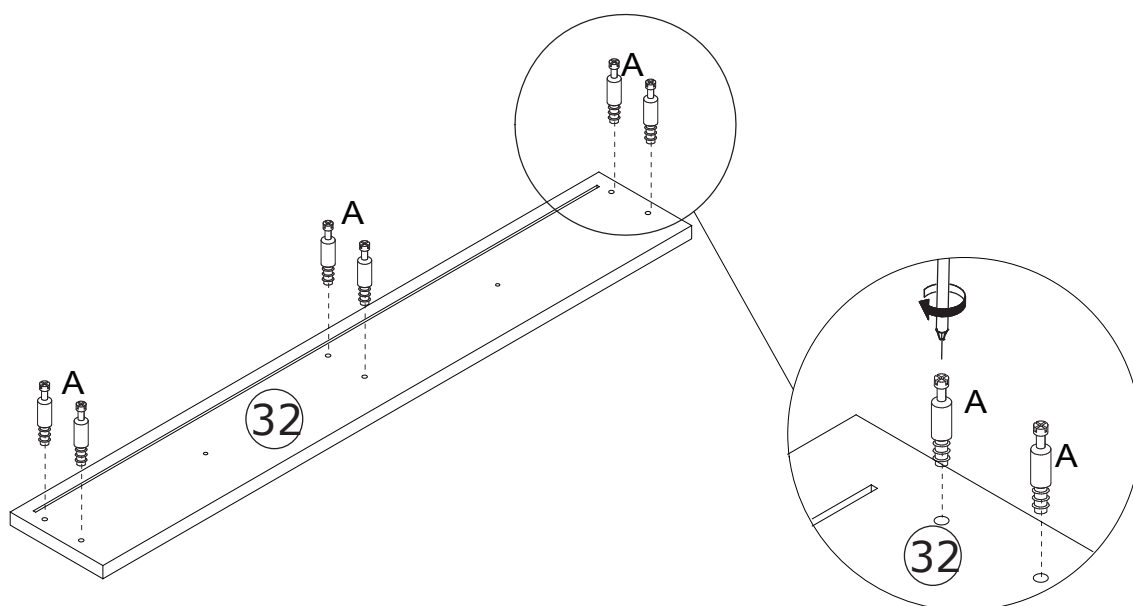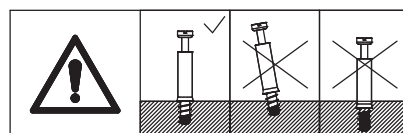


29

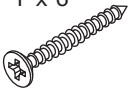
T x 6

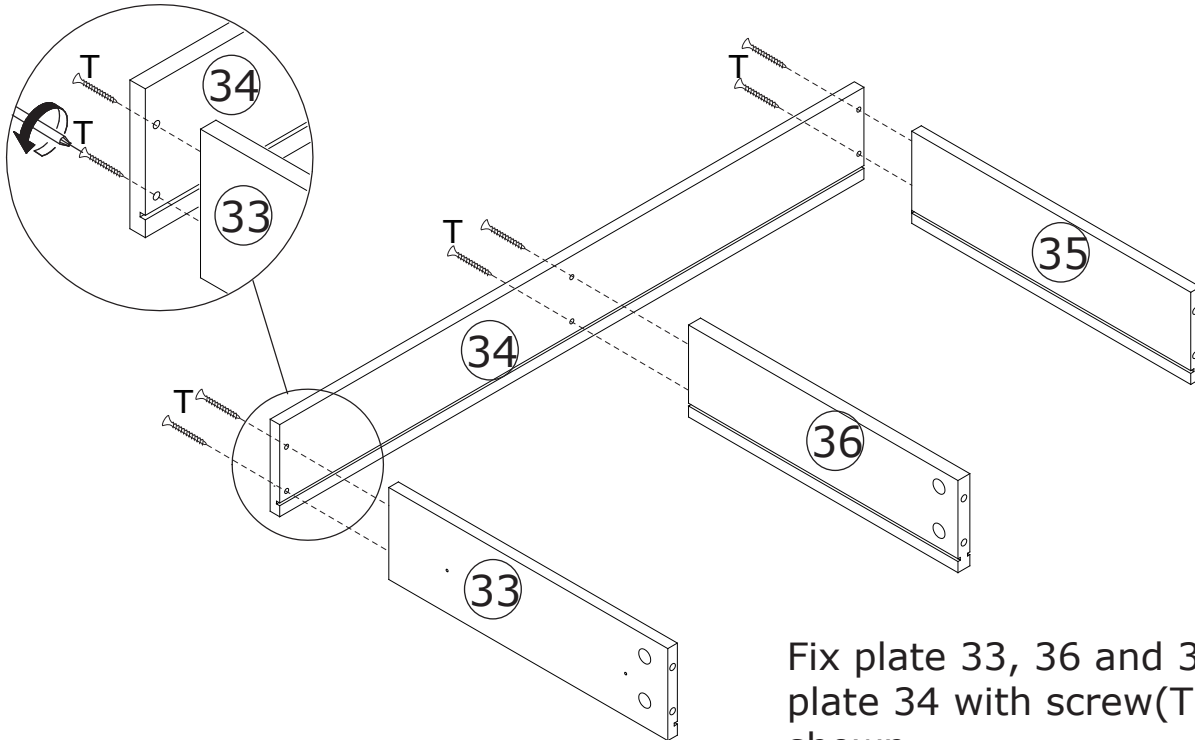  Ø 4 x 30 mm




Fix plate 33, 36 and 35 to plate 34 with screw(T) as shown.

 30



D x 6

 Ø 15 x 9 mm

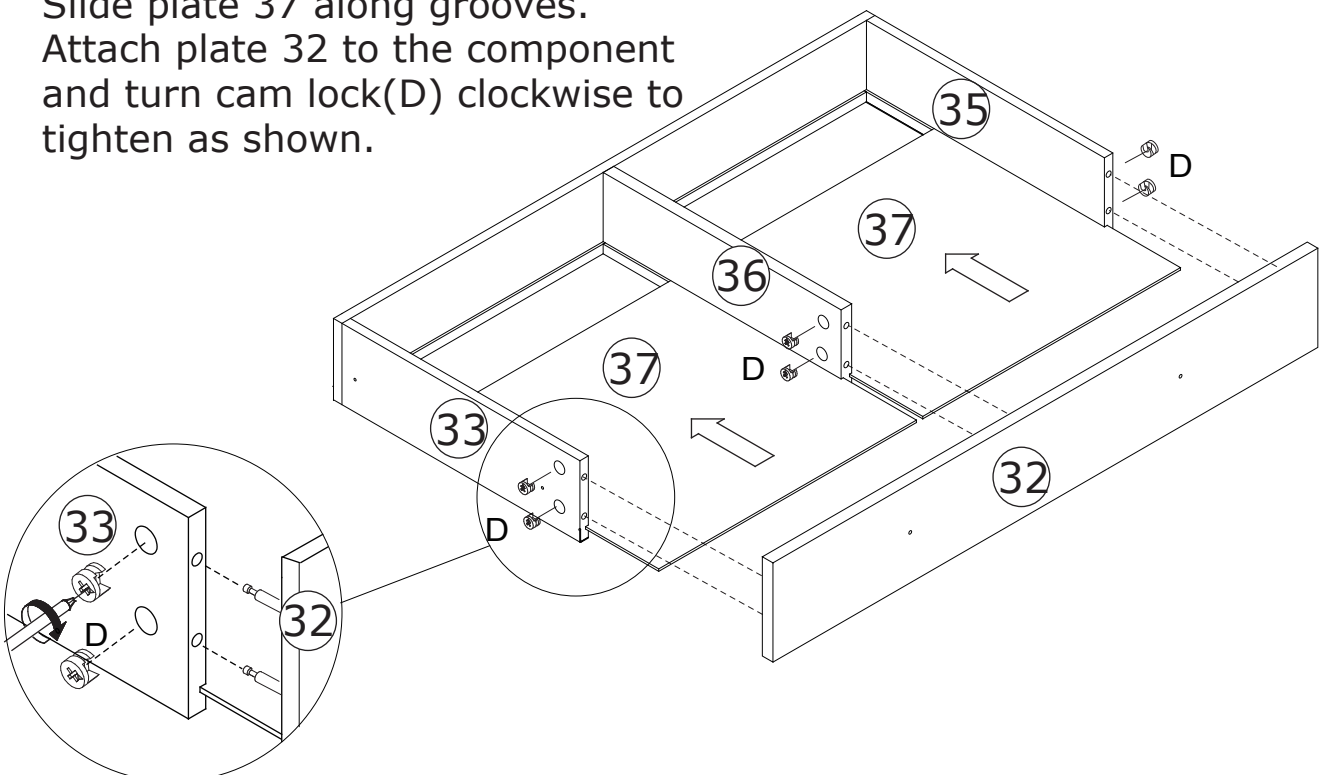

Slide plate 37 along grooves.
 Attach plate 32 to the component
 and turn cam lock(D) clockwise to
 tighten as shown.

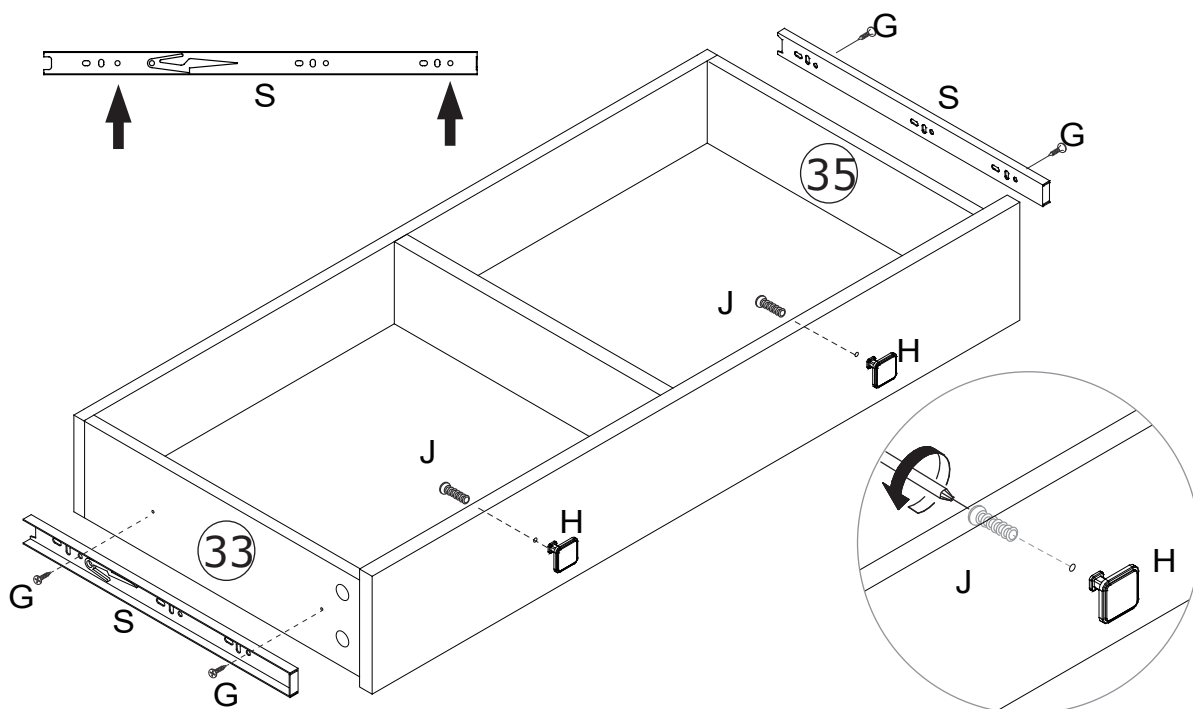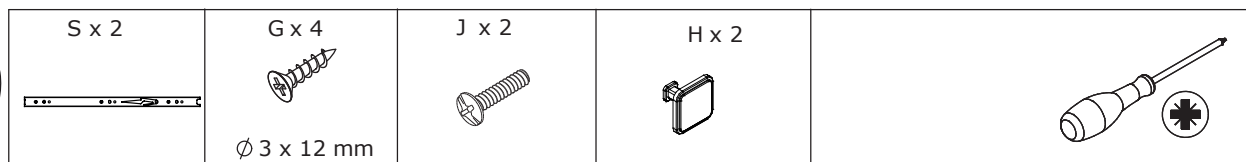


31



Fix runner(S) to plate 33 and 35 with screw(G) as shown.

32

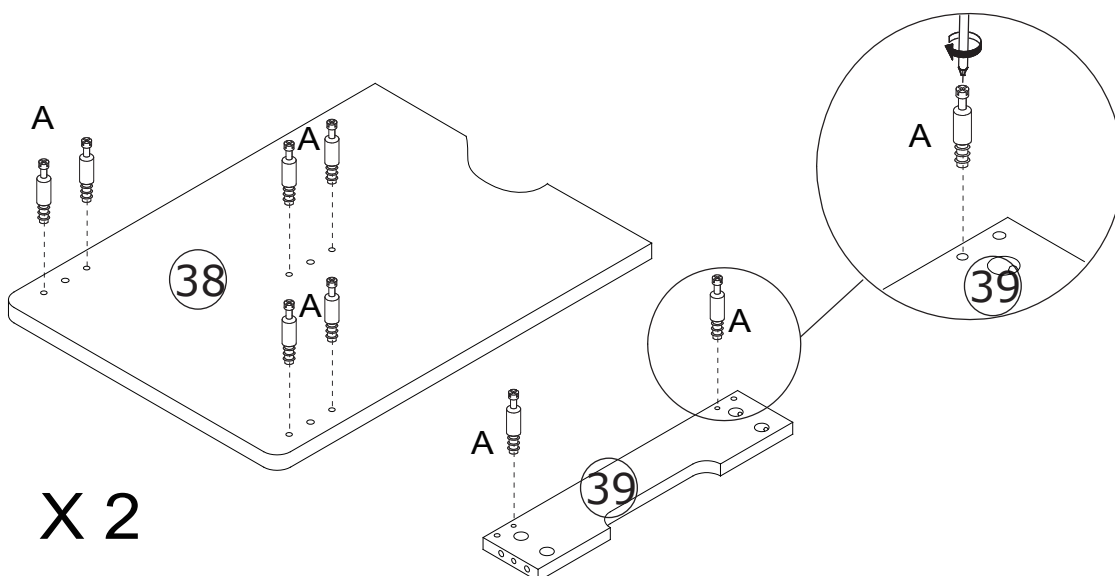

Insert quickfit screw(A) into plate 38 and 39 with a screwdriver as shown.

33

D x 4

 


Ø 15 x 9 mm




B x 4



Ø 6 x 30 mm



Insert wooden dowel(B) into plate 40 at first.
Connect plate 39 with plate 40, add cam lock(D)
into plate 40 and turn clockwise to tighten as
shown.

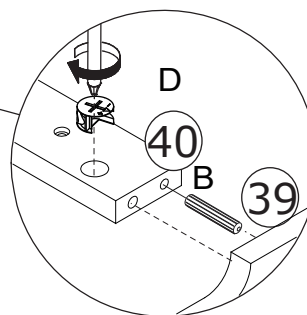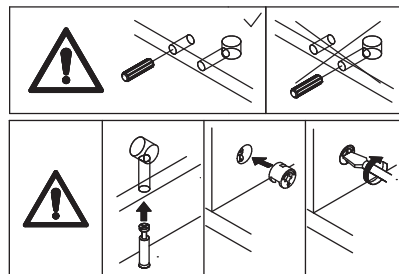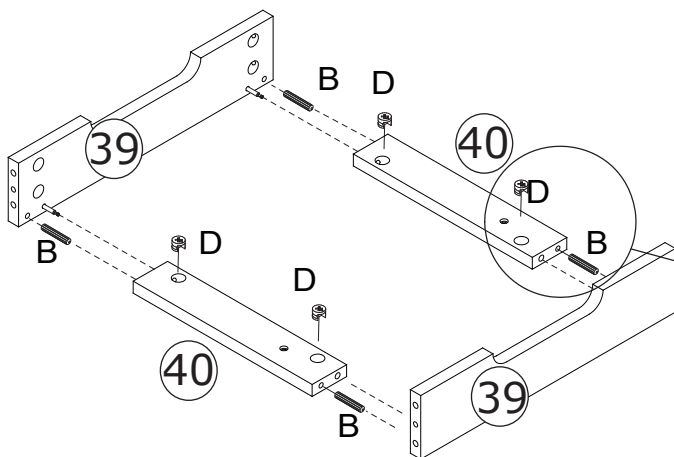

34

D x 6





Ø 15 x 9 mm

B x 3



Ø 6 x 30 mm

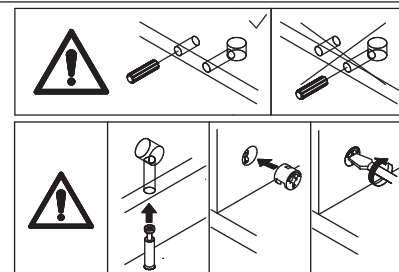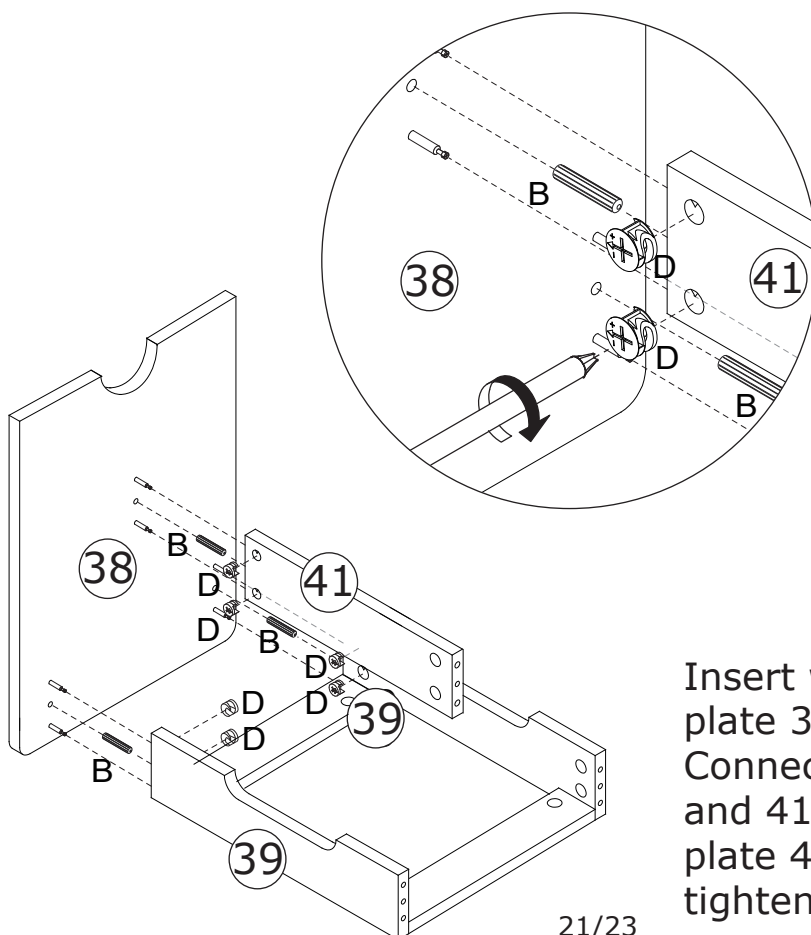

Insert wooden dowel(B) into
plate 38 at first.
Connect plate 38 with plate 39
and 41, add cam lock(D)
into plate 41 and turn clockwise to
tighten as shown.

35

D x 6

 


Ø 15 x 9 mm




B x 3



Ø 6 x 30 mm



Insert wooden dowel(B) into plate 38 at first. Connect plate 38 with plate 39 and 41, add cam lock(D) into plate 41 and turn clockwise to tighten as shown.

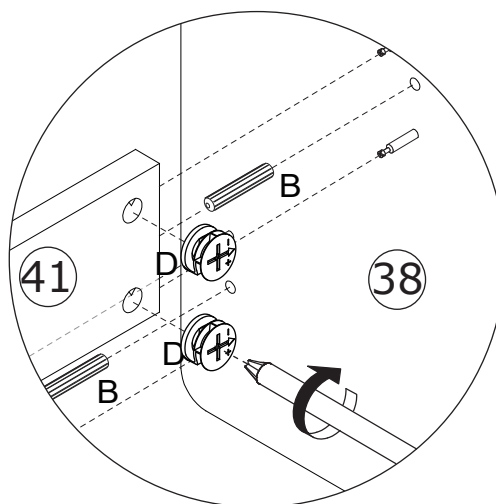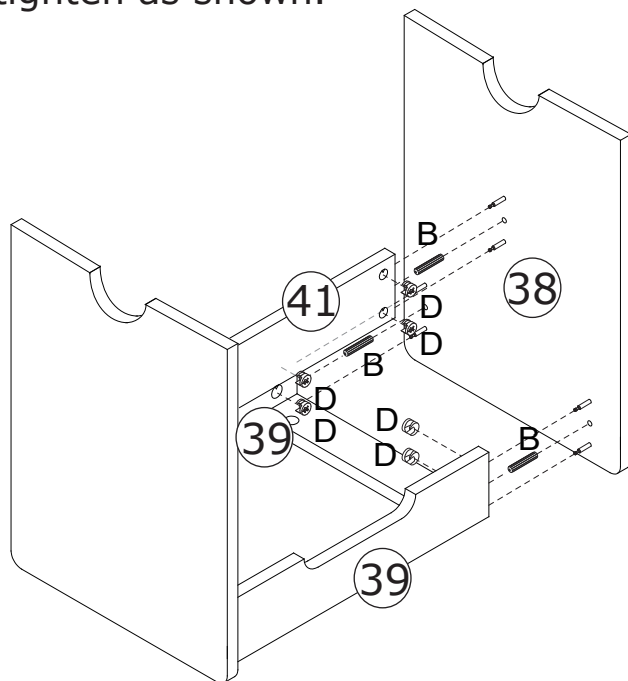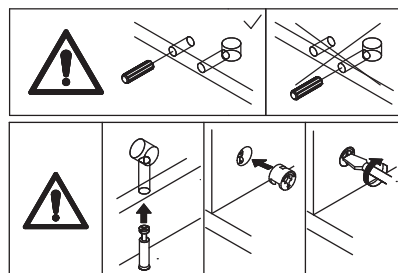

36



Q x 4




Ø 4 x 25 mm





Attach the component to plate 42, fix plate 40 to plate 42 with screw(Q) as shown.

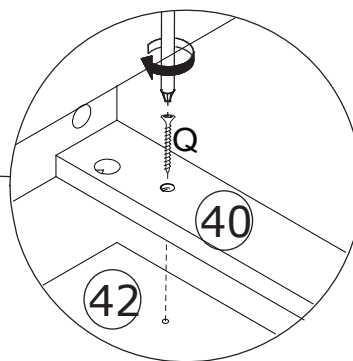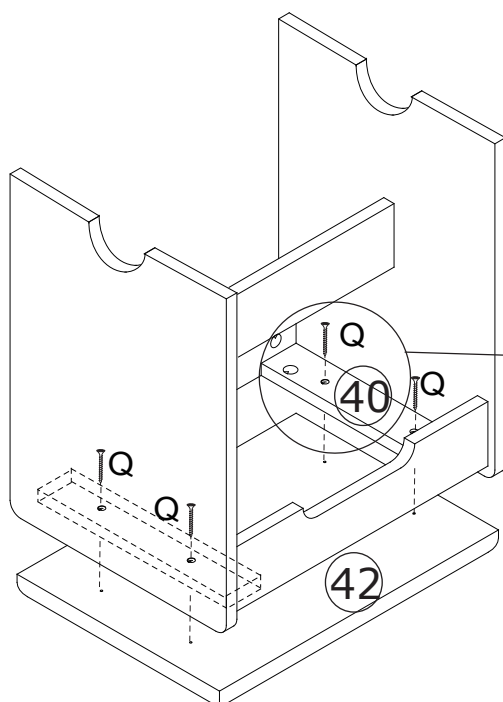

37

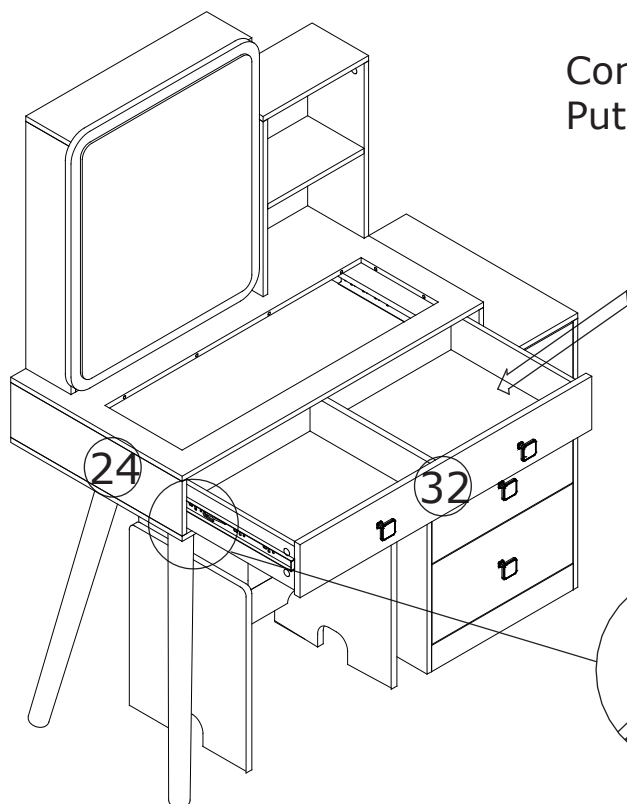

Connect plate 44 with plate 45 at first.
Put the part into drawer.

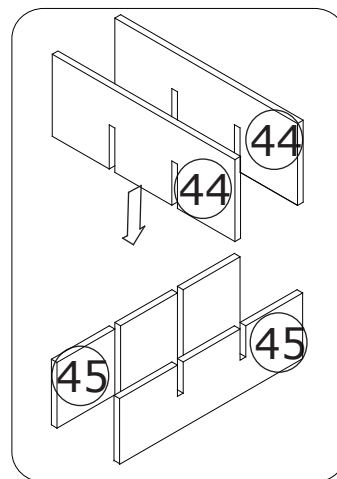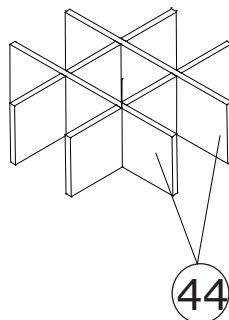


38

L x 12



Insert part(L) into corresponding holes,
and place glass plate 43.

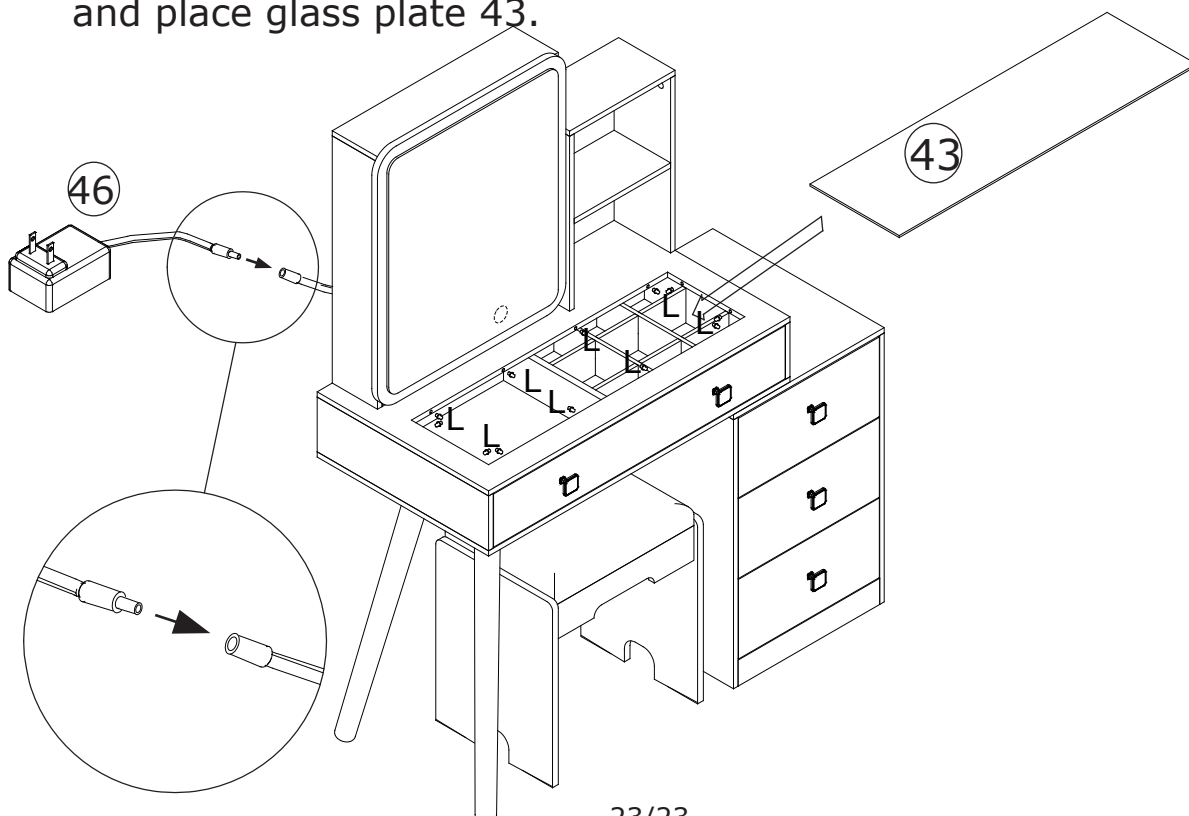

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.