
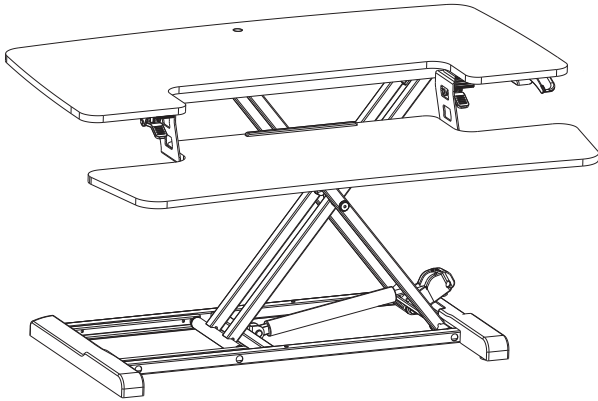


ITEM NO.: WDC7-L
Installation guide

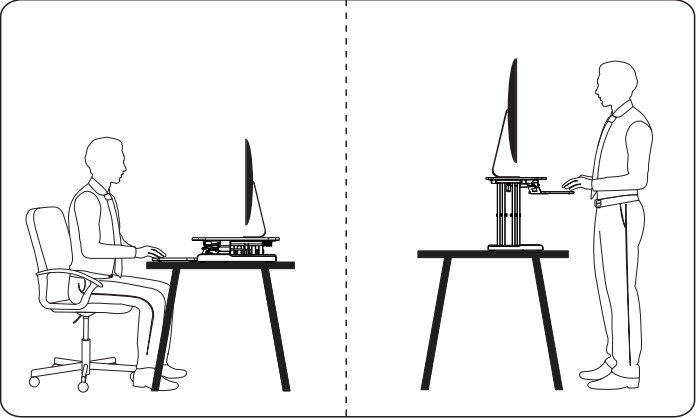

Product Specifications and Parameters

Size of the Desktop :

Warning: Please do not exceed the max load capacity listed

Load Range	6.61-44.09 lbs
Adjustment Range	4.72"-19.69"

Part		No.	Part	No.	Part
	①	A x 1		③	C x 4
	②	B x 1		④	D x 2

Tools

STEP1

Please open the package, take out the product, and place it on the table.


Attention: please ensure that the size of the tabletop meets the placement requirements, to avoid property damage and/or personal injury.

STEP2

Install the tray connector board into the corresponding slots and lock it in place.

To remove the keyboard tray, please open the parts on both sides and then take out the keyboard tray.

STEP3

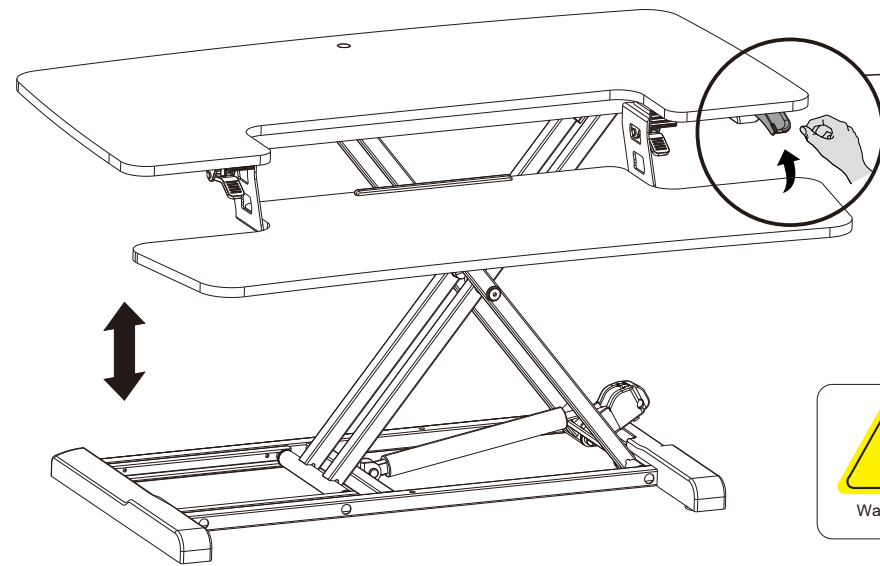


According to your needs, adjust the height of the desk riser by turning the handle on one side.




Do not place your hands near the support rod. The angle of the support rod may change during the adjustment, which could cause harm to you.

STEP4

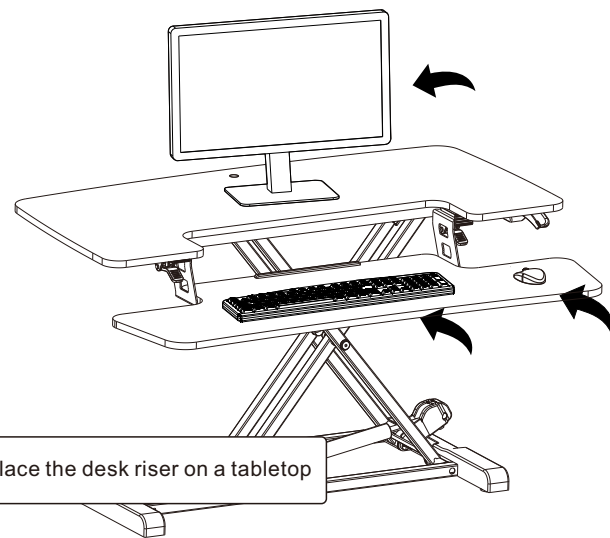

Place the desk riser on a tabletop


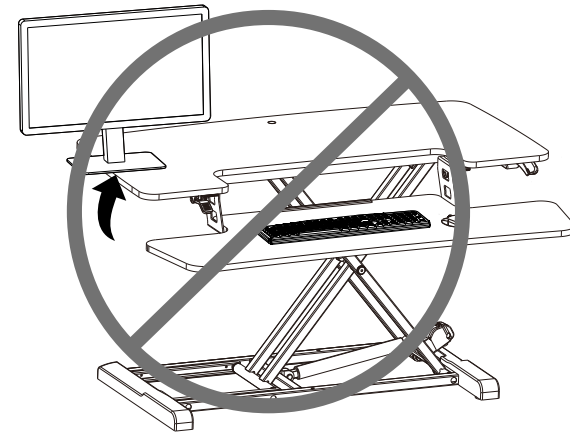


Please make sure that installed desk riser are fully placed on the table and do not extend beyond the edge of the table, as this may cause property damage or personal injury.

STEP5

1 Use Velcro to bundle and organize cables

2 This surface has adhesive that can be used to organize and fix cables to the desktop.

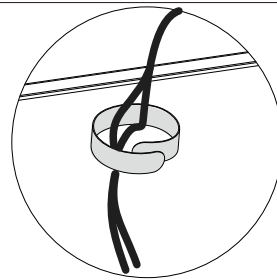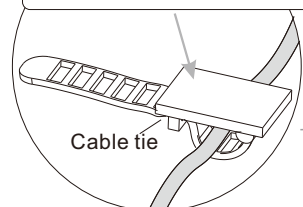

Cable




Please make sure that the cables are sufficiently slack to allow for vertical movement of the product, to avoid property damage or personal injury.




WARNING

Hands Pinching


Do not place your hand near the strut. Strut's angle will change during the desktop lifts and it may hurt you.

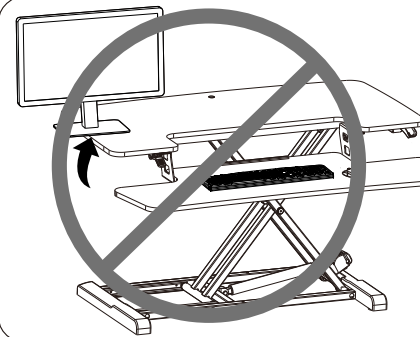


Please make sure that installed desk riser are fully placed on the table and do not extend beyond the edge of the table, as this may cause property damage or personal injury.

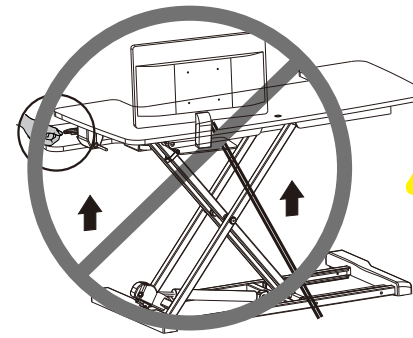

Please make sure that the cables are sufficiently slack to allow for vertical movement of the product, to avoid property damage or personal injury.

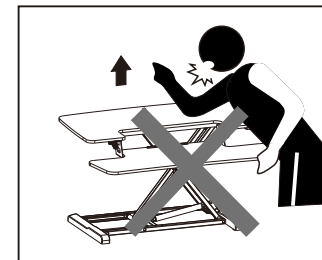

Please firstly adjust the deskriser to its highest position before removing it, to prevent property damage or personal injury.

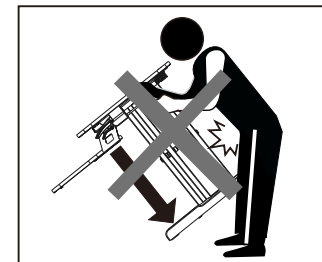

When moving the product, it must be done by two people working together, otherwise the moving parts may cause collisions, leading to property damage or personal injury.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.