

COASTER[®]
Fine Furniture

701957

END TABLE

ASSEMBLY INSTRUCTION

COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

 
PARTS IDENTIFICATION:
Z
HARDWARE PACKAGE:

A . TOP PANEL



1 PC

B . LEG



4 PCS

C . SHELF




1 PC

NO	DESCRIPTION	FIGURE	QTY
1	ALLEN WRENCH LARGE		1 PC
2	BOLT-LARGE		8 PCS
3	LOCK WASHER LARGE		8 PCS
4	FLAT WASHER LARGE		8 PCS
5	ALLEN WRENCH SMALL		1 PC
6	BOLT-SMALL		4 PCS
7	LOCK WASHER SMALL		4 PCS
8	FLAT WASHER SMALL		4 PCS

Assembly Instruction


STEP 1

Pull the drawer out. Set the LEGs on the TOP PANEL as shown by using FLAT WASHER LARGE, LOCK WASHER LARGE and BOLT-LARGE with ALLEN WRENCH LARGE.

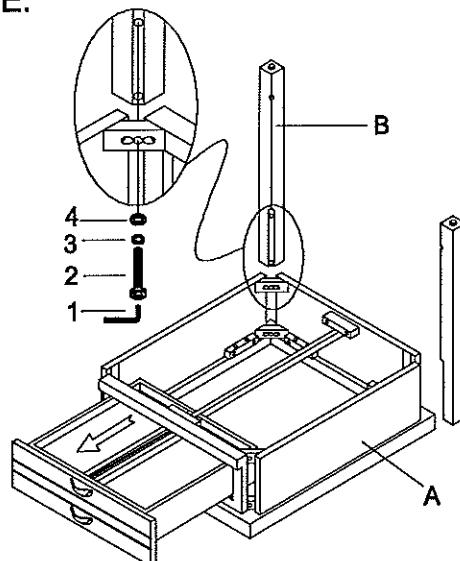

STEP 2


Insert the SHELF and fix it with the LEGs as shown by using FLAT WASHER SMALL, LOCK WASHER SMALL and BOLT-SMALL with ALLEN WRENCH SMALL.

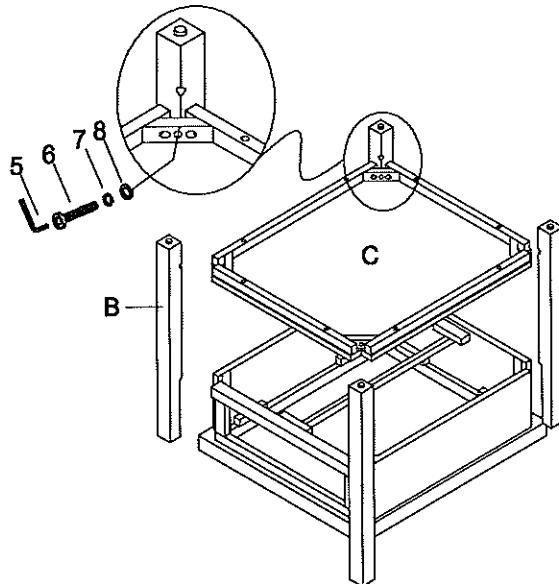

Assembly Instruction

STEP 3

Put the drawer in.

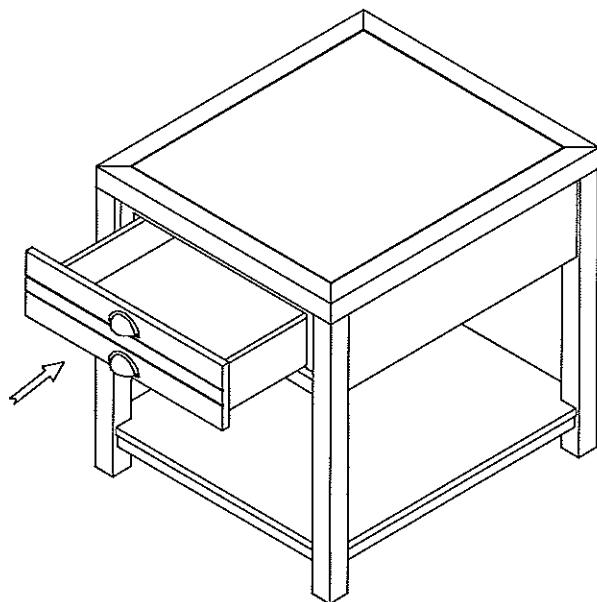

STEP 4

Assembly complete.

