

|--|

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <a href="https://tiny.cc/SunnydazeWarranty">https://tiny.cc/SunnydazeWarranty</a>
If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: <a href="mailto:customerservice@sunnydazedecor.com">customerservice@sunnydazedecor.com</a>, or via our contact us page at <a href="https://tiny.cc/SunnydazeContact">https://tiny.cc/SunnydazeContact</a>

 
# 15-FOOT HAMMOCK STAND HS15

Read all assembly and care instructions carefully before using this product. Save these instructions for future reference.


Select a smooth, level surface to place the hammock stand.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

No.	Parts	QTY.
A	Leg	2
В	© Center Pole	1
С		2
D	Chain with Attached S-Hook	2





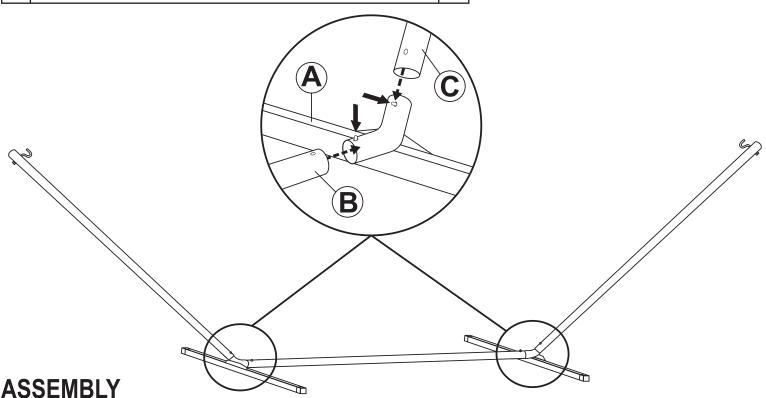


- 1. Place 2x Leg (A) on the ground, ensuring the elbow pipes are at a 120-degree angle.
- 2. Align the hole on Center Pole (B) with the spring button on Leg (A). Press the spring button down and carefully slide the center pole over the button, the spring button will snap through the hole in the center pole when it is connected. Repeat this step to connect the other leg.
- 3. Align the hole on Upright Pole (C) with the top spring button of the leg. Press the spring button down and carefully slide the pole over the button, the spring button will snap through the hole in the upright pole when it is connected. Repeat this step to connect the other upright pole.

#### HANGING YOUR HAMMOCK

#### (!) HAMMOCK NOT INCLUDED WITH THIS STAND

Select an appropriate size hammock (not included) for this stand.

If your hammock is too short to hang on the pre-installed hooks, use the included chains with attached S-hook. Adjust the length of the chains to tighten/loosen the fit of the hammock.

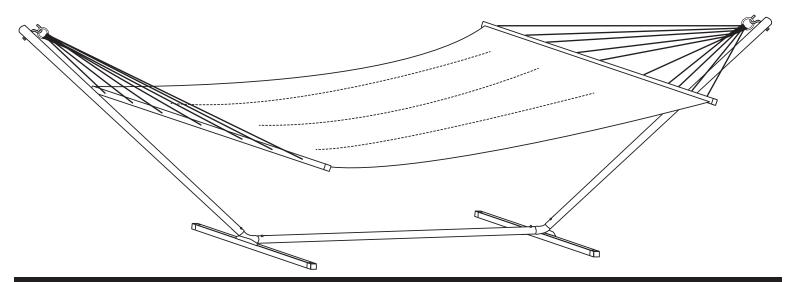

## 🛕 IMPORTANT INFORMATION 🛕

Under normal use, Sunnydaze hammock stands will last for years. It is important to follow basic care tips to prolong the life of your stand.

### **USE & CARE**

- **SAFE USE:** Never exceed the weight capacity of the stand, 400 lbs. Swinging, bouncing, jumping or any other excessive movement may result in serious injury including, but not limited to, the stand tipping over or dislodging the spring buttons causing components to disconnect.
- **CHILDREN:** Supervise children at all times. Do not allow children to play or sleep in hammocks (not included) when used with this stand.
- **STORAGE:** Store the stand indoors when not in use. Cool, dry locations are recommended to prevent damage that may result from exposure to moisture.
- **INSPECTION:** Examine the stand before each use to ensure it is assembled correctly and all connection points are secure.
- **CLEANING:** Use a soft cloth and warm water to wipe down the stand, if necessary. Wipe away moisture with a soft, clean cloth.
- **SCRATCHES:** The powder coating on the stand is tough and durable but even under normal use, some scratching is inevitable. To prevent excessive rust, wipe scratched areas to remove moisture.

### **TROUBLESHOOTING**

• If the stand seems unstable, make sure it is on a level surface. Also make sure that the components are assembled correctly and the connection points are secure.

Any modification to the product or failure to follow recommended care will void the product warranty.

# **⚠WARNING**:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.