


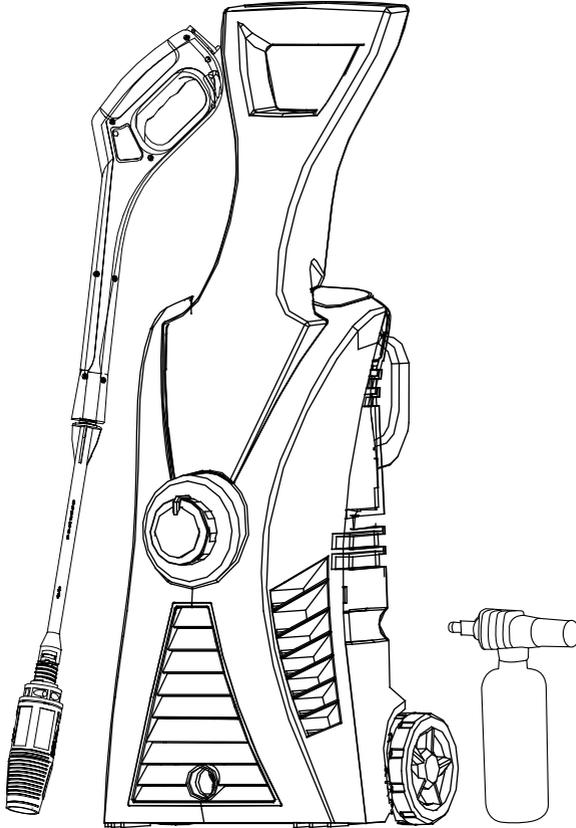

Model GYE20V

2000 PSI ELECTRIC PRESSURE WASHER OPERATOR'S MANUAL



WARNING: This product and other substances that may become airborne from its use contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling. For more information, visit www.P65warnings.ca.gov.



DO NOT RETURN TO STORE!

HAVE QUESTIONS OR NEED SERVICE?



1-866-591-8921



support@pulsar-products.com

2000PSI Pressure Washer

Table Of Contents

Topic	Page #
Important Safety Tips, Precautions, Warnings, and Usage Instructions	2-5
Assembly Instructions	6-9
Operating Instructions	10-12
Detergents	13
Clean-up and Storage	14-17
Technical Data	17
Troubleshooting Tips	18
Exploded View, Parts Lists	19-20

2000PSI Pressure Washer

GROUND FAULT CIRCUIT INTERRUPTER (GFCI)

This pressure washer is provided with a Class A ground fault circuit interrupter (GFCI) built into the plug of the power supply cord. This device provides additional protection from the risk of electric shock. Use only identical replacement parts.

When connecting the GFCI plug to the receptacle, the indicator should appear red. If the indicator is not red, press the RESET button on the GFCI until the indicator appears red.

IMPORTANT SAFETY TIPS

Never point the high-pressure nozzle at people or animals.
Never drink alcohols or use drugs while operating the pressure washer.
Never operate the pressure washer while standing in water.
Never touch the electrical plug with wet hands.
Never let the electrical connections rest in water.
Never operate the pressure washer without the water turned on.
Never use hot water with this pressure washer.

2000PSI Pressure Washer

IMPORTANT SAFETY PRECAUTIONS

WARNING! When using this product, basic precautions should always be followed, including:

1. Read all instructions before using the product. Save all safety instructions.
2. Do not operate the pressure washer when fatigued or under the influence of alcohol or drugs.
3. Risk of injury – never direct the high-pressure water stream at any people or animals.
4. Never allow children to operate the pressure washer.
5. Do not use the pressure washer near children.
6. Know how to stop the pressure washer immediately. Be completely familiar with the controls.
7. Stay alert – always be aware of where you are directing the high-pressure spray.
8. Keep the cleaning area clear of all people.
9. Maintain safe footing and balance at all times – do not overreach or stand on an unstable support.
10. The work area should have adequate drainage to reduce the possibility of a fall due to slippery surfaces.
11. Follow the maintenance instructions specified in the manual.
12. To reduce the risk of electrocution, keep all connections dry and off the ground.
13. Do not touch the plug with wet hands.

SAVE THESE INSTRUCTIONS

GENERAL SAFETY PRECAUTIONS

1. Intended for outdoor household use only.
2. High-pressure hose can develop leaks from wear, abuse, kinking, etc. NEVER use a damaged hose.
3. Do not use the pressure washer in areas near combustible materials, or combustible fumes.
4. Some chemicals or detergents may be harmful if inhaled or ingested causing severe injury. Use a respirator or mask whenever there is a chance that vapors may be inhaled.

2000PSI Pressure Washer

Read all instructions included with the mask so you are certain the mask will provide the necessary protection against inhaling harmful vapors.

5. Before starting the pressure washer in cold weather, check all of the parts of the equipment and be sure that ice has not formed. Do not store the unit anywhere that the temperature will fall below 0° C (32° F).
6. DO NOT MAKE ANY MODIFICATIONS TO ANY OF THE COMPONENTS! Units with broken or missing parts, or without protective housing or covers should NEVER be operated.
7. Keep the high-pressure hose connected to the pressure washer and the spray gun while the system is pressurized. Depressurize the hose before disconnecting it.
8. NEVER leave the pressure washer unattended while the power switch is ON.
9. Keep the water spray away from electrical wiring or fatal electric shock may result.

SERVICING OF A DOUBLE-INSULATED APPLIANCE

In a double-insulated product, two systems of insulation are provided instead of grounding. No means of grounding is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED". This symbol  may also be marked on the product.

USE OF EXTENSION CORDS

Use of an extension cord with this product is NOT RECOMMENDED. If you must use an extension cord, use only extension cords that are intended for outdoor use. These cords are identified by a marking "ACCEPTABLE FOR USE WITH OUTDOOR APPLIANCES, STORE INDOORS WHILE NOT IN USE." Use only extension cords having an electrical rating not less than the rating of the product. Examine the extension cord before use. Do not use damaged extension cords! Do not pull on cord to disconnect from the receptacle. Always disconnect by pulling on plug. Keep the cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.

2000PSI Pressure Washer

WARNING! – To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch the plug with wet hands.

PROPER USE OF THE PRESSURE WASHER

WARNING! – This unit is intended for use with cold water only! Do not use hot water in this pressure washer.

1. The pressure washer must be supplied with ordinary household water pressure, (40-80psi), see page 17 for details.
2. Make sure that the water supply you use for the pressure washer is not dirty or contaminated. Using a dirty water supply will reduce the life of the pressure washer.
3. CAUTION - The pressure washer can be used for a variety of applications including washing cars, boats, patios, decks, garages etc. where high pressure is necessary to remove dirt and debris. High-pressure water flow can damage the work surface if not used properly! See the section titled “Operating Instructions” for more details. Always test the spray in an open area first.
4. NEVER move the unit by pulling on the high-pressure hose. Use the handle provided on the top of the unit.
5. Always hold the high-pressure gun and wand with two hands. Keep one hand on the gun/trigger, while supporting the wand with the other hand.
6. When dispensing detergent, the pressure washer applies detergent to the cleaning area at low pressure only. Once the detergent has been applied, spray the detergent off of the work area by using the adjustable nozzle.


2000PSI Pressure Washer

ASSEMBLY INSTRUCTIONS

Unpacking The Carton

After opening the carton, please remove all parts and check them against the following list of components that are included:


- A. High Pressure Washer
- B. Gun
- C. High Pressure Hose
- D. Adjustable Nozzle
- E. Water Intake Filter (Pre-Installed)
- F. Detergent Bottle
- G. Hose Hook
- H. Four 4.8x25 Screws

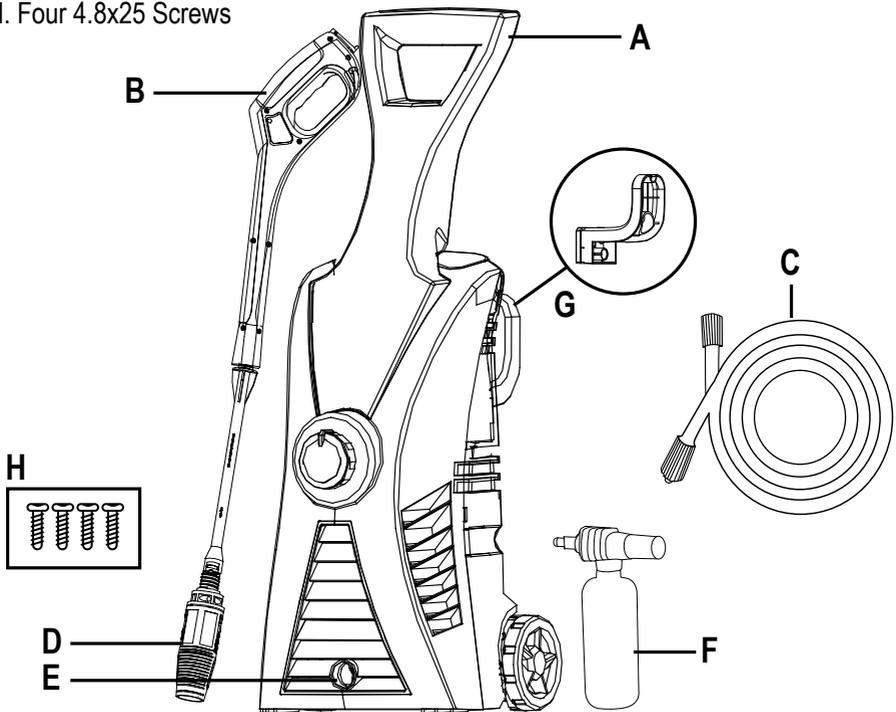


2000PSI Pressure Washer

STEP 1

Align the holes on the handle to the body of the pressure washer.

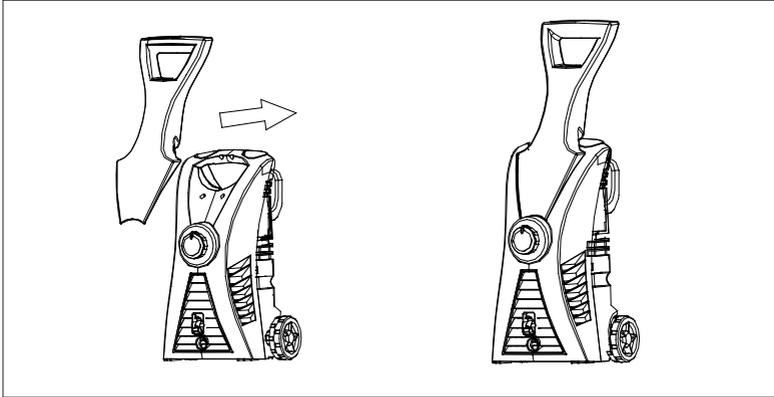


Then using the 4 screws provided, screw the handle to the pressure washer from the back of machine with a screwdriver (not included)

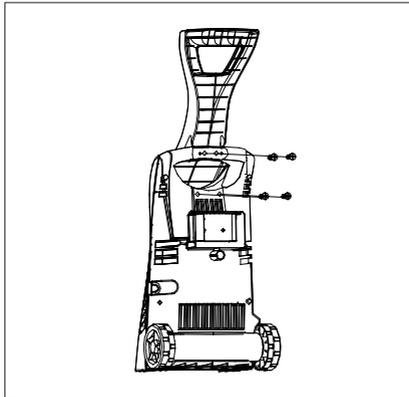

2000PSI Pressure Washer

STEP 2


With hook oriented as shown, slide the hook into the housing dovetail.

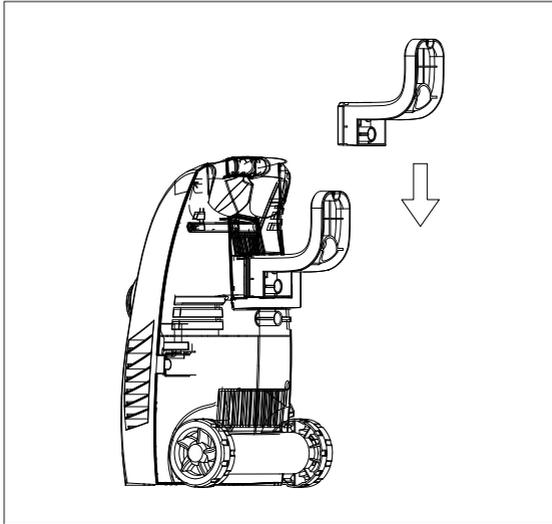

2000PSI Pressure Washer

STEP 3


Attach the pressure hose to the gun fitting as shown below and tighten.

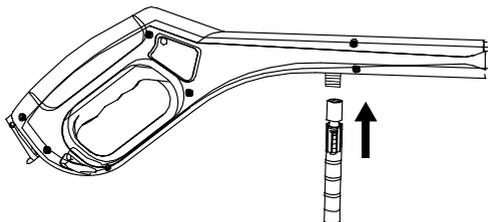

STEP 4

Adjustable Spray Nozzle

Insert the adjustable spray nozzle into the gun. Push and turn the adjustable nozzle clockwise onto the gun until it is hand tight and locked in place. When the pieces are joined properly, you cannot separate the two components by pulling out on the adjustable nozzle. Attachments must be inserted into the gun for proper use.

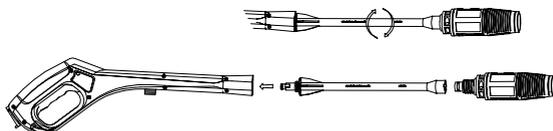


STEP 5

Attach the pressure hose connector to the pressure washer. First, remove and discard the plastic shipping cap from the male fitting on the pressure washer. With the pressure hose and gun installed, attach the garden hose to the water hose connection. Then connect the other end of the garden hose to the water spigot.



← High Pressure
Hose Connection

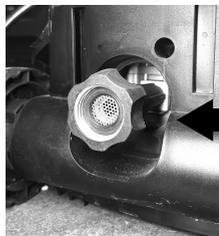

← Water Hose
Connection

2000PSI Pressure Washer

OPERATING INSTRUCTIONS

***THIS UNIT IS INTENDED TO BE USED WITH COLD WATER ONLY!
DO NOT USE HOT WATER IN THIS PRESSURE WASHER!***

Starting

After connecting the pressure washer to your cold water supply, proceed as follows:

- Make sure that the ON/OFF switch is in the OFF position.
- Connect the garden hose to the inlet fitting.
- Attach the high-pressure hose to the gun as per assembly instruction step 3.
- Insert the adjustable spray nozzle into the gun as per assembly step 4.
- Connect the high pressure hose to the high pressure outlet fitting as per assembly step 5.
- Open the water supply valve completely.
- Before turning the unit on, press the gun trigger to bleed all the remaining air out of the pump and hose.
- Start the pressure washer by turning the ON/OFF switch to the ON position and squeezing the trigger.



ON/OFF Switch

WARNING! – Risk of Injury - The unit will start spraying when the trigger is squeezed. When turning the unit off after use, high pressure still exists inside the hose and unit. Point the gun in a safe direction and discharge the excess pressure. NEVER direct the high pressure water stream at people or animals.

Automatic ON/OFF

The pressure washer is equipped with an automatic on/off switch. The pressure washer will only run when the power switch is in the ON position and the trigger on the gun is squeezed. When you release the trigger to stop spraying water through the gun, the motor on the pressure washer will automatically shut off. Simply squeeze the trigger again to resume using the washer. To stop using the pressure washer, release the trigger and switch the unit to the OFF position. The pressure washer must be OFF and unplugged when unattended.

2000PSI Pressure Washer

Bleed Air from the Gun

It is very important to bleed all the air out of the pressure washer before using it. To do this:

1. Release trigger lock.
2. Squeeze the trigger **before** turning the power ON. This removes any air trapped inside the pressure washer and lance before using the unit.
3. Continue holding the trigger for a few seconds to allow any excess air out of the unit. Water will flow through the gun at low pressure during this procedure.
4. Release then lock the trigger.
5. Plug in the power cord.
6. Release the trigger lock.
7. Turn the ON/OFF switch clockwise to the ON position. The pressure washer is ready for operation.


Gun Safety Lock

This pressure washer is equipped with a gun trigger safety lock. When not using the pressure washer, use the safety lock to protect from accidentally engaging the high pressure spray.

Adjustable Spray Nozzle


The adjustable nozzle will allow you to use a variety of spray patterns from a full fan spray (Diagram 1) to a direct stream spray (Diagram 2). When using the pressure washer to clean wood decks, siding, vehicles, etc., always start using the fan spray and begin spraying from a minimum of 3 feet away to avoid damaging the surface of the material you are cleaning. Always begin by spraying in a test area free and clear of people and objects.

2000PSI Pressure Washer

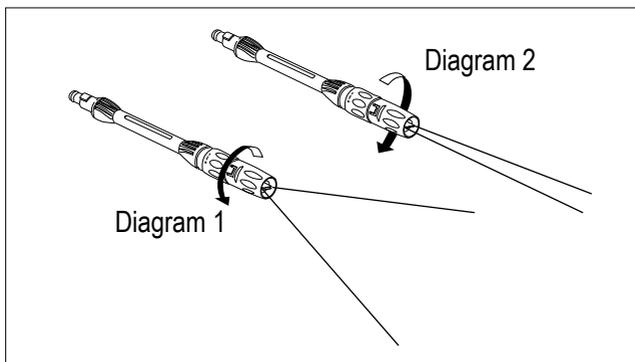

Detergent Nozzle

The detergent nozzle will allow you to apply liquid detergent onto the work surface. Detergent application happens at low pressure only. Fill the container with detergent only. Do not add any water. The pressure washer will mix water and detergent automatically. When finished applying the detergent to the work surface, install the adjustable spray nozzle, and rinse the detergent by using the high-pressure spray.

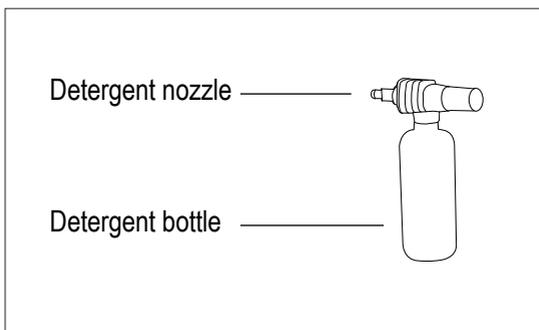

Auto Stop System

The pressure washer is fitted with an automatic stop system to protect the motor when in use. When the trigger is released the motor will stop. When the trigger is squeezed the motor will start up again.

2000PSI Pressure Washer

Using Detergents

Biodegradable detergents are specifically formulated to protect the environment and your pressure washer. These detergents will not clog the filter and will protect the internal parts of the pressure washer for a longer life.

STEP 1



Open the cover of the detergent bottle by twisting it off.

STEP 2

Fill the detergent bottle with liquid detergent suitable for pressure washers. Close the cover.

STEP 3

Remove the front lance, and install the detergent nozzle with the bottle. (see below)

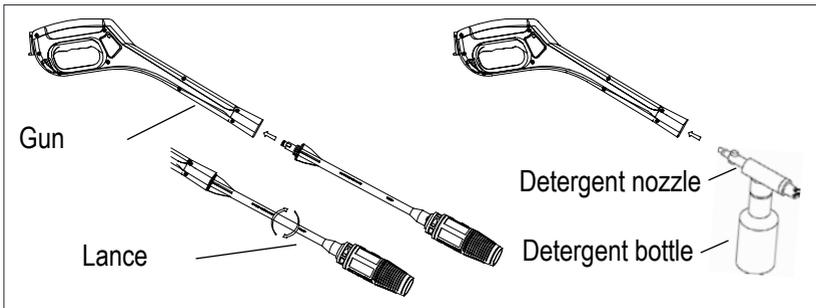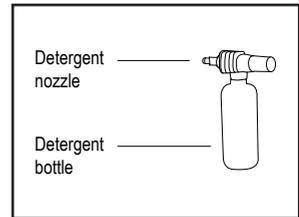

STEP 4

To apply the detergent to your work area. Turn the pressure washer switch to the ON position. Pull the Trigger to operate the unit. The pressure washer will mix the detergent with water. Do not allow the detergent to dry on the object that you are cleaning.

WARNING! Never use products with bleach or chlorine or any other corrosive materials, including solvents, oils, or fuel of any kind, tri-sodium phosphate products, ammonia, or acid-based cleaners. These chemicals will harm the unit and cause damage to the surface being cleaned. Always read and follow label directions.

2000PSI Pressure Washer

Clean-up And Storage

Shutting Down the Pressure Washer

WHEN FINISHED USING THE PRESSURE WASHER, FOLLOW THESE STEPS TO SHUT DOWN THE UNIT:



ON/OFF Switch

- Turn the pressure washer to the OFF position.
- Turn off the water supply.
- Before disconnecting high-pressure hose connection, point the gun in a safe direction and discharge the high-pressure water.
- Disconnect high-pressure hose from the pressure washer and gun.
- Disconnect garden hose from the pressure washer.
- Remove excess water from the pump by tipping the unit on both sides to drain any remaining water from the inlet and outlet fittings.
- Remove the Water Intake Filter and flush with water to remove dirt or debris. Return the filter once it is cleaned.



← High Pressure
Hose Connection



← Water Hose
Connection

- Drain the detergent reservoir and flush with running water.
- Wipe away any remaining water on all parts and fittings.
- Engage the gun safety lock.
- Store the pressure washer, parts, and accessories in an area with a temperature above 0°C (32°F).

2000PSI Pressure Washer

CAUTION! ANY USE OF THE PRESSURE WASHER WITHOUT THE WATER SUPPLY ATTACHED WILL CAUSE SEVERE DAMAGE TO THE UNIT!

- Always store the pressure washer, parts, and accessories in an area with a temperature above 0° C (32° F).

WARNING! FAILURE TO COMPLY WITH THESE STORAGE INSTRUCTIONS WILL RESULT IN DAMAGE TO THE PUMP ASSEMBLY.

Maintenance

- This pressure washer is supplied with a closed lubrication system, so no addition of oil is needed.
- Check all hoses and accessories for damage prior to use.
- Check the water intake filter periodically for deposits. Clean this filter regularly for maximum performance.

2000PSI Pressure Washer

Cleaning Tips

WARNING! ALWAYS TEST THE SPRAY IN AN AREA FREE AND CLEAR OF PEOPLE AND OBJECTS BEFORE AIMING AT THE INTENDED CLEANING SURFACE.

Wood and Vinyl Decks

Rinse the deck and surrounding area with fresh water. If using detergent, apply it to the area being cleaned at low pressure. For optimal results, divide large work areas to smaller sections and clean each section one at a time. Allow the detergent to rest on the surface for a few minutes and then rinse at high pressure. Do not let the detergent dry. Always clean from left to right and top to bottom for best results. Rinse at high pressure using the fan spray keeping the tip of the spray nozzle at least 6-9 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a tighter spray.

Caution: For softer woods, increase the distance from the cleaning area.

Cement Patios, Stone, and Brick

Rinse the area with fresh water . If using detergent, apply to the area being cleaned at low pressure. Rinse at high pressure using the fan spray in a sweeping motion keeping the tip of the spray nozzle at least 3-6 inches from the cleaning surface. Maintain a further distance from the cleaning area when using a tight spray.

Cars, Boats, and Motorcycles

Rinse the area with fresh water. If using detergent, apply it to the area being cleaned at low pressure. For best results, clean one side at a time. Allow the detergent to remain on the surface for a few minutes, but do not let the detergent dry. Rinse at high pressure using the fan spray in a sweeping motion keeping the tip of the spray nozzle at least 8 inches from the cleaning surface. Maintain a greater distance from the cleaning area when using a tight spray. Wipe the surface dry for a polished finish.

2000PSI Pressure Washer

Barbecue Grills, Power Equipment, and Garden Tools

Rinse the area with fresh water. If using detergent, apply to the area being cleaned at low pressure. Allow the detergent to remain on the surface for a few minutes, but do not let the detergent dry. Rinse at high pressure using the fan spray keeping the tip of the spray nozzle at least 1-3 inches from the cleaning surface.

TECHNICAL DATA

Voltage	120 V
Frequency	60 Hz
Max. Pressure	2000PSI
Rated Pressure	1450 PSI
Max. Flow	1.6 GPM
Rated Flow	1.25 GPM
Max. Water Supply Pressure	40-80PSI
Max. Water Temperature	40-140F (5-60°C)
Weight	21 LBS

2000PSI Pressure Washer

Troubleshooting Tips

WHEN THE SWITCH IS IN THE “I” POSITION THE MACHINE WILL NOT START

Probable Cause

Electrical socket is faulty
Voltage is inadequate
GFCI trips
Power cord is not plugged in

Solution

Check plug, socket, and Circuit Breakers
Reset / Try another outlet
Plug in power cord

PUMP DOES NOT REACH ADEQUATE PRESSURE OR FLUCTUATES

Probable Cause

Water Intake Filter is clogged
Pump is drawing air
Diameter of garden hose too small
Water supply is restricted
Insufficient water supply

Solution

Remove and clean filter
Tighten connections/bleed system
Replace to 1-inch garden hose
Check hose for kinks or leaks
Fully open the water source

PRESSURE WASHER WILL NOT MAINTAIN PRESSURE

Probable Cause

Excessive air in water line and pump

Solution

Leave the pressure washer OFF and the water supply ON, then squeeze the trigger for a few seconds until the air is discharged and only water flows out.

PRESSURE WASHER MAKES EXCESSIVE NOISE

Probable Cause

Intake is blocked
Hose is kinked

Solution

Check/clear the intake
Correct as needed

THE MOTOR STOPS RUNNING WHILE IN USE


Probable Cause

Check if the GFCI has tripped
Circuit breaker has opened

Solution

Make sure there is no standing water, then reset the GFCI
Connect the pressure washer to a different circuit (outlet)

Exploded View

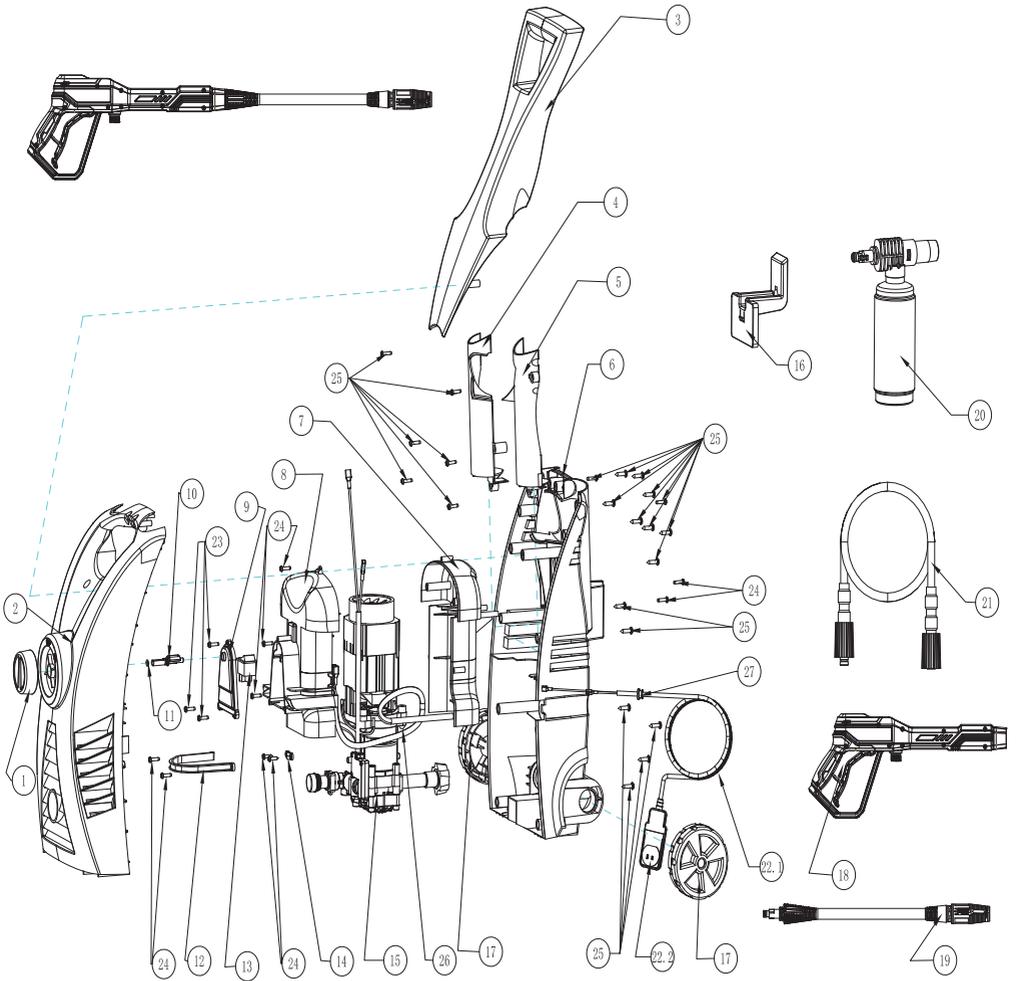

Parts Lists

Num	Product number	Type	Qty
1	TA6.356.013	Knob	1
2	TA8.075.105	Motor cover	1
3	TA8.530.016	Handle	1
4	TA8.075.107	Left holster	1
5	TA8.075.108	Right holster	1
6	TA8.075.106	Rear end cabinet	1
7	TA8.234.026	Waterproof motor cover	1
8	TA8.234.025	Waterproof motor cover	1
9	TA8.234.027	Waterproof switch cover	1
10	TA8.337.070	Swich lever	1
11	TA8.683.040	O-ring	1
12	TA8.220.067	Water pump retaining ring	1
13	TA6.618.020	Power supply	1
14	TA8.242.083	Wire clamp	1
15.1	TA8.005.039	Pump head	1
15.2	TA8.683.039	Spring	1
15.3	TA3.138.034	AC motor	1
16	TA8.668.008	High pressure pipe hook	1
17	TA6.206.010	Wheel	2
18	TA5.330.001	Gun	1
19	TA8.200.072	lance+adjust nozzle	1
20	TA8.081.001	Soap bottle	1
21	TA7.883.001	High pressure pipe	1
22.1	TA6.641.109	Power cord	1
22.2	TA6.618.019	GFCI Switch	1
23	ST3.5X15	Screw	3
24	ST4X20	Screw	9
25	ST4.8X25-F	Screw	22
26	ST5.5X25-F	Screw	4
27	TA7.860.076	Inner sheath	1



For product questions or to order replacement parts, please call 1-866-591-8921 or email support@pulsar-products.com.

Goodyear (and Winged Foot Design) are trademarks of or licensed to The Goodyear Tire & Rubber Company or Goodyear Canada Inc. used under license by Pulsar Products Inc, 8676 Rochester Ave, Rancho Cucamonga, CA 91730. © 2024 The Goodyear Tire & Rubber Company.