
VOLT



# **INSTALLATION INSTRUCTIONS** VOLT<sup>®</sup> LOW VOLTAGE LANDSCAPE LIGHTING

**ITEM: AZAL-SPKIT2** 

1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (EST)

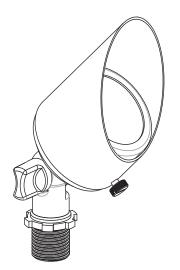

**IMPORTANT: PLEASE READ BEFORE INSTALLATION** 

This fixture is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

- 1. Make sure that the power is turned OFF before installing or servicing this fixture.
- 2. This fixture is perfect for placing in water fountains, water falls, ponds, pools, etc.
- This fixture is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at Maximum 15 volts.
- 4. Underground Low Energy Cable must not be buried over 6" (15.2 cm) in order to connect to the main low voltage cable.
- 5. Wiring connections must be made with UL listed wire connectors that are suitable for outdoor use.
- 6. Position the wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire, or fitting.

### **IMPORTANT SAFETY INSTRUCTIONS**

#### LIGHTED LAMP IS HOT!

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS.


- 1. Turn off/unplug and allow to cool before reducing lamp.
- 2. Lamp gets HOT quickly!
- 3. Do not touch the hot lens, guard or cowl.
- 4. Keep lamp away from materials that may burn.
- 5. Do not touch lamp at any time.
- 6. Use a soft cloth.
- 7. Oil from skin may damage lamp.
- 8. Do not operate the fixture with a damaged or missing lens or shield.

**PACKAGE CONTENTS** 


A. (1) Fixture Body

B. (1) Stake

#### **PRODUCT DIMENSION**

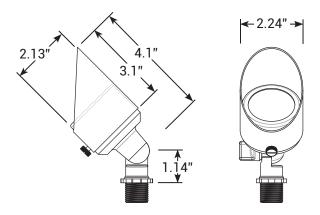

#### **INSTALL FIXTURE TO STAKE**

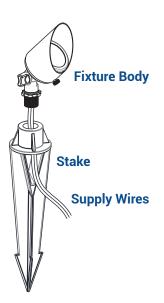


Pass the supply wires of the fixture body through the center hole on the stake. Thread the fixture body onto the stake.



# INSTALLATION INSTRUCTIONS


AZAL-SPKIT2

#### 2 INSERT STAKE TO SOIL

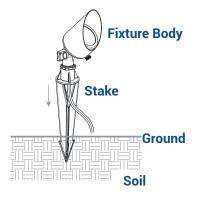


Insert the stake into the desired soil until flange of stake is flush to the ground.

#### **3 WIRE CONNECTION**

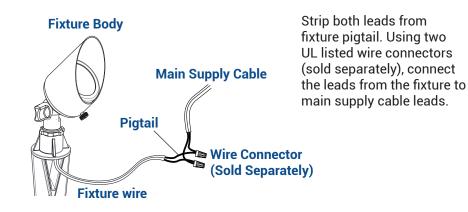

813.978.3700 • customersupport@voltlighting.com • www.voltlighting.com

## **4 WIRE CONNECTION**

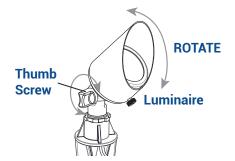

Loosen the thumb screw at the joint and adjust the luminaire to the desired directions. Once the desired direction is achieved, tighten the thumb screw.



#### INSTALLATION INSTRUCTIONS AZAL-SPKIT2

813.978.3700 · customersupport@voltlighting.com · www.voltlighting.com

813.978.3700 • customersupport@voltlighting.com • www.voltlighting.com



#### 1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (EST)

Specifications and product details subject to change without notice. © Copyright 2024, VOLT® Lighting, Lutz FL USA 33549 • All rights reserved. customersupport@voltlighting.com • www.voltlighting.com