 


BANTING / DEVLIN / ARGYLE

---

MID CENTURY BOOKCASE

MODEL # AXCBAN-12

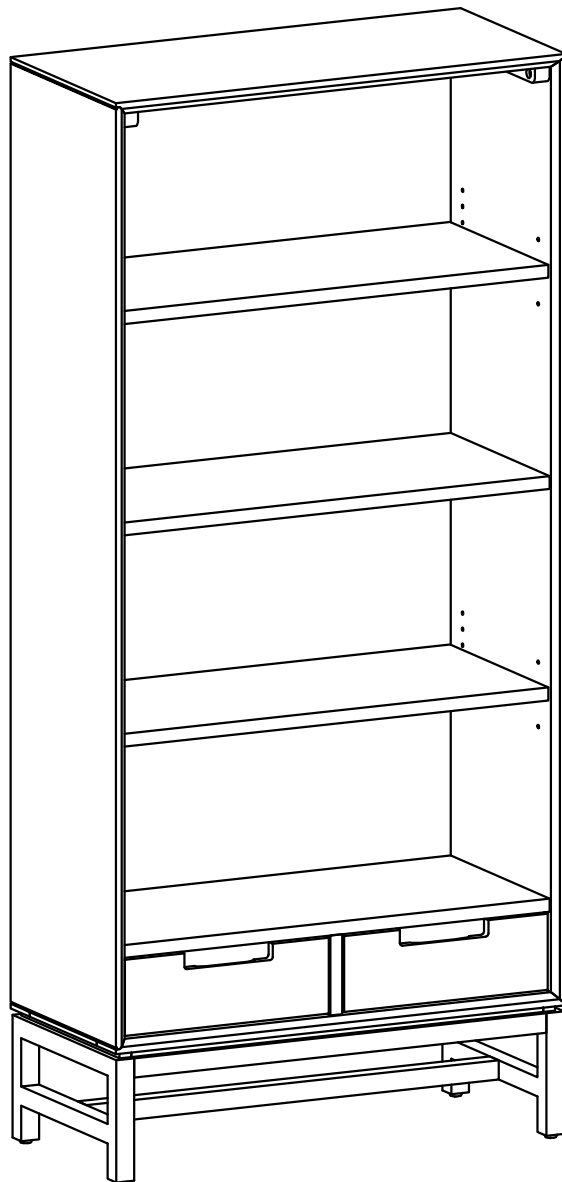



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am –4 pm EST

or go to

[www.simpli-home.com/parts request](http://www.simpli-home.com/parts request)

In order to assist you in a timely manner, please have the following information ready:

Model # \_\_\_\_\_ Part Number or Letter \_\_\_\_\_

Purchased at \_\_\_\_\_ Date of Purchase \_\_\_\_\_

If you wish to return the product, please contact the retailer where the product was purchased.

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

**IMPORTANT** : Keep this manual for future reference.

## CARE and MAINTENANCE

**This furniture is designed for indoor use.**

Damage to furniture can come from temperature changes in relative humidity (RH) in our homes. Humid air oxidizes metal which results in rusting, corrosion, tarnishing and roughness. Wood absorbs water as relative humidity rises and falls, and in doing so it swells and shrinks.

 
To protect against the humidity effect, the metal is powder coated. The powder coat layer protects the metal from oxidizing, corrosion, tarnishing and scratching and keeps it looking good for years to come. The wood is sealed and lacquered to protect against humidity.

**To help protect your furniture, follow these steps:**

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly.
- Dust with soft dry cloth.
- Wipe up spills promptly. Clean with a dry cloth.
- Do not use abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish.
- Use soft felt base coasters, placemats to help prevent scratches.
- Keep furniture out of direct sunlight, which can cause cracking or roughness on the protective layer.
- If it can be avoided, do not put furniture near heating vents. Keep the furniture 3 to 4 inches away from the wall, giving heat and air space to circulate.


PART DESCRIPTION

A

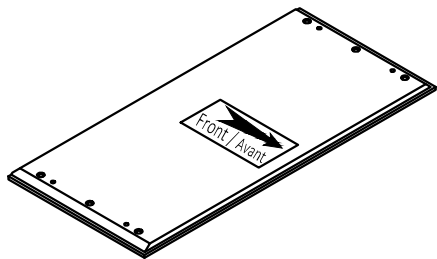


TOP  
QTY 1

 BL




LEFT SIDE  
QTY 1

 BR




RIGHT SIDE  
QTY 1

 C

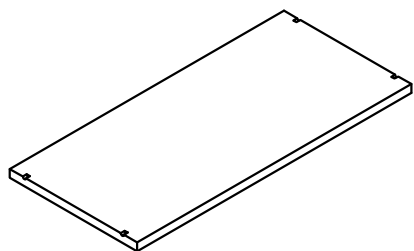


SHELF  
QTY 2

 D

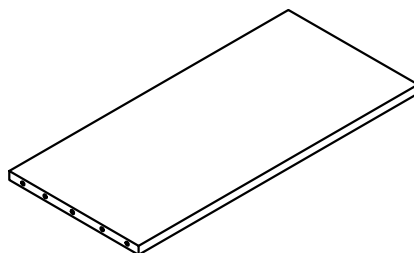


CABINET SHELF  
QTY 1

 E

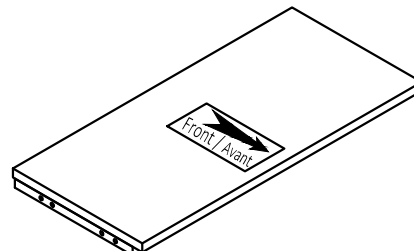


CABINET SHELF  
QTY 1

 F

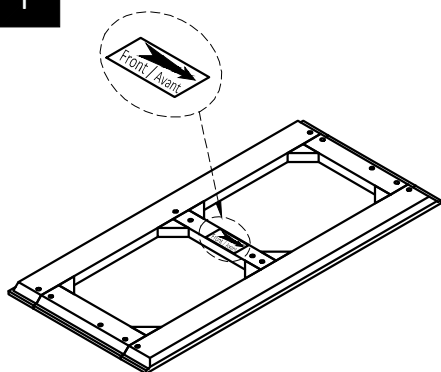


BOTTOM SHELF  
QTY 1

 G

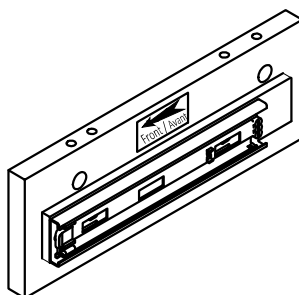

DIVIDER  
QTY 1

 H

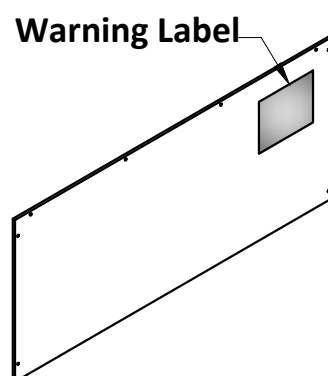


TOP BACK PANEL  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


PART DESCRIPTION

 I

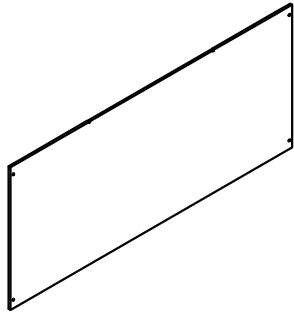


MIDDLE BACK PANEL  
QTY 3

 J

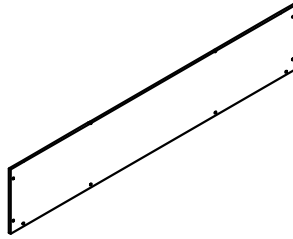


BOTTOM BACK PANEL  
QTY 1

 K

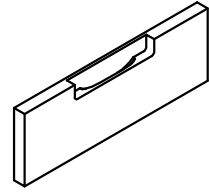


DRAWER FRONT  
QTY 2

 LL

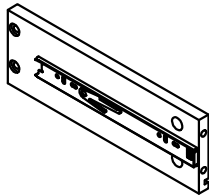


LEFT DRAWER SIDE  
QTY 2

 LR

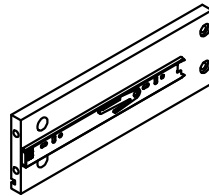


RIGHT DRAWER SIDE  
QTY 2

 M

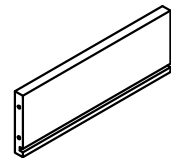


DRAWER BACK  
QTY 2

 N

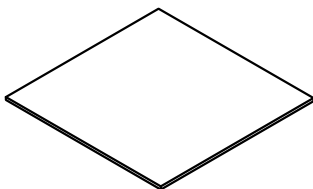


DRAWER BOTTOM  
QTY 2

 O

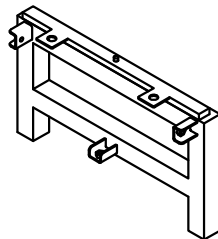


LEG (L&R Same)  
QTY 2

 P

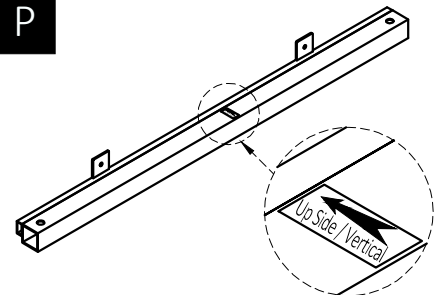

LEG UPPER CONNECTOR  
QTY 2

 









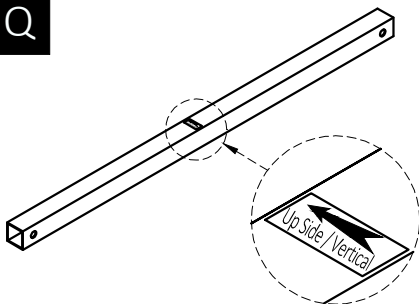



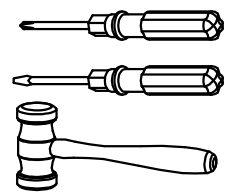
Q



LEG LOWER CONNECTOR  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

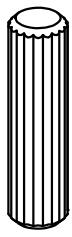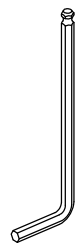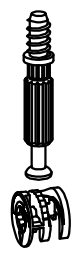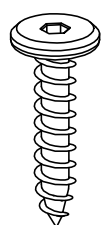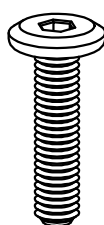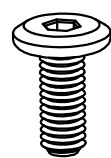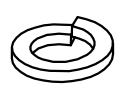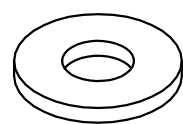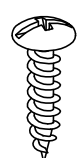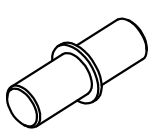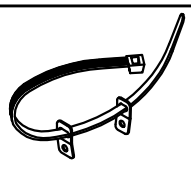
HARDWARE DESCRIPTION

<p>1</p>  <p>WOOD DOWEL Ø8 X 30mm QTY 20</p>	<p>2</p>  <p>ALLEN KEY QTY 1</p>	<p>3</p>  <p>CAM LOCK PIN CAM LOCK QTY 16 SETS</p>
<p>4</p>  <p>ALLEN KEY SCREW M6 X 30mm QTY 14</p>	<p>5</p>  <p>ALLEN KEY BOLT M6 x 30 mm QTY 12</p>	<p>6</p>  <p>ALLEN KEY BOLT M6 x 15 mm QTY 10</p>
<p>7</p>  <p>LOCK WASHER Ø10 / Ø6.5 x 1.5 mm QTY 10</p>	<p>8</p>  <p>WASHER Ø16 / Ø6.5 x 1.5 mm QTY 14</p>	<p>9</p>  <p>PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 36</p>
<p>10</p>  <p>SHELF SUPPORT QTY 12</p>	<p>11</p>  <p>a.  M4X25mm-QTY2 (1 is extra) b.  M4X15mm-QTY1 c.  M4X25mm-QTY1</p> <p>FURNITURE TIP OVER RESTRAINT QTY 1 SET</p>	 <p>Required - Flathead screwdriver Phillips screwdriver Rubber mallet <b>Not Included</b></p>

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


# COMPONENTS-KEY DIAGRAM

 MODEL # AXCBAN-12

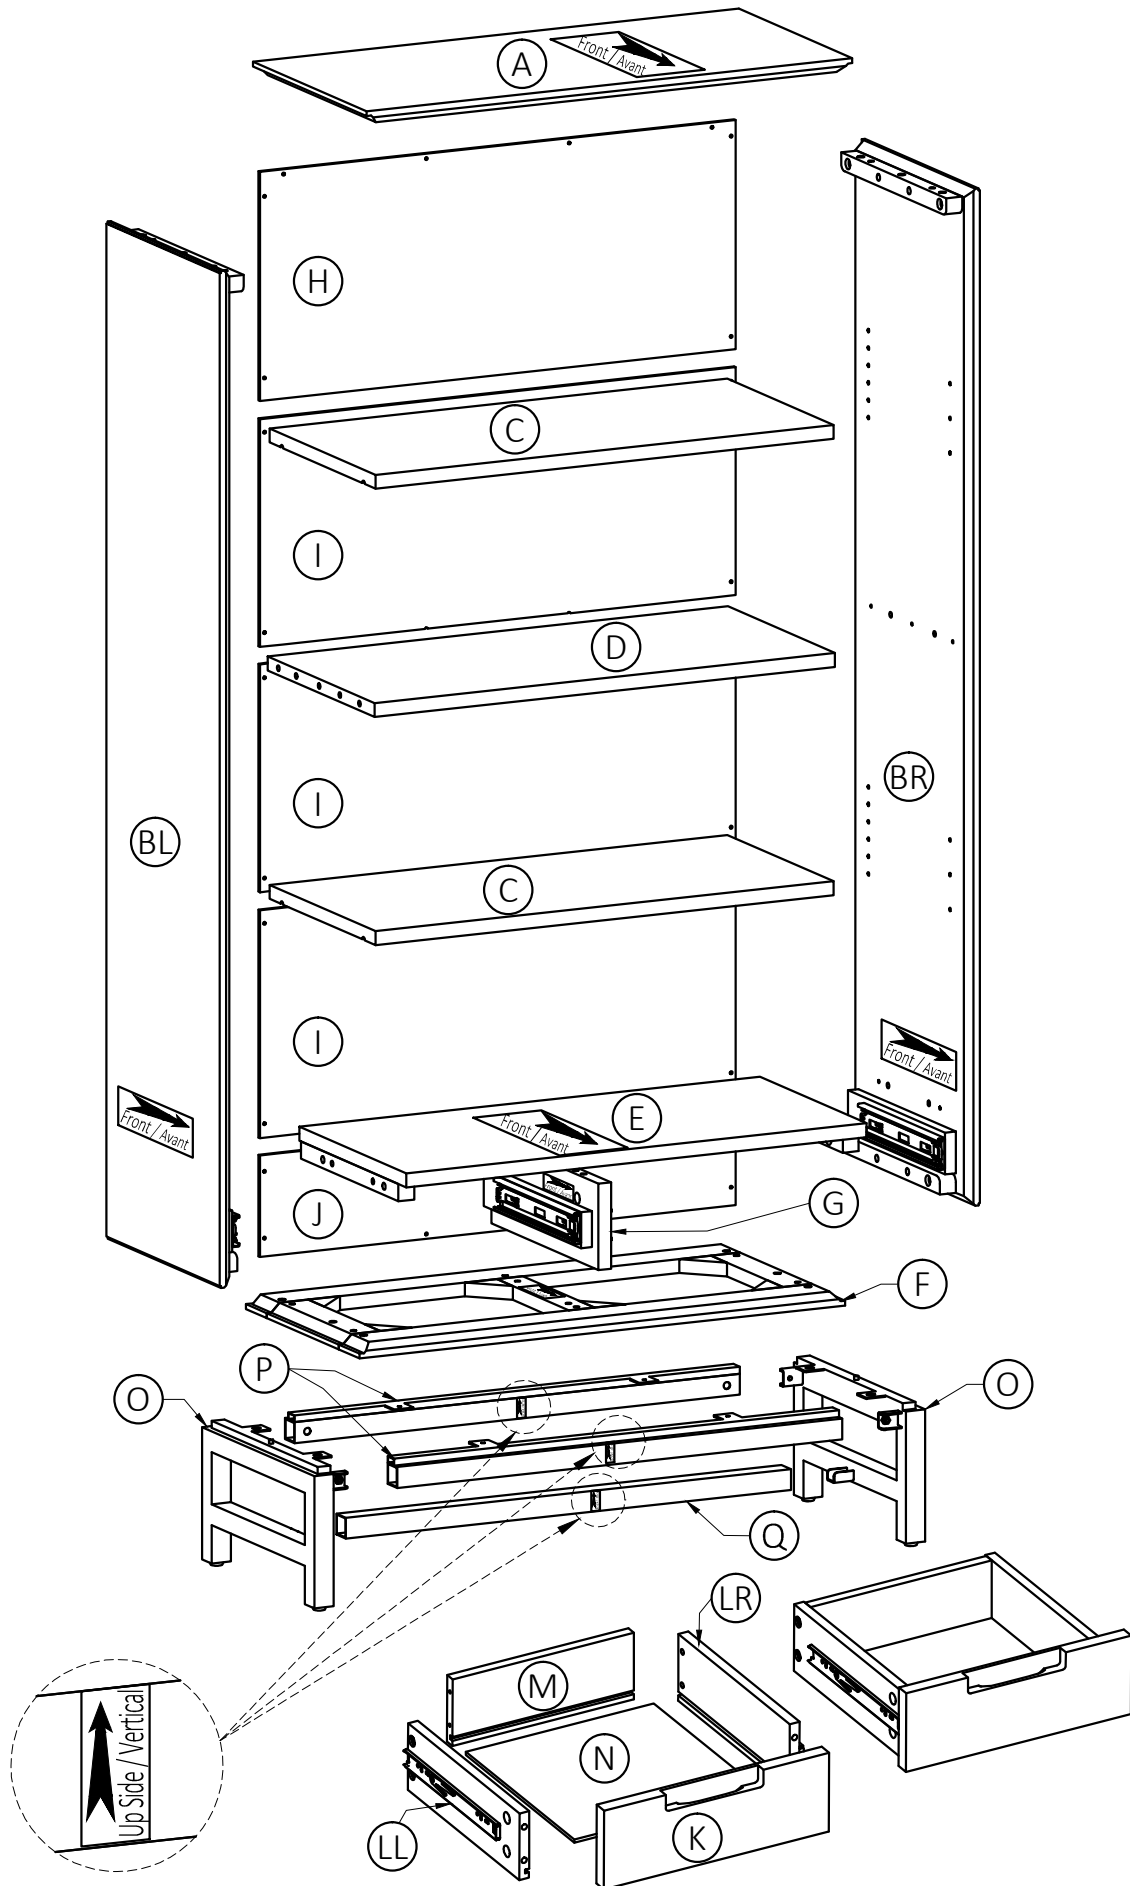




STEP-1

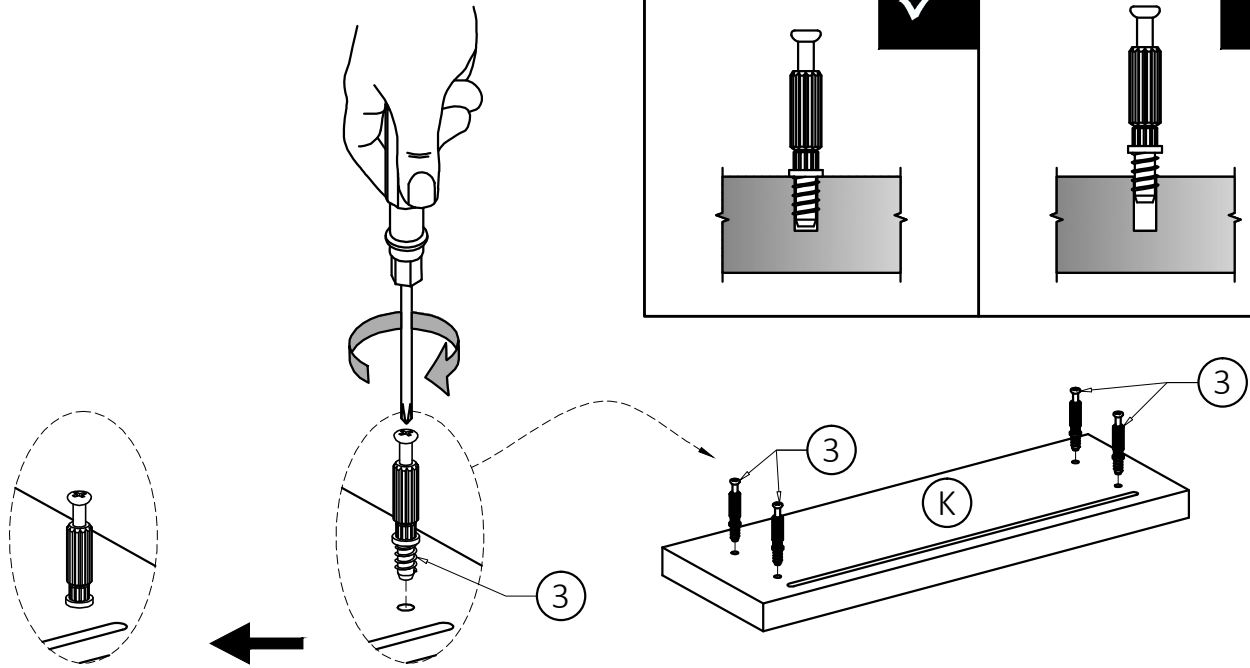 


1. Attach four Cam Lock Pins (3) into pre-drilled holes at back of Drawer Front (K).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

 STEP-2

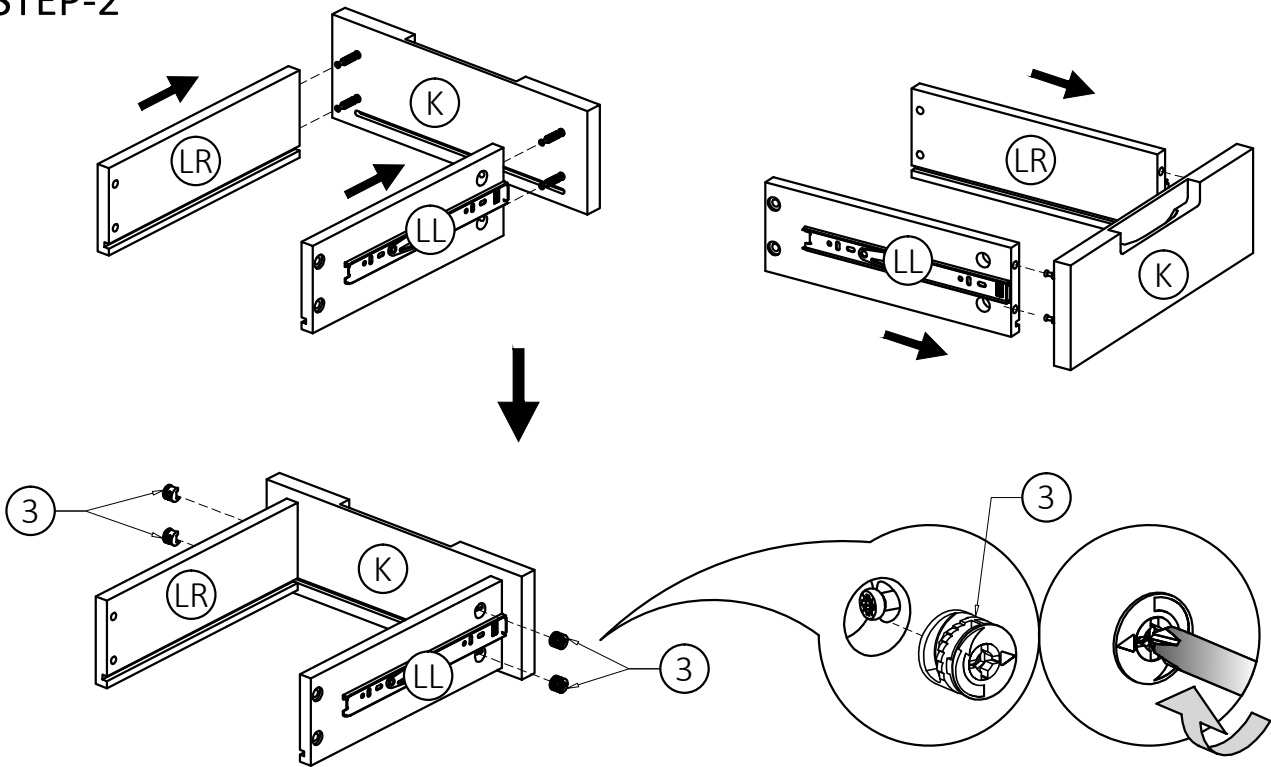


1. Align Cam Lock Pins with guide holes and attach Drawer Sides (LL, LR) to Drawer Front (K).
2. Insert two Cam Locks (3) into guide holes on each Drawer Side (LL, LR).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

## STEP-3

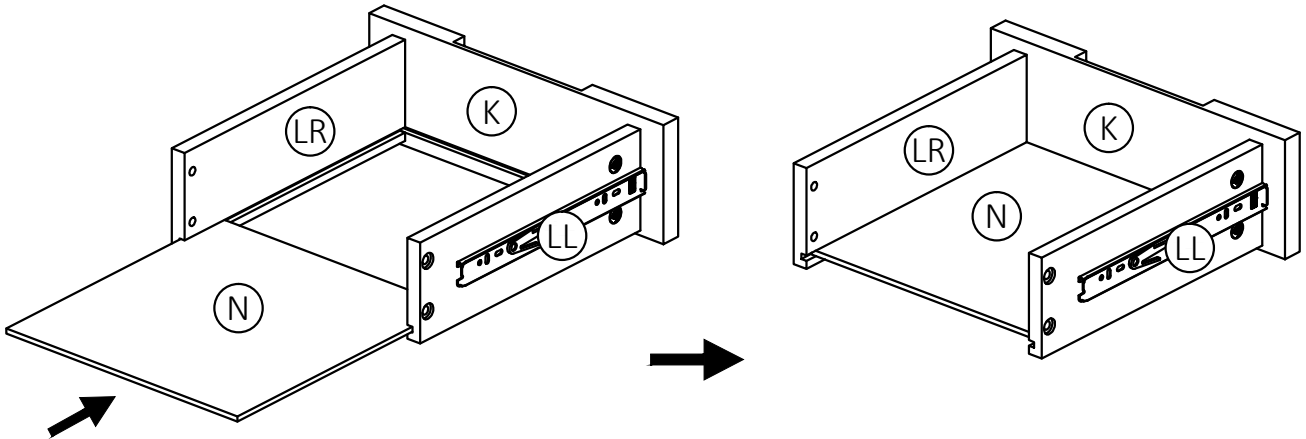 

1. Slide Drawer Bottom (N) firmly into slots on Drawer Sides (LL), (LR) and Drawer Front (K).


## STEP-4

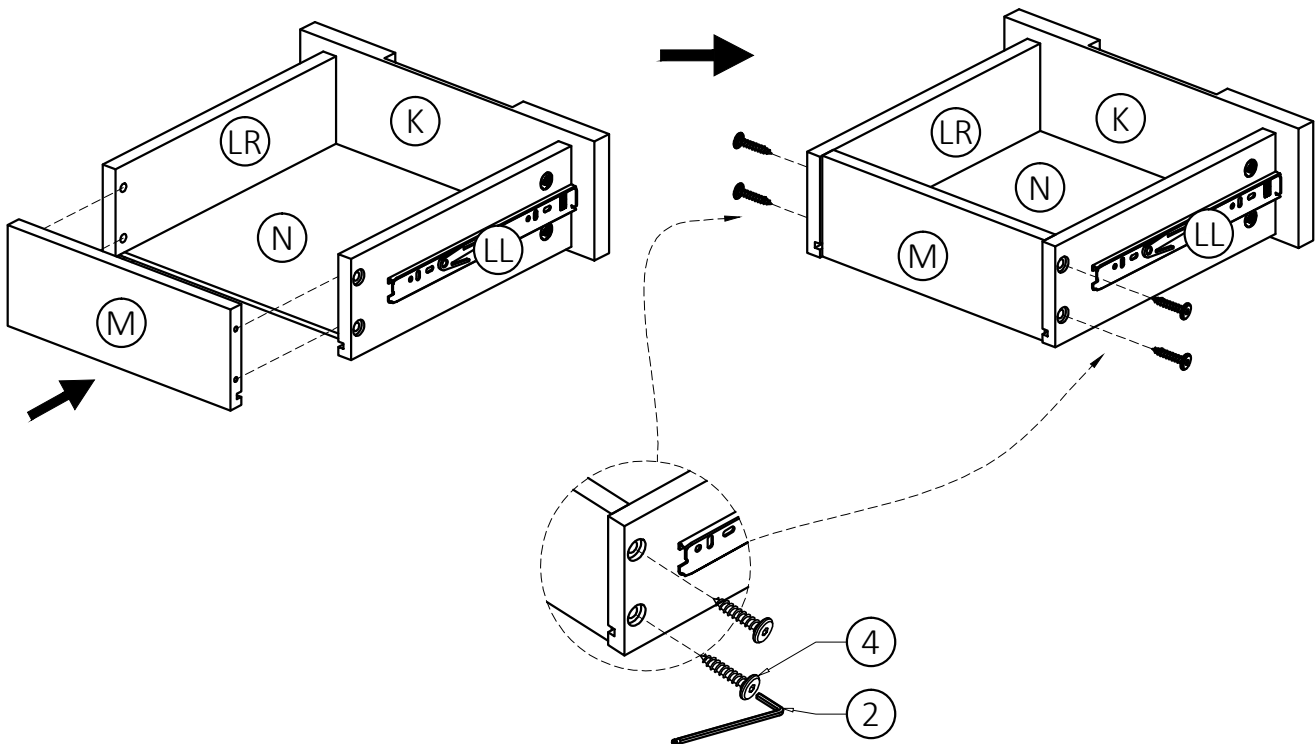 

1. Align Drawer Back (M) with Drawer Bottom (N) and press firmly into slot.
2. Attach Drawer Back using two Allen Key Screws (4) through drilled holes on each Drawer Side (LL), (LR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten


**4. Repeat Step 1-4 for the other drawers.**

 STEP-5

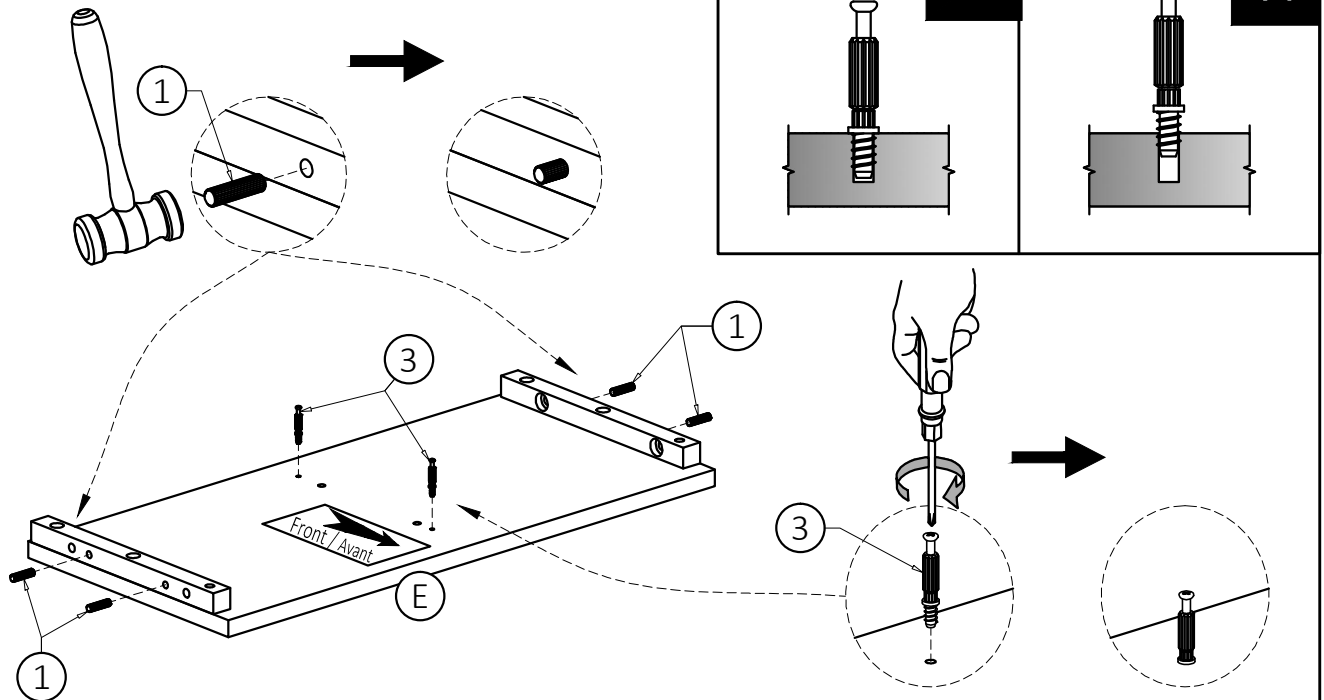


1. Insert four Dowels ① into guide holes on Cabinet Shelf ⑤.
2. Use rubber mallet to tap Dowels ① into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach two Cam Lock Pins ③ into pre-drilled holes at Cabinet Shelf ⑤.
4. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

 STEP-6

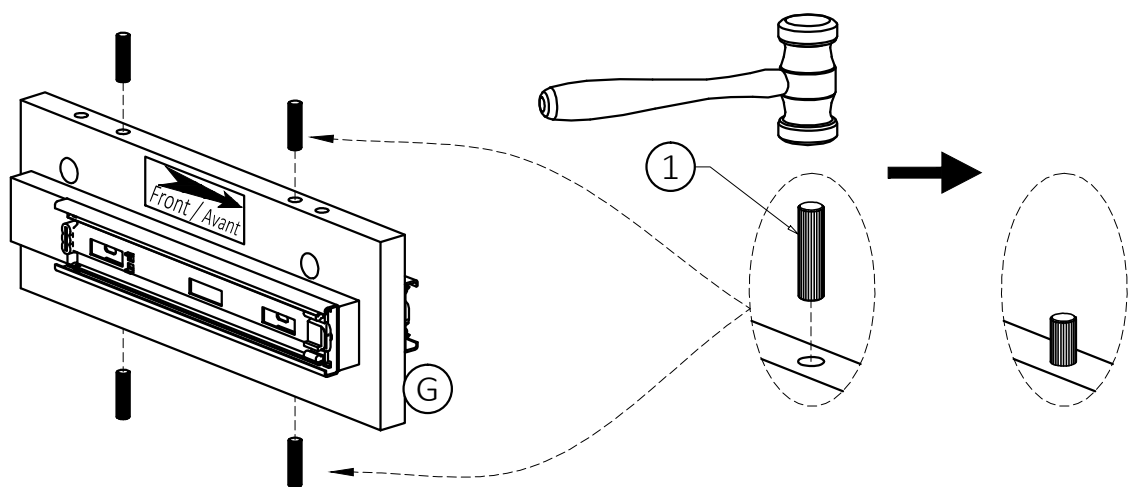


1. Insert four Dowels ① into guide holes on Divider ⑦.
2. Use rubber mallet to tap Dowels ① into bottom of holes securely. 1/2 length of Dowels should be exposed.

## STEP-7

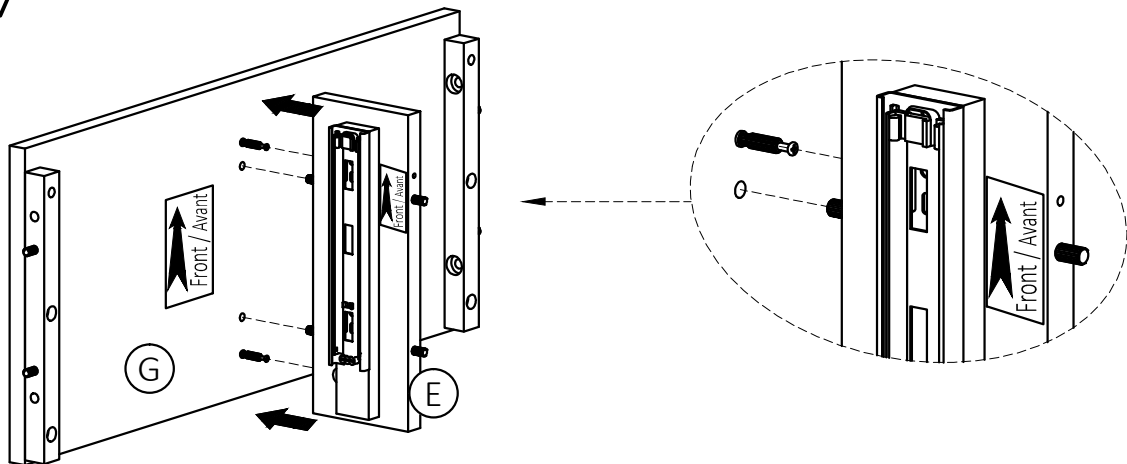 


 1. Align Wood Dowels with guide holes on Cabinet Shelf (G); align Cam Lock Pins with guide holes on Divider (E) and attach Divider (E).

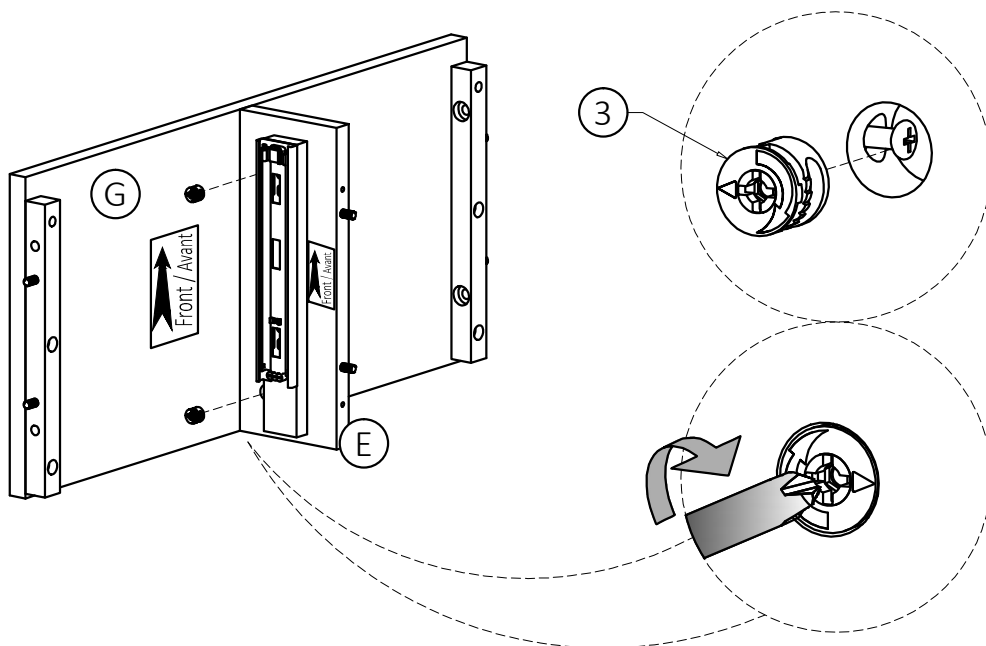


2. Insert two Cam Locks (3) into guide holes on Divider (E).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

 STEP-8

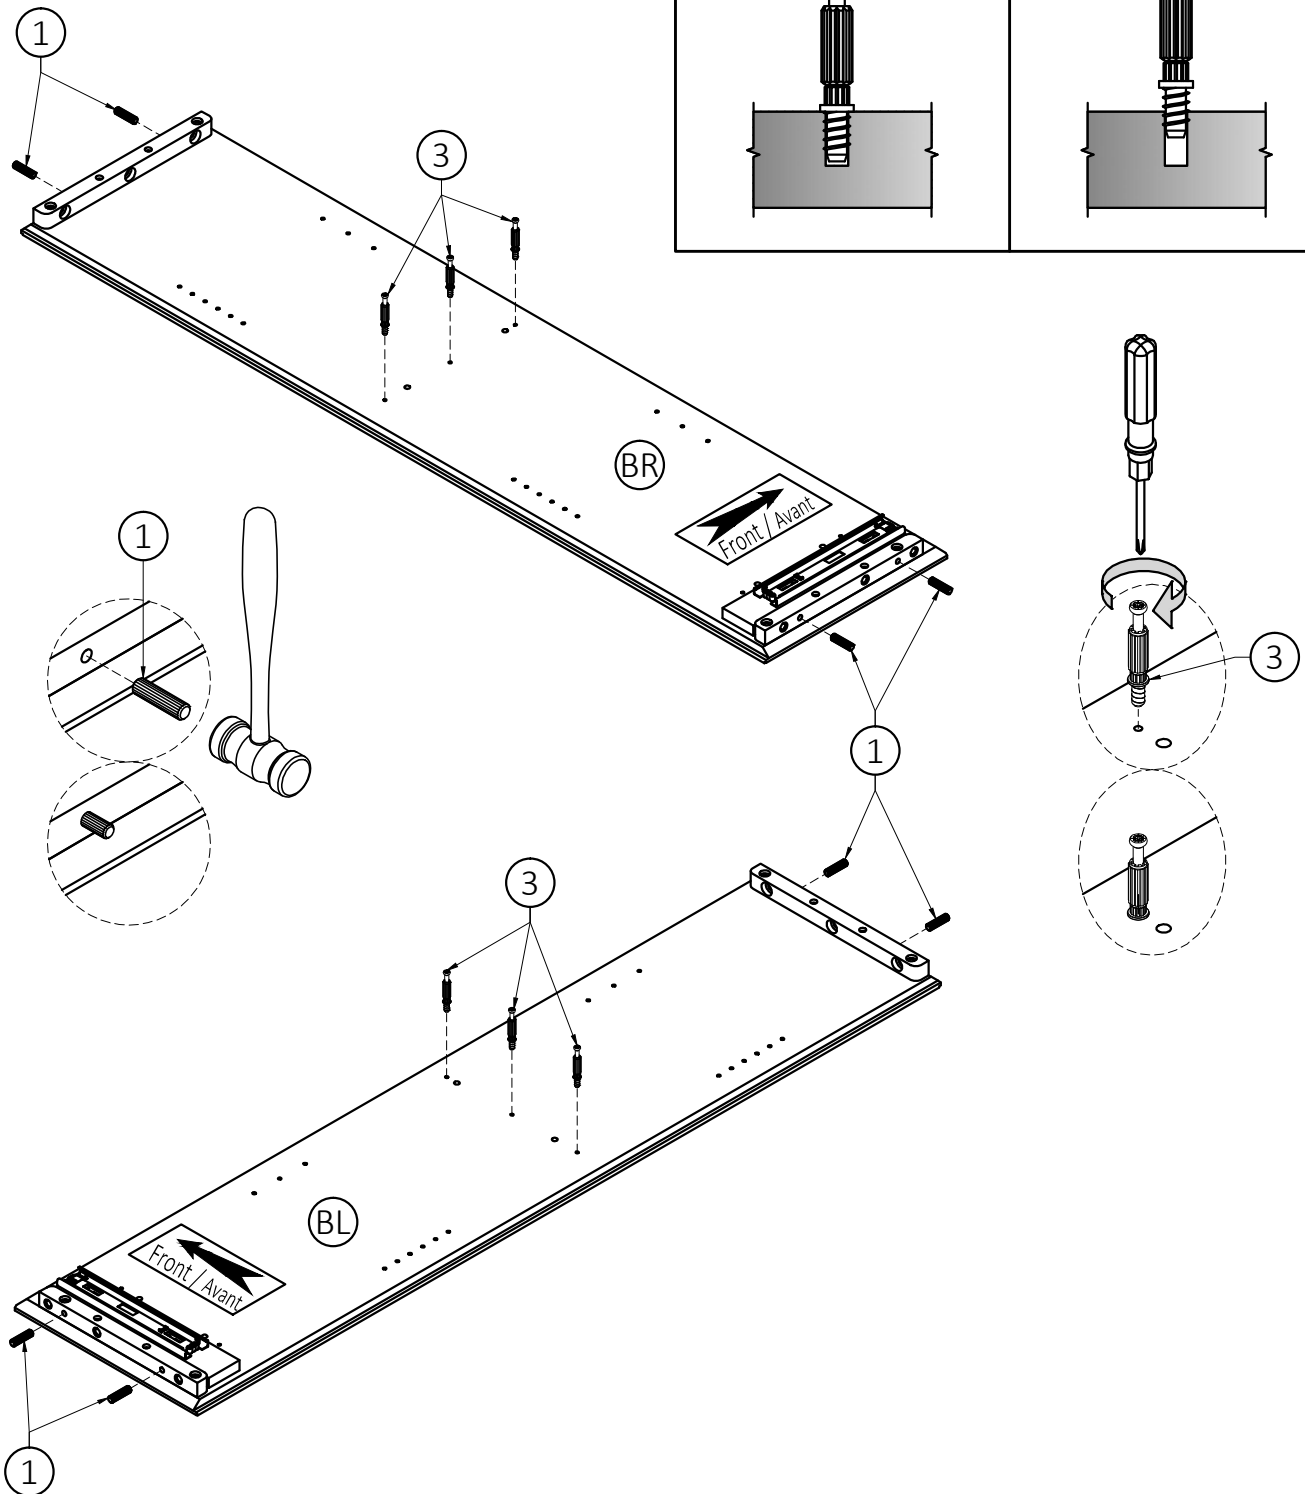


1. Insert four Dowels (1) into guide holes on each Side (BL), (BR).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach three Cam Lock Pins (3) into pre-drilled holes at each Side (BL), (BR).
4. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

 STEP-9

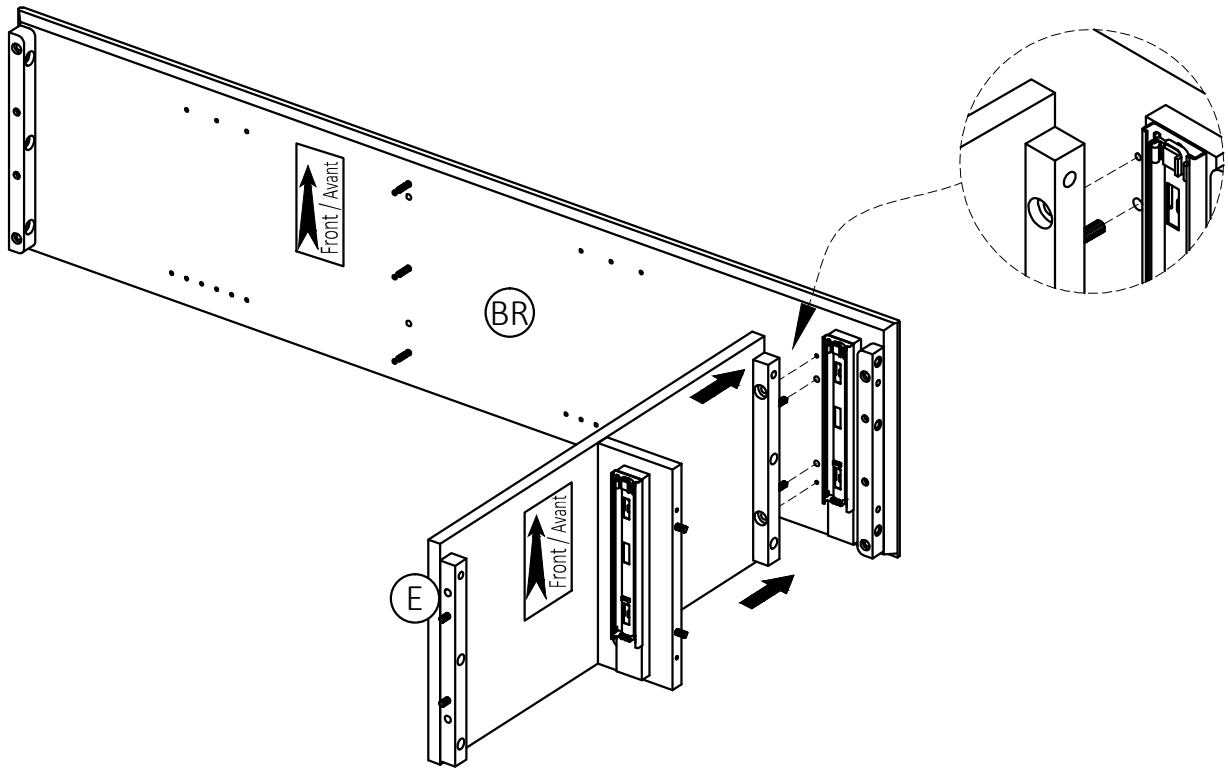


 1. Align Wood Dowels with guide holes on Bottom Frame (D) and attach Dividers (CL), (CR) to Bottom Frame (D).

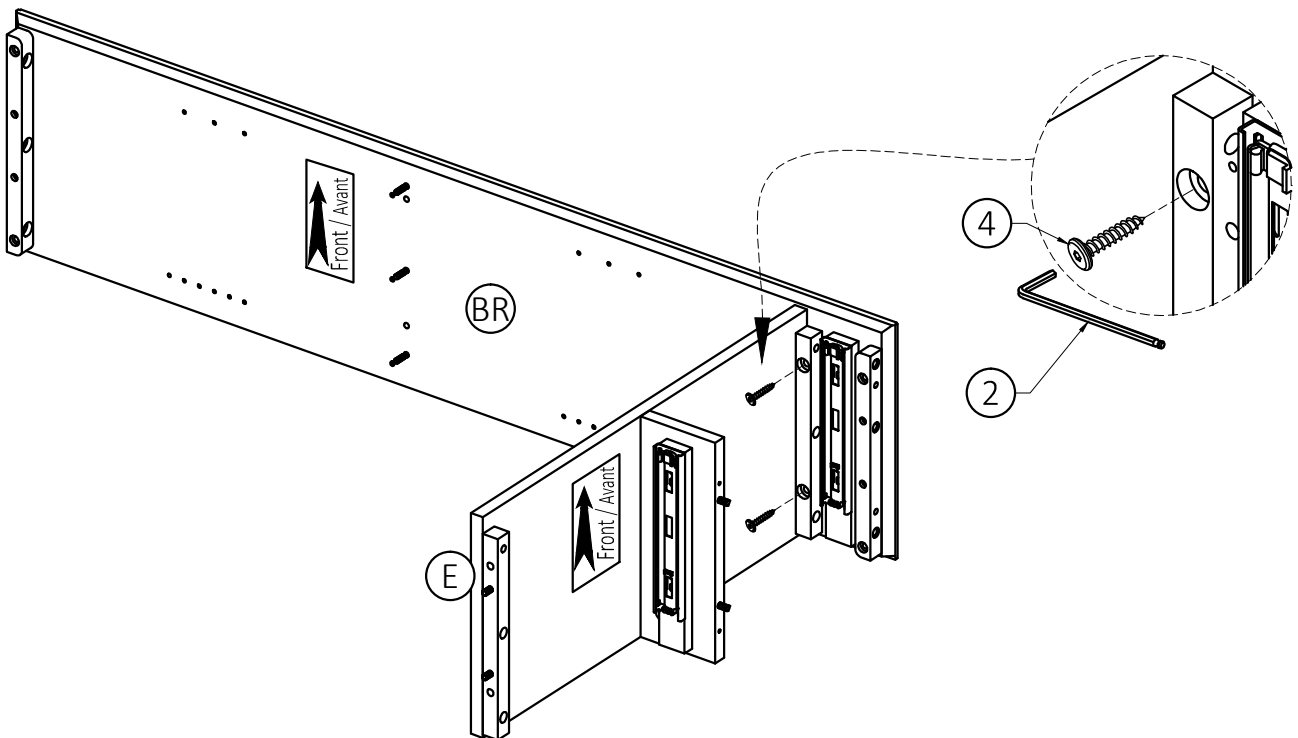


2. Use two Allen Key Screws (4) to attach Cabinet Shelf (E) through guide holes from Cabinet Shelf (E) to pre-drilled holes of Right Side (BR).
3. Use Allen Key (4) to tighten Screws. Do not over-tighten.

 STEP-10

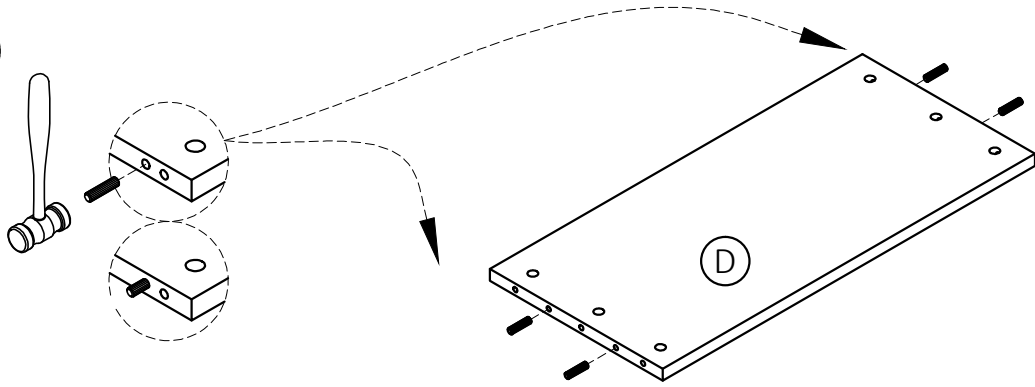


1. Insert four Dowels ① into guide holes on Cabinet Shelf ④.
2. Use rubber mallet to tap Dowels ① into bottom of holes securely. 1/2 length of Dowels should be exposed.

 STEP-11

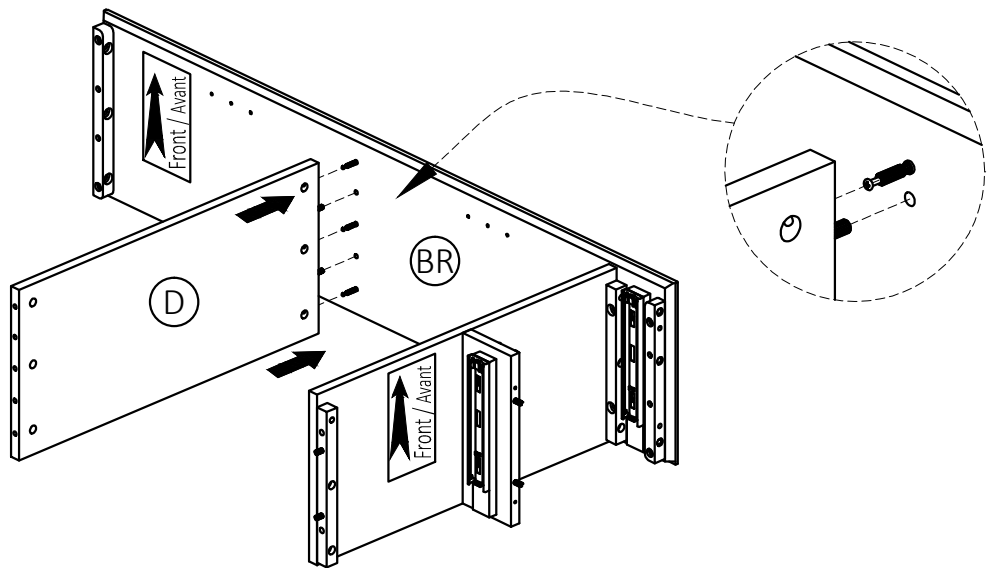


 1. Align Wood Dowels with guide holes on Cabinet Shelf ④; align Cam Lock Pins with guide holes on Divider ⑤ and attach Divider ⑤.

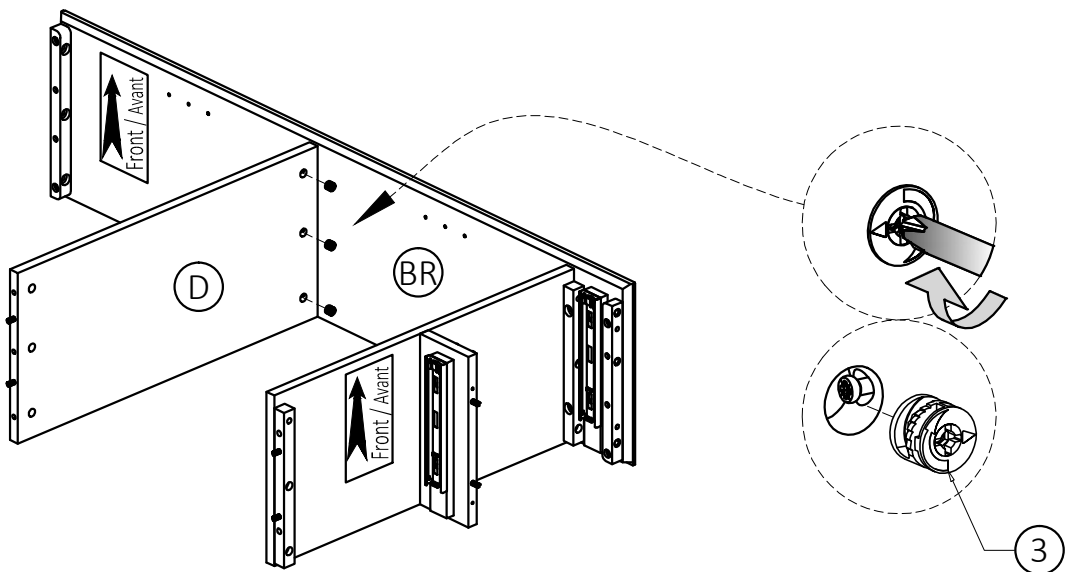


2. Insert three Cam Locks ④ into drilled holes on Cabinet Shelf ④. Use Phillips screwdriver to secure Cam Locks.

## STEP-12

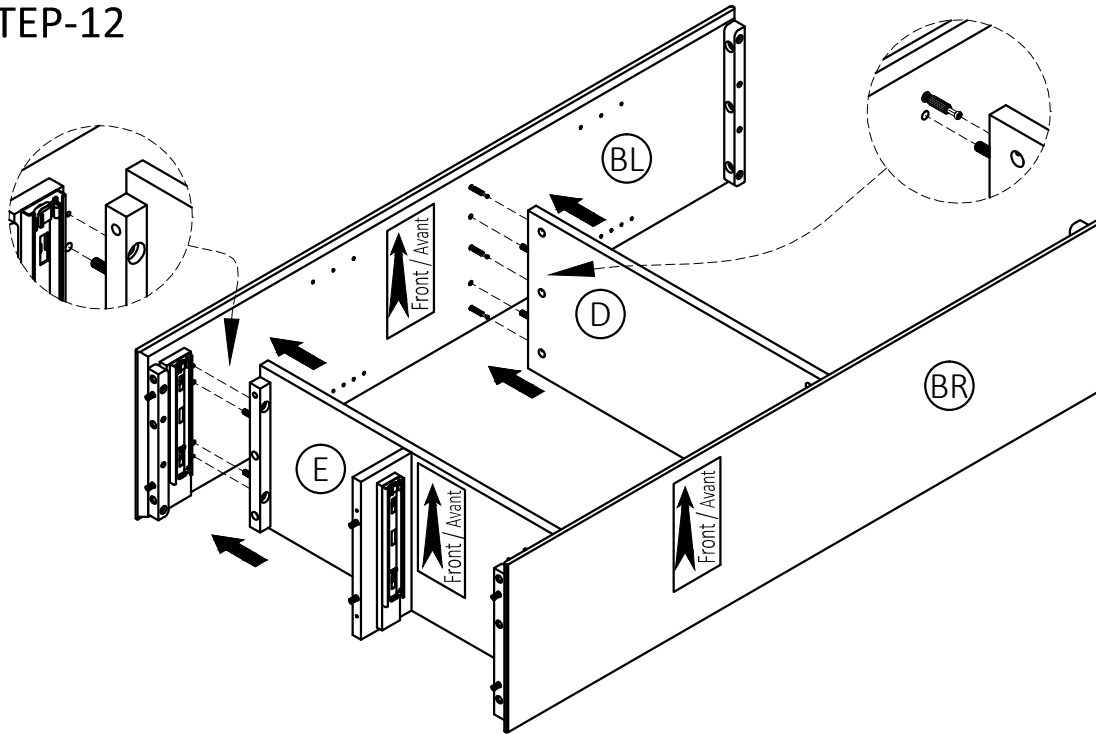 

 
1. Align Wood Dowels with guide holes on Left Side (BL); align Cam Lock Pins with guide holes on Cabinet Shelf (D) and attach Left Side (BL).

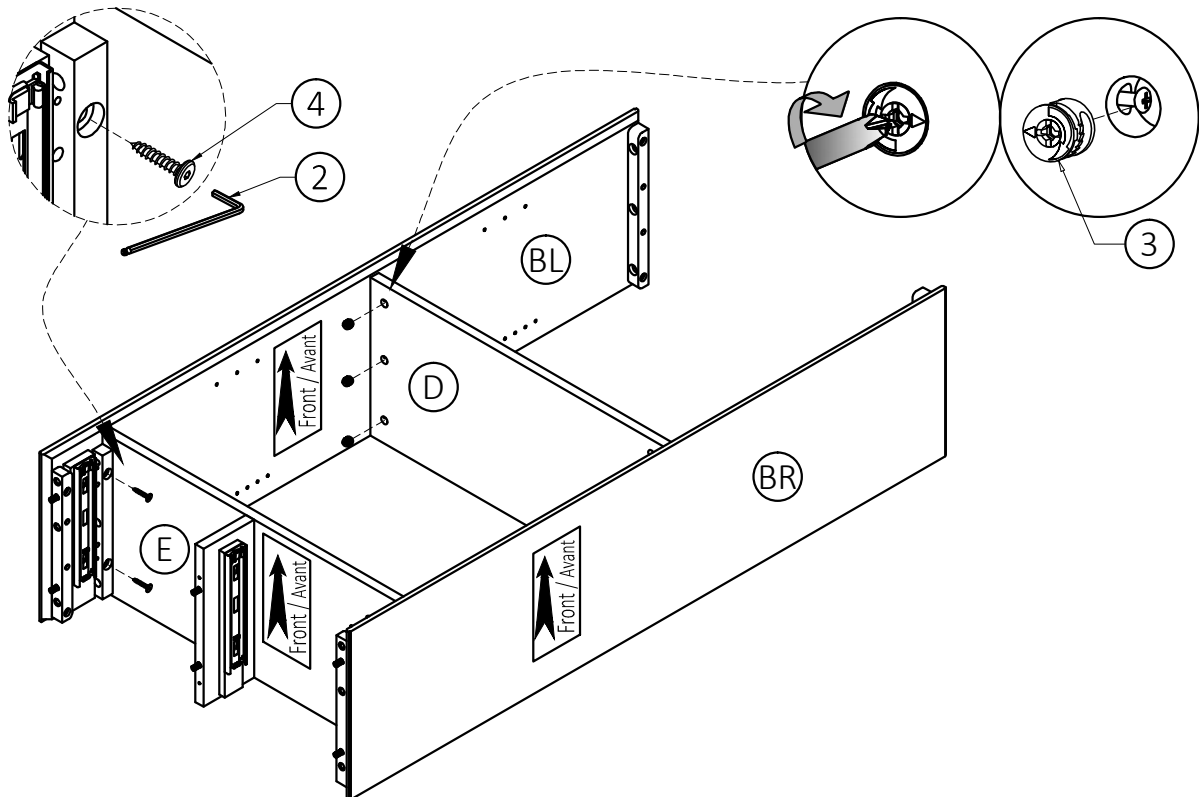


2. Insert three Cam Locks (3) into drilled holes on Cabinet Shelf (D). Use Phillips screwdriver secure Cam Locks.
3. Use two Allen Key Bolts (4) to attach Left Sides (BL) through guide holes from Cabinet Shelf (E) to pre-drilled holes of Left Side (BL).
4. Use Allen Key (2) to tighten Screws. Do not over-tighten.



 STEP-13


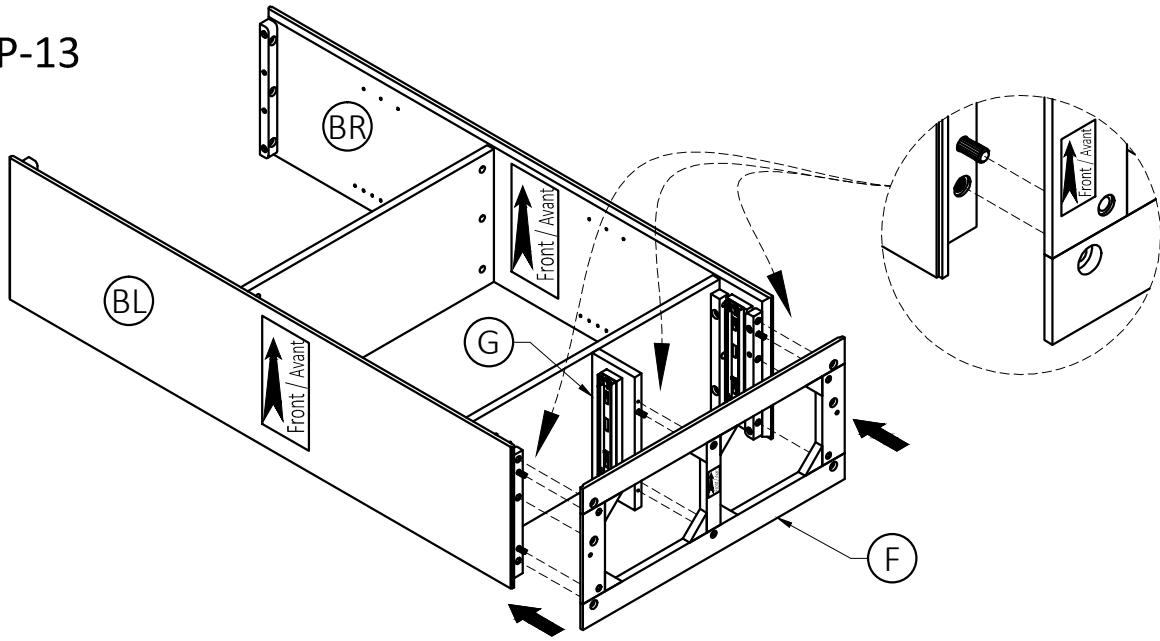


 1. Align Wood Dowels with guide holes on Bottom Shelf (F) attach Divider (G), Sides (BL, BR) to Bottom Shelf (F).

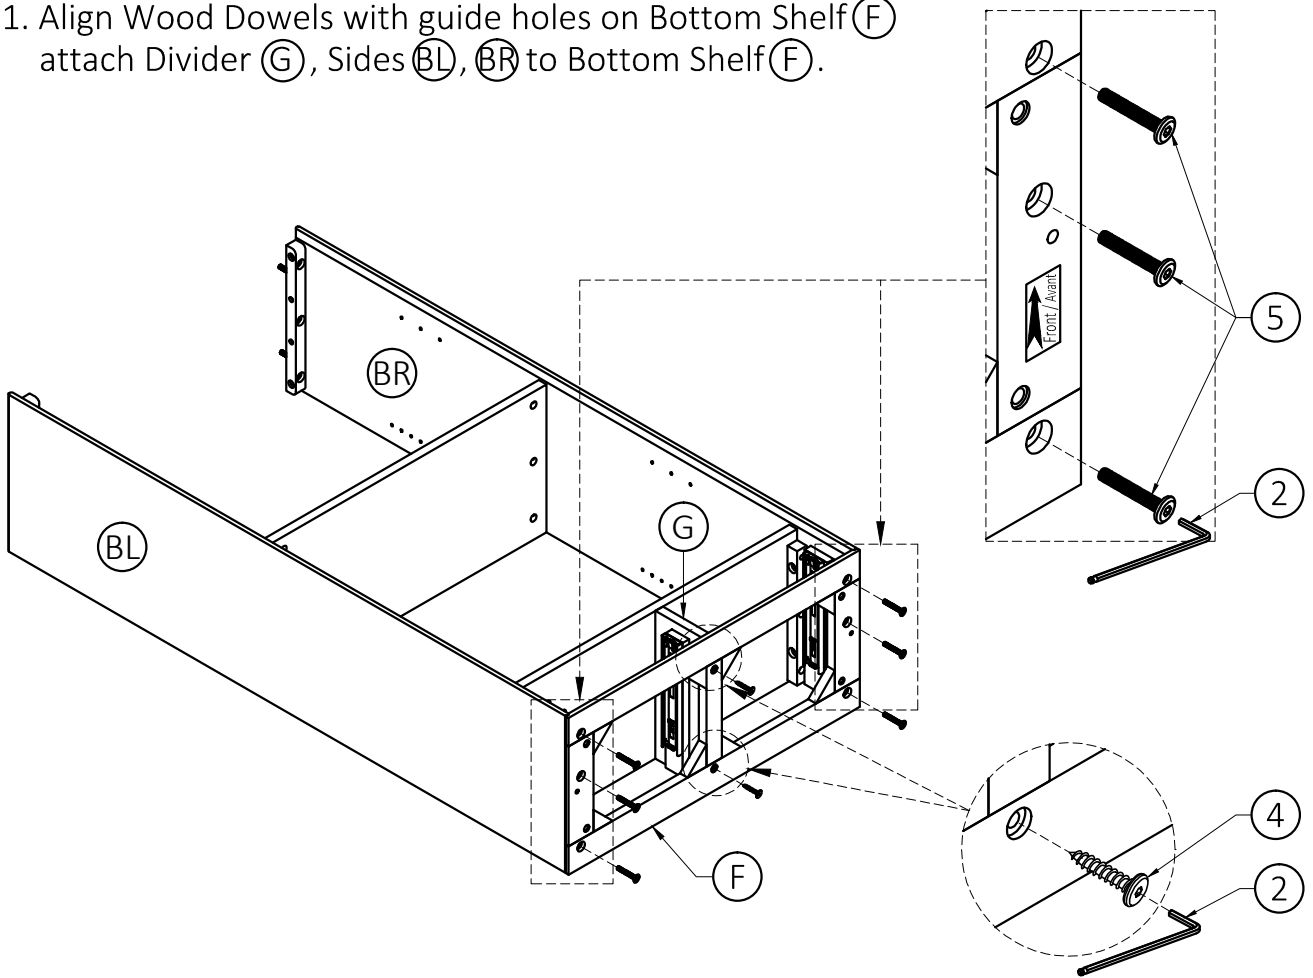


2. Use six Allen Key Bolts (5) to attach Sides (BL, BR) through guide holes from Bottom Shelf (F) to Sides (BL, BR).
3. Use two Allen Key Screws (4) to attach Divider (G) through guide holes from Cabinet Shelf (F) to pre-drilled holes of Divider (G).
4. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

  STEP-14

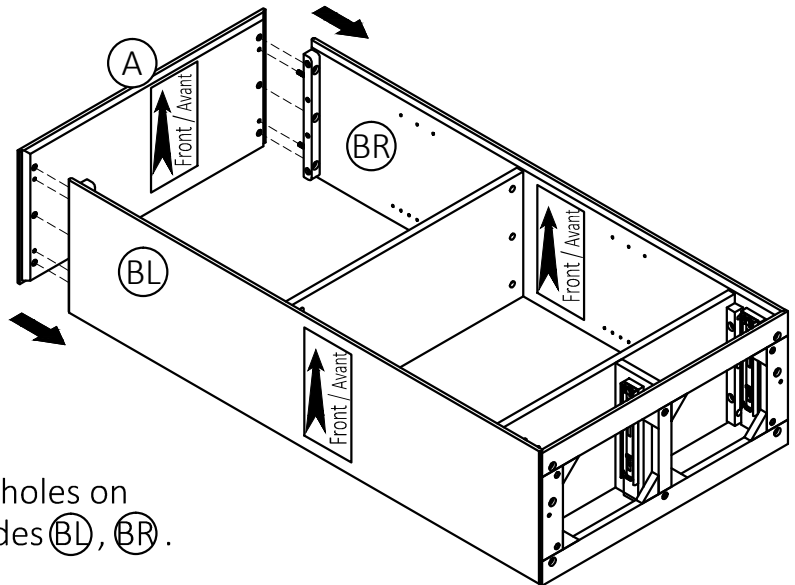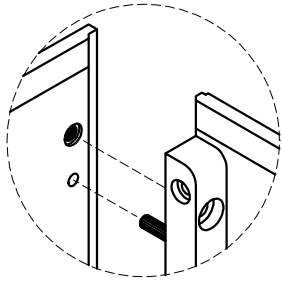


 1. Align Wood Dowels with guide holes on Top (A) and attach Top (A) to Sides (BL), (BR).



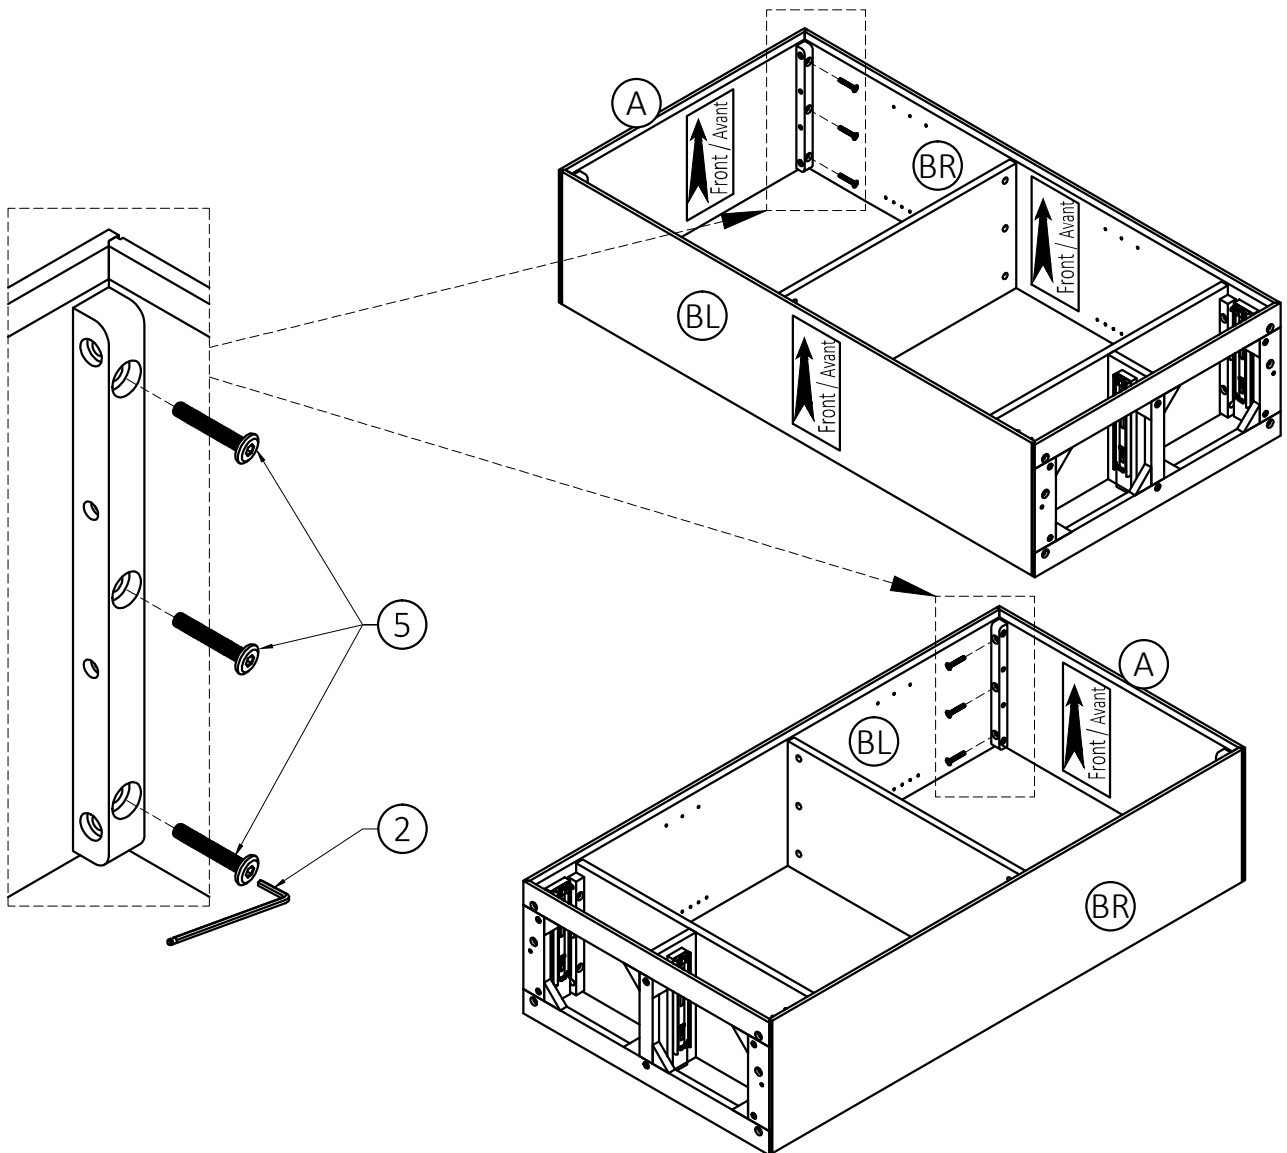


2. Use six Allen Key Bolts (5) to attach Sides (BL), (BR) through guide holes from Sides (BL), (BR) to Top (A).  
 3. Use Allen Key (4) to tighten Bolts. Do not over-tighten.

 STEP-15


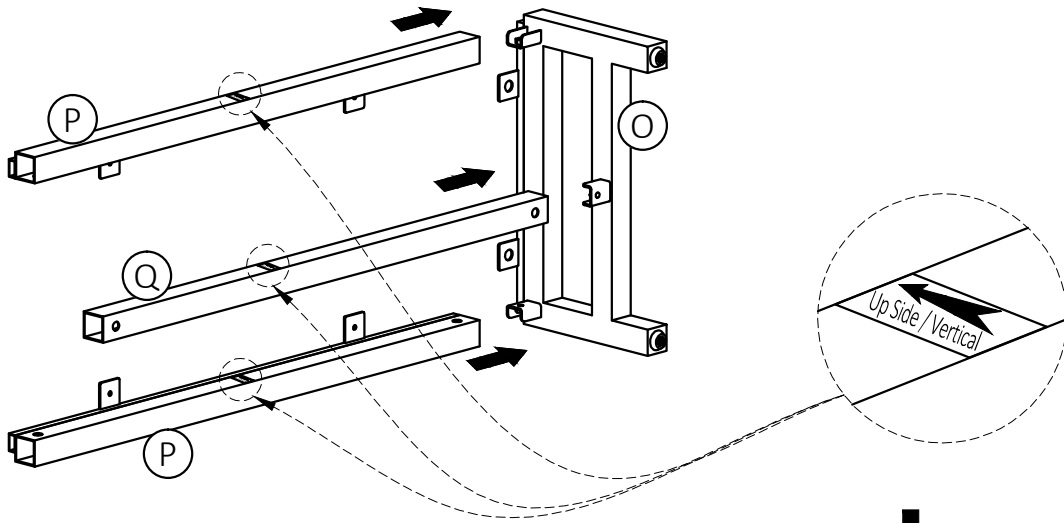


   1. Align Parts (P), (Q) to Leg (O).

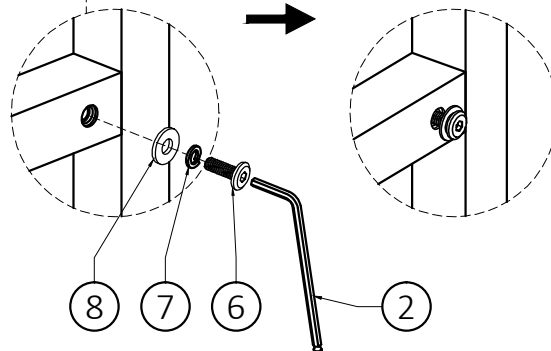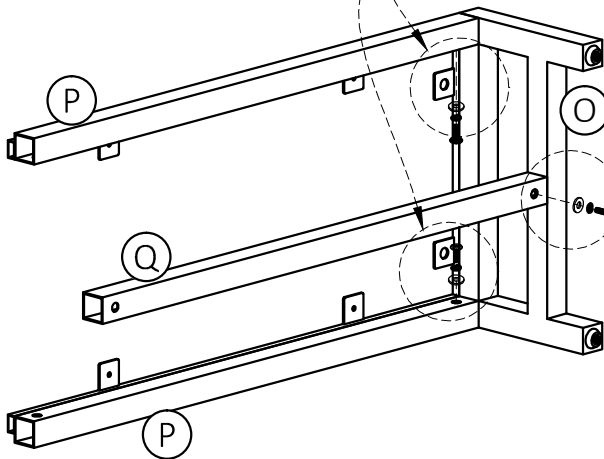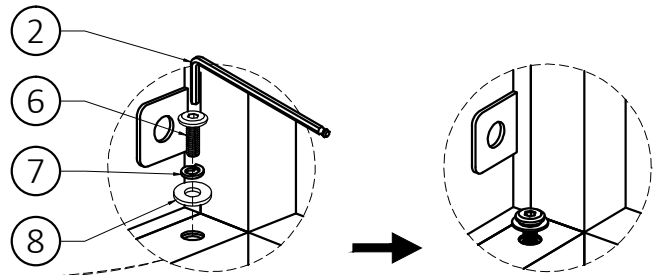


2. Use one Bolt (6), one Lock Washer (7) and one Washer (8) to secure each part (P), (Q) with (O).
3. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

  STEP-16

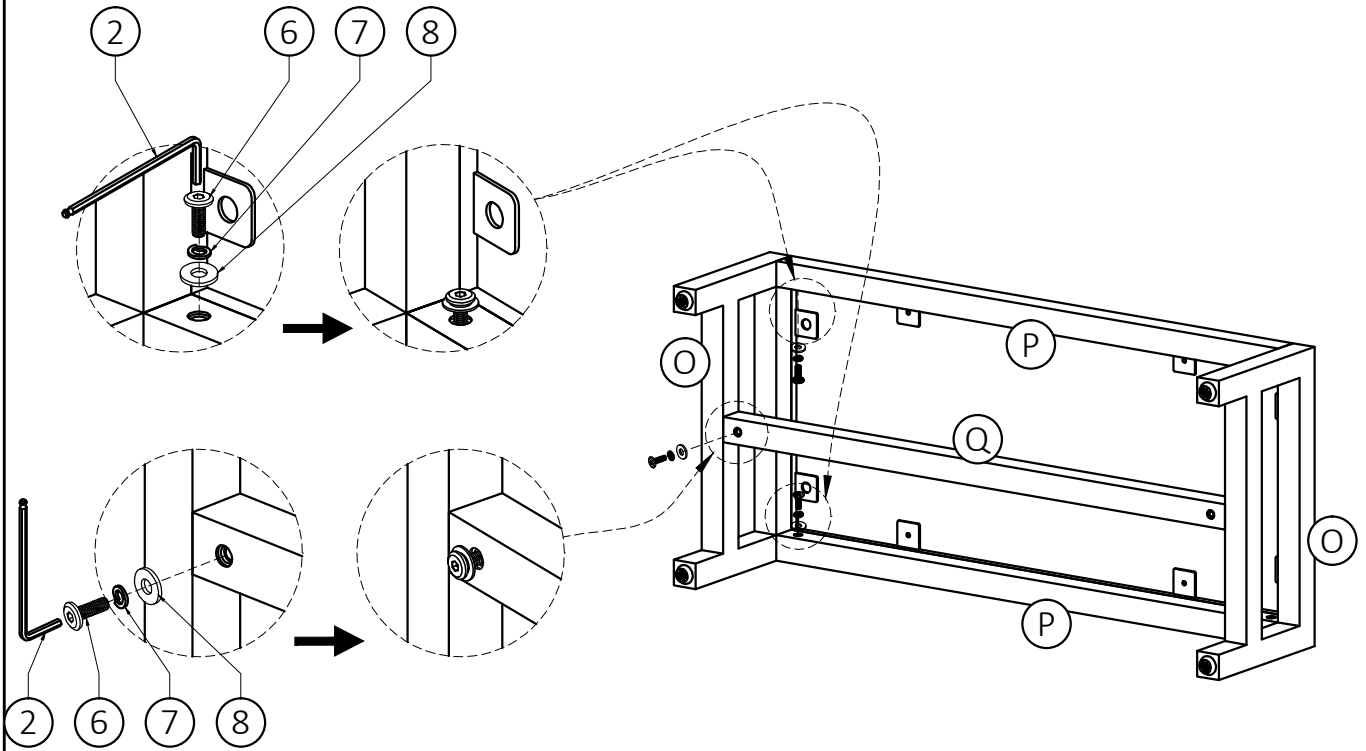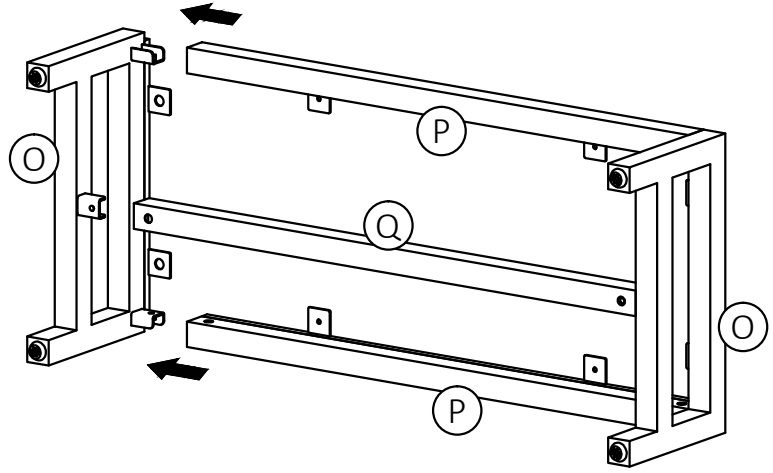


 1. Repeat Step-1 for second Leg (O).

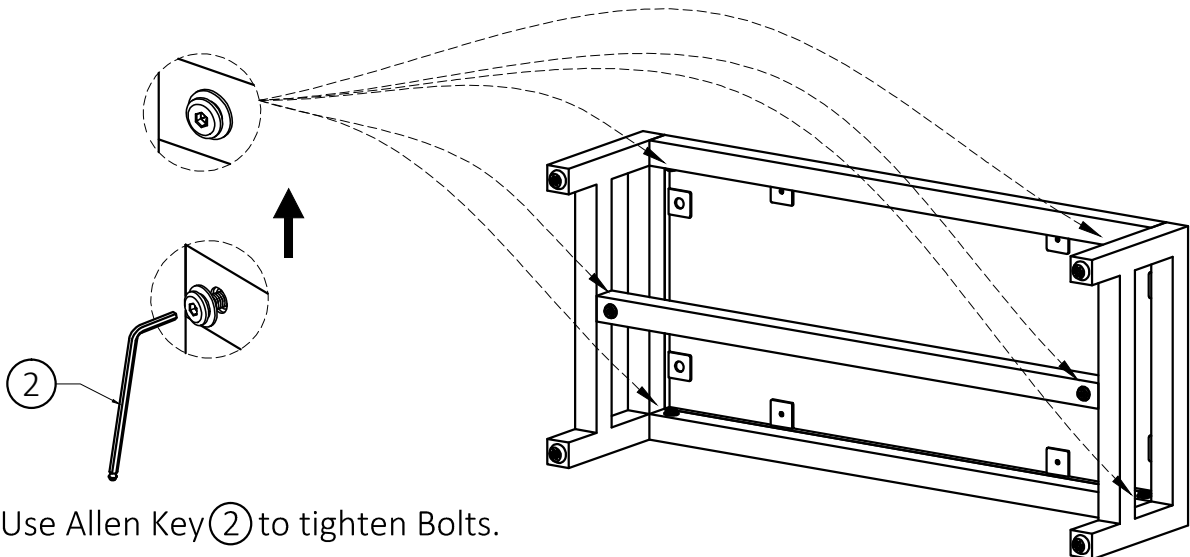


2. Use Allen Key (2) to tighten Bolts.

## STEP-17

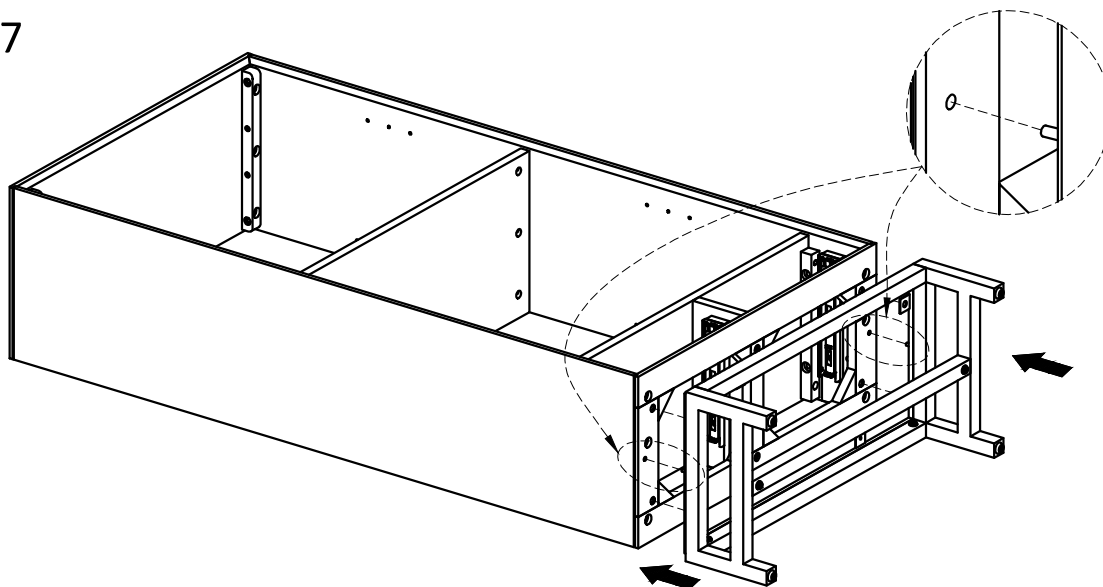 


 1. Align iron dowels with guide holes on wooden frame and attach the assembled metal frame to bottom wooden frame .

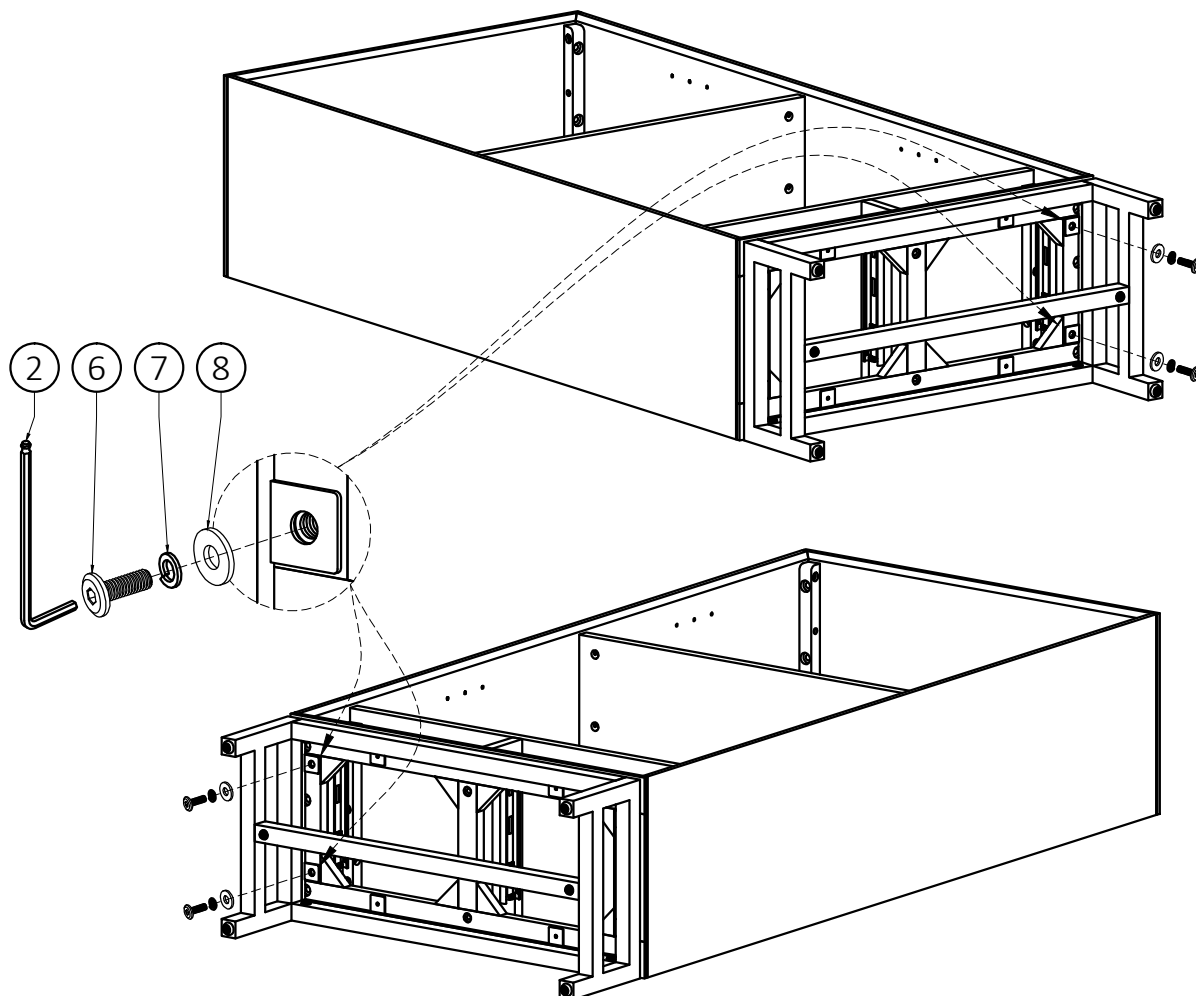


2. Use four Bolts (6), four Lock Washers (7) and four Washers (8) to secure metal frame and wooden frame .
3. Use Allen Key (2) to tighten Bolts.

## STEP-18

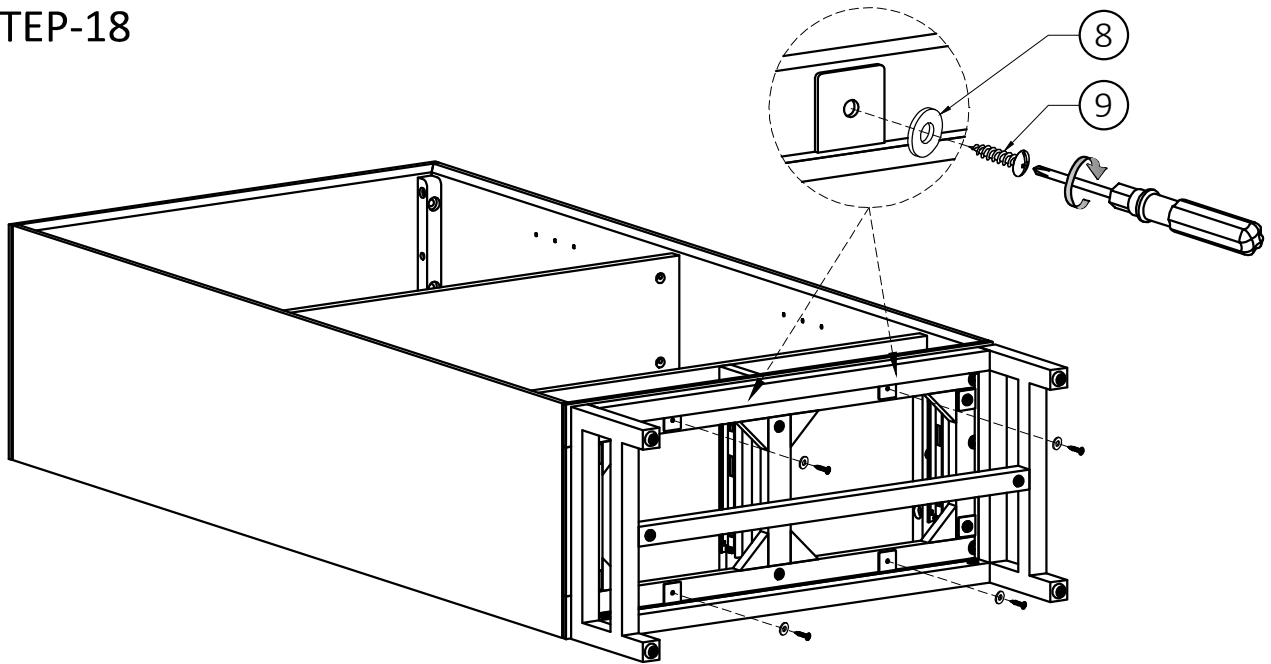 

 
1. Use four Phillips Screws Round Head (9) and four Washers (8) to secure wooden frame and metal frame.
2. Use Phillips screwdriver to snugly tighten Screws.

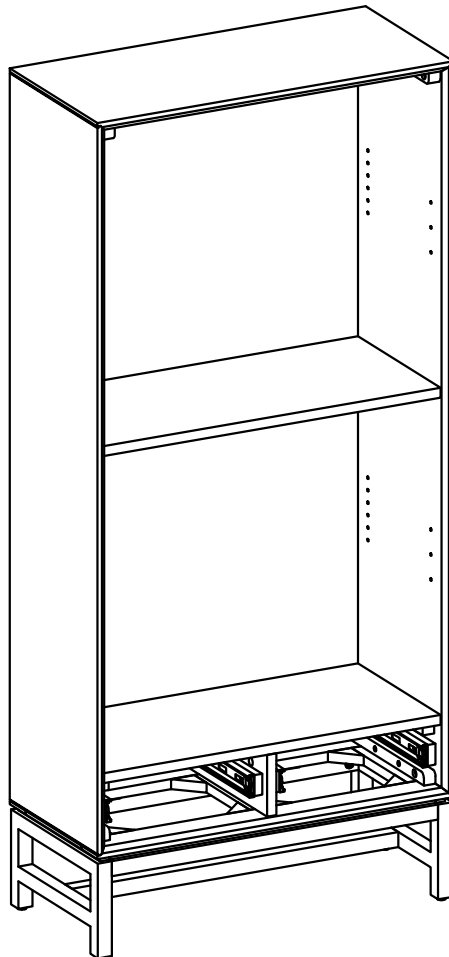


STEP-19

Note:

 The back of the cabinet frame does not have pre-drilled holes to attach the back panels.





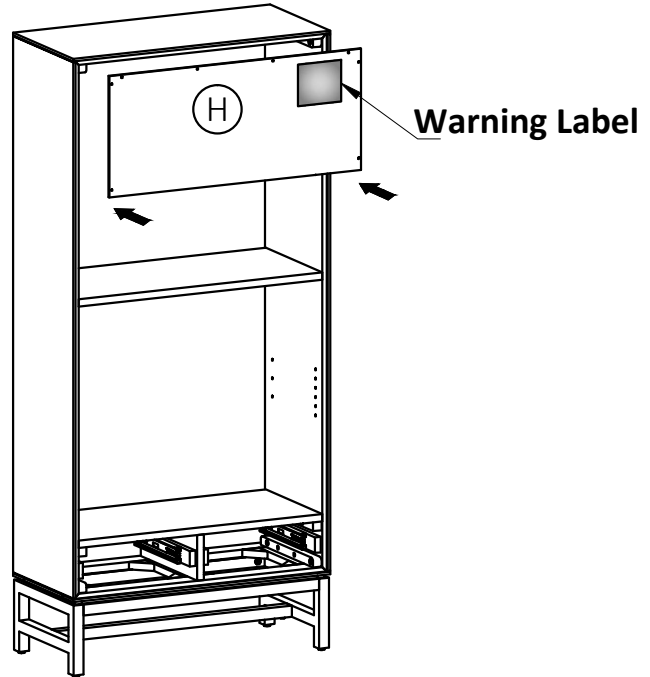


1. Attach the Top Back Panel (H) to back frame using Phillips Screws Round Head (9) through guide holes on Top Back Panel to the back of Bookcase.

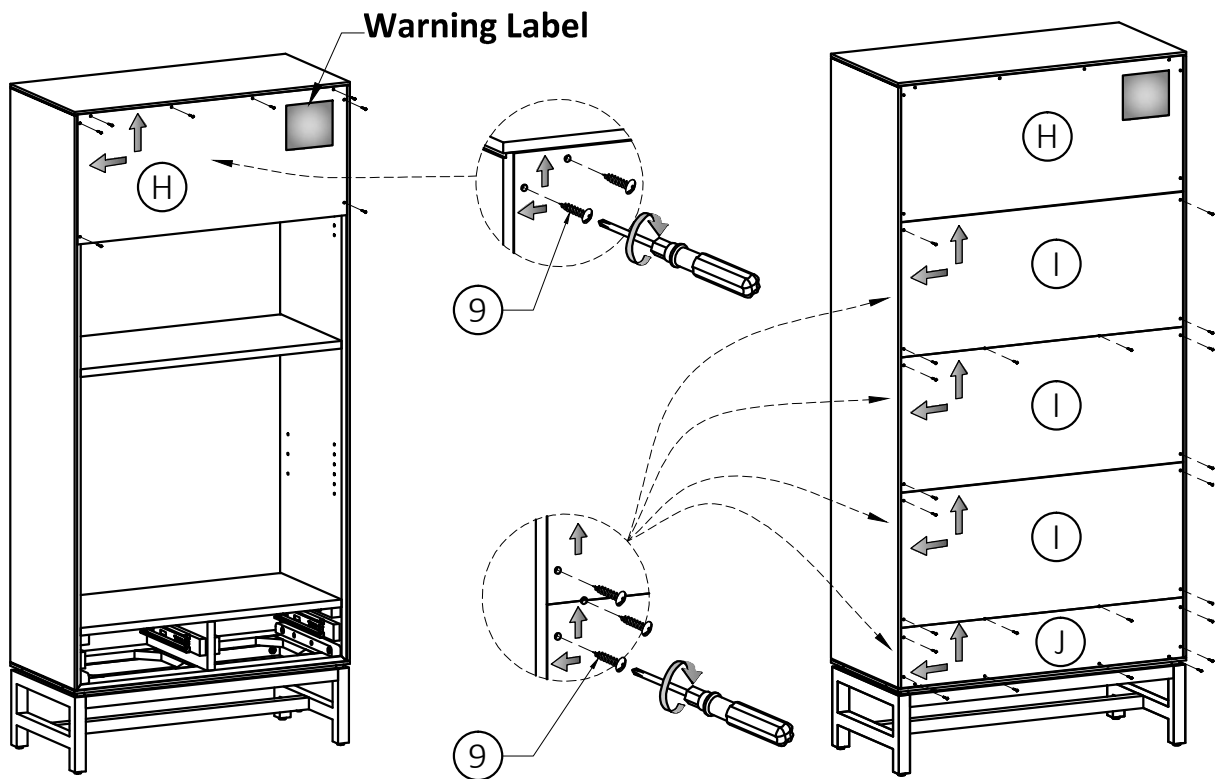 

2. Attach the Back Panels (I, J) to back frame using Phillips Screws Round Head (9) through guide holes.
3. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

     
STEP-20

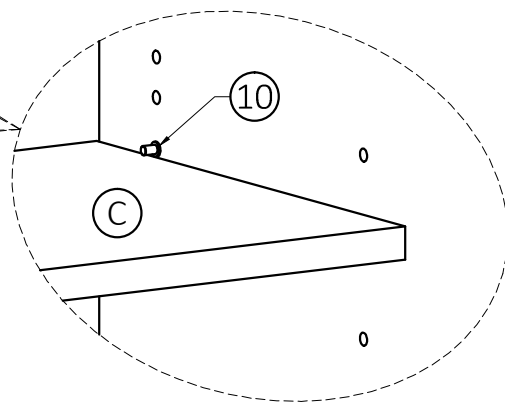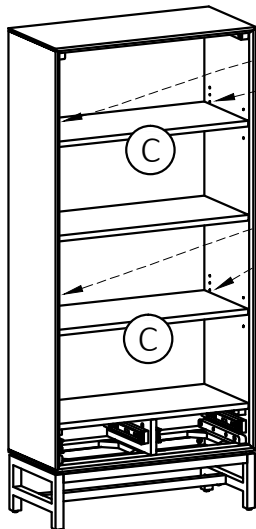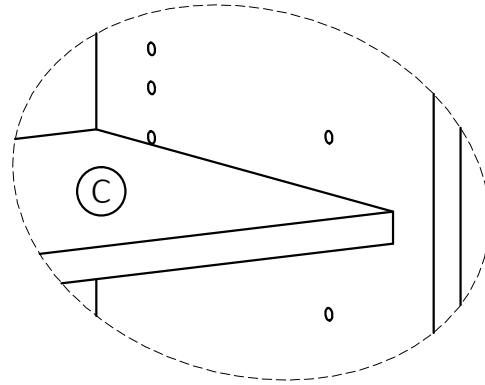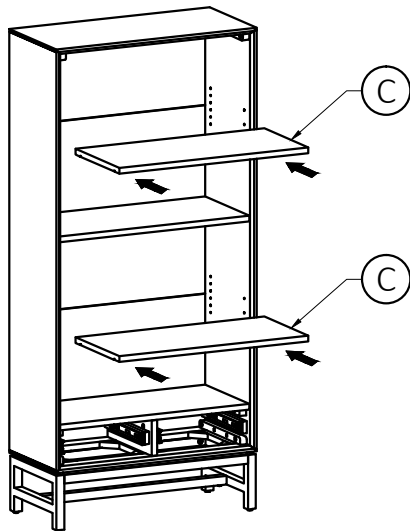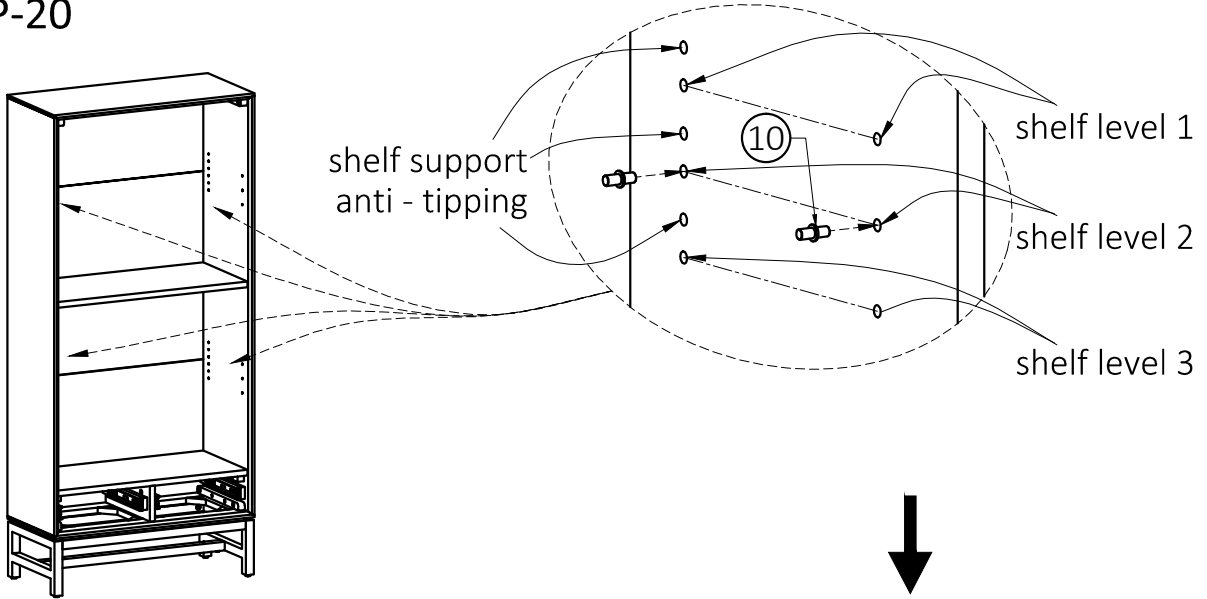

1. Use four Shelf Supports ⑩ for each Cabinet Shelf ③ in desired location .
2. Two Shelf Supports ⑩ may be used attached on back top of each Cabinet Shelf ③ as a tipping restraint.




 STEP-21

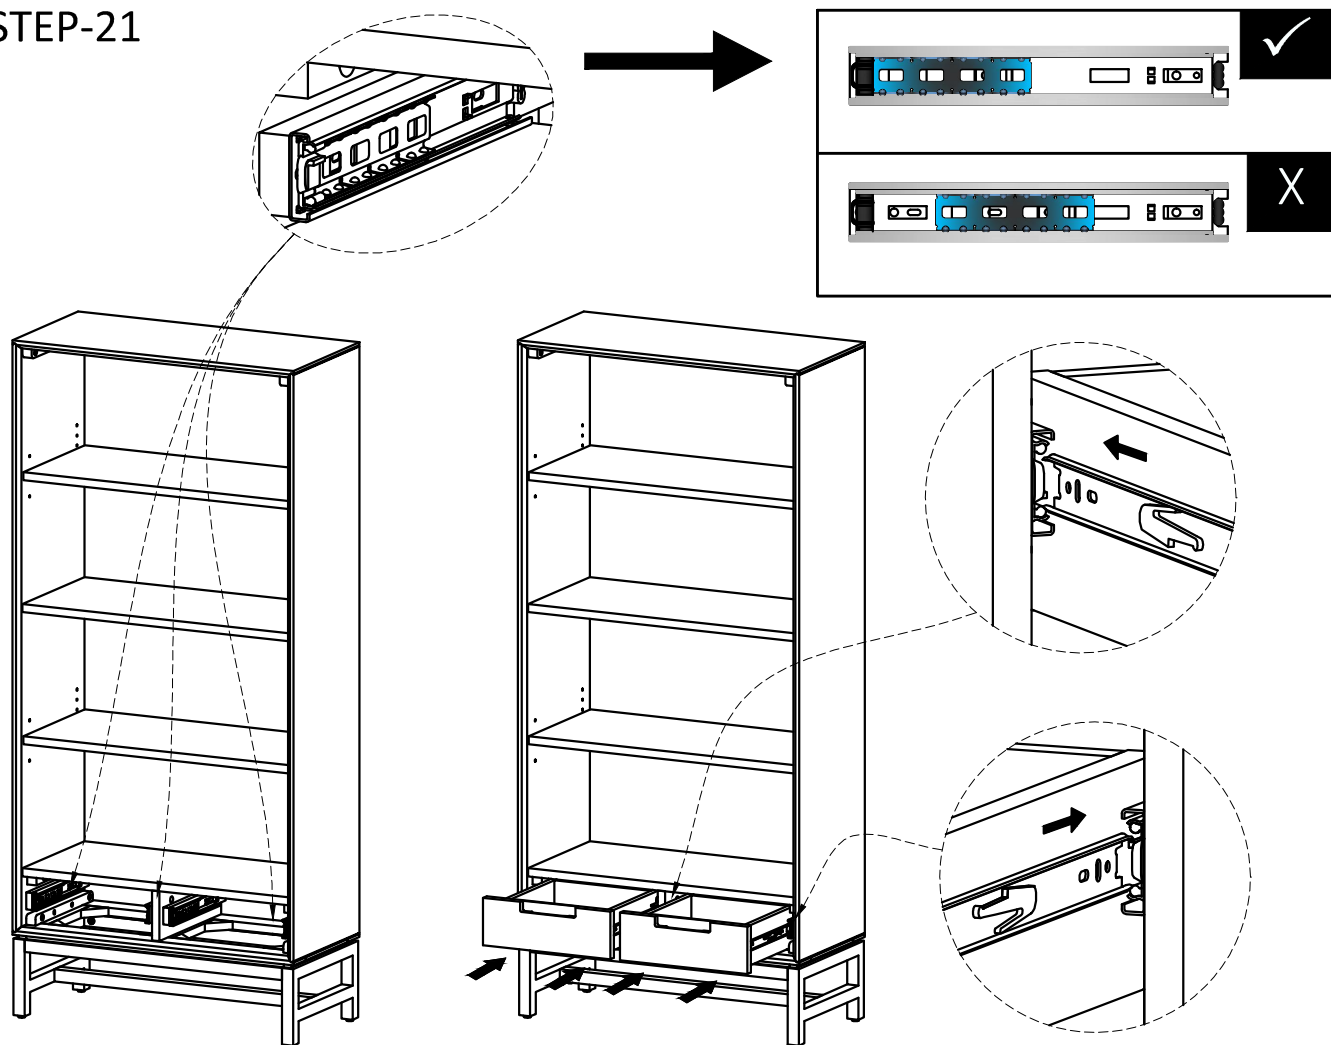

1. Insert assembled drawers into glides on assembled Bookcase.

 STEP-22

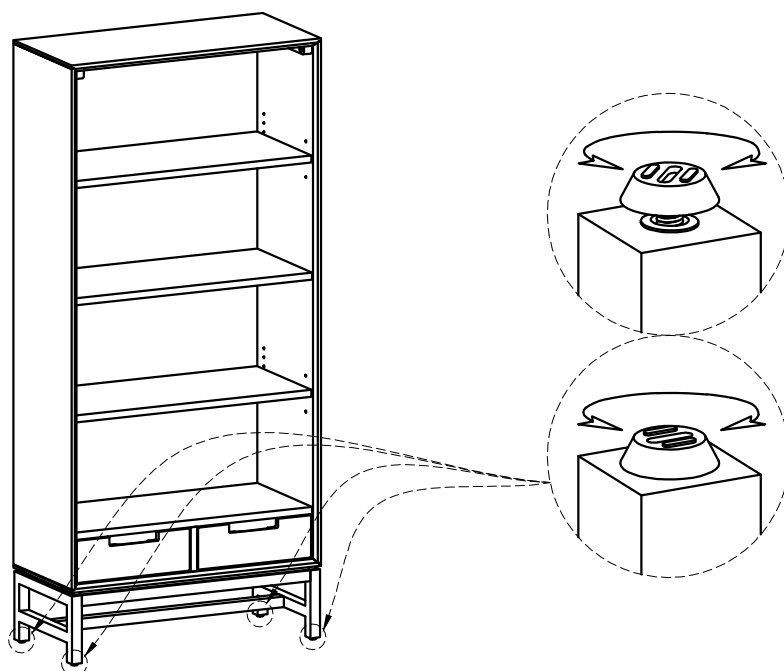

Note: Levelers on bottom of legs can be adjusted if floor is uneven.


## FURNITURE TIP OVER RESTRAINT ASSEMBLY






 
### WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### STEP-23



    
NOTE: The screwdriver is not included in the hardware pack.

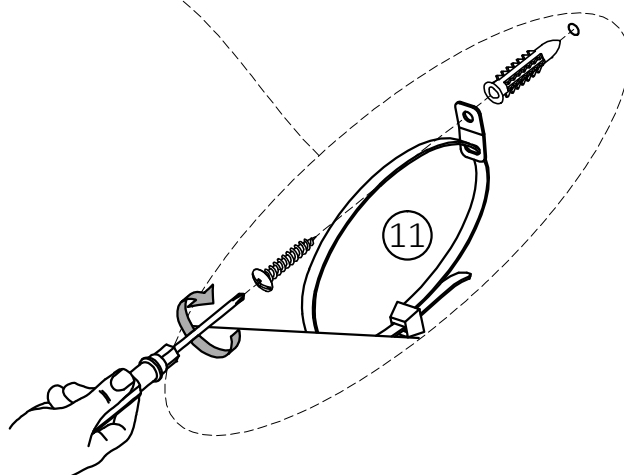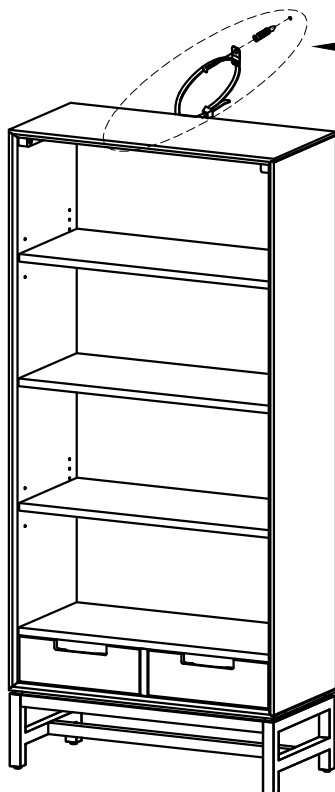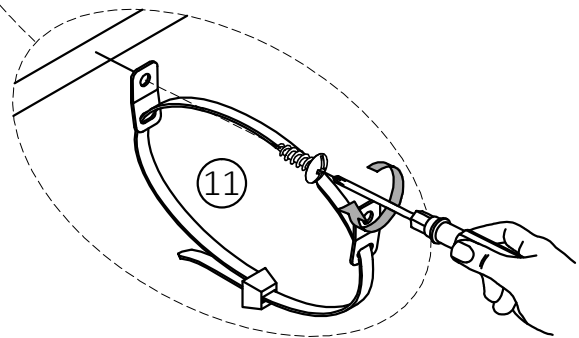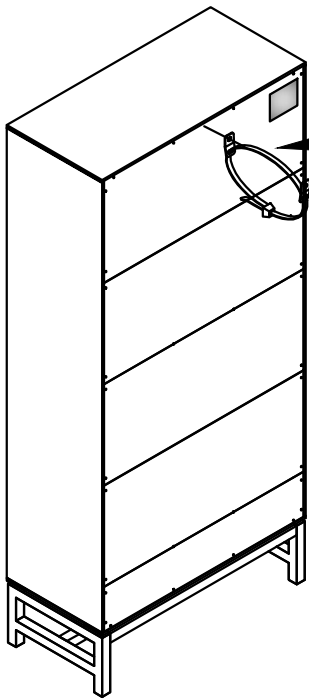


## FURNITURE TIP OVER RESTRAINT ASSEMBLY

### Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

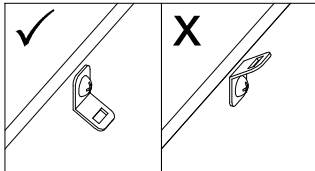

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

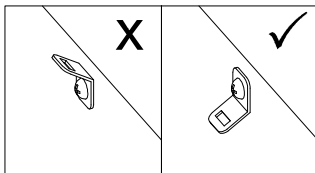

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

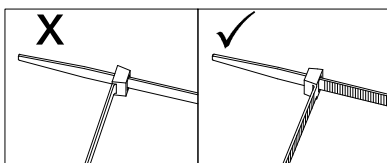 

- **DO NOT** put a TV or other heavy objects on top of a chest of drawers or any other furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers
- **DO NOT** let children climb or hang on drawers, doors or shelves



## WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [customerservice@simpli-home.com](mailto:customerservice@simpli-home.com).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.