Outdoor Windmill – Use & Care Manual

Thank you for choosing a Teamson Outdoor Windmill. Engineered to bring motion, beauty, and charm to your outdoor garden or yard, our windmills are crafted for durability and elegance. To ensure optimal performance and longevity, please follow the use and care guidelines below.

General Use & Setup Tips

- **Assembly Required**: Carefully follow the included instructions for proper assembly. Secure all parts before use.
- **Stable Surface**: Place your windmill on level ground to ensure balanced spinning and structural stability.
- Wind Flow: Position in an open area with adequate airflow for the kinetic blades to spin freely.
- **Anchoring**: Use ground stakes or anchoring systems provided to prevent tipping or movement in strong winds.
- Avoid Obstructions: Ensure blades have ample clearance from trees, walls, or other objects.

Care & Cleaning Guidelines

- **Surface Cleaning**: Wipe the windmill with a soft cloth and mild soap-water solution to remove dust and debris.
- Avoid Abrasives: Do not use harsh chemicals or abrasive materials that may scratch or degrade the finish.
- Inspect Hardware: Regularly check bolts, nuts, and blade connections for tightness and signs of wear.
- Lubrication: Apply a light lubricant to moving joints annually to maintain smooth spinning.
- Paint Touch-Up: If paint chips occur, use rust-resistant outdoor metal paint to retouch and seal exposed areas.

Safe Operation

• **Supervise Children**: Blades may spin quickly in high wind. Ensure children and pets are supervised around the windmill.

- Avoid Climbing: Do not allow anyone to climb or hang from the windmill to prevent tipping or damage.
- **Relocation**: Disassemble or move with care. Avoid dragging the windmill across hard surfaces to prevent base damage.

Maintenance Tips

- Winter Storage: In regions with snow or high winds, consider storing the windmill indoors or covering it during the off-season.
- Storm Protection: Take down or securely anchor the windmill if high winds or storms are expected.
- Seasonal Cleaning: Clean the windmill before each new season to remove environmental buildup.

💭 Environment & Seasonal Care

- **UV Exposure**: Prolonged sun exposure may cause fading. Consider applying a UV-protective sealant or placing in partial shade.
- **Rust Prevention**: Keep metal surfaces dry when possible and use protective sprays annually to resist rust.
- **Moisture Management**: If storing in humid areas, place silica packets or dehumidifiers nearby to prevent corrosion.

We appreciate your selection of Teamson. With proper use and care, your bird bath fountain will remain a soothing and elegant centerpiece in your outdoor space. Contact our Customer Support Team - support@teamson.com for assistance or replacement parts anytime.