


USER MANUAL CL-4SL7003-TP | 44" 7000 LUMEN TREADPLATE SHOP LIGHT

CARE FOR YOUR PRODUCT:

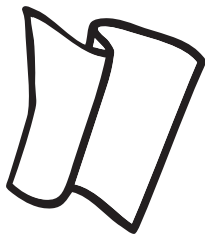

Your product will last for many years with minimum care. Therefore, it is essential to clean the product periodically. Use a soft, non-abrasive cloth or a mild, non-abrasive glass cleaner. It is essential NOT to use any solvents or harsh cleaning agents. **When cleaning, make sure the power is OFF.** Do not spray liquid directly onto the product or wiring. Instead, spray or pour a small amount into the cloth and clean the product.

TROUBLESHOOTING:

Problem	Possible Cause	Solution
The product does not turn on	The power is off	Check the power supply and make sure it is ON
	There is a bad wire connection	Check the wiring
	The switch is defective	Test and/or replace the switch
Flickering	The light is not operating correctly	Disconnect and call the manufacturer

EYES:



- **DO NOT** look directly at the LED lights.
- **DO NOT** remove the LED lights protective covering.

CARE FOR YOUR PRODUCT:



This product has a **two-year warranty** from the date of purchase—this guarantees against failure due to factory defects, whether caused by materials or workmanship. The warranty is non-transferable and only pertains to the original purchaser. Proof of purchase is required for any repair or replacement, so please keep your proof of purchase receipt. This warranty does not cover normal wear and tear or damage due to misuse. Misuse of this product includes but is not limited to:

- Using outdoors in extreme weather conditions.
- Opening the product's housing.
- Any attempts to update, remodel or fix the unit yourself.



If you have questions or missing parts, please contact our customer care at 1-888-745-4837



USER MANUAL CL-4SL7003-TP | 44" 7000 LUMEN TREADPLATE SHOP LIGHT



44" 7000 LUMEN LINKABLE LED TREADPLATE SHOP LIGHT

Lumen	7000
Watts	85
CCT	4000K Bright White
Power Supply	5 ft. Power Cord

WARNING:

YOU SHOULD ALWAYS FOLLOW BASIC PRECAUTIONS.



Read, follow, and understand all instructions and warnings before beginning any installation of this product. Failure to do so can result in electric shock, fire, or other injuries, including death. Save this user manual for instructions and warnings for possible future relocation and installation.

CAUTION:



- This product is not waterproof and is designed for dry/damp use.
- Avoid environments with extreme dust and/or humidity.
- Avoid areas with temperatures higher than 104 Fahrenheit.
- Avoid using this product near flammable materials and/or gas.
- DO NOT use on radiant-heating type of ceilings.
- Always shut off the main power supply at the circuit breaker before removing or relocating this product from any area.



If you have questions or missing parts, please contact our customer care at 1-888-745-4837

USER MANUAL #CL-4SL7003-TP | 44" 7000 LUMEN TREADPLATE SHOP LIGHT

PRE-INSTALLATION INSTRUCTIONS:

Before beginning any installation, select your location. Measure between the two "S Hook" attachment holes on top of the light to determine the distance between each hanging chain. Next, determine your mounting method.


If you or a professional electrician is mounting into wood, it is recommended to use Screw Hooks (C) as in **Diagram 1**.

If mounting into drywall, it is recommended to use Screw Hooks (C) and Anchors (D). Screw the Screw Hook into the Anchor. Then drill a 1/8" hole into the drywall. Pinch the butterfly ends flat and push through the drywall hole. The Anchor will expand behind the drywall as shown in **Diagram 2**. Repeat for the other side.

It is up to the purchaser or a professional electrician to determine the best area to install. The manufacturer is NOT responsible for improper installations.

HARDWARE INCLUDED:


Part	Description	Quantity
A	"S" Hook	2
B	Hanging Chain	2
C	Screw Hook	2
D	Anchor	2

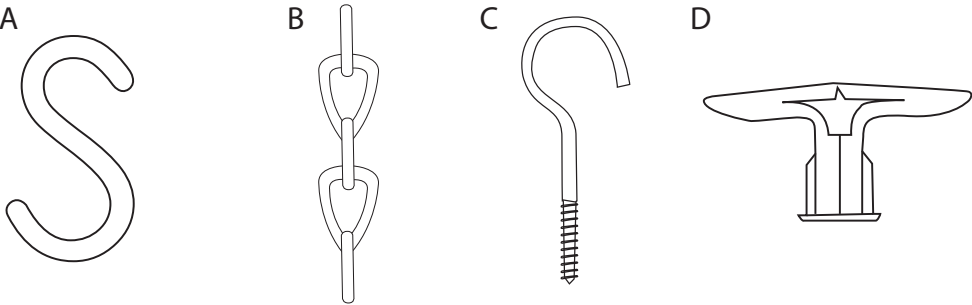

USER MANUAL #CL-4SL7003-TP | 44" 7000 LUMEN TREADPLATE SHOP LIGHT

PRODUCT INSTALLATION INSTRUCTIONS:

1. Attach the "S Hook" (A) to the LED light (**Diagram A**). Repeat this on the other side.
2. Attach the "Hanging Chain" (B) to the "S Hook" (A) (**Diagram B**). Repeat this step on the other side.
3. Hang the Hanging Chain on the pre-installed "Screw Hook" (C). Adjust to the desired height and make sure the product is level.
4. For this product, you can link up to **6 UNITS**. Simply plug the power cord directly into the adjacent unit(s).
5. Plug the main light's AC power cord into the AC outlet. Pull the chain to power the product ON and again to power the product OFF.

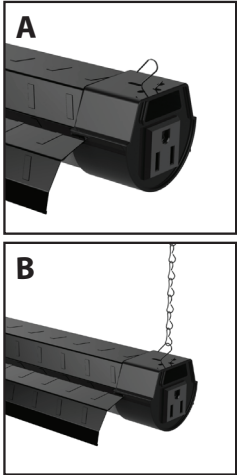

LINKABLE
UP TO
6 UNITS



If you have questions or missing parts, please contact our customer care at 1-888-745-4837



If you have questions or missing parts, please contact our customer care at 1-888-745-4837