
MODEL: T101R



24 HR DIAL TIME SWITCH (SPST) CIN TYPE 3R DUSTPROOF RAINPROOF ENCLOSURE SUITABLE FOR POOL EQUIPMENT CONTROL IF INSTALLED 5FT. OR MORE FROM EDGE OF POOL.

40 AMP. RESISTIVE, INDUCTIVE, TUNGSTEN OR 1000 VA PILOT DUTY 120/208/240 VOLT AC; 2 HP (24 FLA) - 120V AC; 5 HP (28 FLA) - 240V AC

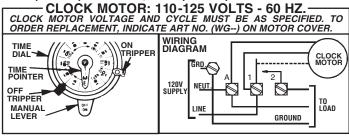

WIRING INSTRUCTIONS: To wire switch follow diagram above. Use solid or stranded COPPER only wire with insulation to suit installation. See gauge selection table for normal service applications. To make power connections remove 1/2 inch of insulation from wire ends. Insert bare ends of wire under the pressure plate of terminals. Use 3/16 or larger screwdriver to tighten terminal screws firmly. (25 lb-in minimum).

REPLACE INSULATOR BEFORE TURNING ON ELECTRICITY.

	MINIMUM COPPER WIRE SIZE (AWG)	MAX. LOAD (AMP)	MIN. INSUL- ATION TEMP (°C)	75°C INSULATION MAX. MOTOR Load (HP)				PRESSURE PLATE
				SINGLE PHASE		3 PHASE		TERMINAL SCREW
	(Awa)		121111 (0)	120 V.	240 V.	208 V.	240 V.	
	14	15	60	1/2	2			MAKE SURE WIRE
	12	20	60	1	2 1/2	N/A	N/A	INSULATION CLEARS
	10	30	60	2 3	, .,	PRESSURE PLATE		
	8	40	75	-	5			••

PROGRAMMING INSTRUCTIONS

- TO SET "ON" AND "OFF" TIMES: Hold trippers against edge of CLOCK-DIAL, pointing to time (AM or PM) when ON and OFF operations are desired, tighten tripper screws firmly. For additional tripper pairs on CLOCK-DIAL order 156T1978A.
- TO SET TIME-OF-DAY: Pull CLOCK-DIAL outward. Turn in either direction and align the exact time-of-day on the CLOCK-DIAL (the time now, when switch is being put into operation) to the pointer. DO NOT MOVE POINTER.

OPERATING INSTRUCTIONS

• TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER

below **CLOCK-DIAL** left or right as indicated by arrows. This will not effect next operation.

 IN CASE OF POWER FAILURE, reset CLOCK-DIAL to proper time-of-day. See programming instructions.

INTERMATIC INCORPORATED

158TS10914 SPRING GROVE, ILLINOIS 60081-9698

158TS10914 1 4/15/09 4:49:53 PM