


ASSEMBLY INSTRUCTION

PATIO FURNITURE SETS

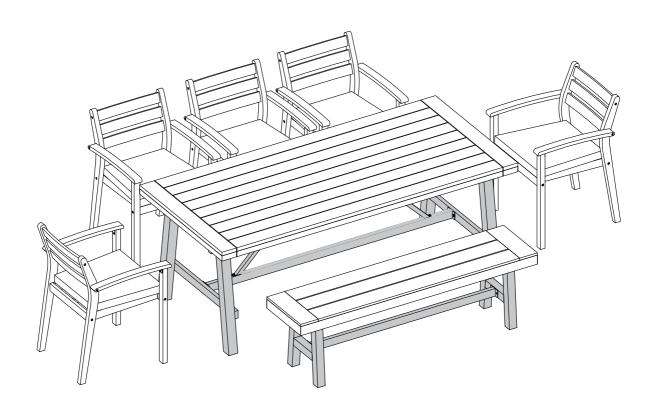


WF316738 WF316739 WF316740

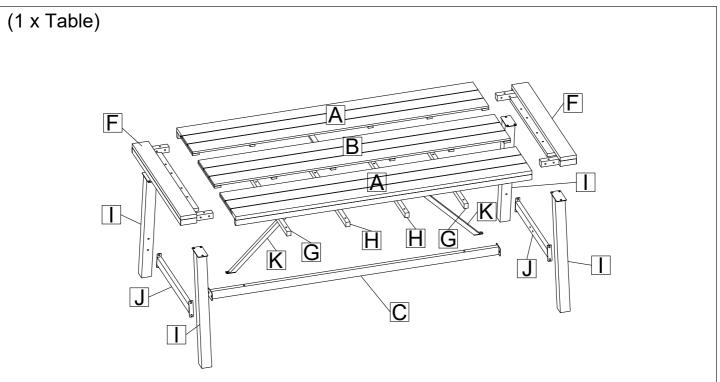


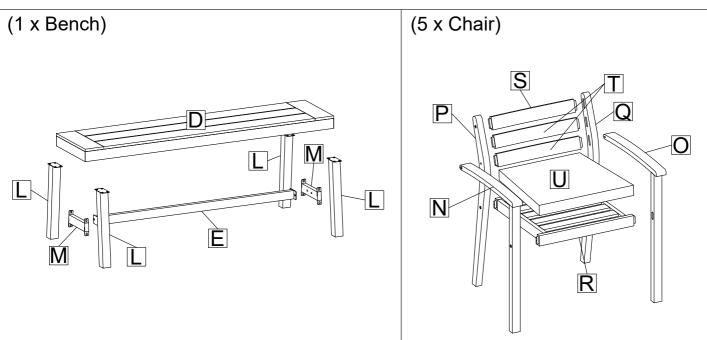



Note:


- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screw with tools gradually.
- 4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

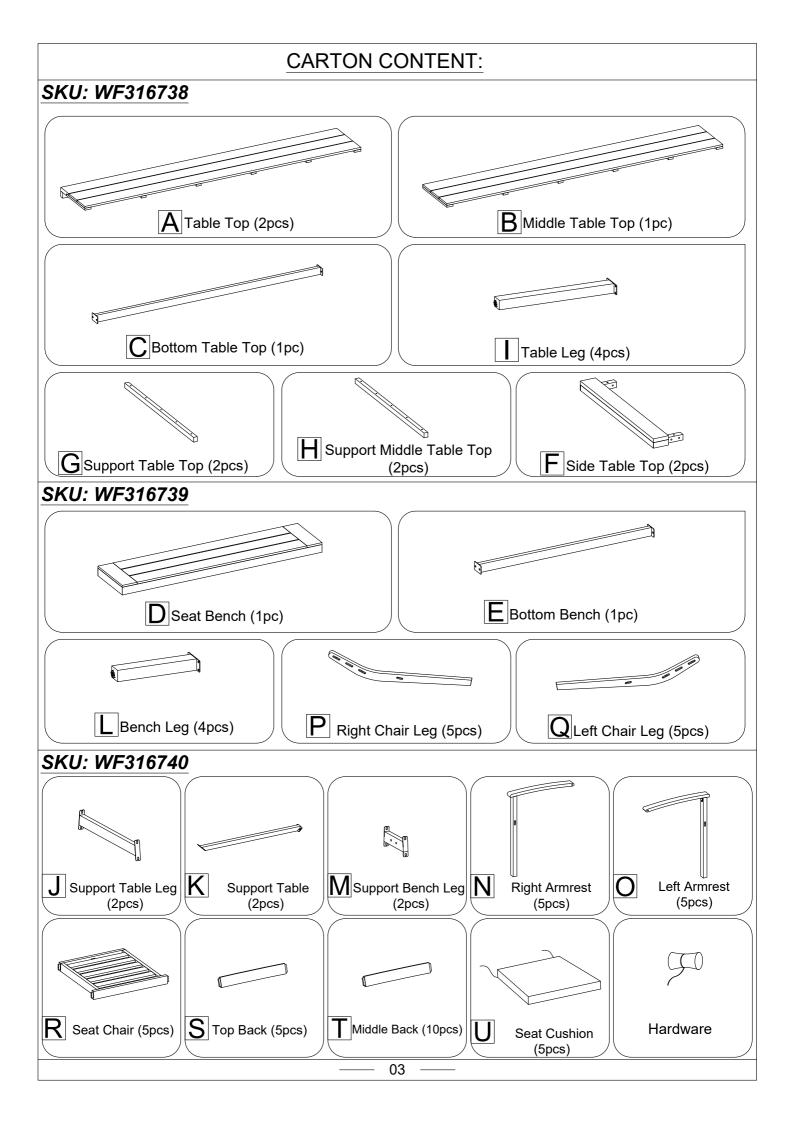


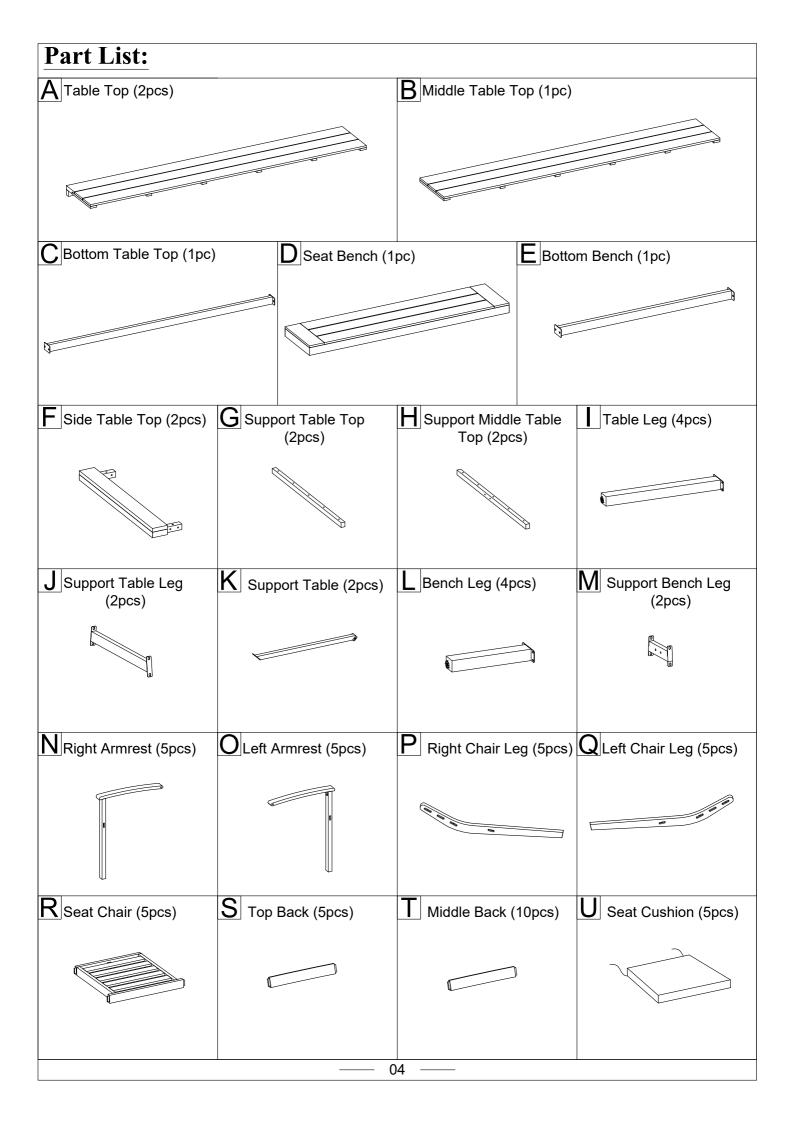


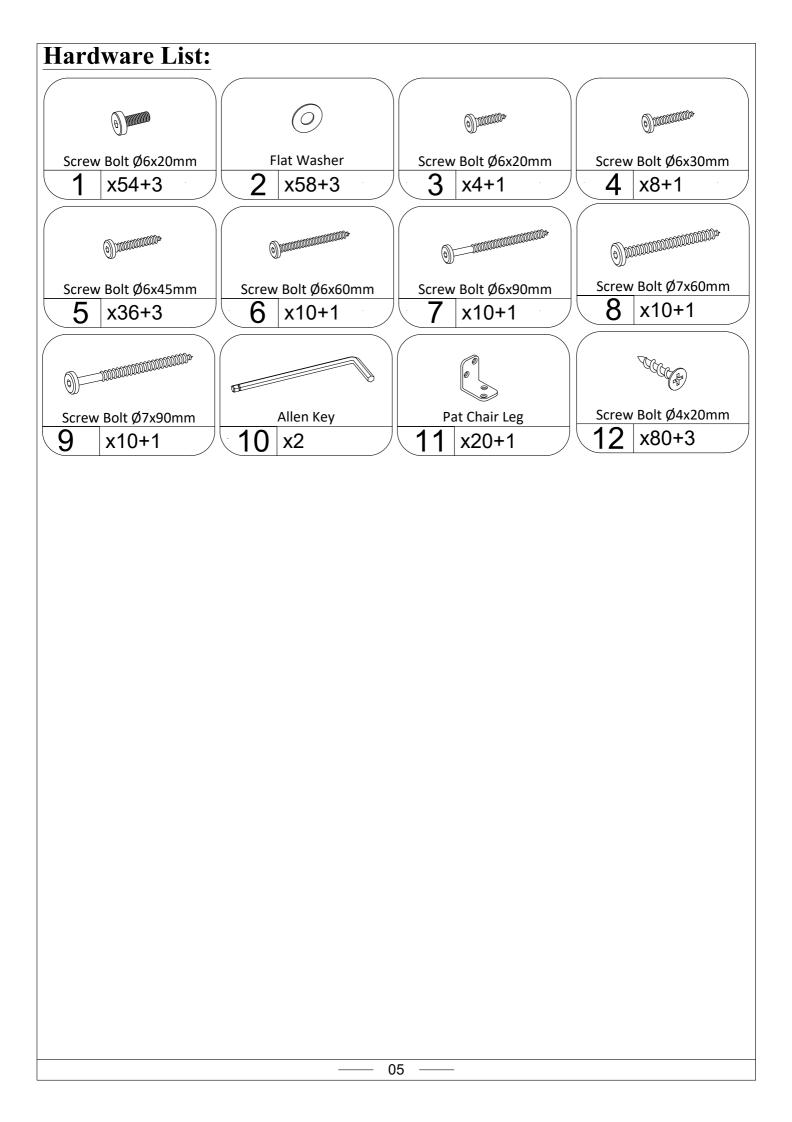


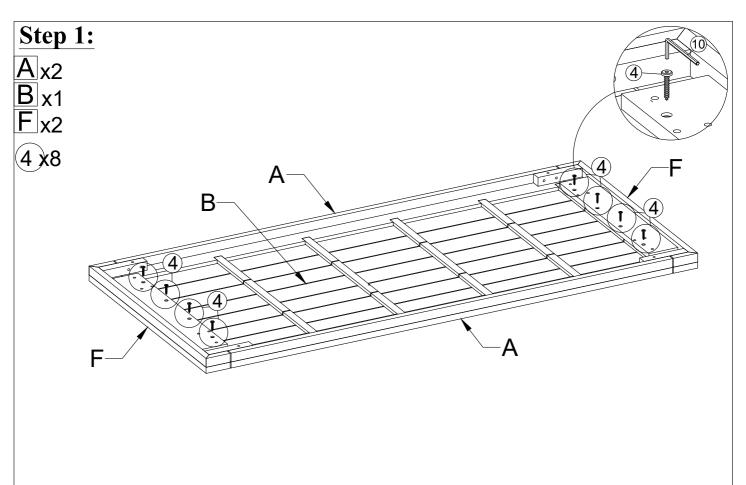


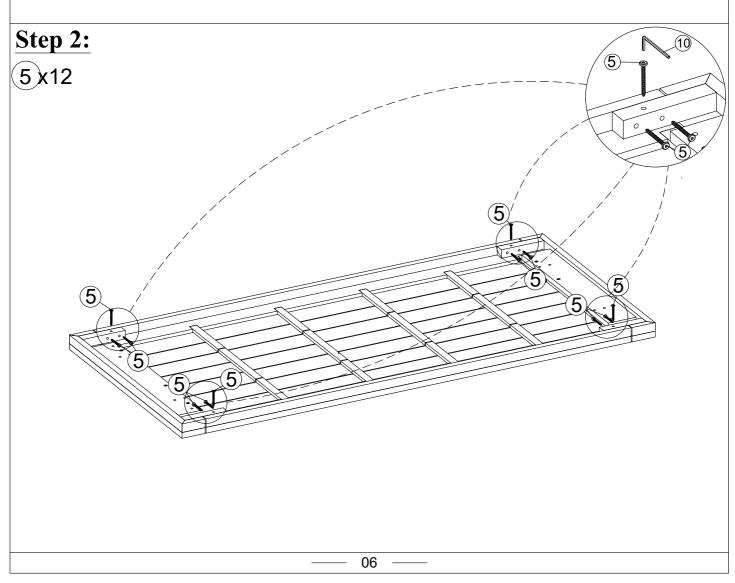


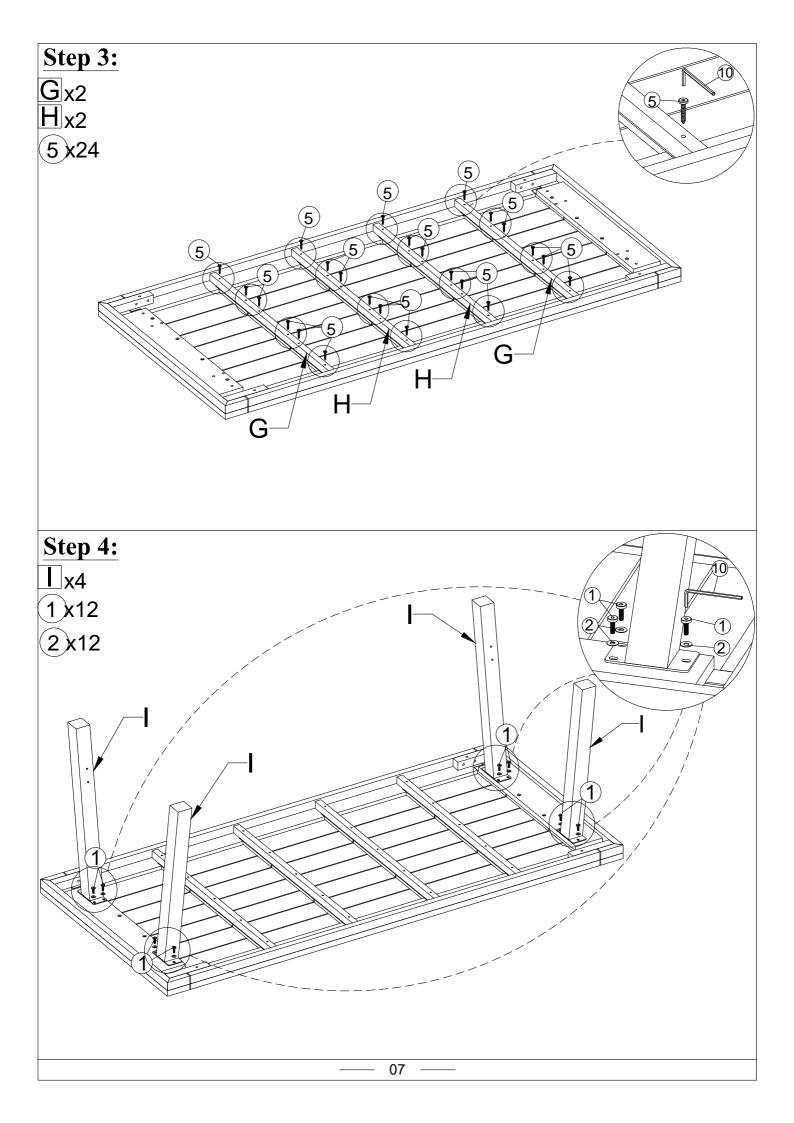

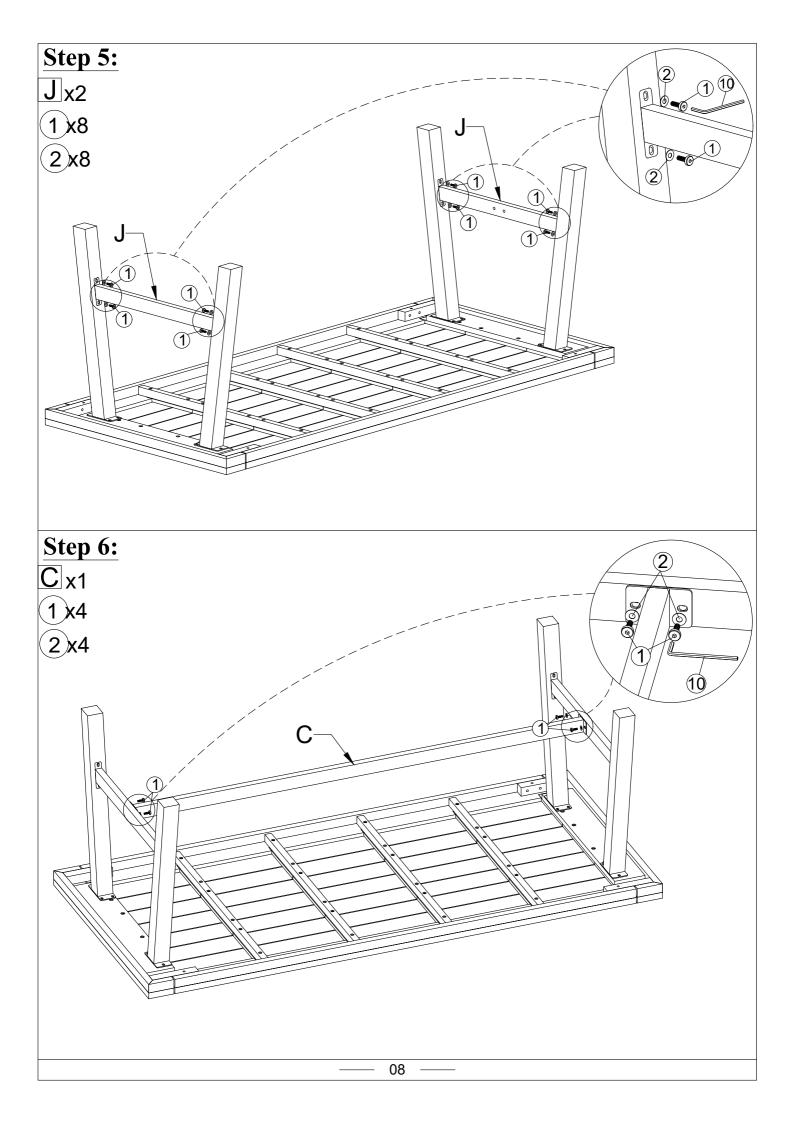


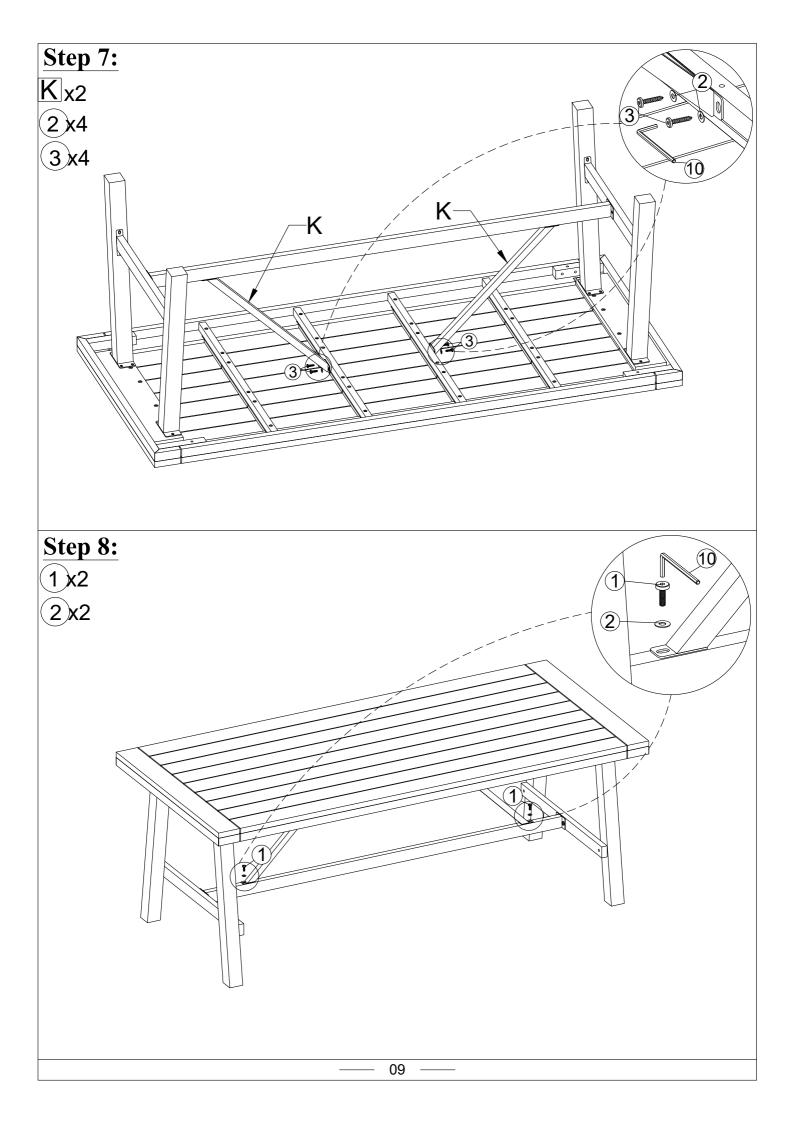

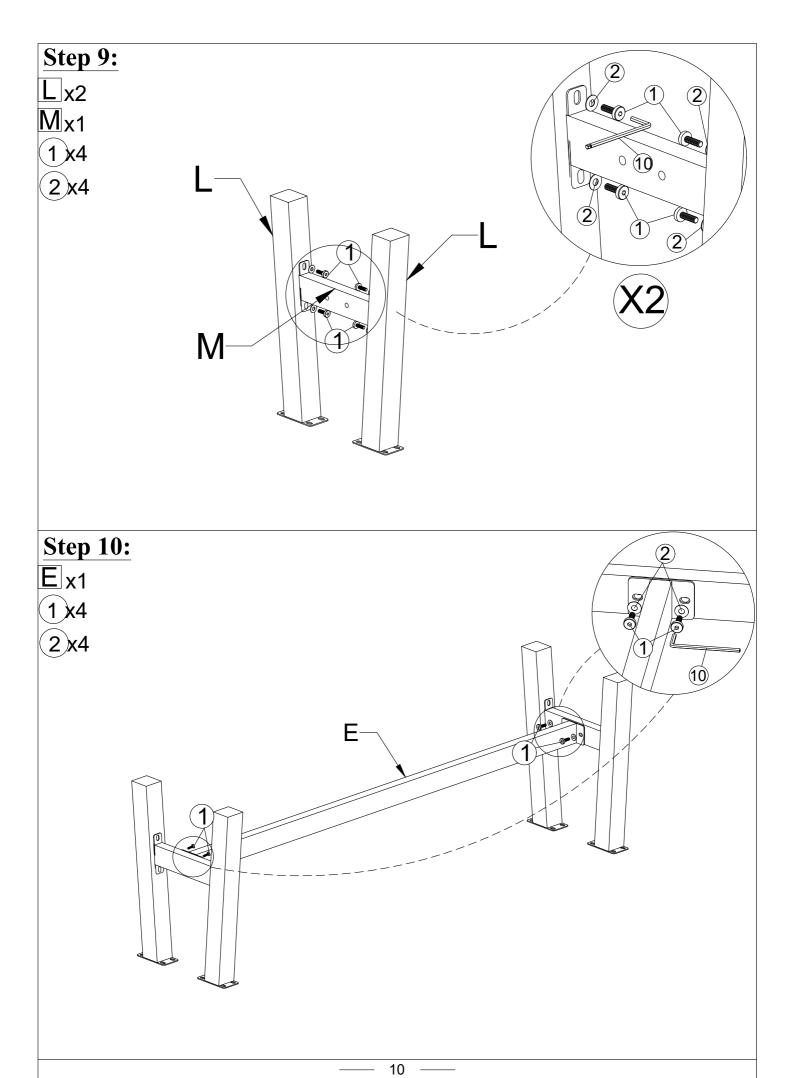

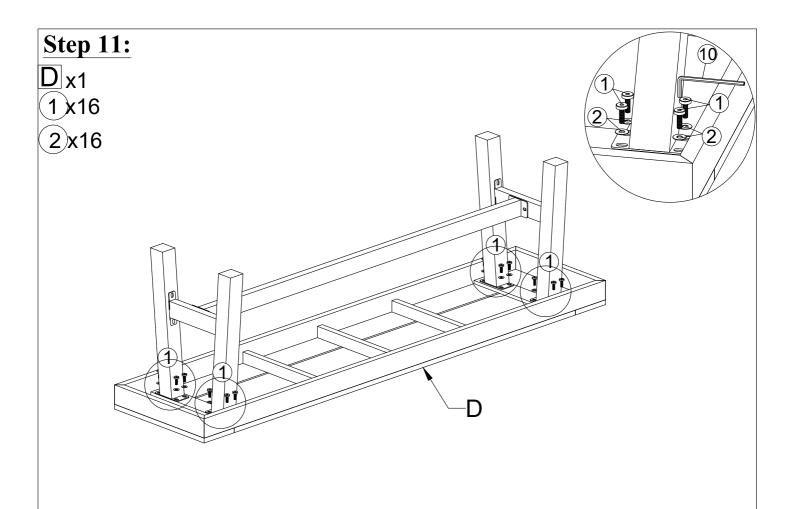

Step 12:

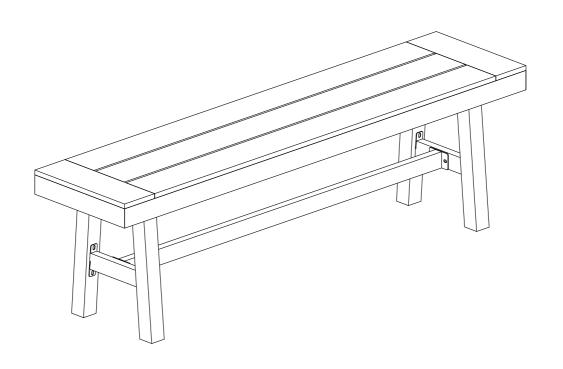

Put the Bench upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (10).

