

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product

In addition to installing the restrains, to help prevent tip-over

1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product



Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

 
- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.






- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in box for hardware packs.



ACCENT CABINET



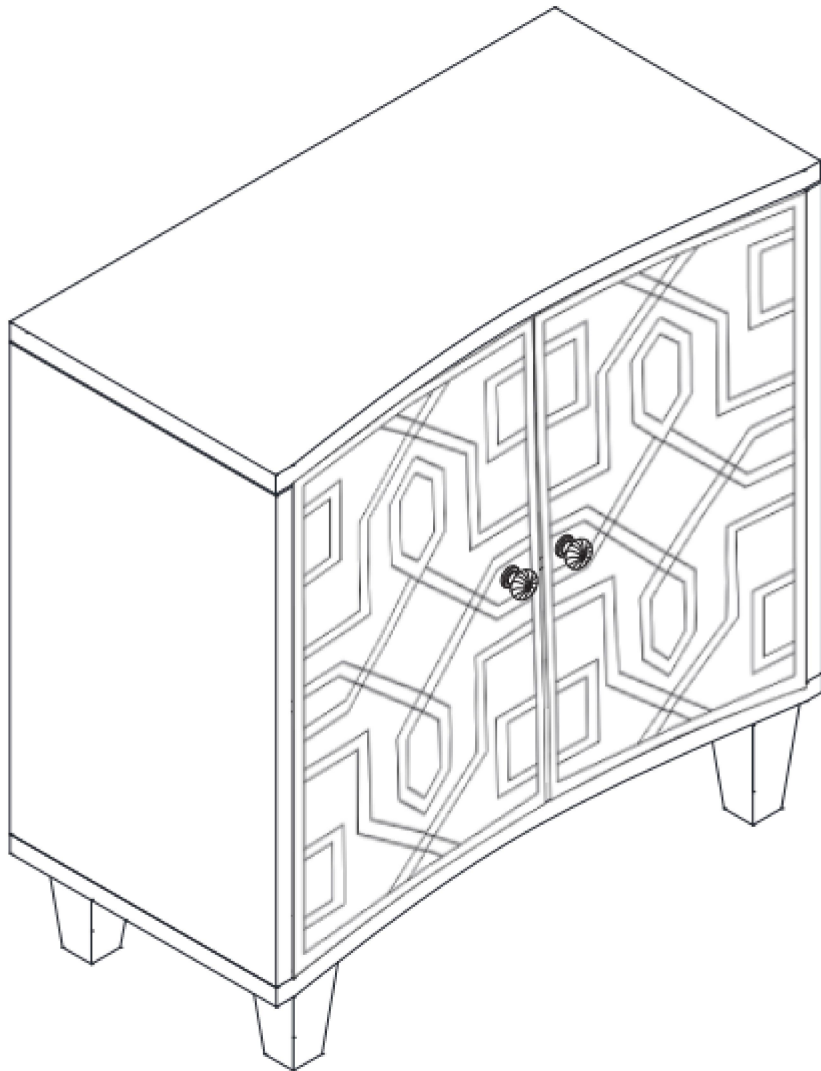


Parts List

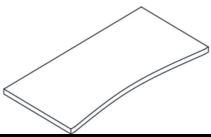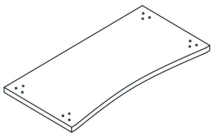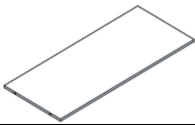   Label	Picture	Description	QTY
①		TOP PANEL 82x40x2.4cm	1
②		BOTTOM PANEL 82x40x2.4cm	1
③		LEFT SIDE PANEL 64x40x2.4cm	1
④		RIGHT SIDE PANEL 64x40x2.4cm	1
⑤		LAYER PANEL 76x32x1.2cm	1
⑥		FEET 4.5x4.5x11.5cm	4
⑦		LEFT DOOR 38.4x63.5x2cm	1
⑧		RIGHT DOOR 38.4x63.5x2cm	1
⑨		BACK PANEL 64.6x38.7x0.3cm	2
⑩		BACK PANEL STRIP 63.5x1.2cm	1

  
Hardware

Label	Picture	Description	QTY
A	 Ø 6x35mm	Φ6x35mm CAM LOCK BOLT	4
B	 Ø 15x10mm	Φ15x10mm CAM LOCK NUT	4
C	 Ø6x30mm	Φ6x30mm WOOD DOWEL	8
D	 Ø 5x60 mm	Φ5x60mm BOLT	4
E		SCREWDRIVER	1
F		MAGNETIC COLLISION	2
G	 Φ3x14mm	Φ3x14mm BOLT	36
H		SHELF NAIL	4
K		HINGE	4

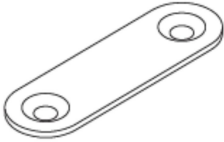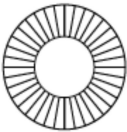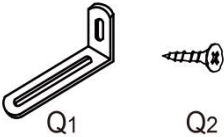   J		MAGNETIC COLLISION	2
M		PLASTIC WASHER	4
N		HANDLE	2
L		Φ4x25mm BOLT	2
Q		SHEET IRON	2
R		EXPANSION SCREWS	2
P		BACK PANEL BRACKET	4
T		COVER	4

Assembly Preparation

 Before
Beginnin
g
Assembly
:

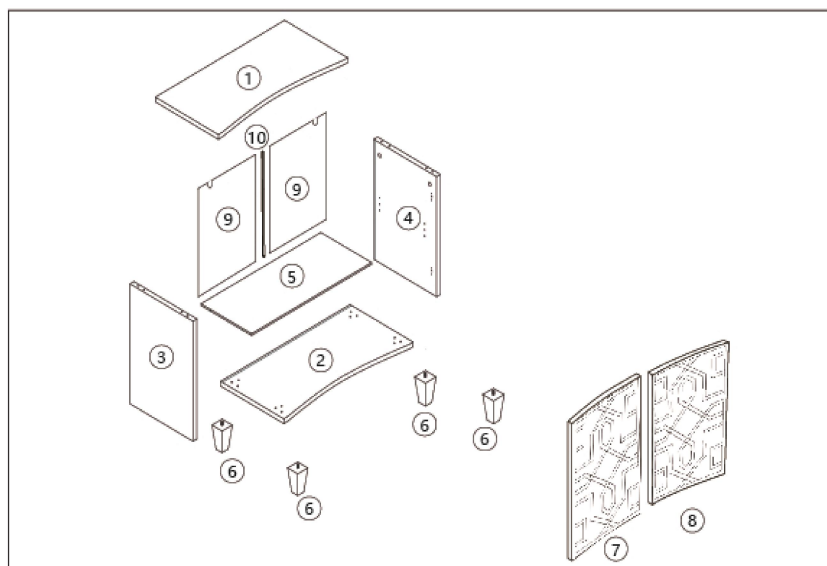

 x35mm AX4	 Ø 15x10mm BX4	 Ø6x30mm CX8	 Ø 5x60 mm DX4	 EX1
 FX2	 Ø3x14mm GX36	 HX4	 KX4	 JX2
 MX4	 NX2	 Ø4x25mm LX2	 Q1 Q2 QX2	 R1 R2 RX2
 PX4	 TX4			



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

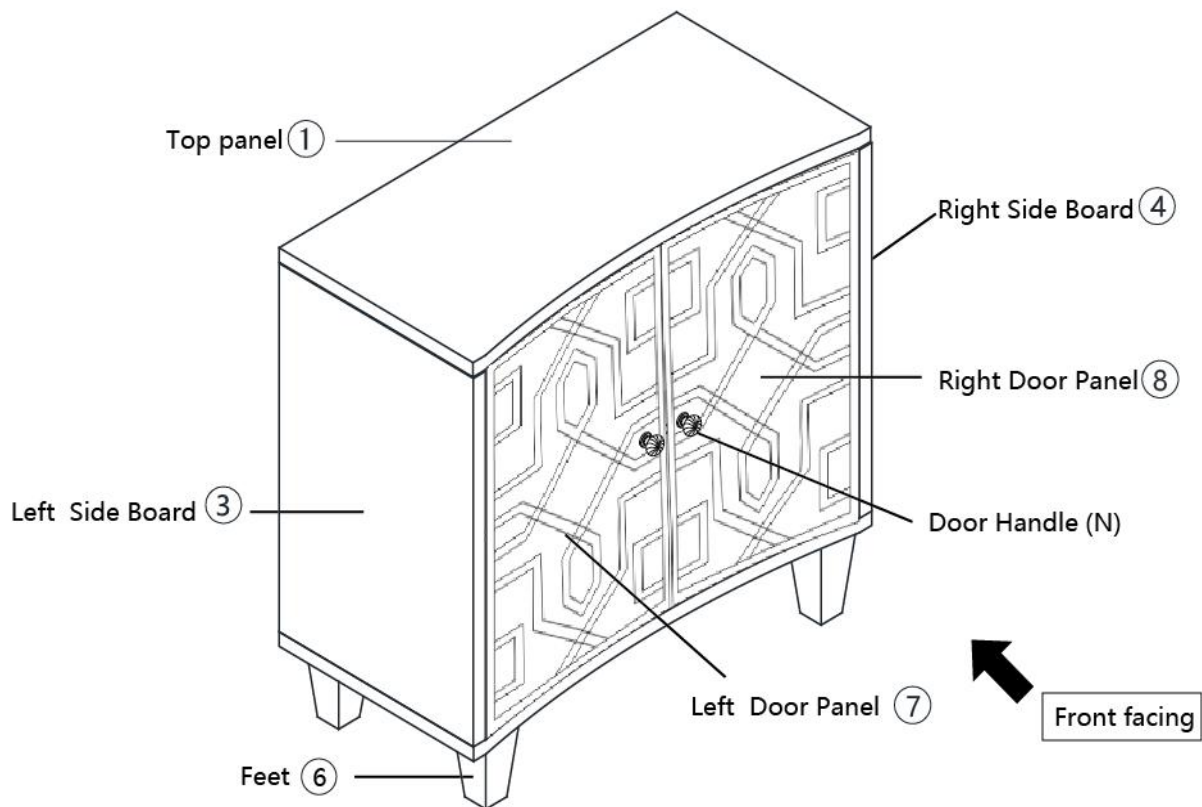

This Accent Cabinet has multiple parts and may require up to some 60 minutes to assemble. To give you an overview of the Accent Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



Step 1

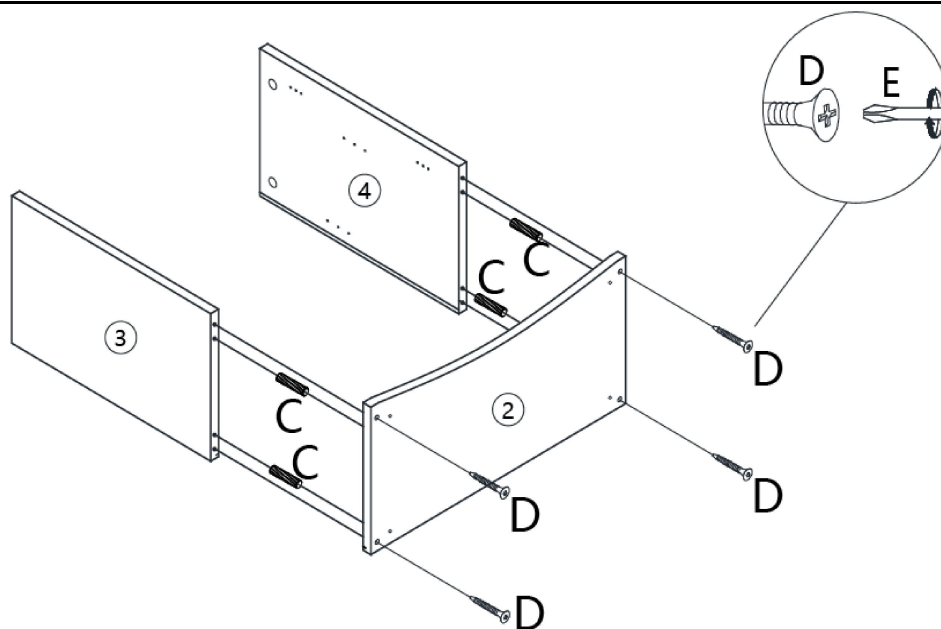

Ø6x30mm		Ø 5x60 mm
CX4	EX1	DX 4


1. Take the left side panel ③ and the right side panel ④, take the bottom panel ②, align the bottom panel with the bottom edge of the side panels, insert the Wood dowel (C) into the corresponding hole in the connection area between the side panel ③ ④ and the bottom panel ②, and use a screwdriver (E) to tighten the screws (D) to make sure that the connection is secure.

Step 2

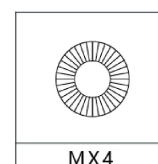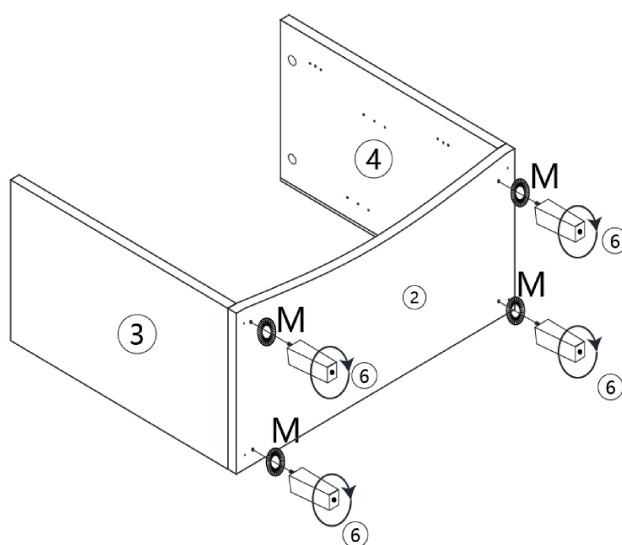

Fit plastic washer (M) into wood foot nut, then screw four feet(⑥) onto bottom panle(②)


Step 3

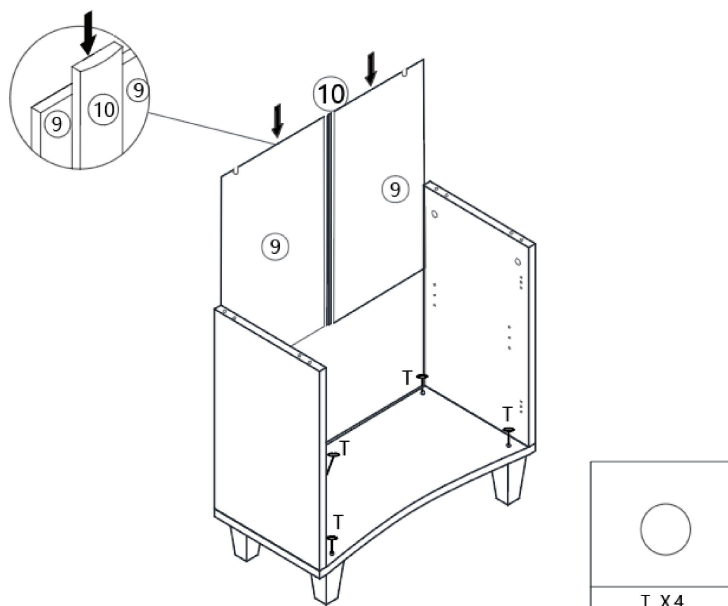

Insert the two back panels ⑨ and connect them with the back panel strip ⑩ in the center.


The holes for the screws, affixed with (T).

Step 4

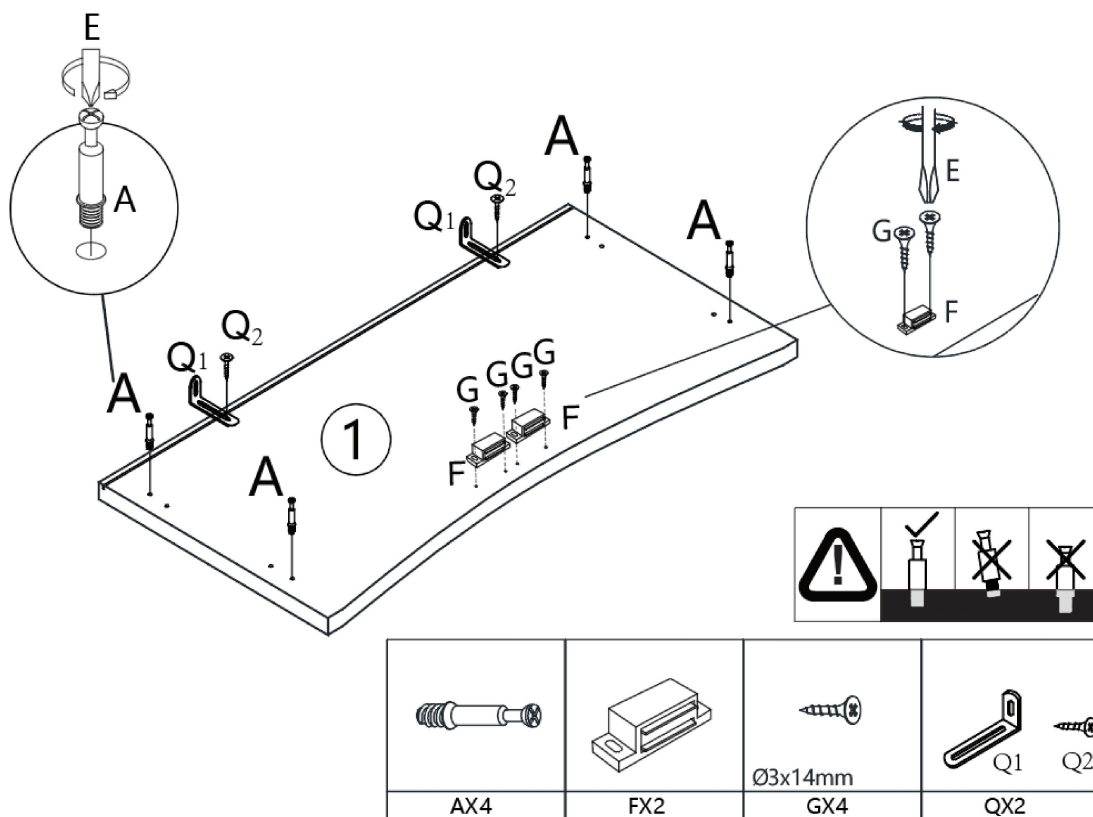


Mount cam lock bolt (A), magnetic collision contact (F), and furniture tipping restraint (Q) on top panel. (①)

Step5

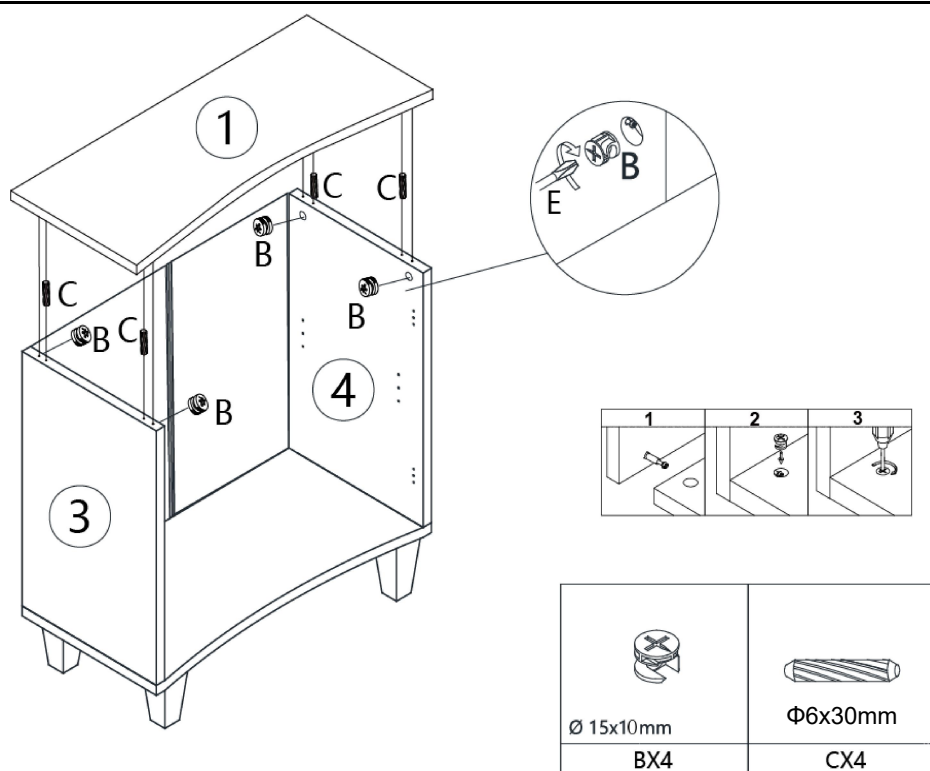


1. Place the top panel① on top of the assembled cabinet frame so that the edges of the top panel align with the top edges of the side panels and back panels. Insert holes for Wood dowels(C) in the corresponding holes in the connection area between the top panel① and the side panels so that the dowels are tightly connected to the top panel and the side panels.
2. The dowels are then secured using eccentric wheels Cam Lock Nut(B). Pass the screw portion of the eccentric wheel through the corresponding pre-drilled hole, but do not tighten. Next, use a screwdriver (E) to rotate the eccentric part of the eccentric wheel so that the top panel and the side panel fit tightly, and finally tighten the screw on the eccentric wheel to ensure a firm connection. Follow this method of installing the eccentric wheel at each connection point to ensure a stable top panel installation.

Step 6

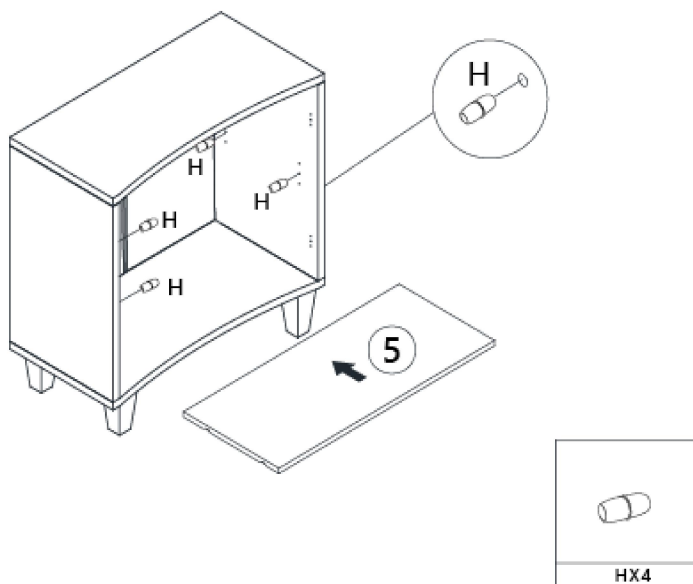


Insert shelf nail(H) on two side panel(③④), then place layer panel(⑤)

Step 7

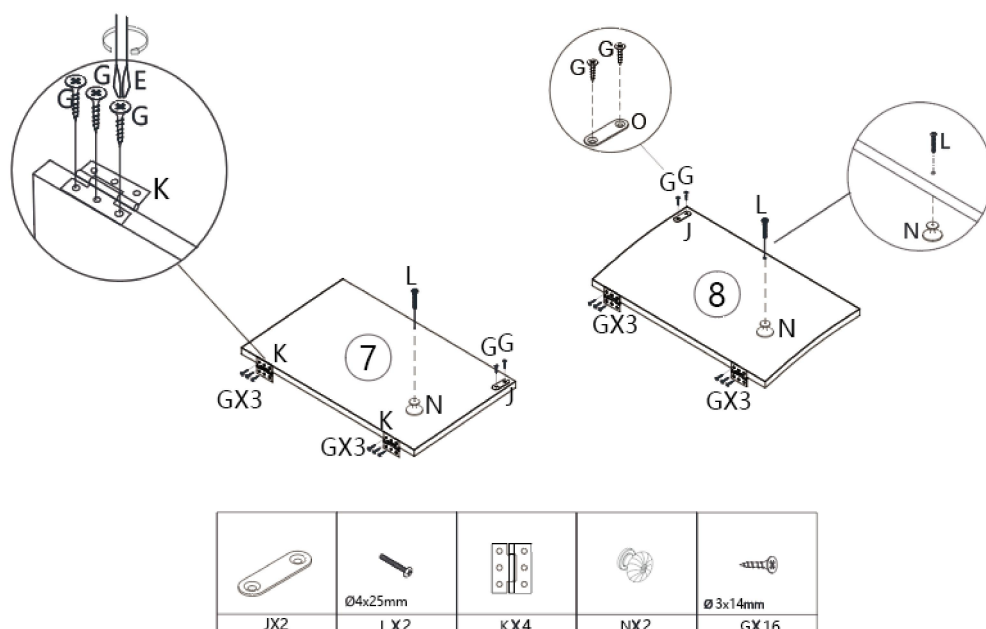


1. First, install one half of the hinge (K) on the cabinet door ⑦ using screw (G).
2. Then attach the Pull handle (N) to the cabinet door ⑦ using screws (L). Take care that the screws are tightened to ensure that the pulls are securely installed and will not loosen or wobble.
3. Fit magnetic collision (J) on the left door (⑦) using screw (G).
4. Repeat the above steps to install the other cabinet door ⑧.

Step 8

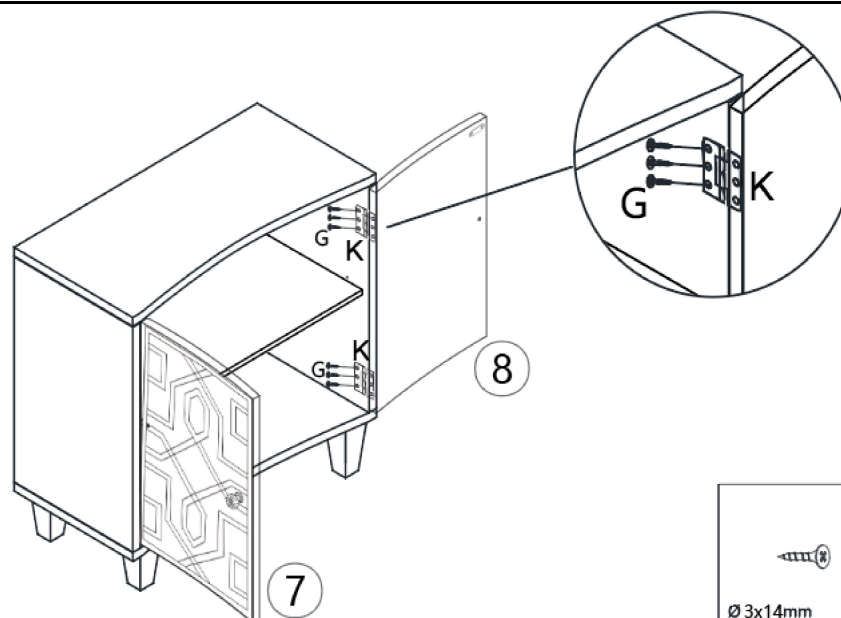


Install the other half of the hinge(K) on the side panel, securing it with screws (G).To attach the left and right door panel(7)(8) on the cabinet. So that the cabinet door is aligned with the edge of the cabinet frame and the door gap is even .

Step 9

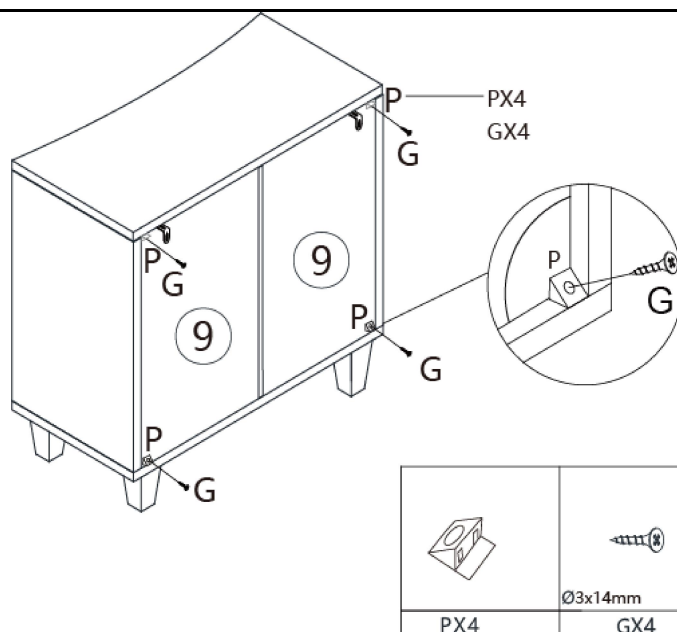


Fit back panel bracket (P) on the back of the cabinet with screws (G).

Step 10

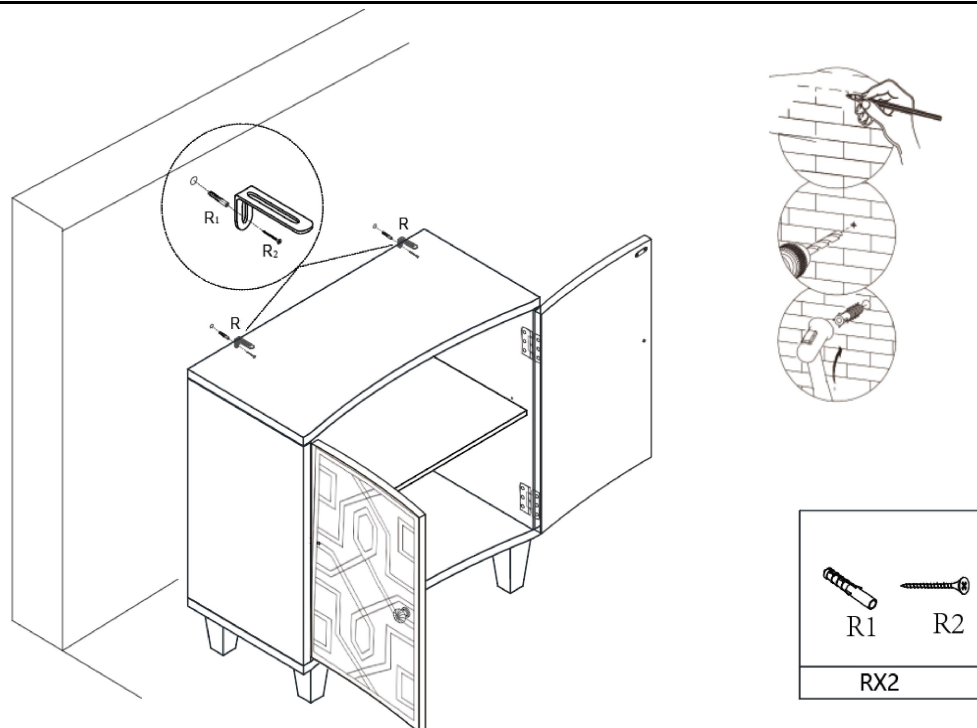

Align the cabinet with the wall and slats. Screw the expansion screws(R) into the wall, then connect the other end of the anti-tip device(R) to the expansion screws on the wall and tighten the screws to ensure that the anti-tip device (R) is firmly installed and can effectively prevent the cabinet from tipping over.

Step 11

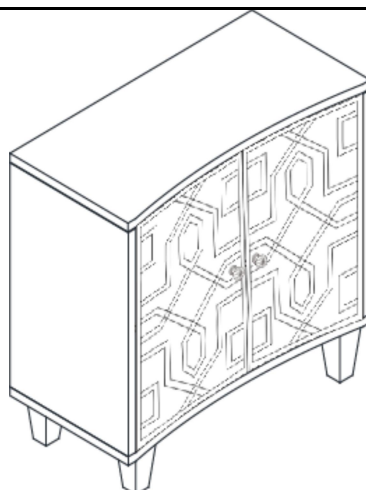

Your cabinet is ready for use. This cabinet can only be used on a flat and level surface.