



# Snowburst™ Christmas Snow Globe Candle Holder- Log Cabin (DCSG0001)

This unit is made for display purposes and is not a toy. Read the following carefully to ensure satisfactory and safe operation of this unit. Please keep these instructions for future reference.

## FEATURES:

1. 3 LED lights illuminate the scene.
2. Cord-free decoration can easily be displayed anywhere indoors.
3. Pulsing snow swirl effect.
4. Timer function to preserve battery life (5 hours on, 19 hours off).
5. Supports a real or flameless pillar candle up to 4" in diameter.

## OPERATING PROCEDURE:

1. Carefully remove all packing materials.
2. Open the battery compartment door at the bottom of the unit.
3. Insert 3 AA batteries with the correct polarity as shown in Fig. 1. Alkaline batteries are strongly recommended for the best performance.
4. Slide the switch to the "ON" position to turn on snowglobe.
5. To extend battery life slide switch to the "OFF" position when not in use.

## TIMER FUNCTION:

When the switch is slid to the "ON" position the lights will turn on and the snow will pulse on and off for approximately 5 hours and then turn off for approximately 19 hours. The 5-hour on and 19-hour off cycle will repeat as long as the switch is left in the "ON" position. If the timer function stops working properly replace the batteries with new ones.

## ATTENTION:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries (See Fig. 1).
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries or batteries of different types.
6. Replace batteries when the light is faint and motion is distorted.
7. Replace all batteries at the same time.
8. Remove dead batteries from unit.
9. Do not short-circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come into contact with heat.
11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Email us at [customerservice@haute-decor.com](mailto:customerservice@haute-decor.com)

Haute Decor  
PO Box 1594  
Allen, TX 75013

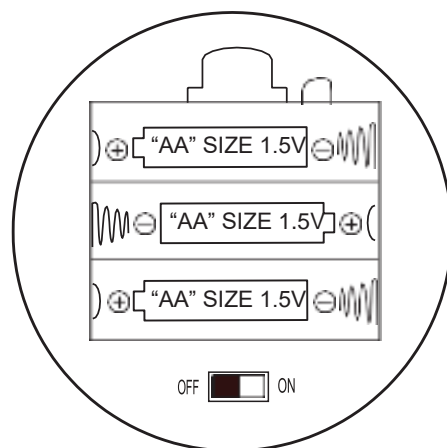


Fig. 1



### To prevent fire and serious injury when using a real candle:

- \* Never leave a burning candle unattended.
- \* Keep out of reach of children, pets and flammable materials.
- \* Do not place in drafty areas.
- \* Keep the wick centered and trim to 1/4" prior to lighting each time.
- \* Keep wax pool free of debris.
- \* Do not burn any longer than 4 hours at a time.
- \* Candle holder will be hot when the candle is lit; allow it to cool before re-lighting.
- \* Never allow a candle to burn down to the bottom while on the holder.
- \* Use candle holder only on a heat-resistant surface

**For indoor use only**  
**Made in China**