

Wanderer10A/30A Installation Notes :

- The default starting position of the Wanderer controller terminal hatches are closed (in the UP position) that could mistakenly look like an open wire hatch.
- Make sure to FIRST lower each terminal hatch by screwing the terminals counterclockwise to expose the wire terminal hatch to open position.
- THEN secure each cable by rotating the screws clockwise to the closed position.



Wanderer10A



Wanderer30A