

Teamson Kids Indoor Play Kitchen – Use & Care Manual

Thank you for choosing Teamson Kids' Play Kitchen! Thoughtfully designed to inspire creativity and imaginative play, our products offer endless fun for your little chefs. To keep your play kitchen in great condition and ensure safe play, please follow the use and care guidelines below.

General Use & Setup Tips

- **Choose a Safe Indoor Location:** Set up the play kitchen on a flat, stable surface in a low-traffic area to prevent tipping or accidental bumps.
 - **Assemble with Care:** Follow the provided instructions closely to ensure all pieces are securely and properly assembled before allowing children to play.
 - **Adult Supervision Recommended:** While the play kitchen is designed for safe use, we recommend supervising young children during play, especially when multiple children are using it together.
 - **Age-appropriate Play:** Ensure that only children within the recommended age range use the kitchen to avoid misuse or safety issues.
 - **Avoid Rough Play:** Teach children to gently open and close doors, and to avoid standing or climbing on the unit.
 - **Keep Accessories Organized:** Store small items like utensils or play food when not in use to prevent tripping hazards or loss.
-

Care & Cleaning Guidelines

General Cleaning

- **Routine Cleaning:** Wipe down the play kitchen regularly with damp cloth and mild soap to remove dust, fingerprints, or spills.
- **Avoid Harsh Chemicals:** Do not use bleach, abrasive sponges, or strong chemical cleaners that may damage painted surfaces or finishes.

- **Dry After Cleaning:** Use a dry cloth after cleaning to prevent moisture buildup, especially on wooden parts.

Surface Maintenance

- **Wood and MDF Surfaces:** Check periodically for any chipping, peeling, or scratches. If needed, lightly sand and touch up with non-toxic paint suitable for children's furniture.
- **Plastic Accessories:** Wash play food and utensils regularly with warm, soapy water. Rinse and air-dry before returning to the kitchen set.
- **Avoid Prolonged Sunlight:** Place the kitchen away from direct sunlight to prevent fading or warping of materials.

Moving Parts

- **Check Hinges and Knobs:** Periodically inspect doors, knobs, and drawers for looseness. Tighten any screws or fasteners if needed to maintain functionality and safety.
 - **No Overloading:** Avoid placing heavy objects inside cabinets or on countertops to prevent tipping or damage.
-

Electronic Features (if applicable)

- **Battery Safety:** If your play kitchen includes sound or light features, ensure batteries are installed correctly and kept out of reach of young children.
 - **Turn Off When Not in Use:** Encourage children to turn off any battery-operated features after use to preserve battery life.
 - **Check for Corrosion:** Occasionally open the battery compartment to inspect for leaks or corrosion. Replace batteries as needed and dispose of them properly.
-

Seasonal & Long-term Care

Indoor Storage Tips

- **Avoid Damp Areas:** Keep the play kitchen in a dry, climate-controlled space. Avoid basements or attics with excessive moisture to prevent swelling or mildew.
- **Disassemble for Moving:** If relocating or storing the kitchen long-term, consider disassembling large parts to avoid damage during transport or storage.
- **Cover During Inactivity:** If the kitchen won't be used for a prolonged time, consider covering it with cloth to keep it dust-free.

Holiday & Gift Season Tips

- **Check Before Gifting:** If reusing or gifting a pre-assembled play kitchen, inspect all parts to ensure safety and cleanliness.
- **Update Accessories:** Rotate play food and utensils occasionally to keep playtime fresh and engaging.

Thank you for choosing Teamson Kids! We hope your little ones enjoy years of imaginative play. For replacement parts or questions, please contact our customer service team - support@teamson.com.