





USER
MANUAL

Please read all instructions carefully before using this product.

RETRO EDITION 6 BLADE
FABRIC SHAVER
MODEL NO: LR-900



www.salavusa.com

Dear Valued Customer
Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salavusa.com.

IMPORTANT SAFETY INSTRUCTIONS

1. Prior to first use, inspect all parts of the fabric shaver to make sure all parts are intact. The fabric shaver and its accessories should not be used if there are visible signs of damage to the body or accessories.
2. DANGER: Any appliance is electrically live even when the switch is off.
3. To reduce the risk of death by electric shock, always unplug the fabric shaver from its charger before using and before cleaning.
4. Do not reach for an appliance that has fallen into water. Do not immerse or let appliance be soaked in water. Do not use it while bathing or in the shower.
5. This appliance is not a toy and should not be used by children. Close supervision is necessary when this appliance is used near children, or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
6. Use this appliance only for its intended use. Do not use attachments not specified in this manual.
7. Do not use on animals, people, or plants. Do not use on clothes while being worn.
8. This appliance is meant to be used indoors. Store, charge, and use this appliance in a cool, dry place.
9. Do not charge the unit in areas with temperatures exceeding 100°F or below 50°F.
10. When unplugging the USB-C cable, grab the plug to unplug it, as it may cause damage to the USB-C cable and the connector
11. Do not insert fingers, body parts, or metal objects into the blade section, as it may cause damage to the machine or personal injury.
12. Do not turn on the machine when removing or installing the blade mesh cover.
13. Do not forcefully press the thin blade mesh cover surface or strike it with a hard object
14. Do not directly use blades on clothing.
15. This product is only suitable for general clothing lint removal and should not be used for other purposes.

PRODUCT PARTS

- 1.Fabric Shield

2.Blade Cover

3.Blade

4.Fabric Shaver

5.Charging Port

6.Power Button

7.Handle

 
8.Handle Cover

9.Lint Roller

10.Roller Cover

11.USB-C Cable

12.Brush

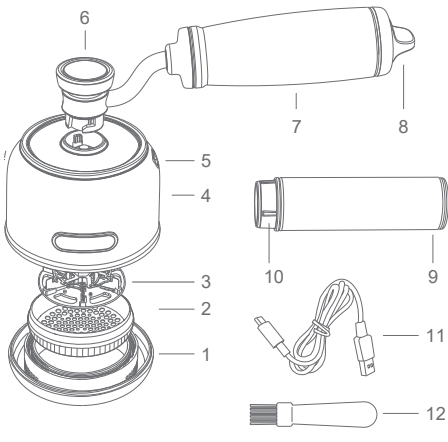



PRODUCT SPECIFICATION

Input Voltage: 3.7V
Output Power: 3W
Recharge Voltage: 4.2V
Product Dimension: 7.87x3.14x4.80 inches

OPERATING THE FABRIC SHAVER

 
- 1.Press the power button to power on the unit. White light will illuminate when unit is turned on.

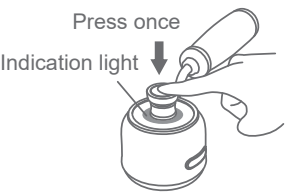 
2. Move the fabric shaver in an up and down motion or a side to side motion, using light pressure to remove lint from clothes.

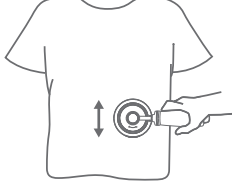

OPERATING THE LINT ROLLER

 
- 1.Turn the handle counterclockwise when unit is off to unlock

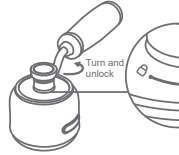

2.Separate the fabric shaver from the handle




 3.Turn the handle cover counterclockwise to unlock

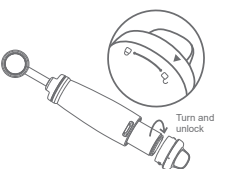


OPERATING THE LINT ROLLER

 
- 4.Remove the lint roller and replace the handle cover. Turn the handle cover clockwise to lock into place.

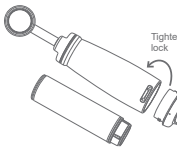

5.Attach the lint roller to the handle following the arrow shown and turn clockwise to lock into place.

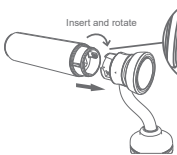 

 6. Use the lint roller in an up and down or side to side motion for optimal lint removal.

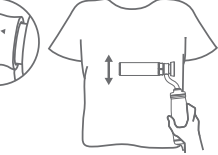


STEPS FOR REPLACING THE LINT ROLLER

1. Turn the handle cover counterclockwise to unlock.



 
2. Remove the roller from inside the handle.




3. Gently pull the roller cover off to release the lint roller



 4. Remove the old roller and replace it with a new one.

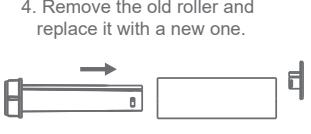

 5. Press the roller cover back onto the lint roller end




CLEANING INSTRUCTIONS

- 1.Ensure the product is turned off and not connected to a power supply and/or charger



 2.Rotate the fabric shield counterclockwise to remove. Discard any fabric shavings inside of the main unit.

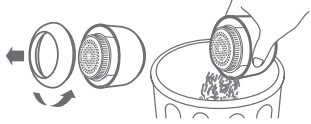


3. Rotate the blade cover counterclockwise and remove to gain access to the blade.



4. Use the brush to clean the blade cover and blade compartment



 5. After cleaning, reinstall the blade, blade cover, and fabric shield. Twist the blade cover and fabric shield clockwise to secure.

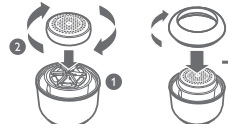

6. Use a damp cloth to clean the main unit.



- Charging**
- 1.Use, charge, and store the appliance at a temperature between 50° and 100°F
 - 2.Charge appliance by inserting USB-C cable into the charging port and plug into a power source
 - 3.Indicator light will flash white while charging
 - 4.Full charge to capacity takes 2 hours
 - 5.Fabric shaver use time at full charge: 90 mins

WARNING

- 1.If the battery begins to leak, do not touch it with your hands. If it comes into contact with the eyes or skin, wash immediately with water and consult a doctor
- 2.This product uses a polymer lithium-ion battery. Dispose in accordance with applicable regulations. Battery should be disposed of in a location that is specifically designated to safely recycle. Do not burn or bury the battery or unit
- 3.Do not disassemble the battery or short-circuit the battery equipment
4. Make sure charging port is clear of debris before charging the unit
- 5.Charge the unit at least once every 6 months to extend battery life

TROUBLESHOOTING

Problem	Solution
What if the machine does not work?	1. Check if the fabric shield and blade cover is screwed on properly 2. Check if the machine has power and/or needs to be charged 3. Check if the machine is jammed or needs to be cleaned 4. Contact our customer support team for further assistance
What if lint is not being removed when using?	1. Check if the fabric shield and blade cover is screwed on properly 2. Check if the machine has power and/or needs to be charged 3. Check if the machine is jammed or needs to be cleaned 4. Check if the blade is worn. Contact our customer support team for further assistance
What if there is a loud noise when the machine starts?	1. Check if there are any foreign objects stuck in the blade and/or blade cover 2. Check if the blade is worn or damaged. Contact our customer support team for further assistance
What if the machine will not charge?	1. Check if anything is stuck in the charging port 2. Make sure the USB-C cable is properly plugged into the charging port 3. Check the USB-C cable for any damage 4. Contact our customer support team for further assistance

Warranty exclusions and limitations

This Limited Product Warranty applies only to the original purchaser of the SALAV branded product that was purchased from SALAV directly or SALAV's authorized reseller. Without limiting the foregoing, the Limited Product Warranty does not apply to any (a) SALAV products and services other than the Brand New SALAV branded products which are purchased directly from SALAV or from SALAV's authorized reseller, (b) non-SALAV products, even if included or sold with a Product, including, without limitation, any counterfeit products, (c) products that are, or SALAV reasonably believes to be, stolen, (d) consumables (such as cleaning pads). This Limited Product Warranty does not apply to third party products or accessories, including but not limited to products with the "Made for SALAV" or "Works with SALAV" logos or advertising.

This Limited Product Warranty does not apply to a product or part of a product that has been replaced, repaired, serviced, altered, refurbished or modified by anyone who is not authorized by SALAV, nor does it apply to any cosmetic damage such as scratches and dents. In addition, this Limited Product Warranty does not apply to damage or defects caused by (a) use with non-SALAV products such as non-SALAV steamer liquid, (b) accident, abuse, misuse, mishandling, flood, fire, earthquake or other external causes, (c) normal wear and tear or aging of the product such as discoloration of product; or (d) operating the product (i) outside the permitted or intended uses described by SALAV under SALAV's Product User Manual, (ii) not in accordance with instructions provided by SALAV, or (iii) with improper voltage or power supply, water or other add-on products.

No SALAV, authorized reseller, distributor, agent, reseller, or employee is authorized to make any modification, extension or addition to this Limited Product Warranty. If any term contained herein is held to be illegal, void or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

If you have any questions regarding this warranty, you may contact us through our website: www.salavusa.com

Limitation of Damages

Except to the extent prohibited by applicable law, SALAV shall not be liable for any incidental, indirect, special or consequential damages, including, without limitation, loss of profits, revenue, resulting from any breach of express or implied warranty or condition or under any other legal theory, even if SALAV has been advised of the possibility of such damages. SALAV warranty and liability is only limited to replacement of the defective item.

Register your product today!

 
Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:
Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.
Faster Service
Supplying your information now saves your time should you need to contact us with questions regarding your product.
Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.salavusa.com/pages/product-registration-1
For information about replacement parts, or questions about your warranty:

Call:
Salav customer care
1(855)725-2867

Email:
support@ctrando.com

Follow us on social media

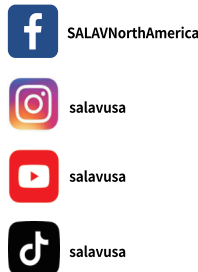

Explore more videos

