


Assembly Instruction

DINING CHAIR

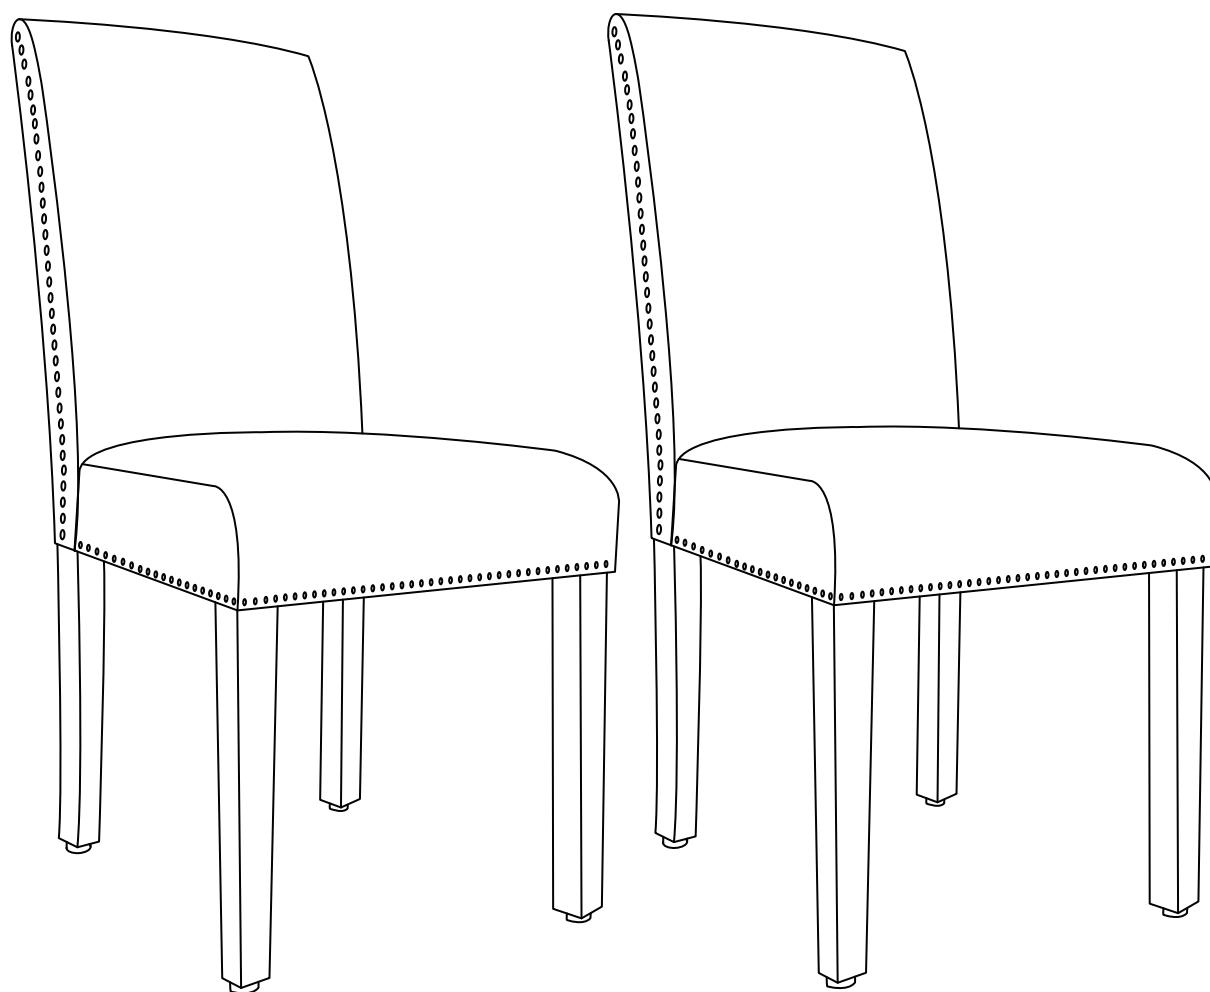

Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface.

 


Get social with us and discover more about our products, tips and exclusive discounts!




 
 
 

PRE-ASSEMBLY PREPARATION

- **CAUTION:** Assembly will require at least 2 adults. DO NOT use power tools. Please inspect all items BEFORE assembly. If for any reason you need to return this item, please kindly return it in it's original packaging.
- **WARNING!**
 1. DO NOT let any sharp objects touch or rub the surface of the product.
 2. When assembling, do not let children play around the working area.
 3. DO NOT tighten all bolts and screws completely until the entire unit has been assembled and set up.
 4. DO NOT USE if this product become damaged, and/or components are broken or missing.
- **CARE AND CLEANING:** DO NOT scratch or chip the finish. DO NOT use abrasive chemicals for cleaning. Clean with mild soap on a soft rag. Rinse and dry thoroughly.
- **MAINTENANCE:** Please periodically check all fittings and re-tighten as necessary.

PARTS LIST

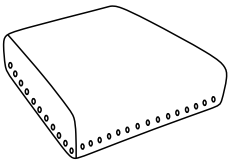BACK (A)  Qty: 1	SEAT (B)  Qty: 1	FRONT LEG (C)  Qty: 2	
---	---	--	--


HARDWARE LIST (1 set in a plastic bag)

ALLEN BOLT (D) M8 x 55MM  Qty: 9	ALLEN KEY (E)  Qty: 1	ADJUSTABLE LEVELER (F)  Qty: 4	SPRING WASHER (G)  Qty: 9
FLAT WASHER (H)  Qty: 9			

**Kindly Reminder: Two bags of hardware separately inside the carton.
One bag for one stool to assemble.**

STEP 1


Attach the Front Legs (C) to the Seat (B) by using Flat Washer (H), Spring Wahser (G), Allen Bolt (D) and Allen Key (E).

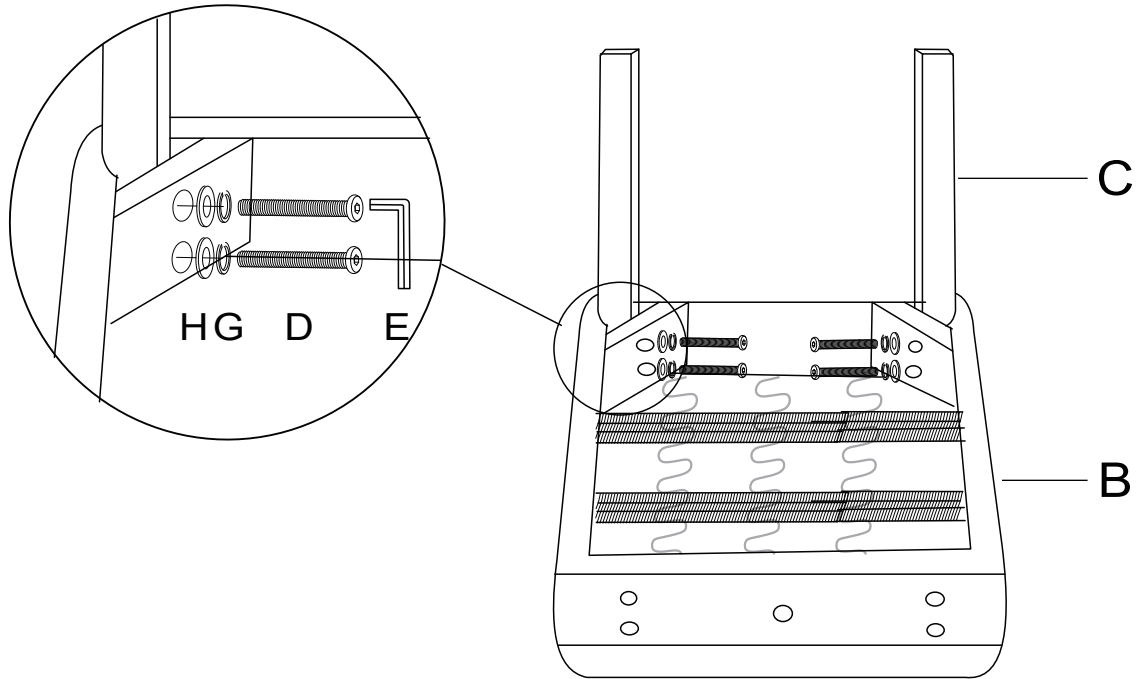

STEP 2


Attach the Seat (B) to the Back (A) by using Flat Washer (H), Spring Wahser (G), Allen Bolt (D) and Allen Key (E).

Insert and tighten the Adjustable Leveler (F) to the bottom of the legs.

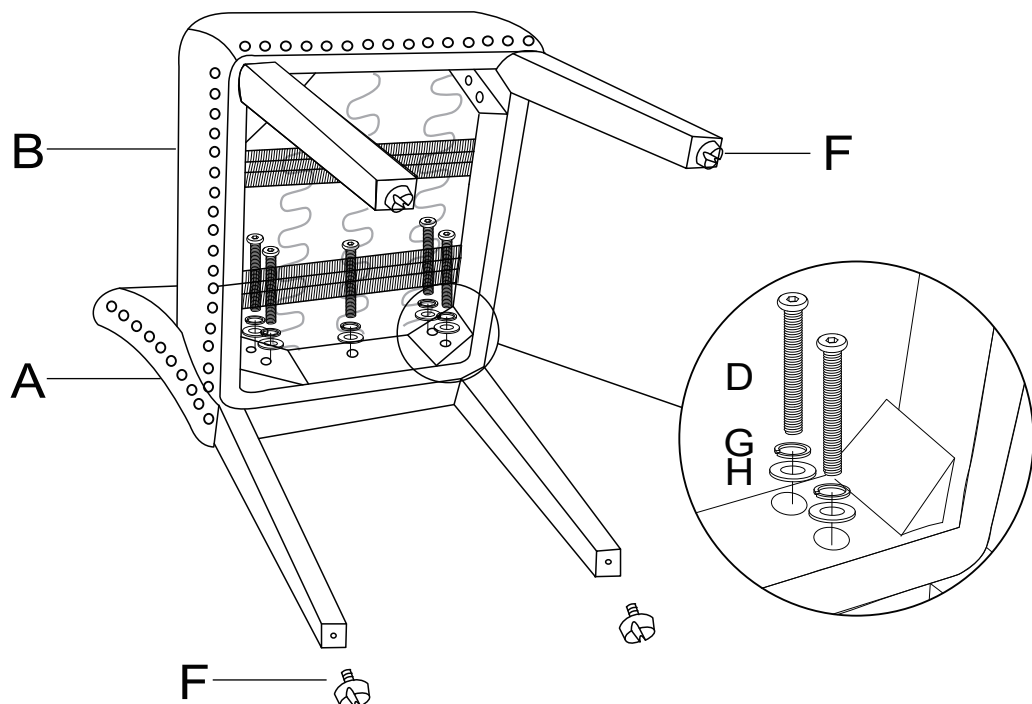

STEP 3

Use body weight to adjust balance of chair, then tighten all the screws 100% all the way.

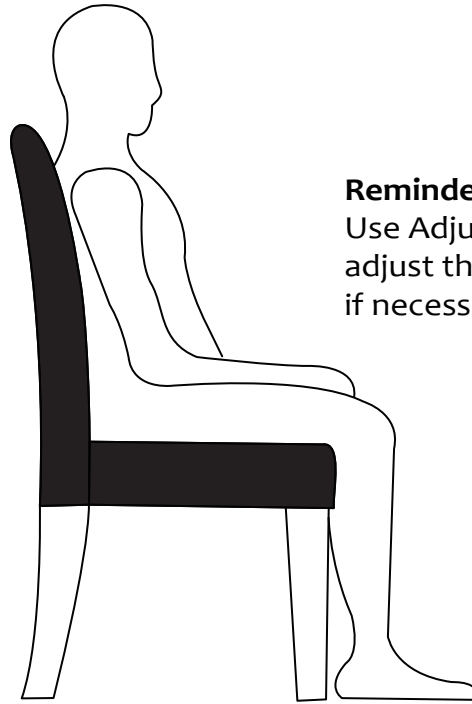

Reminder!!
Use Adjustable Leveler (F) to
adjust the level of chair
if necessary.

STEP 4

Stick the black fabric cover to the seat back as shown in below.

After initial assembly, the product may acclimate to its new environment. Please ensure all screws are still securely tightened.

