



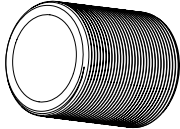
USE AND CARE MANUAL

ADJUSTABLE FLOOR LAMP

Model number: 21423

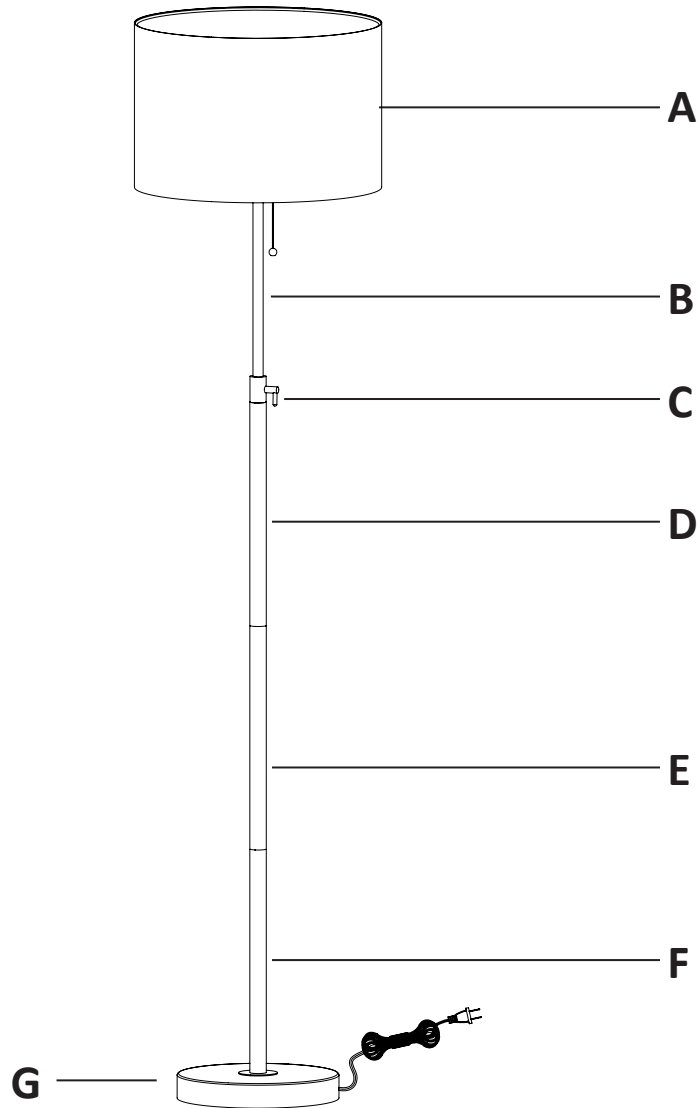

Hardware (Parts are not to scale)

<p>H1 Socket ring (Pre-assembled on the socket of the socket assembly (B)) 1 pc</p> 	<p>H2 Tube connector (Pre-threaded on the fixture wire) 2 pcs</p> 
---	--

THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

IMPORTANT SAFETY INFORMATION

- This lamp is for indoor use only. The lamp should not be used near water. Never immerse the lamp in water or other liquids.
 - Never cover the lamp with any object including cloth or paper as this is a fire hazard.
 - Do not handle the bulb immediately after the light is turned off as it will be hot.
 - This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.
-

PREPARATION


- Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.
-

ASSEMBLY

1 Assembling the tubes to the base

- Pull the excess power cord through the base (G).
- Tighten tube (F) onto the base (G).
- Tighten tube connector (H2) onto the tube (F).
- Tighten tube (E) onto the tube connector (H2).
- Tighten tube connector (H2) onto the tube (E).
- Tighten tube (D) onto the connector (H2).

NOTE: Do not twist the power cord.

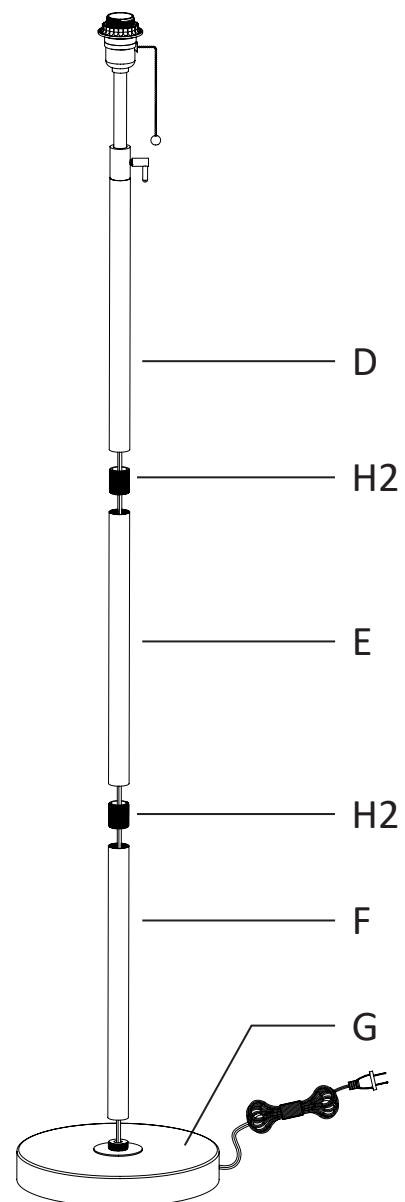


ASSEMBLY (continued)

2 Installing the shade

- Unscrew the socket ring (H1) from the socket of the socket assembly (B).
- Place the shade (A) over the socket of the socket assembly (B) and secure with the socket ring (H1).


NOTE: Remove the plastic cover from the shade before using.

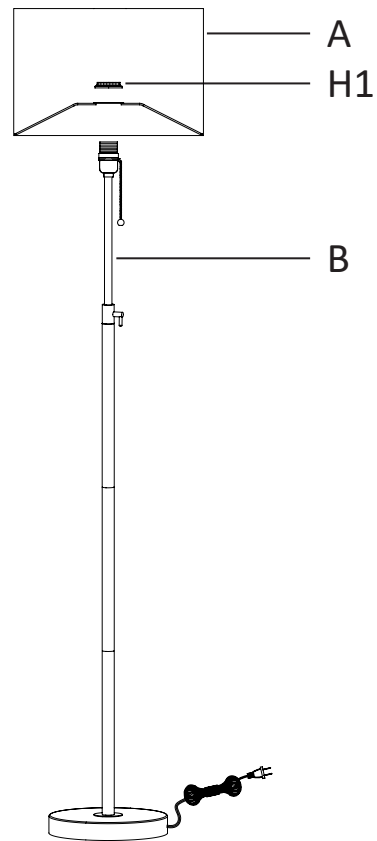

3 Adjusting the lamp

- Loosen the knob (C) on the top of the tube (D) to adjust socket assembly (B) to the desired position, then tighten the knob (C).

NOTE: If you want to retract the socket assembly (B) into the tube (D), you need to pull the excess cord through the base (G) at the same time.

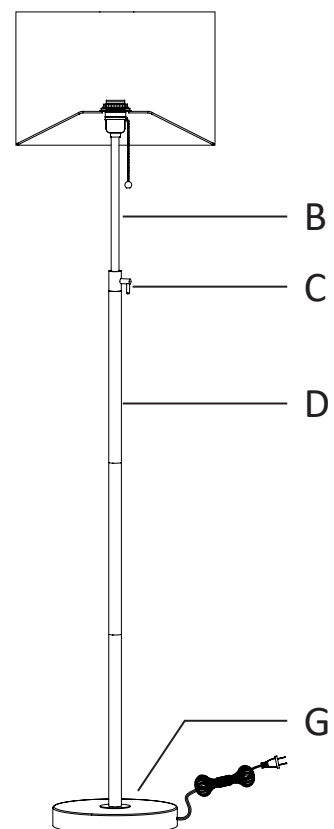


ASSEMBLY (continued)

4 Installing the light bulb

- Install the light bulb (not provide) into the socket. Use one **MAX 100W medium base (E26) type "A"** bulb (recommended).
- Plug into the wall outlet, pull the pull chain of the socket assembly (B) and enjoy.

NOTE: You can also use one **MAX 16W medium base (E26) self-ballasted LED** bulb. Do not exceed the recommended wattage.

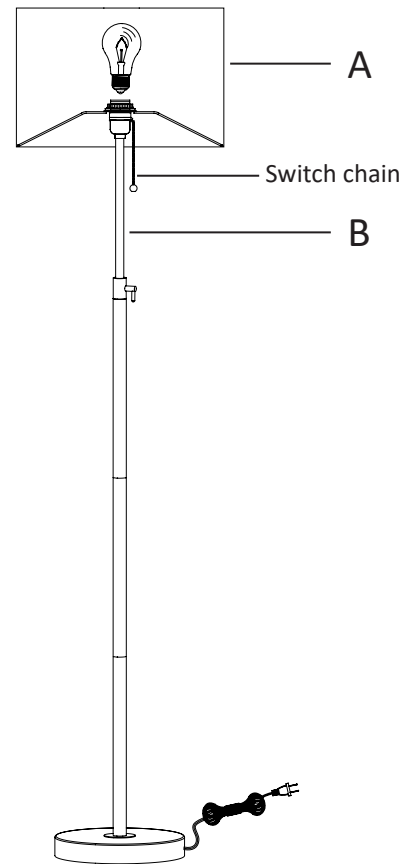

CLEANING

- Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry, soft cloth to dust or wipe carefully.
- To clean the fixture, pull the plug from the wall outlet. Use a dry or slightly dampened, clean cloth to wipe the exterior surface of the fixture.

TROUBLESHOOTING

- The light does not come on at all:
 - a) Check whether the bulb was burned out.
 - b) Ensure the power supply is turned on.
 - c) Ensure the cord is plugged into an outlet.
 - d) Ensure the circuit breaker is set in the "ON" position.
- Fuse blows or circuit trips when light is turned on.
 - a) Check for crossed wires, ensure wiring is correct.

