



Sink Faucet Pet Wash Set-up Instructions

View a short instructional video at www.wondurdog.com or here:



1. At sink faucet, unscrew aerator. (By hand or with pliers if needed.) **Caution: Threads may be sharp.**



2. Determine Your Faucet Type:

A. Male Thread



2 A. Threads are on outside. (Male)



OR

B. Female Thread



2 B. Threads are on inside. (Female)



(Make sure to remove existing washer. Set aside for reassembly.)

3 A.

Remove top adapter.

(Won't need.) Ensure bottom circular washer remains on diverter.



3 B.

Tighten top adapter

(Ensure circular washer on top)



4 A.

Screw diverter onto faucet clockwise. Tighten by hand.



4 B.

Screw diverter with tightened adapter onto faucet clockwise. Tighten by hand.



ALTERNATE FAUCET ADAPTER BAG

If the faucet diverter or top faucet adapter does not fit your faucet, try one of the adapters in the



“Alternate Faucet Adapter Bag.” You’ll have to try different sizes to see which one fits.

When you are looking at the adapters in the bag, the ones with threads on the outside are for FEMALE faucets and the ones with threads on the inside are for MALE faucets.

After finding the faucet adapter that fits your faucet, REMOVE THE TOP ADAPTER from faucet diverter (see 3A.) Then install the faucet diverter on the newly installed faucet adapter.

Continue onto step 5.

5. Remove hose from bag. Remove plastic sheath and plastic caps. (Save plastic caps for storage.) You should have a circular washer in each connector.



8. Test Connections and Operate

- With the faucet diverter lever in DOWN position and the shower brush OFF, turn on cold water slightly. Water should flow straight down through aerator.
- Move the faucet diverter lever up slowly to build pressure. You should have pressure through the hose to the shower brush with no leaks.
- With the shower brush facing down into a drain switch to the ON position. Water should flow through with no leaks. **See notes if you have leaks.***
- Adjust desired pressure and temperature.



Important Notes

- If you have leaks, check your washers and tighten all connections. **If you do not have circular washers installed, it will leak.**
- Never start with hot water to build pressure. Risk of scold, burn, and deterioration of parts.
- If you leave the water ON and the brush in the OFF position for an extended period of time, it can cause a water leak, head burst, and/or water flowing backwards. **ALWAYS turn the water off when finished using product.**
- **If none of the included adapters fit your faucet, please contact us at support@wondurdog.com. WE HAVE MORE ADAPTERS IN STOCK.**

6. Press each washer flat down on either end of hose to avoid leaks. Screw one end into sink faucet diverter. Firmly tighten by hand.



7. Screw other end onto brush head. Firmly tighten by hand.



DISASSEMBLE

- Unscrew hose from diverter and shower brush.
- Stretch out coil in sink to drain water.
- Screw plastic caps back onto hose for storage.
- Shake shower brush dry or leave out to drain.
- You may remove faucet diverter and reinstall your original aerator or leave your new diverter installed for next use. With the faucet diverter lever in the down position your sink faucet will operate as normal.
- Store in Wondurdog drawstring bag.