 
 


# ASSEMBLY INSTRUCTIONS

 
---

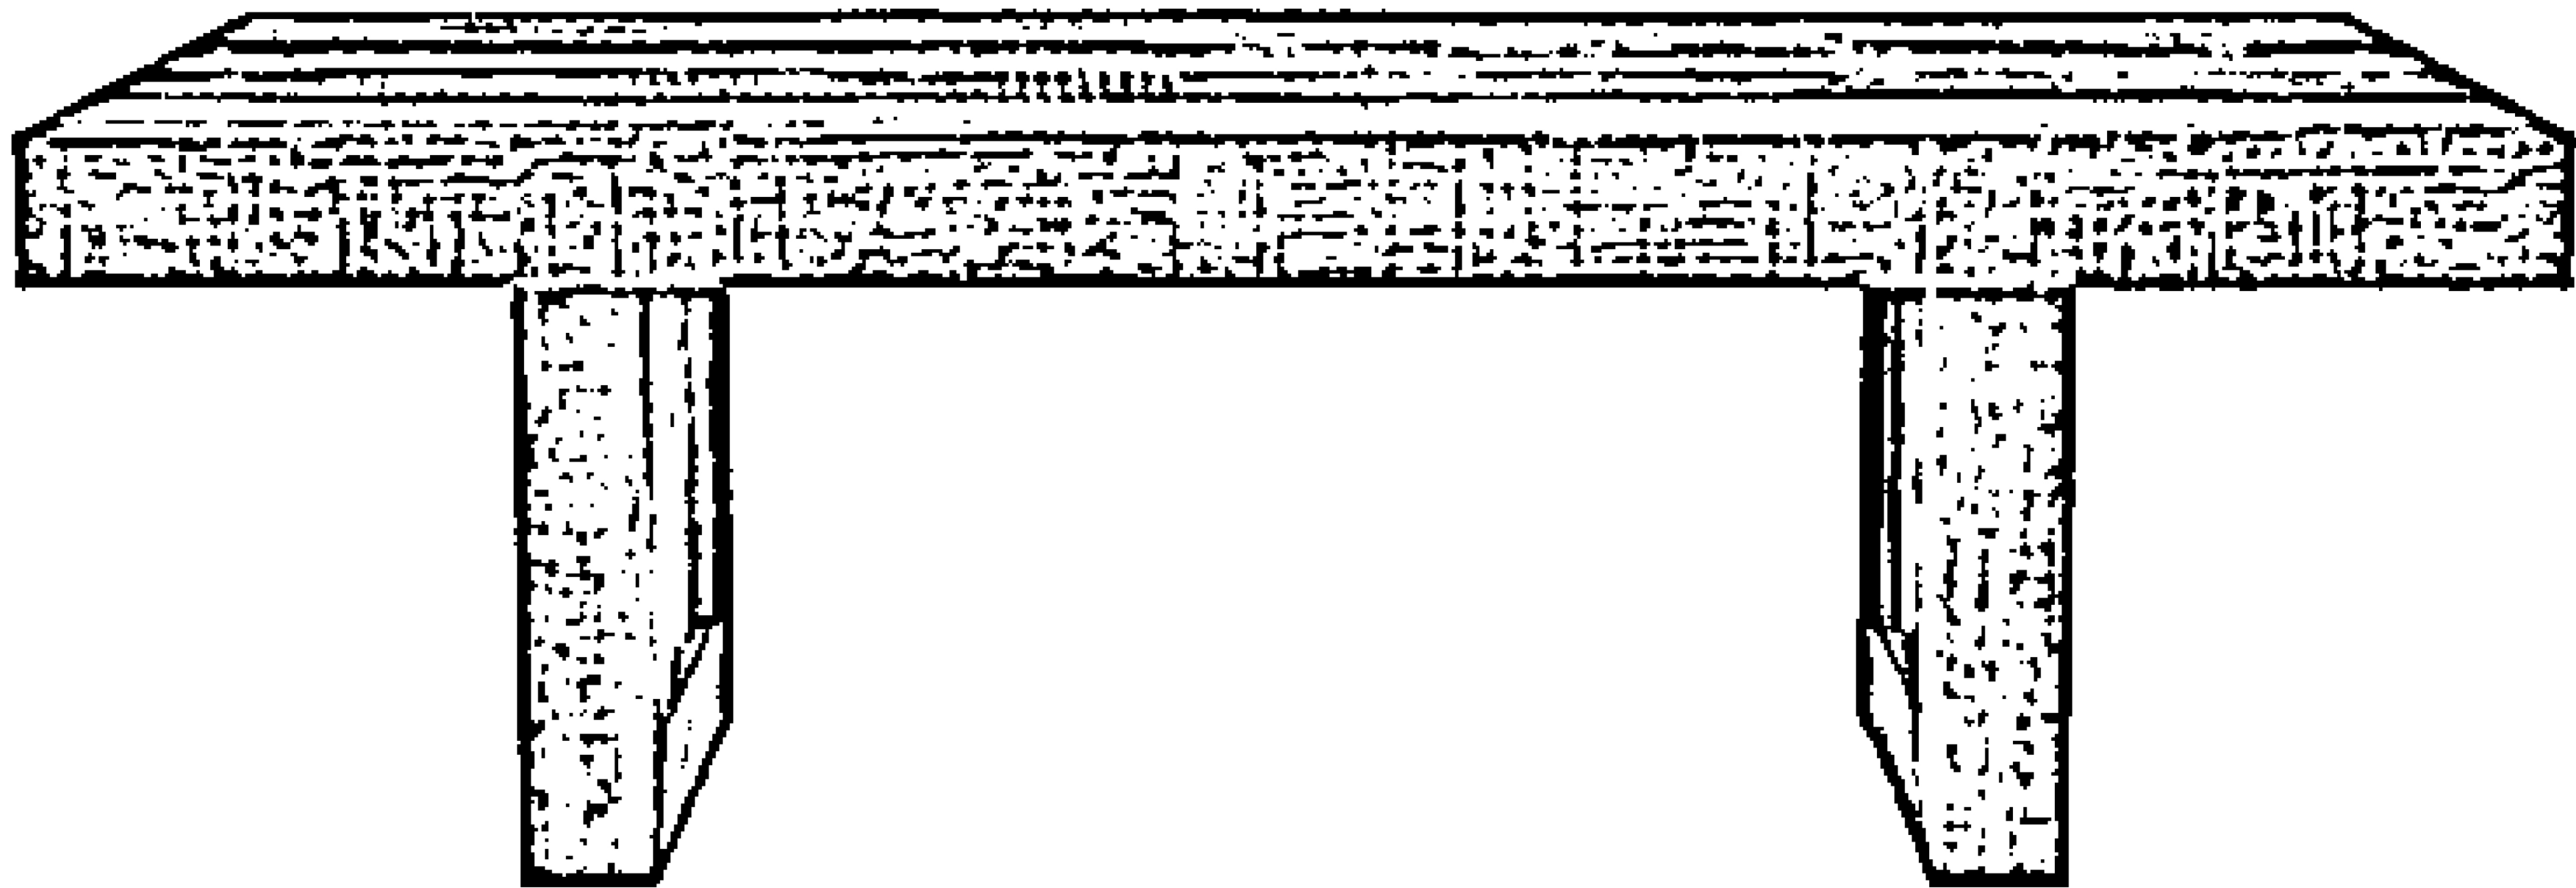

## TOOLS REQUIRED

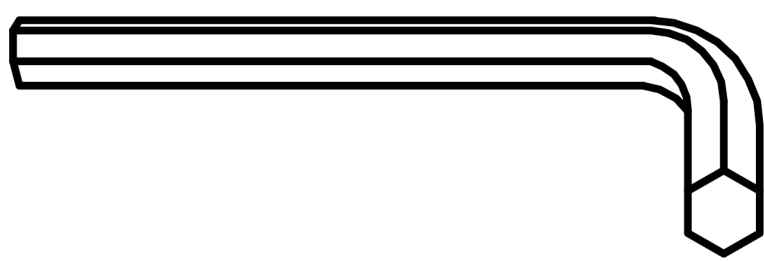


Allen Wrench  
(Included)

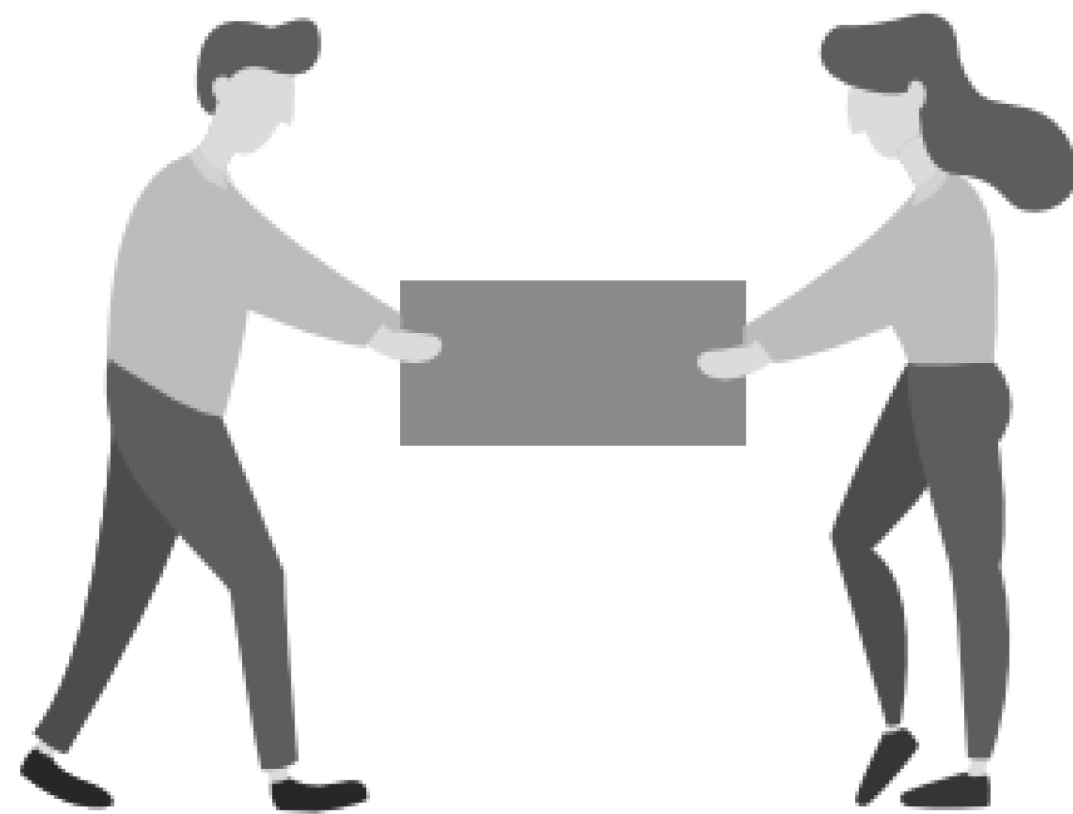

2 - People  
Recommended

## ASSEMBLY RATING

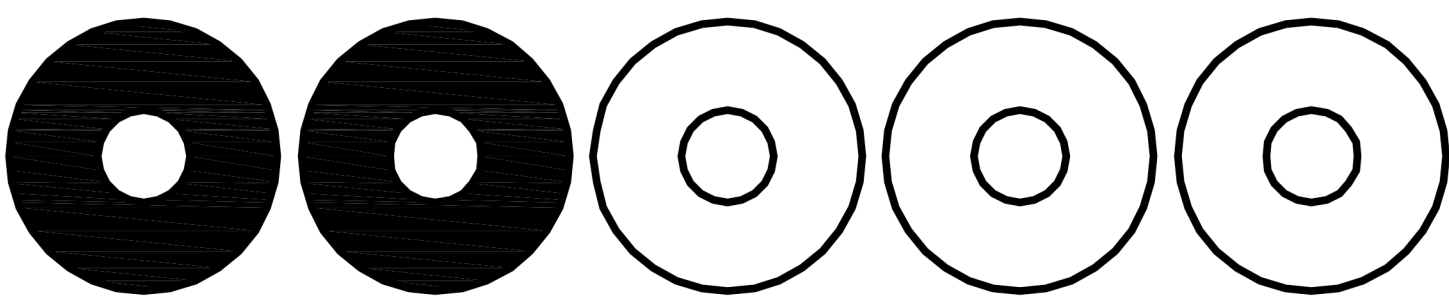 

EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



# CHECK BEFORE STARTING

☐

## Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

## Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

## Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

 
## Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.





# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

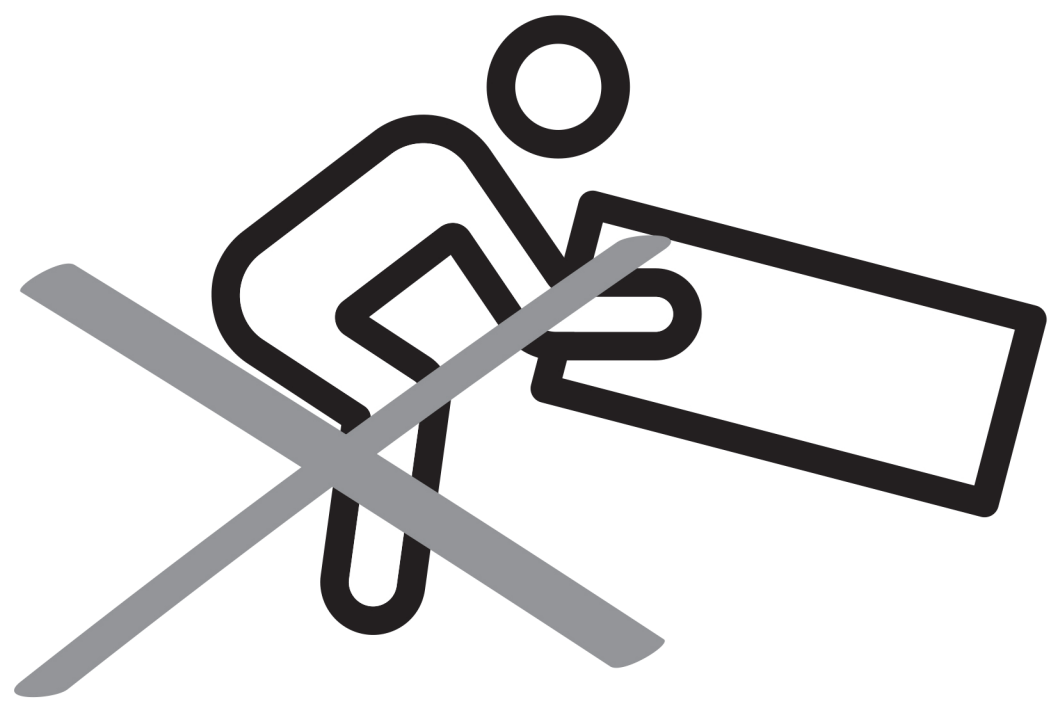

## Teamwork

  ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

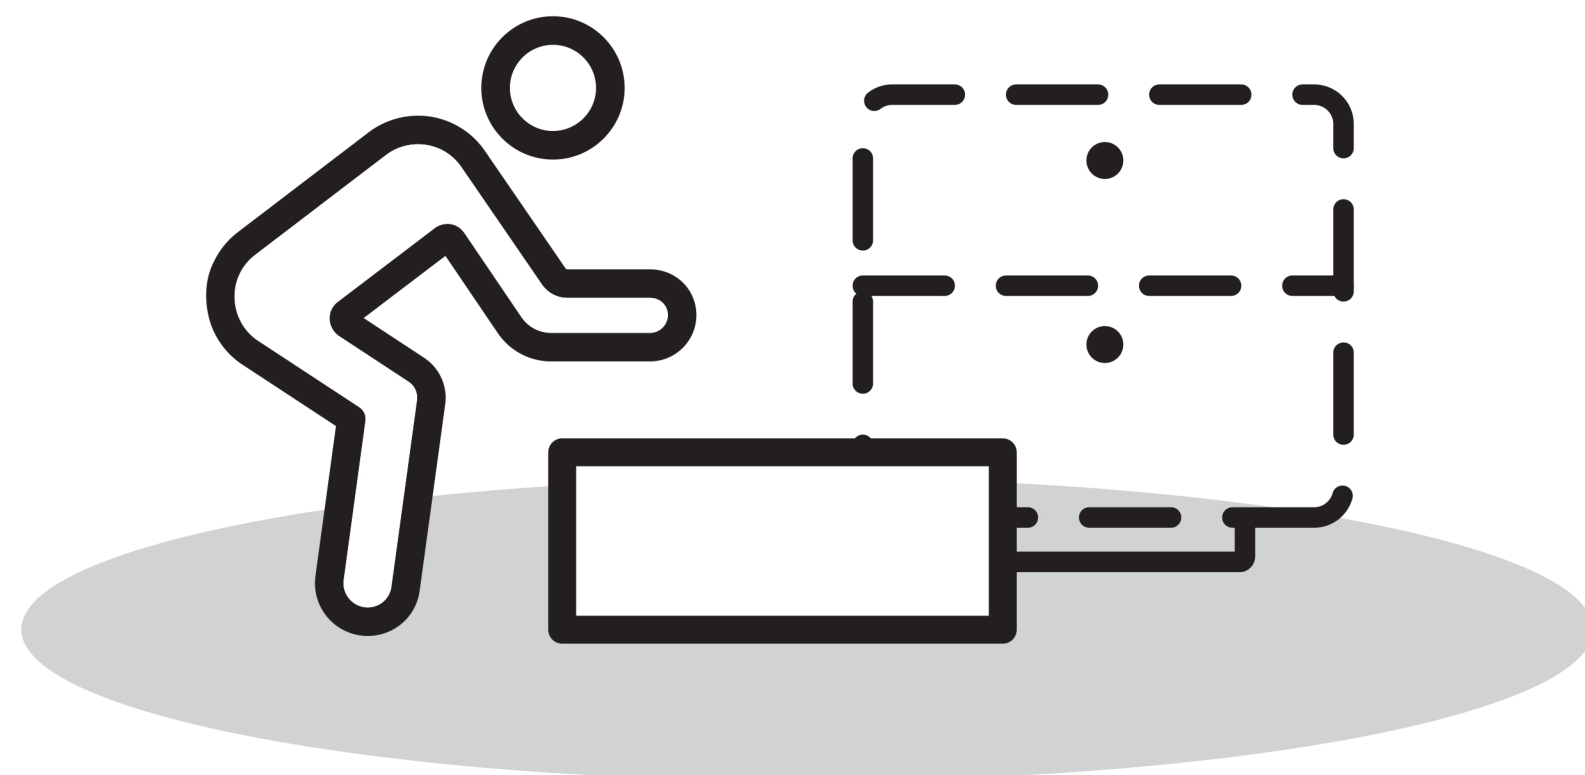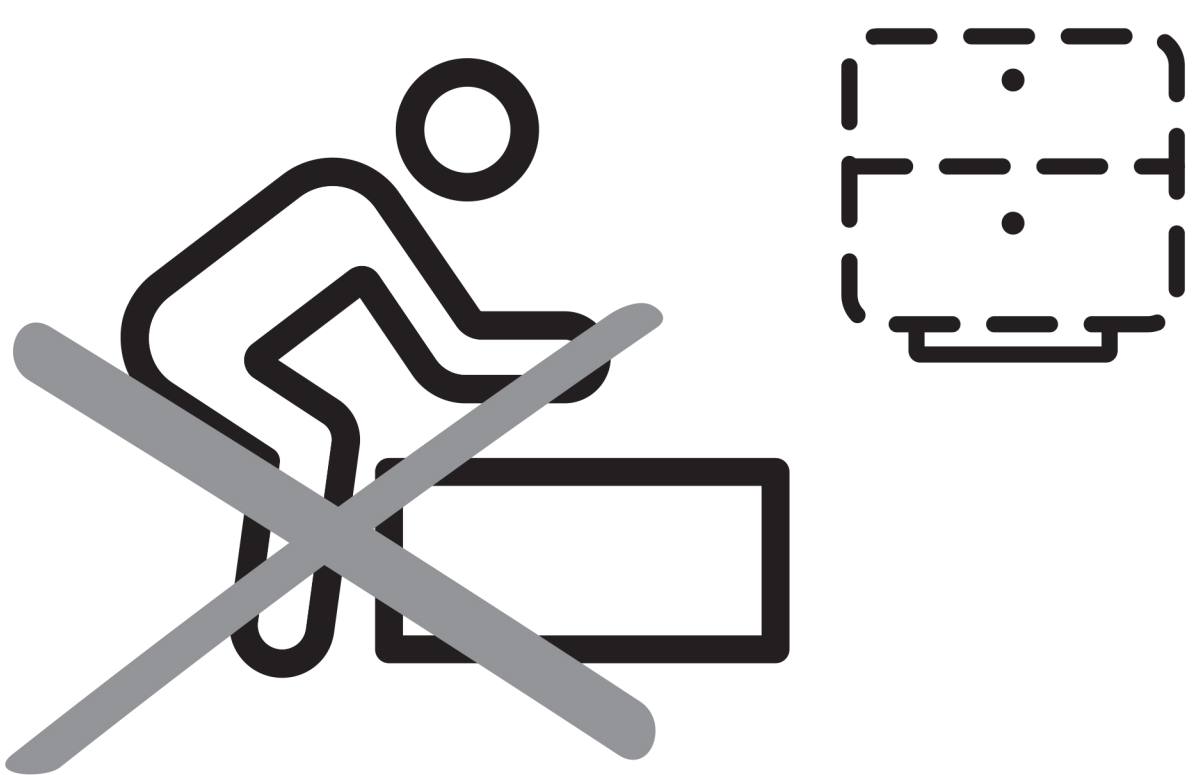

## Suitable Location

Assembling near the area of the intended location is highly recommended.



 
 
## Sufficient Space

Make sure you have enough space to move around during the assembly.



## Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

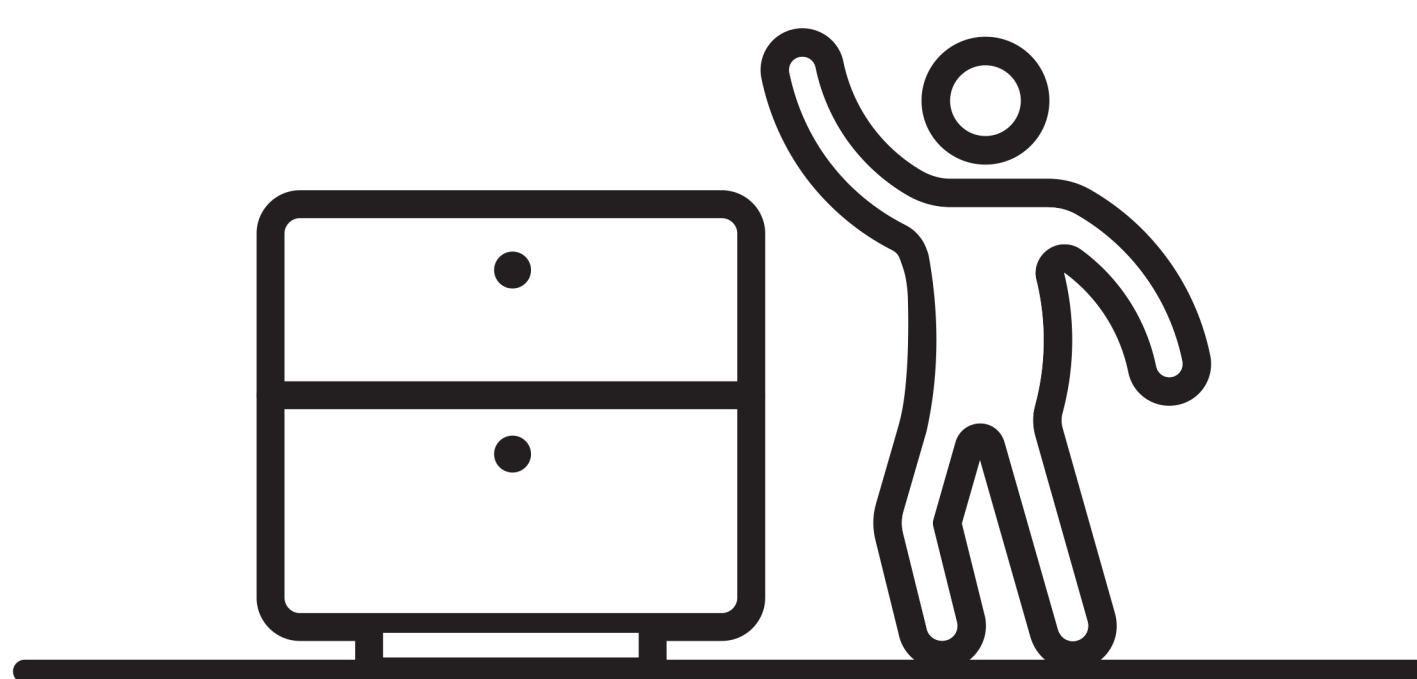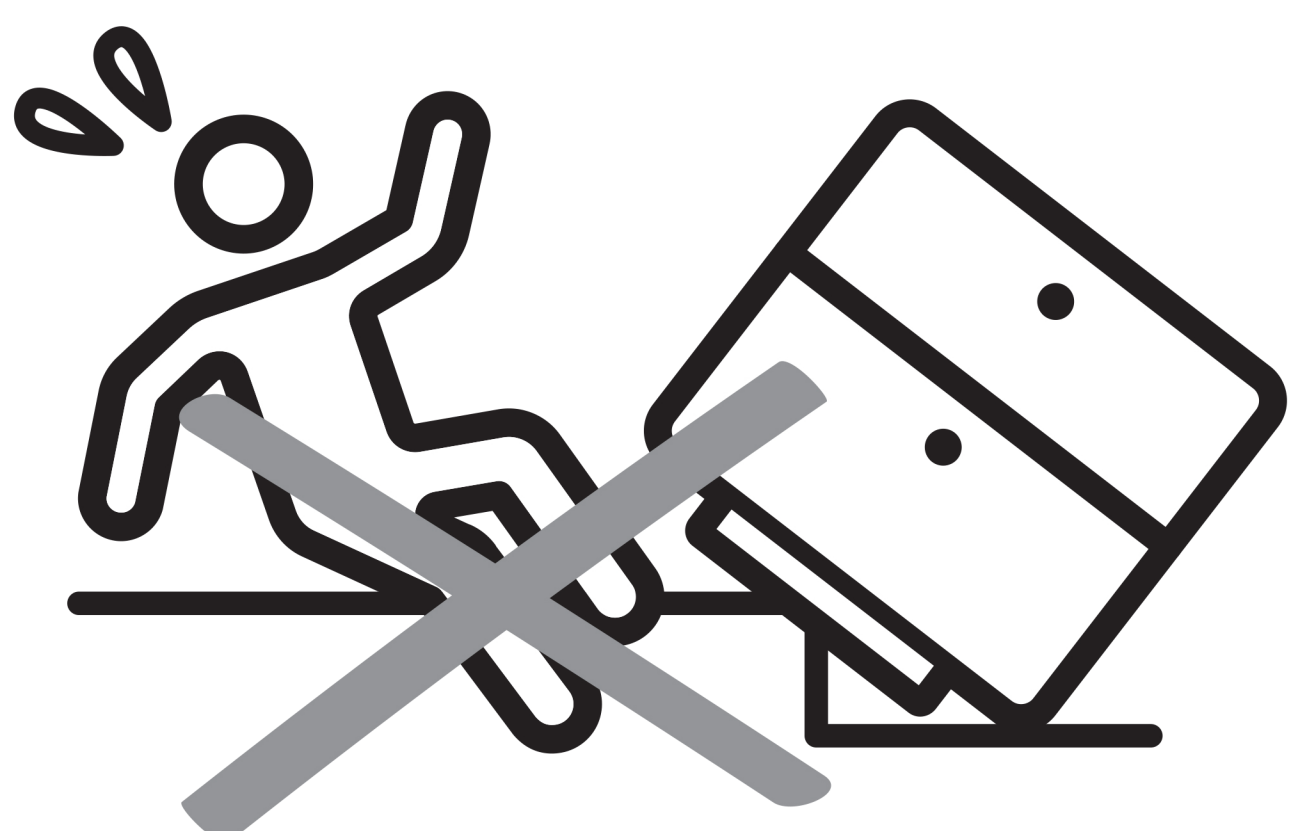

## Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



 
# ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY  
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly  
and insert screws or bolts into  
their respective holes.

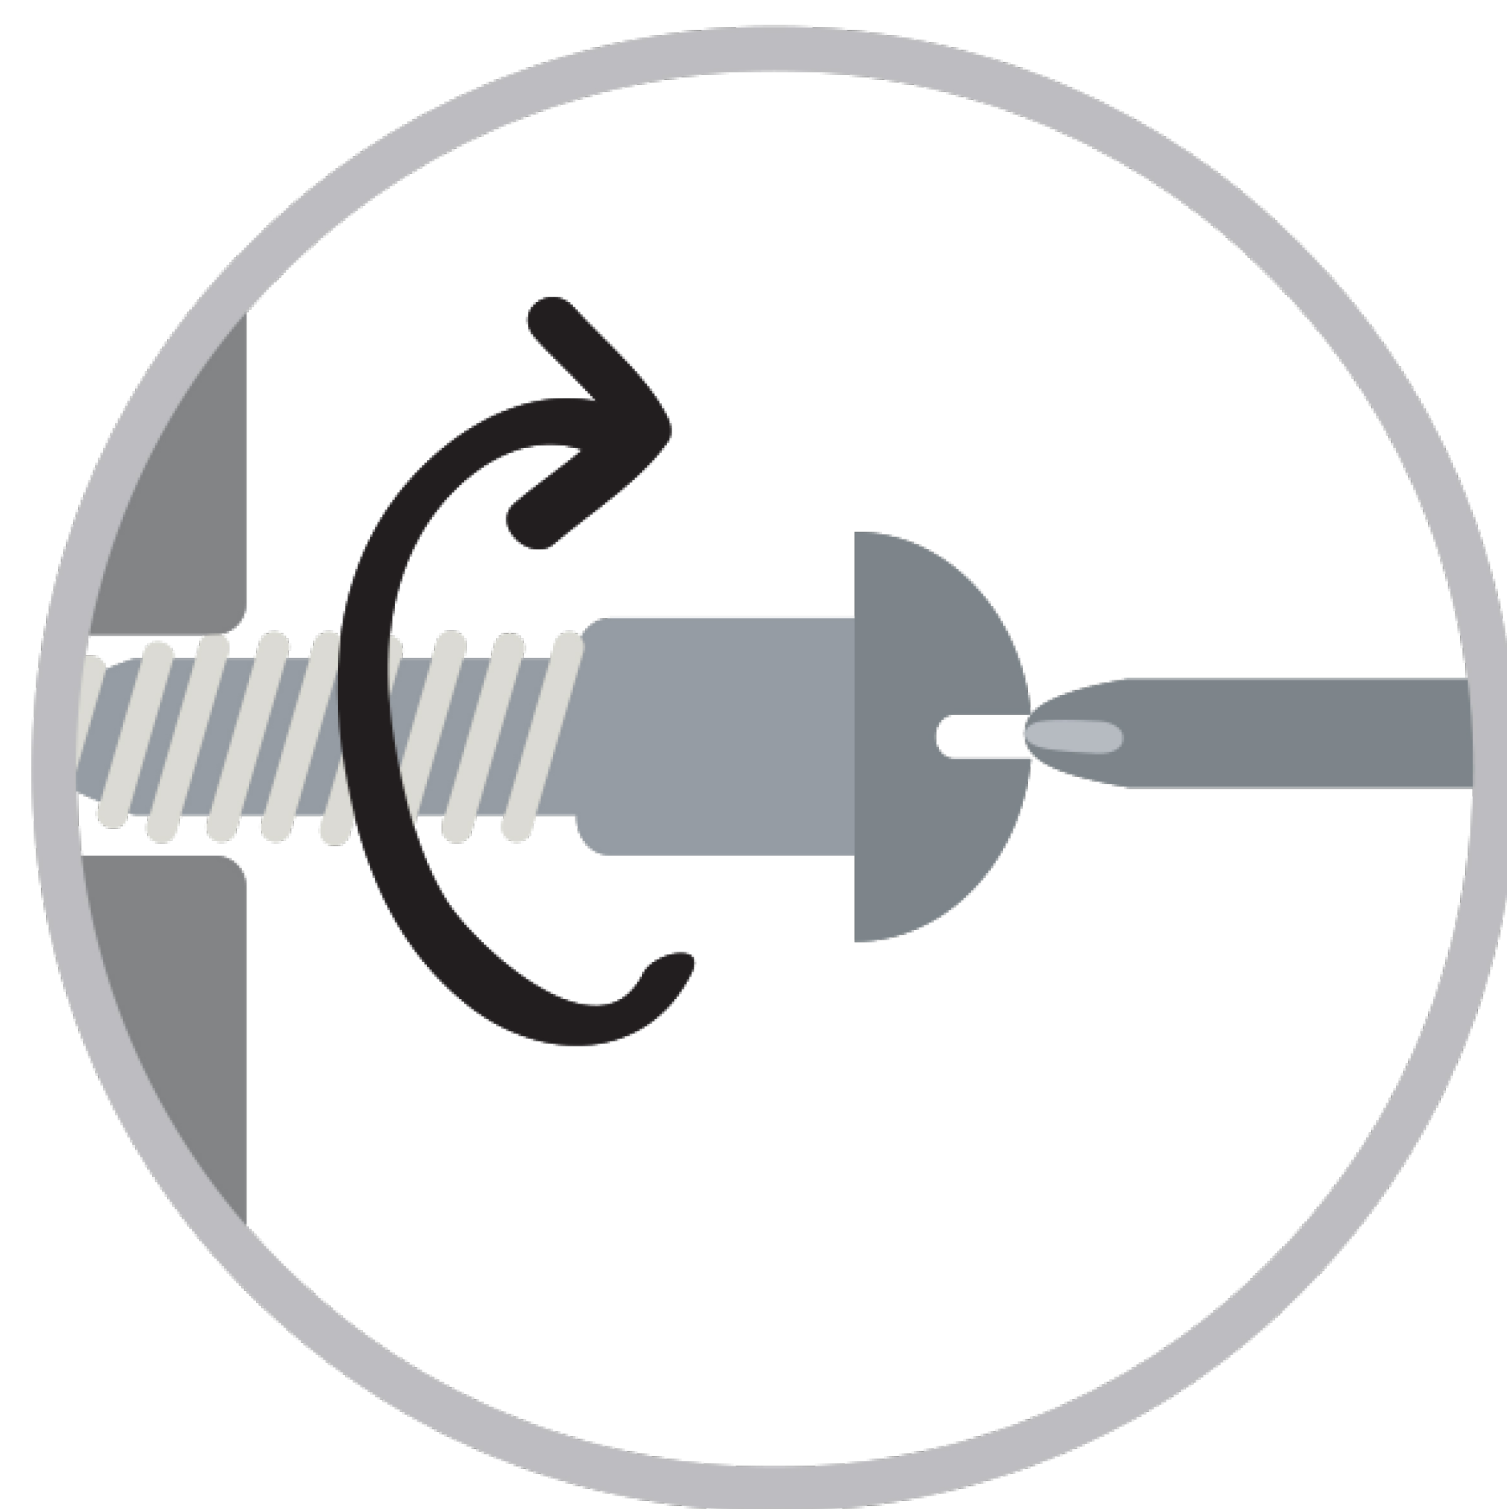


Turn clockwise to tighten and  
only tighten when step is  
completed or when instructed  
to do so.



Use the appropriate hand tools  
or power tools for assembly.  
Select steps, such as tightening  
screws and/or bolts, may require  
hand tools to avoid causing  
damage during assembly.



 
Save the instructions and store  
any supplied tools for later  
maintenance.

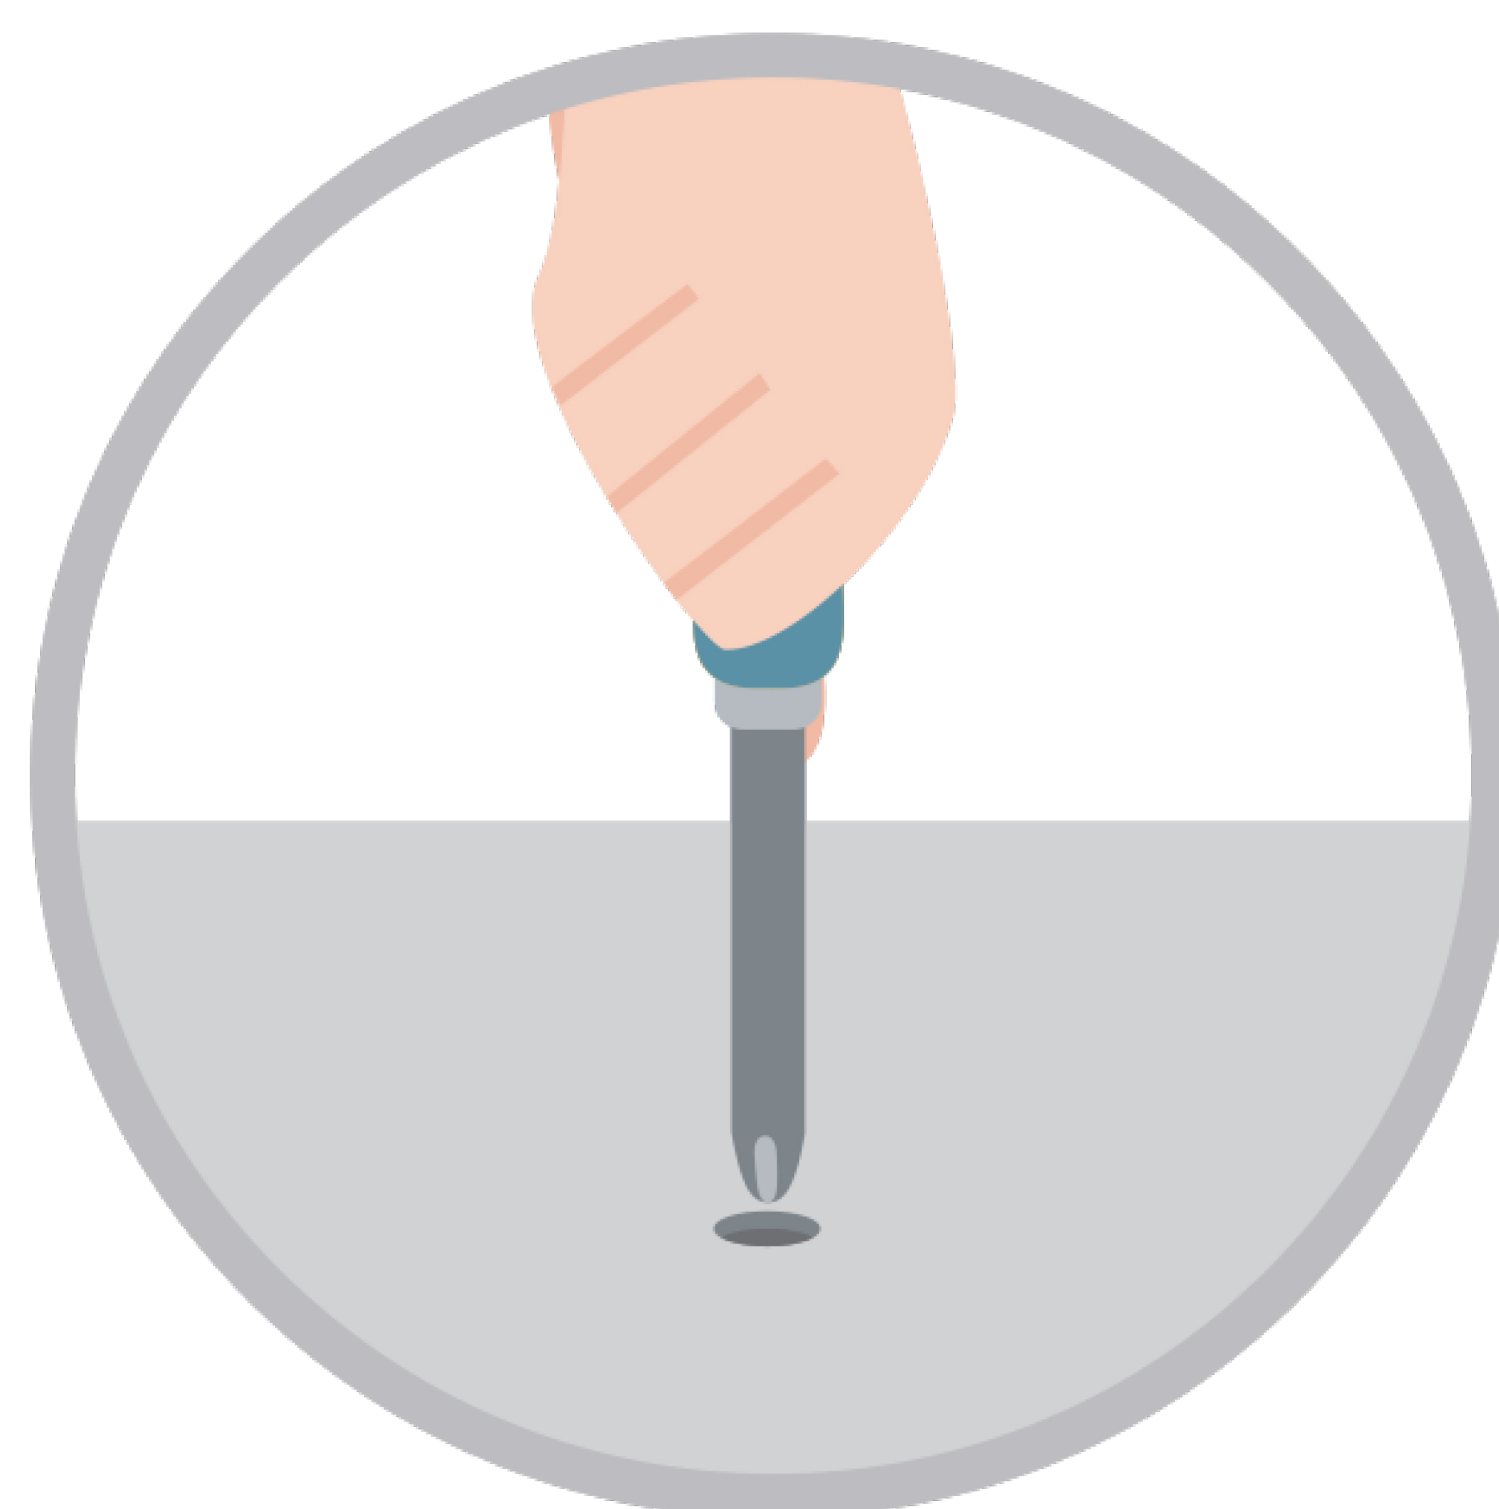

After two weeks, check and  
tighten any loose hardware and  
repeat again every six months  
thereafter.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.**



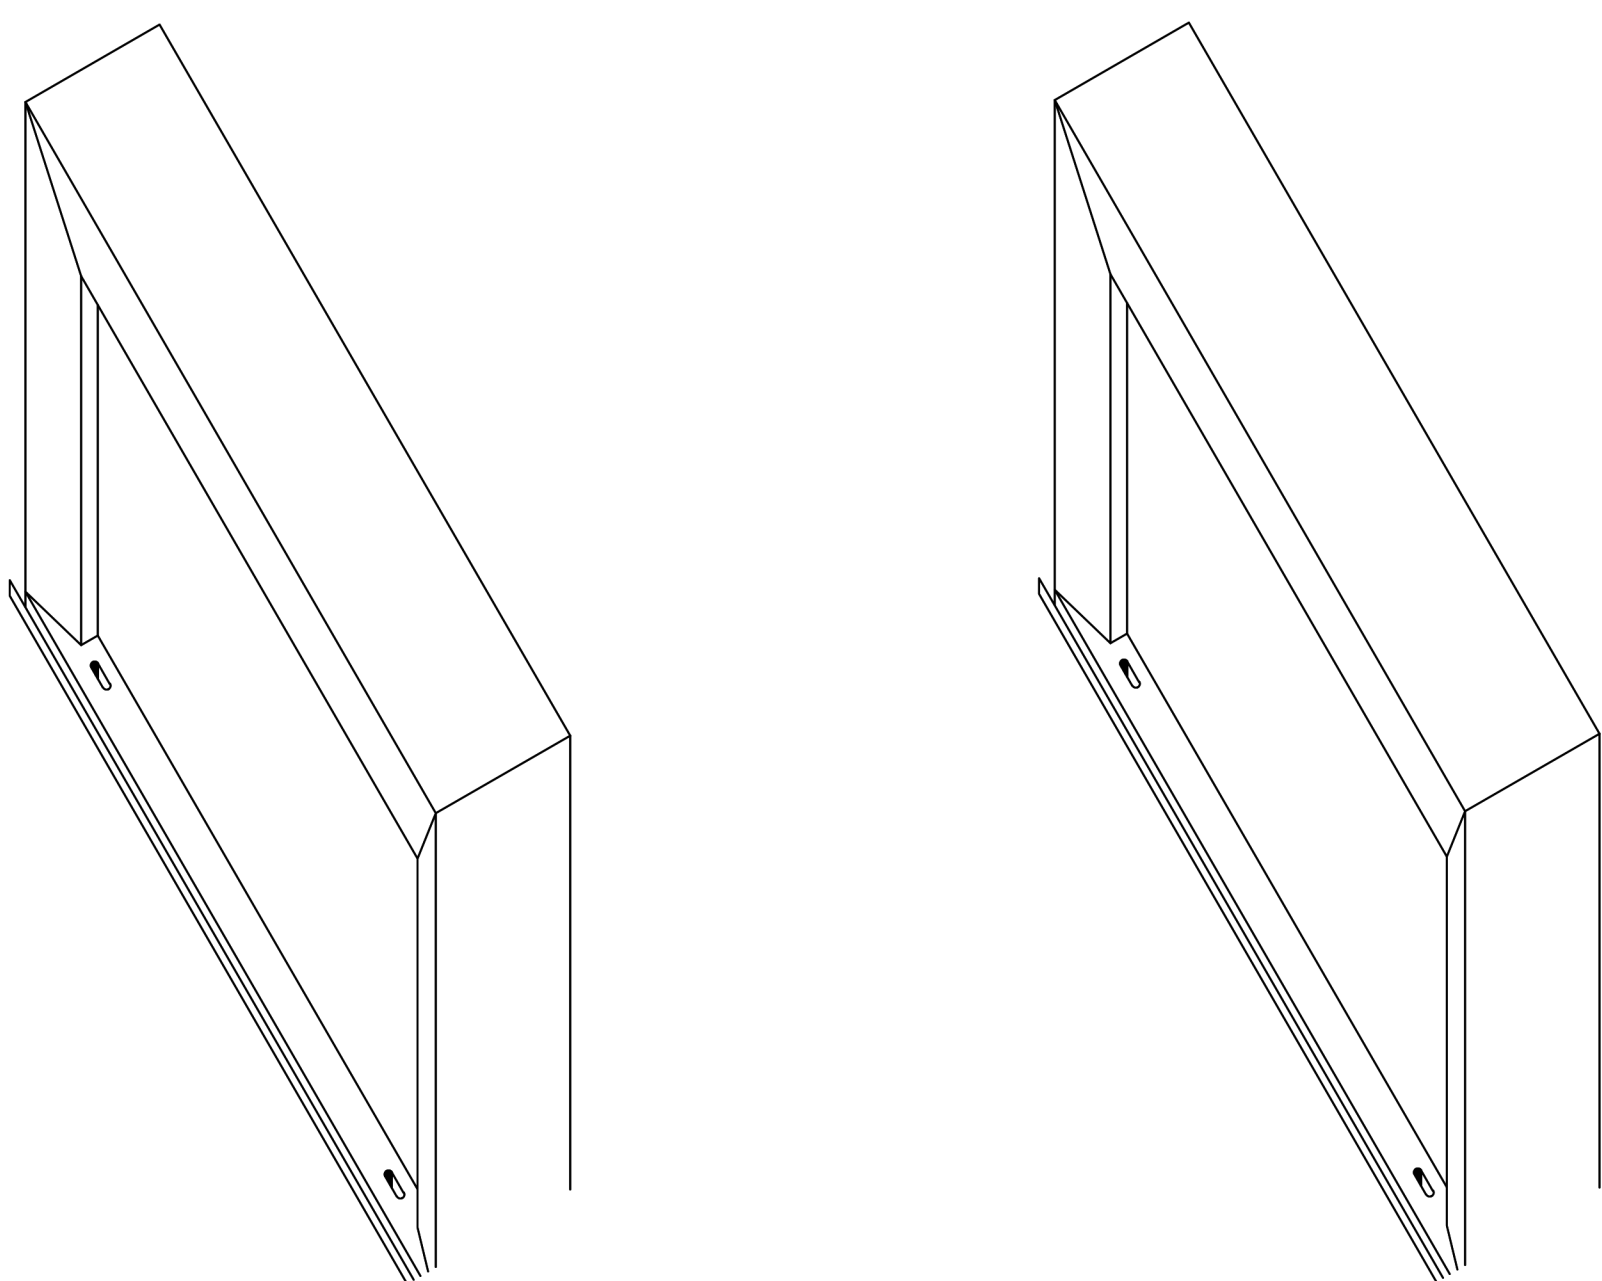 

WOODEN LEGS (2)



WOODEN TOP (1)



 
WASHER (8)



ALLEN KEY (1)



BOLT  
(8)

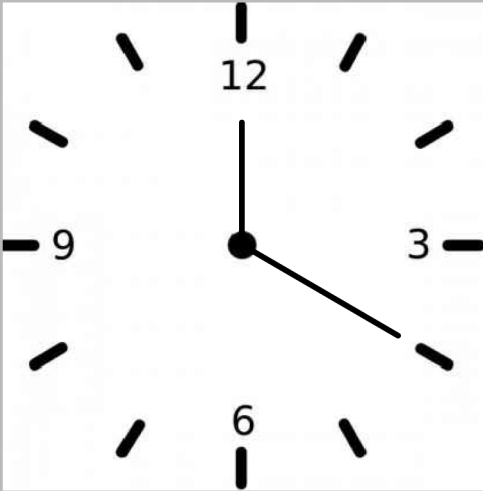

20 MIN.



2 PERSONS

A x 8  
Ø 10 mm



 
 
B x 8  
M8X40 mm



C x 1






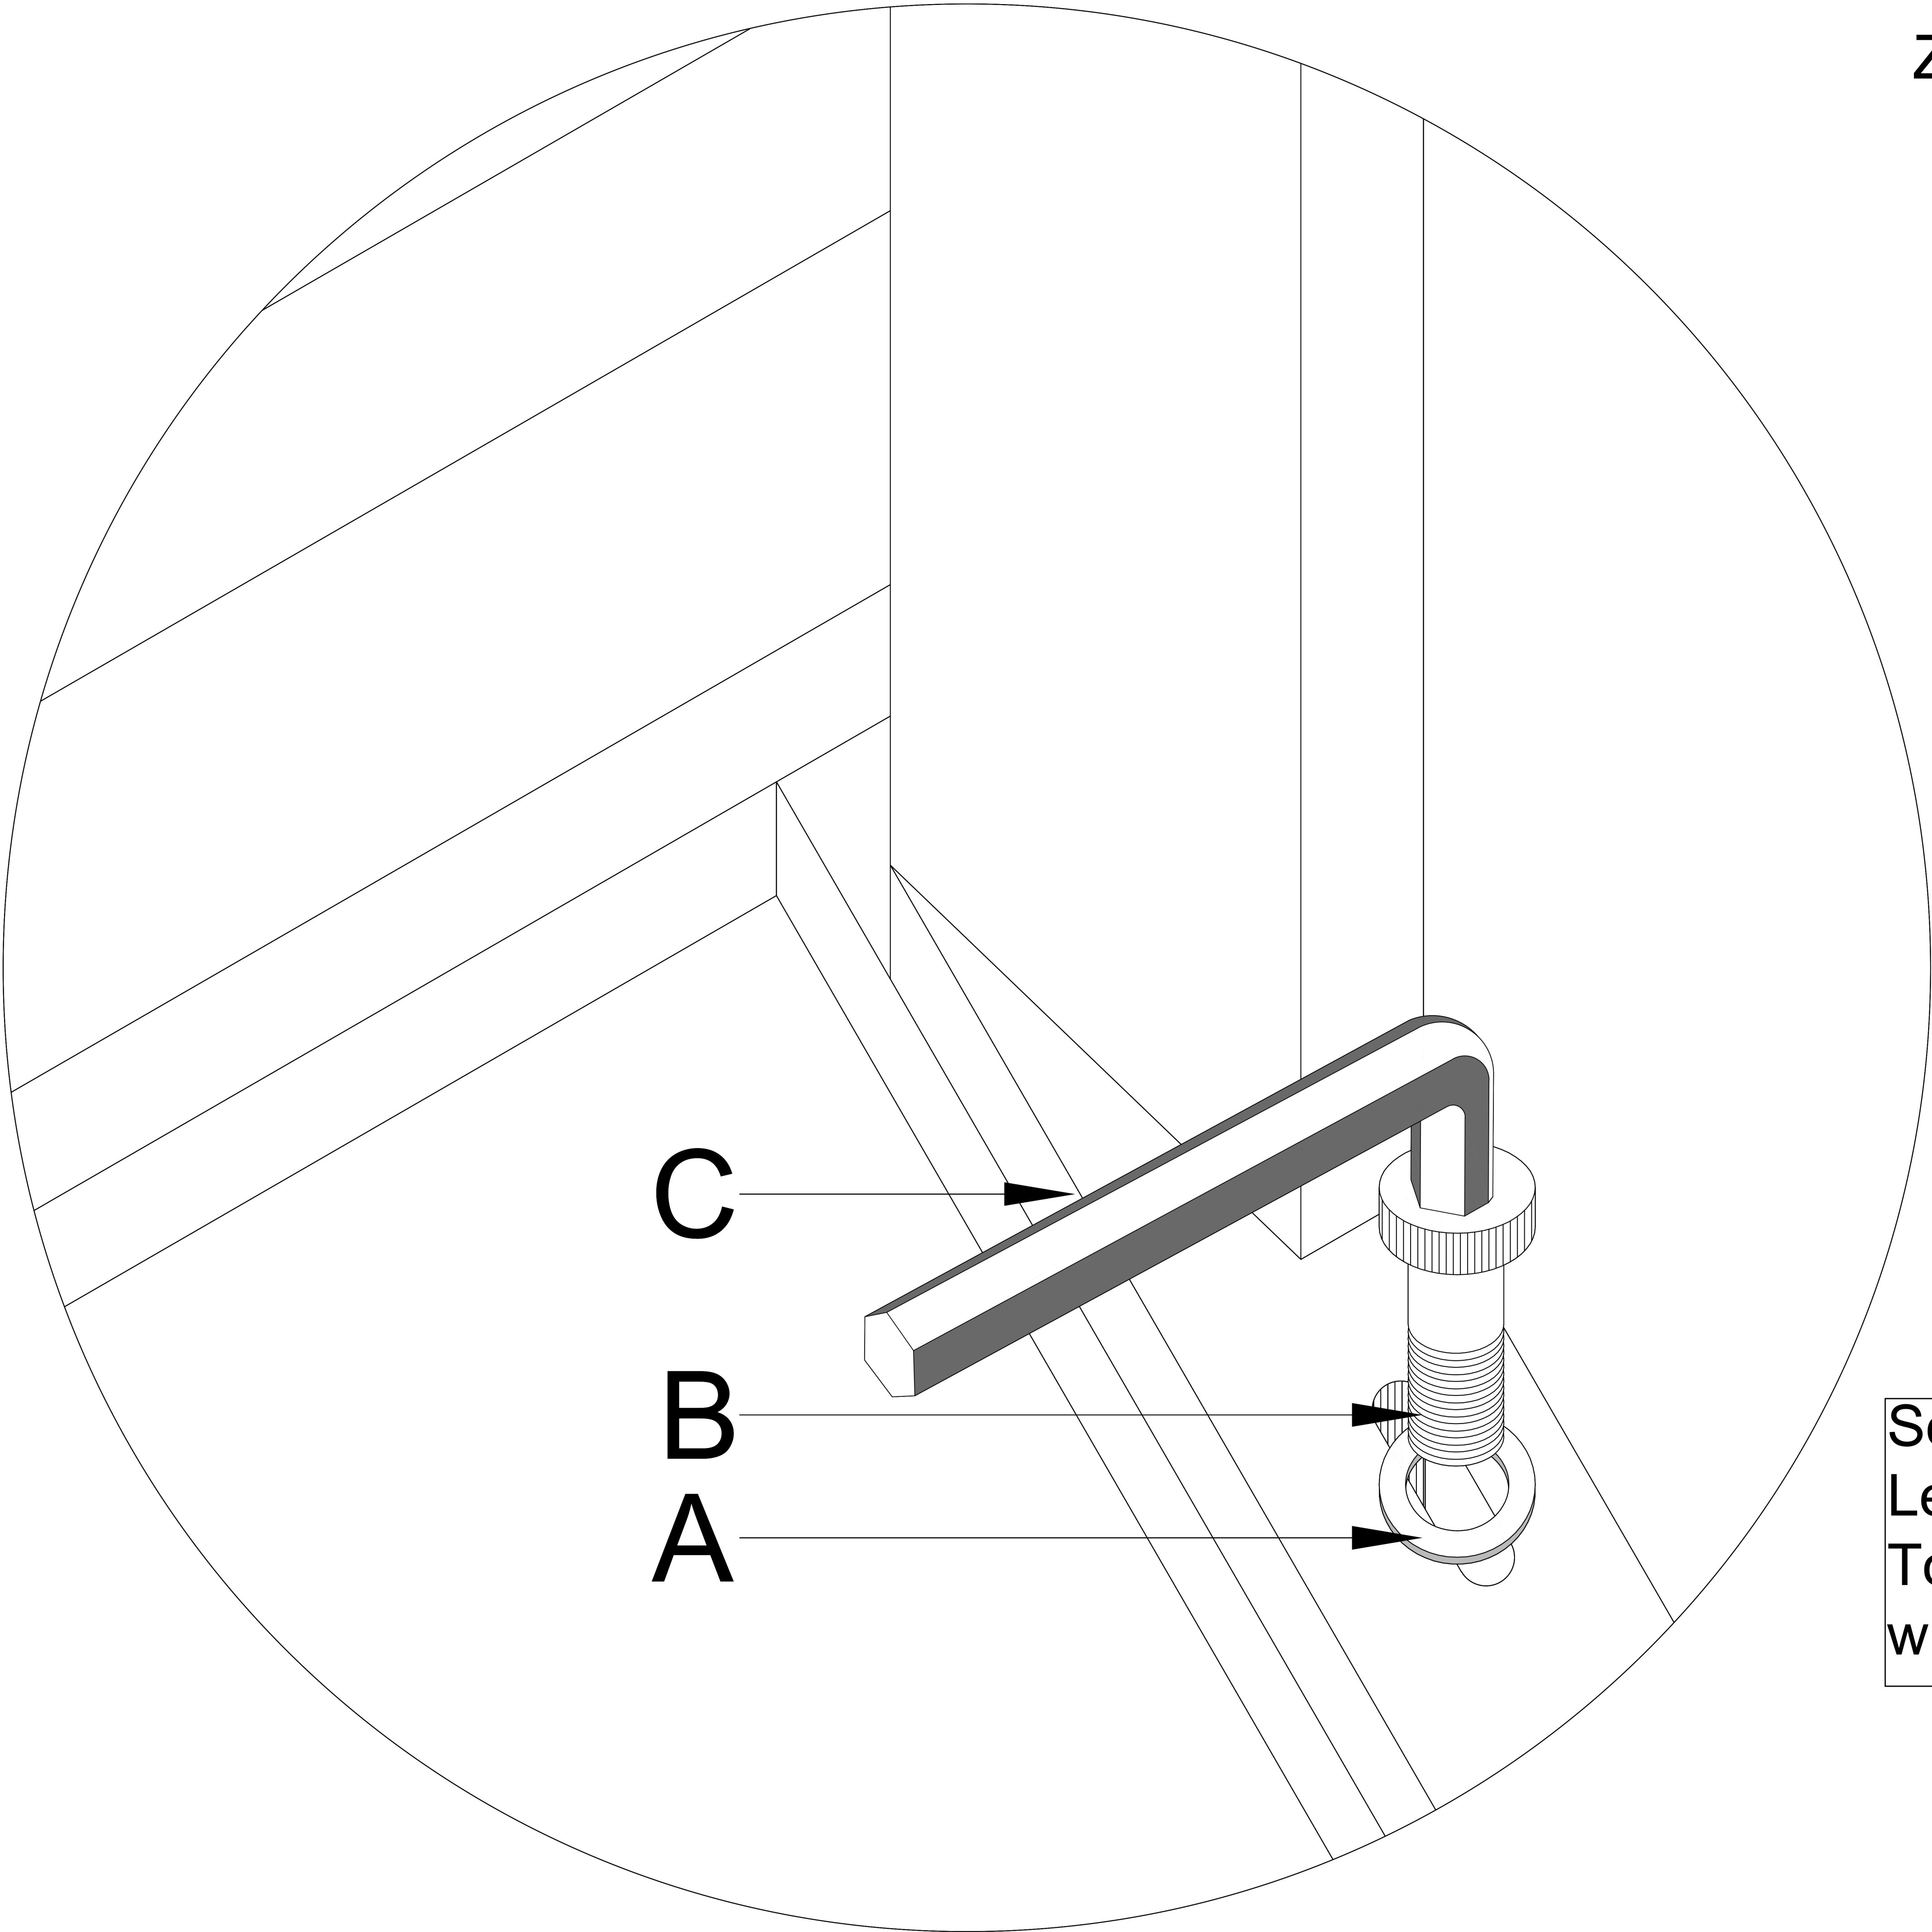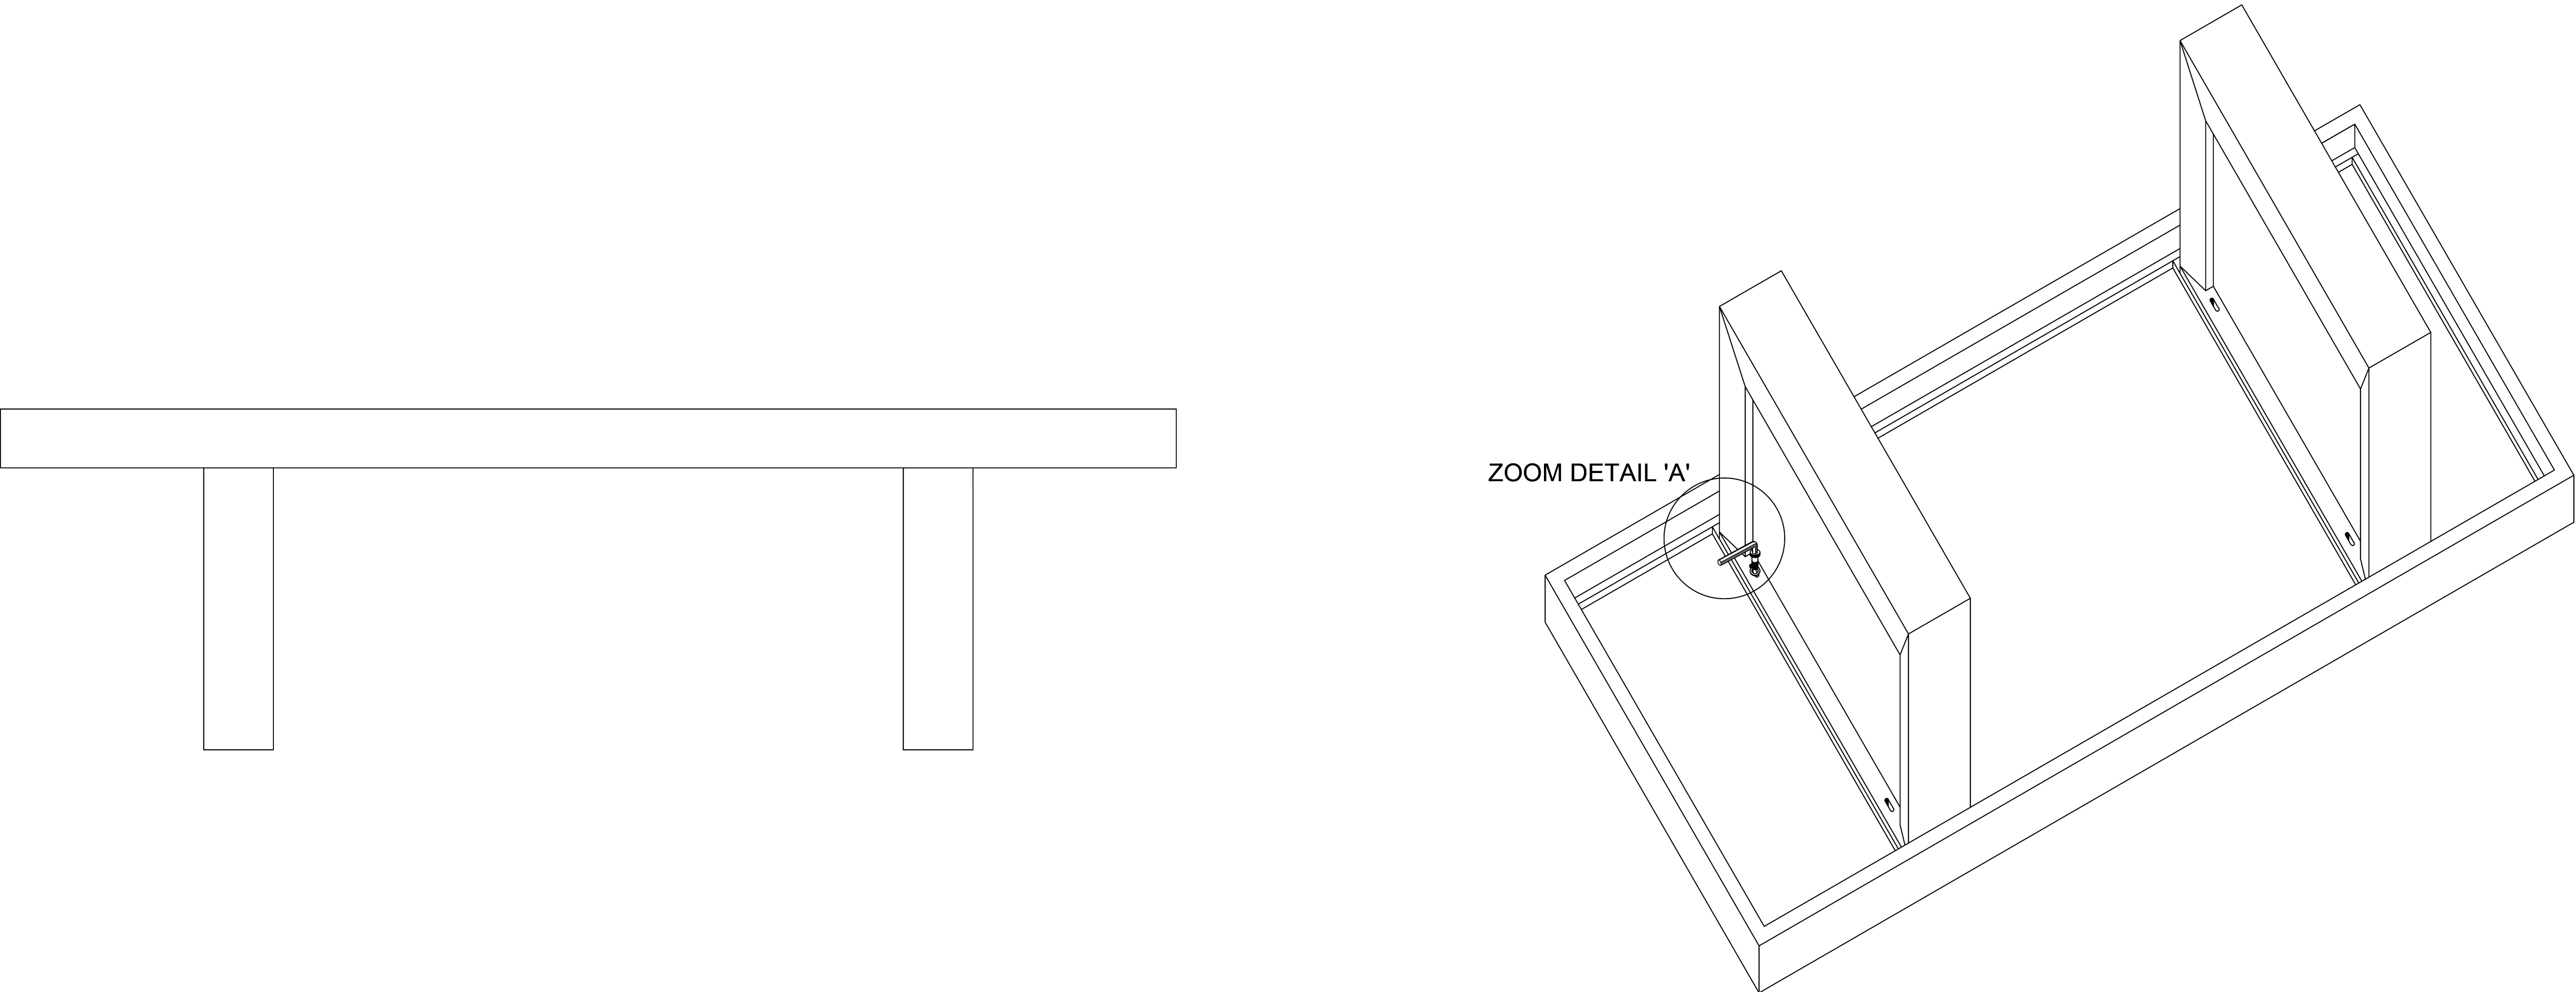

ZOOM DETAIL 'A'

 Secure Wooden  
Legs to Wooden  
Top using Bolt (#B)  
with Washer (#A)

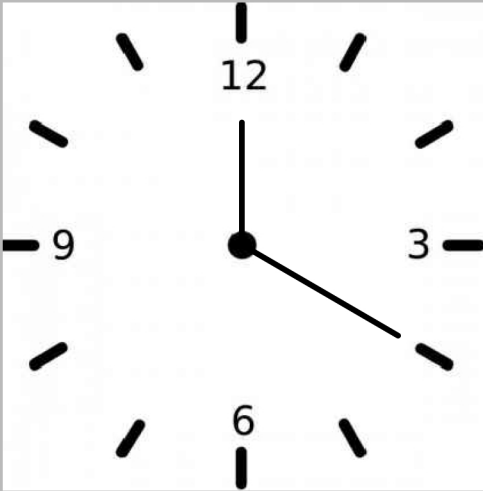

20 MIN.



2 PERSONS

A x 8  
Ø 10mm



B x 8  
M8X40 mm



C x 1

