


# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064

Dining Chair

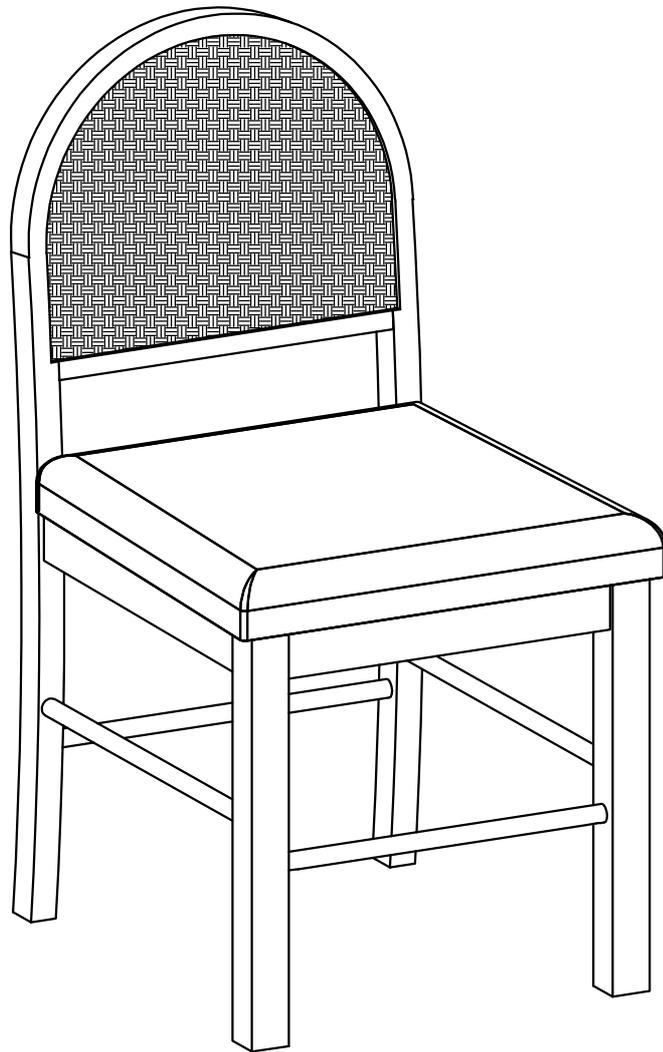

# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064

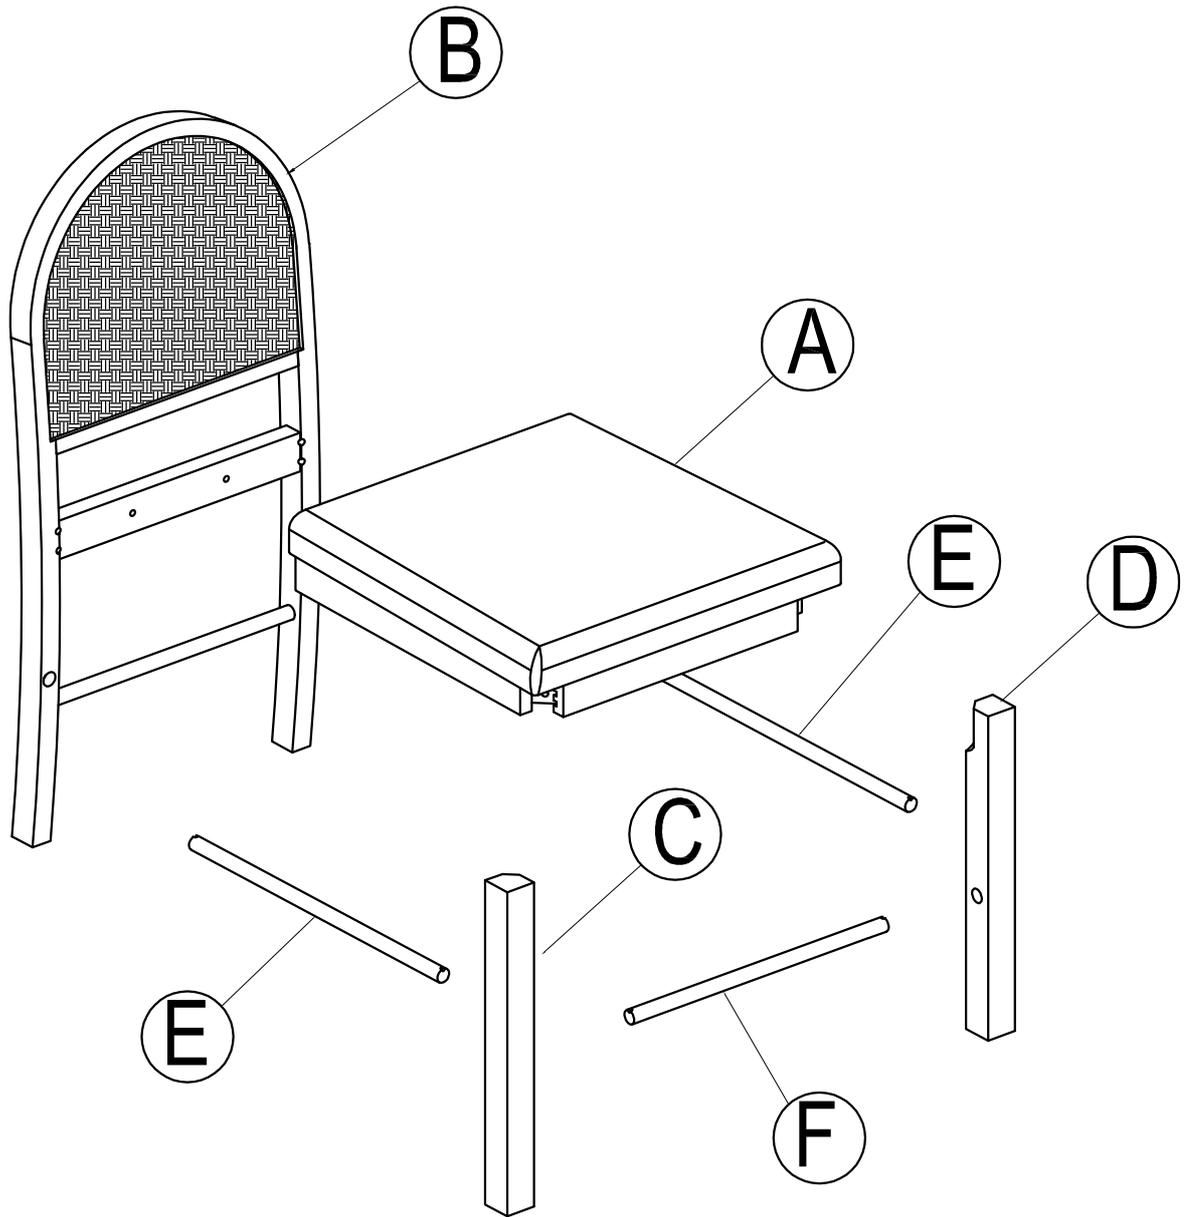


# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064


## Part List For 4

(A)

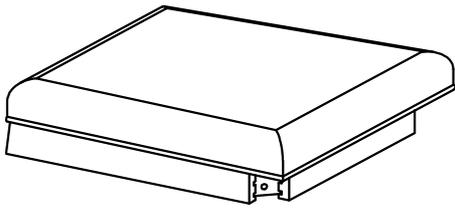

CUSHION SEAT (4 pcs)

(B)

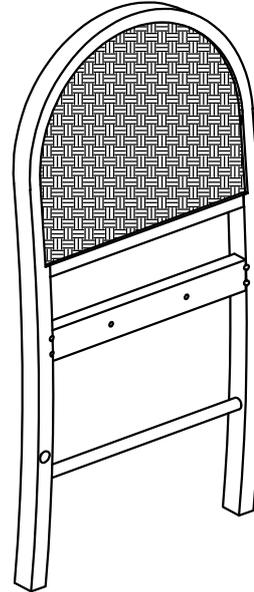


CHAIR BACK (4 pcs)

(C)




LEG LEFT (4pcs)

 (D)




LEG RIGHT (4pcs)

 (E)



LEFT+RIGHT SIDE STRETCHER (8pcs)

(F)

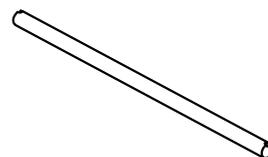


FRONT STRETCHER (4pcs)

# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064

## Hardware List For 4


①

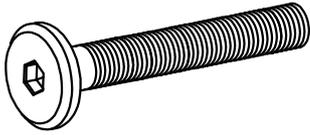

Ø 1/4" x 40mm

BOLT (8pcs)


②

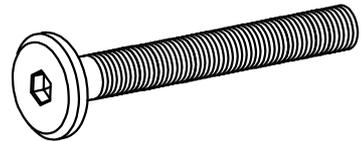

Ø 1/4" x 55mm

BOLT (16 pcs)

③

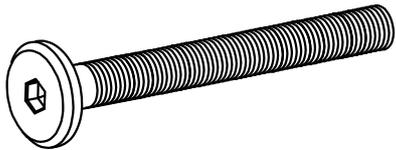

Ø 1/4" x 75mm

BOLT (16 pcs)


④



Ø5/16" x 13mm

LOCK WASHER (40 pcs)

⑤

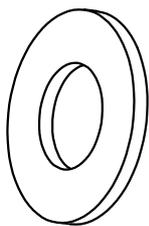

Ø5/16" x 19 x 2mm

FLAT WASHER (40 pcs)

 
⑥



4mm

ALLEN KEY (4 pcs)

⑦




Ø4 x 38 mm

WOOD SCREWS (24 pcs)

# ASSEMBLY INSTRUCTION


ITEM NO.N715P340064


## STEP 1:

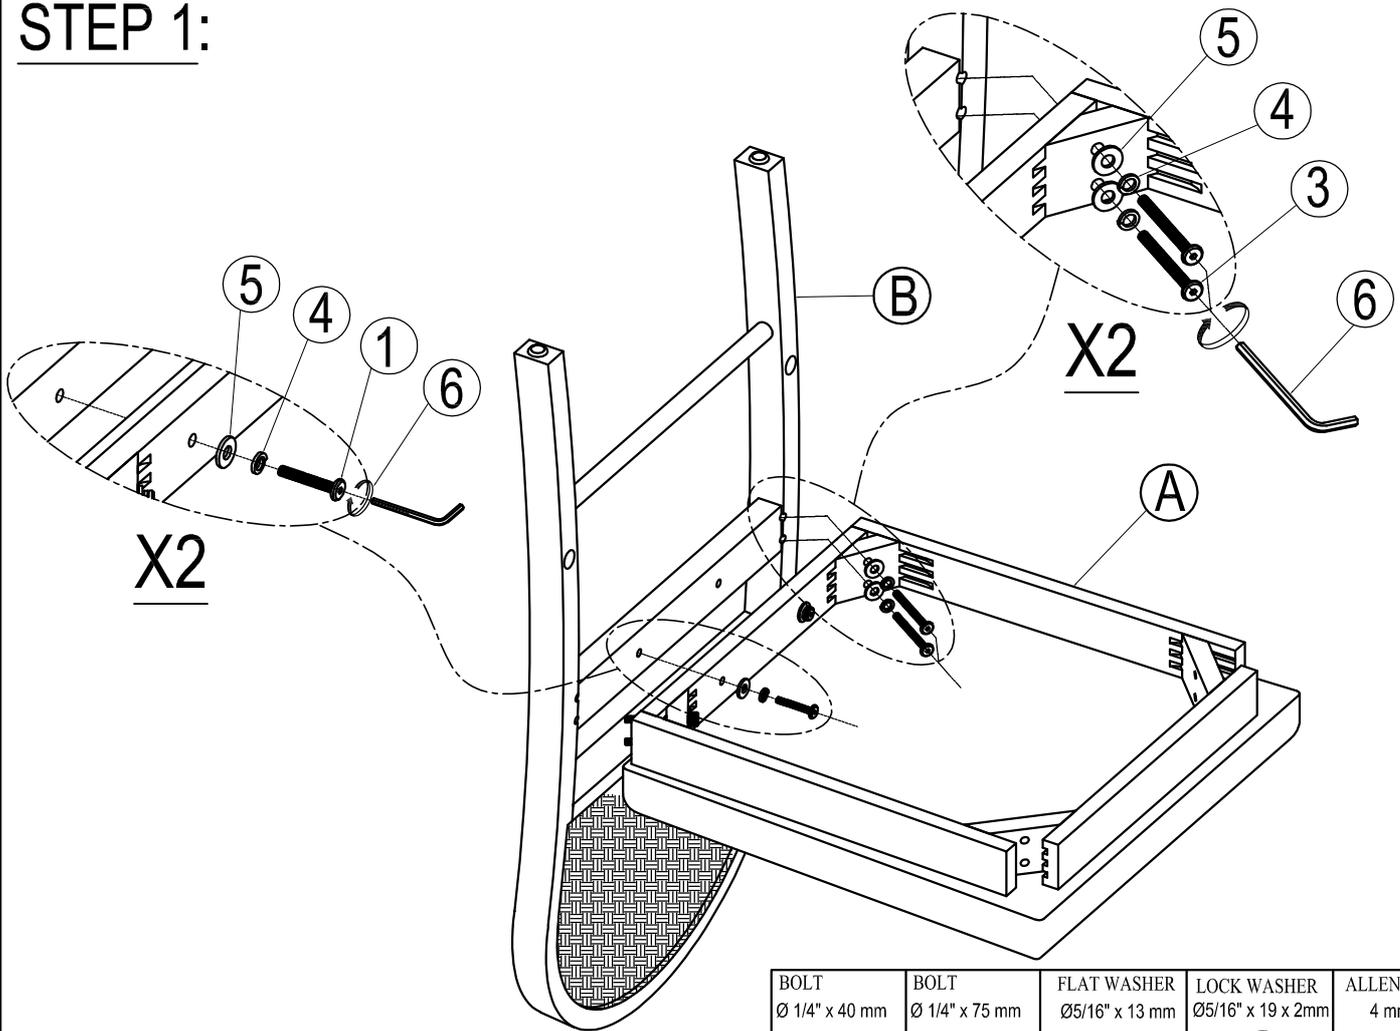

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	FLAT WASHER Ø5/16" x 13 mm	LOCK WASHER Ø5/16" x 19 x 2mm	ALLEN KEY 4 mm
				
①x2	③x4	④x6	⑤x6	⑥x1

## STEP 2:

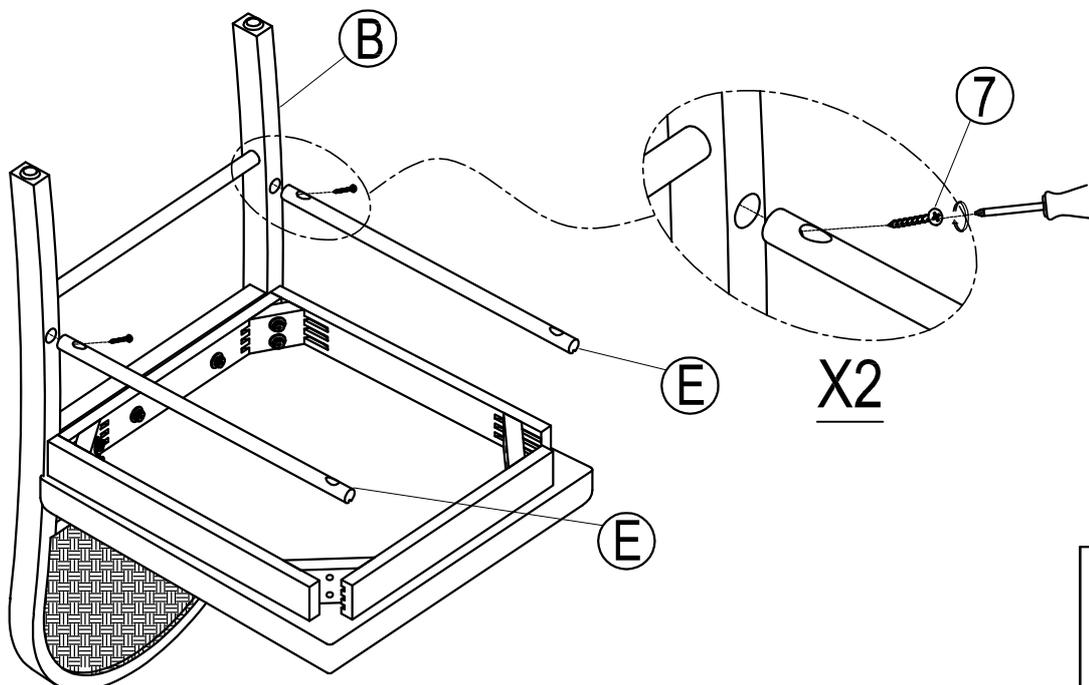


 WOOD SCREWS Ø4 x 38 mm

⑦x2

# ASSEMBLY INSTRUCTION

ITEM NO.N715P340064
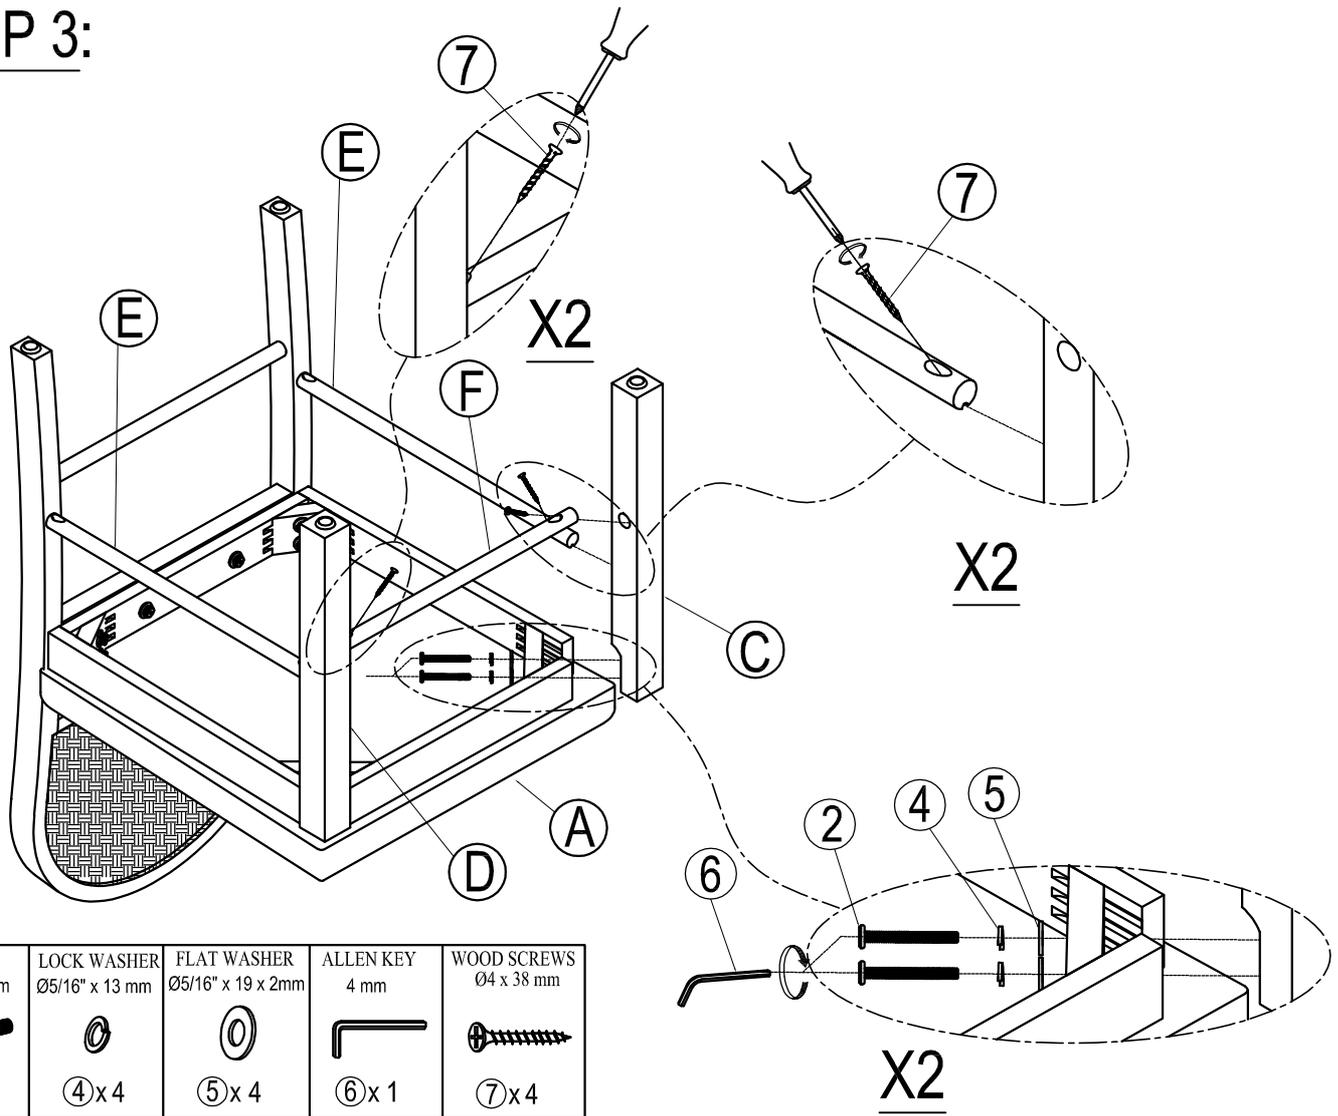
## STEP 3:



## COMPLETE

