

Personal Air Cooler



Features:

- Reduces air temperature around you
- Evaporative Cooling: Uses evaporation to cool the air by 5°F
- 3 cooling levels with push button control
- Runs up to 5 hours on a single tank of water
- Can be used with or without water
- Input/Output: 5V, 1A, 5W
- Wall Adapter: 100-240V, 50/60 Hz, 0,3A Max (included).

Intended Use:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your cooler, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: WARNING indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

Read all the instructions before using this fan.

- Use this cooler only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the cooler with a damaged power cord or plug or after the cooler malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any cooler is used by or near children, disabled persons or pets and whenever the cooler is left operating unattended.
- Do not place the cooler on a small, unlevel, uneven or any surface which might allow cooler to tip or fall.
- For proper operation, cooler should be placed on a smooth, non-combustible, level surface.
- Always unplug cooler when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use cooler in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the cooler with any safety device removed.
- The appliance is only to be used with the power supply unit provided with the appliance.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the cooler. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Moisture may accumulate in/on areas surrounding the cooler. To avoid damage, place this cooler on a water-resistant surface where water will not damage it.**
- The cooler is not to be serviced or repaired by anyone except the manufacturer or service/repair facilities authorized by the manufacturer.

- Do not place this cooler near furnaces, heaters, stoves, or any other source of heat.
- **This cooler requires periodic maintenance.** Refer to the instructions in this manual.
- **DO NOT use anything other than water in this appliance. Do not use additives.**

READ & SAVE THESE INSTRUCTIONS

⚠ WARNING: Shock Hazard

Use your cooler only in dry environments. This cooler is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

⚠ WARNING: Hot Surfaces

Do not touch cooler motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

⚠ WARNING: Fire Hazard

Coolers have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. **DO NOT USE** in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the cooler.

⚠ WARNING: Electrical Shock Hazard

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

⚠ CAUTION: to Prevent Electric Shock, This product has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

⚠ WARNING: to Reduce the Risk of Fire or Electric Shock, do not use this product with any solid-state speed control device.

DO NOT operate any cooler with a damaged cord or plug or after cooler malfunctions, has been dropped or damaged in any manner. Do not operate cooler with a broken safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact World and Main Customer Service by telephone or mail for information and assistance.


DO NOT run power cord under carpeting. **DO NOT** cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the cooler when not in use. Do not operate cooler with its ventilation obstructed.

Usage:

Operation: Always operate the cooler in the upright position following all instructions and recommendations listed in this manual.

Location: Place cooler near you so that the breeze blows directly on you. This Personal Cooler is designed to provide direct personal cooling, rather than cooling the entire room.

Cooler Parts:

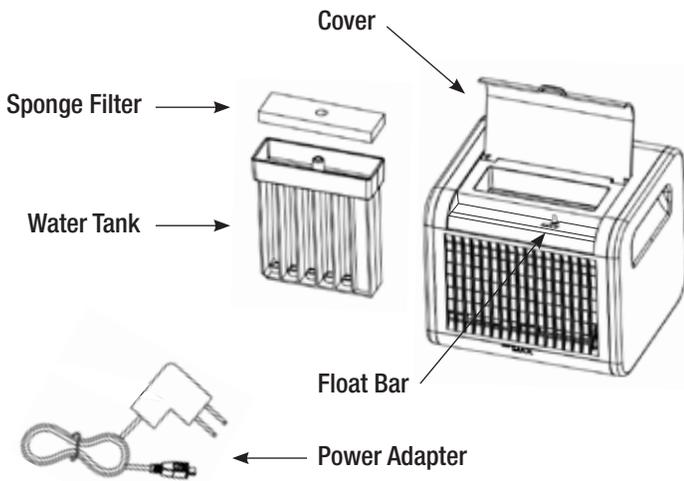


Control Panel Operation:

On/Off: Plug the power adapter into the back of the unit and the other end into a 100-240 Volt AC electrical outlet. Press the POWER button to turn the unit ON, the unit will begin operating at LOW speed. Press the power button again to turn the unit OFF.

Speed: To increase the speed, press the SPEED button, the speed will change from LOW-MID-HIGH speed accordingly, and it goes around in a circular manner.

LED Light Indicator: The blue LED lights will illuminate according to the speed. 1 light indicates operating in LOW speed, 2 lights indicate operating in MID speed, 3 lights indicate operating in HIGH speed.

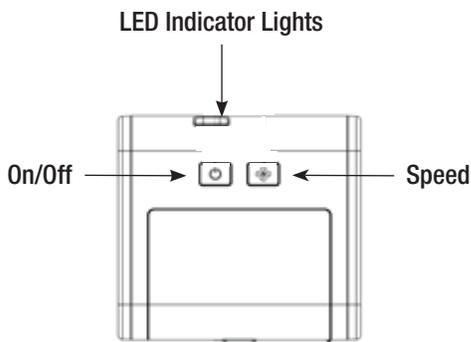


Filling the Unit with Water:

CAUTION: Before filling the unit with water, unplug the power adapter from the wall and from the unit.

NOTE: Always use two hands to carry the unit.

Open the cover of the water tank and fill water into the tank slowly. Water is at maximum level when the red position of the float bar is visible.

If there are many impurities on the sponge filter, remove the filter and rinse it off.

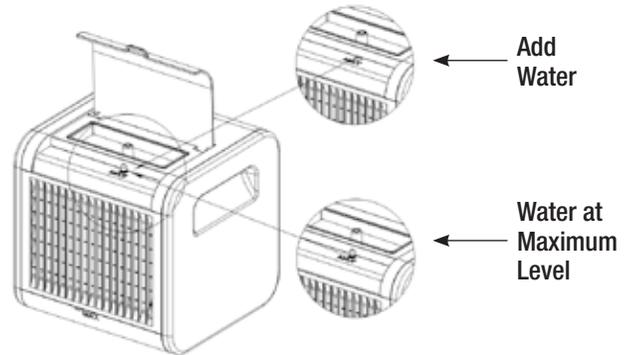

Care and Maintenance:


Cleaning: CAUTION – Before cleaning the cooler be sure to disconnect power cord from the plug.

Body: Clean body with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE COOLER OR ANY WIRES IN WATER. Allow cooler to dry completely before use.

Do not leave standing water in the unit for more than two days.

Before storage or a long period of inoperation, the water should be removed from the tray. The tray and appliance should be completely dried.

If the machine is used for more than three months, mix detergent and vinegar into water at a ratio of 1:3 and pour it into the water tank. After soaking for 30 minutes, remove the rubber plug on the bottom of unit to empty the contents, wash it again with water, replace the rubber plug, and store it in a dry and ventilated place.

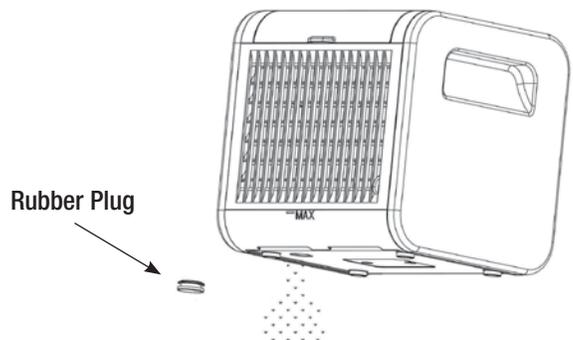

Care and Maintenance: (cont.)

Repair: DO NOT OPERATE THE COOLER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

End of Season Care and Storage: Empty the water tank. Clean all surfaces with a damp, soft cloth. Allow the tank to dry completely. When entire cooler is completely dry, store the cooler in its original carton, in a cool, dry, clean location. Coil and tie the power cord to avoid damage during storage. Remember to clean and inspect the cooler before using it the next season.

Limited Warranty

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to World and Main for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than World and Main are not covered in this warranty. World and Main will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured for:
World and Main (Cranbury), LLC
324A Half Acre Rd.
Cranbury, NJ 08512 USA
800-221-6895
www.comfortzoneproducts.com

Rev. 11/23/20