

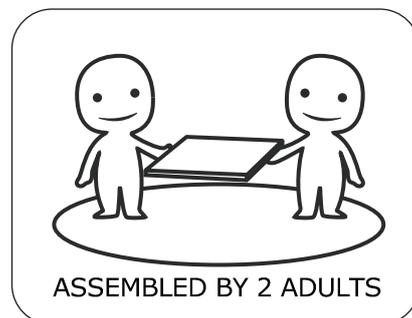


Gaming Desk


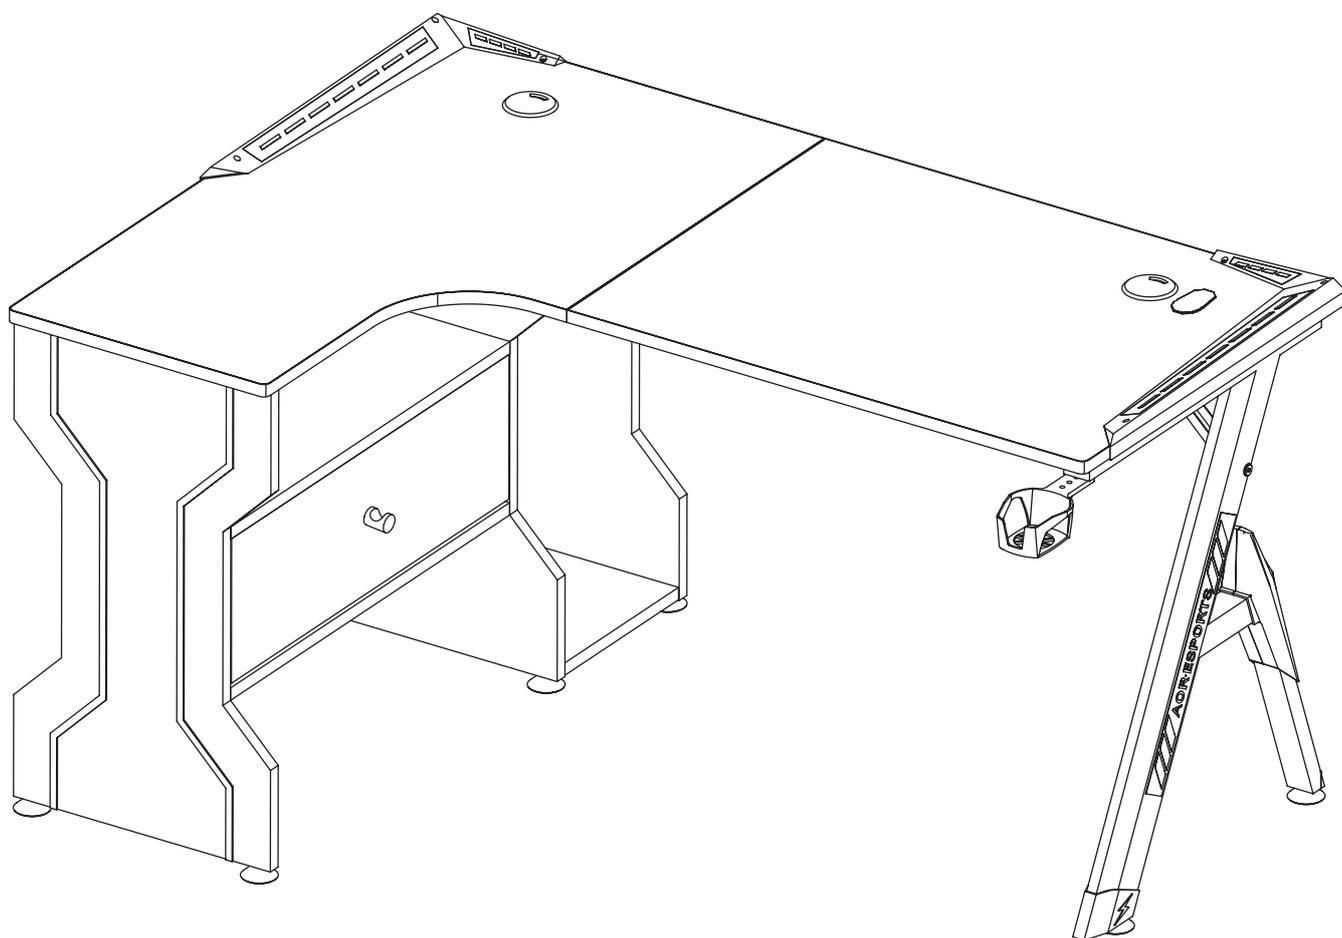


ASSEMBLED BY 2 ADULTS

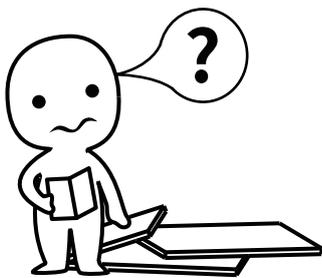


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

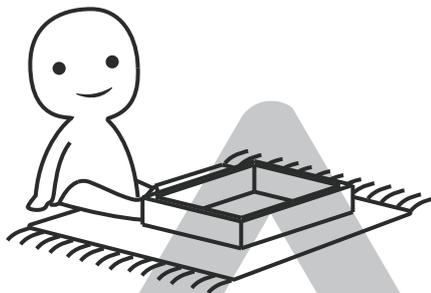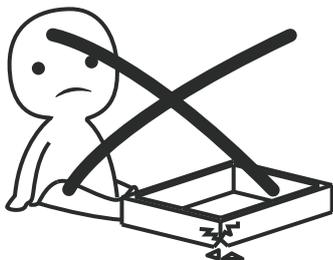


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

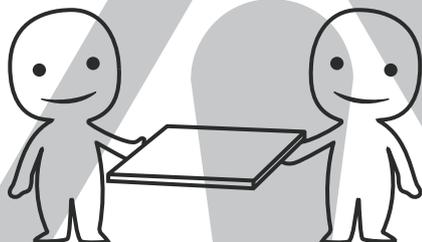

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

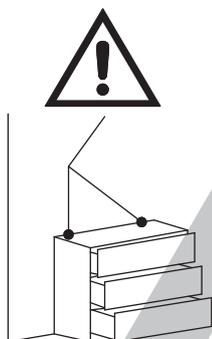

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

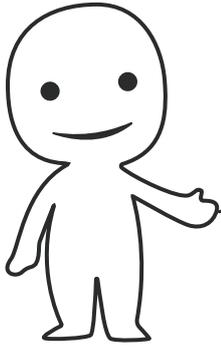


Please prepare the following tools

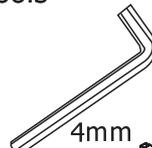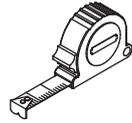


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 39



Ø 5 x 31 mm

B x 39

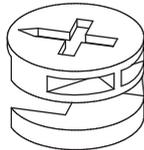

Ø 15 x 12 mm

C x 6




6 mm

D x 22




Ø 4 x 16 mm

E x 1

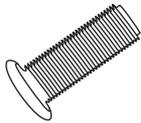


Ø 8 x 20 mm

 F x 1



Ø 6 x 20 mm

G x 6

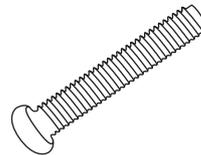


Ø 6 x 50 mm

H x 2




Ø 4 x 40 mm

 ① x 1




800 x 600 x 18 mm

② x 1

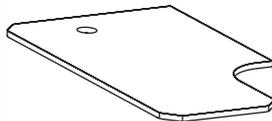


1000 x 600 x 18 mm

③ x 1

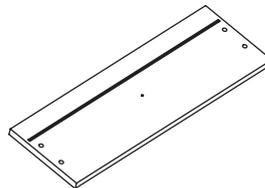

646 x 210 x 18 mm

④ x 2

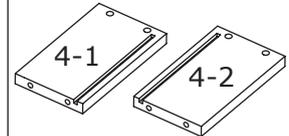


200 x 116 x 18 mm

⑤ x 1




600 x 190 x 4 mm

 ⑥ x 1



589 x 116 x 18 mm

⑦ x 2

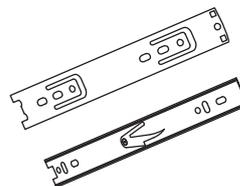


200 mm

























⑧ x 1








 Ø 16 x 20 mm



Ø 4 x 22 mm

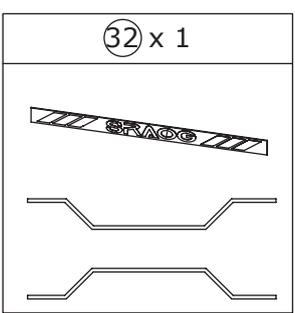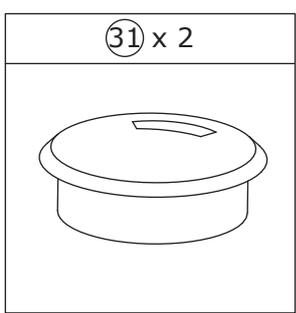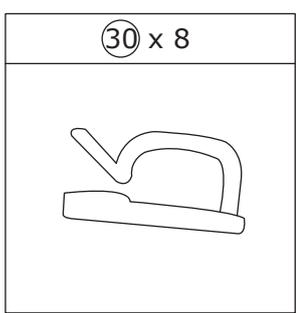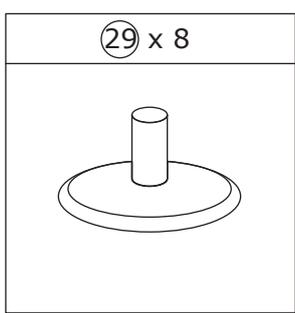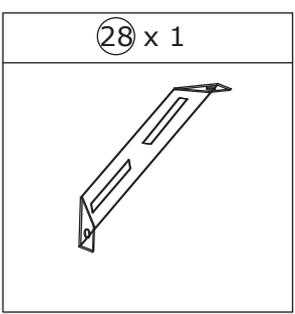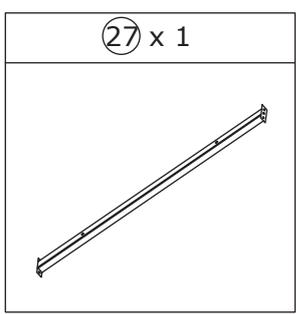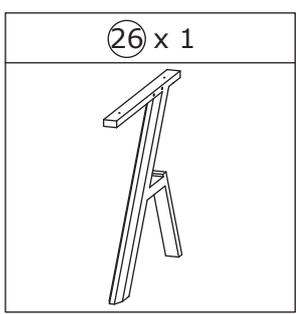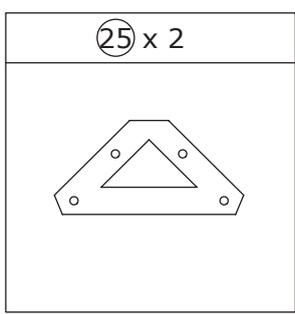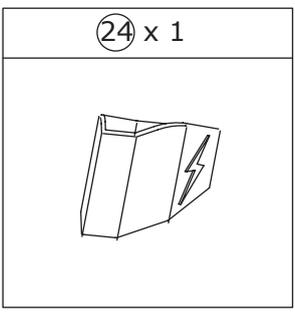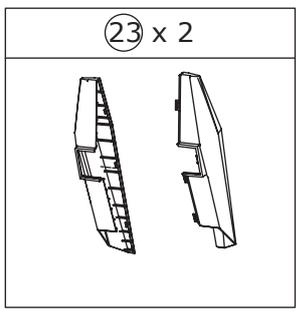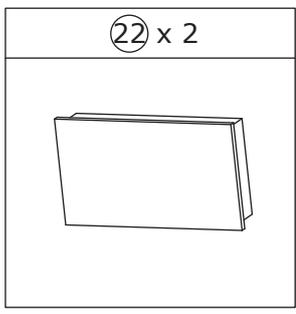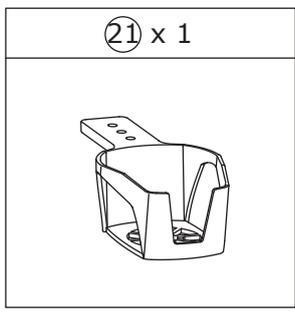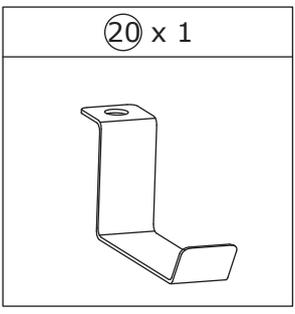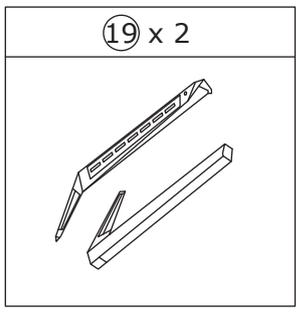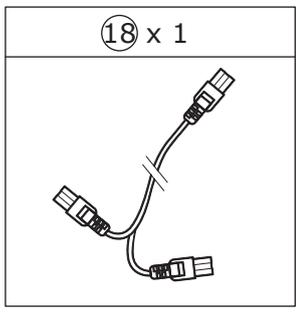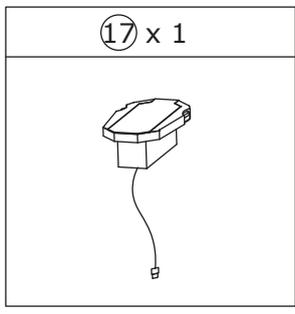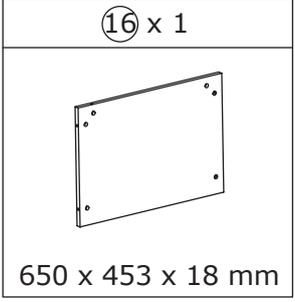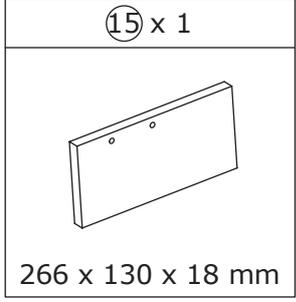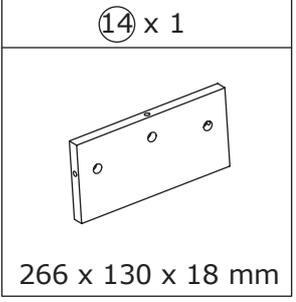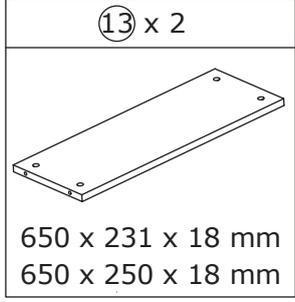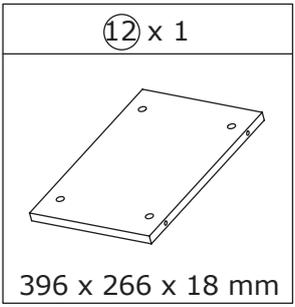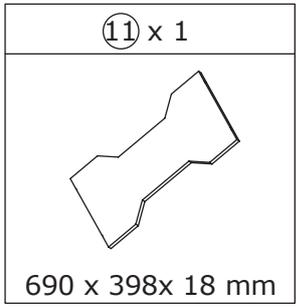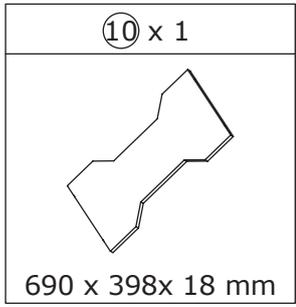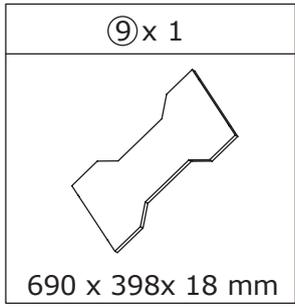

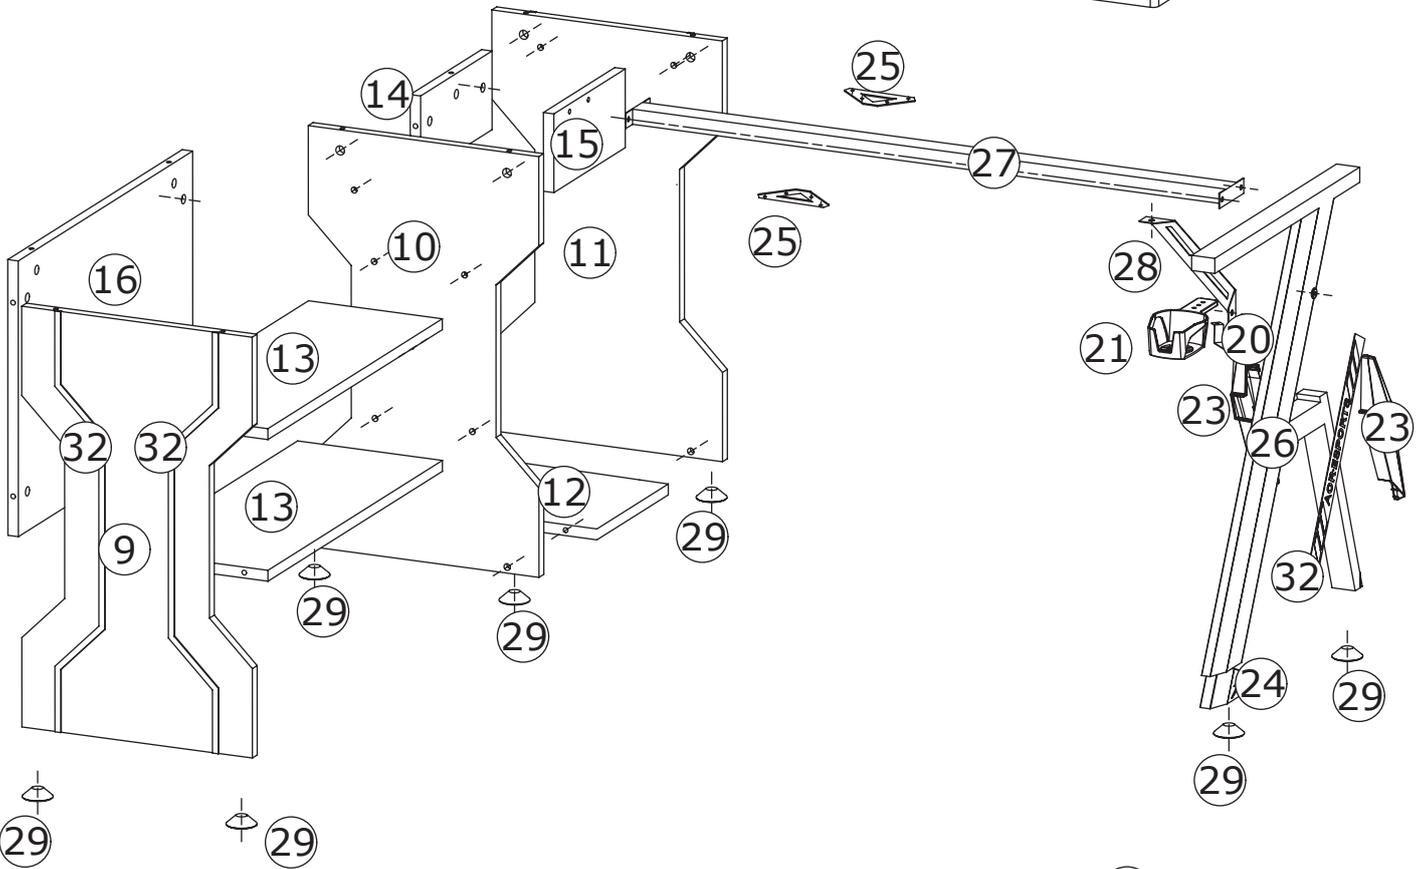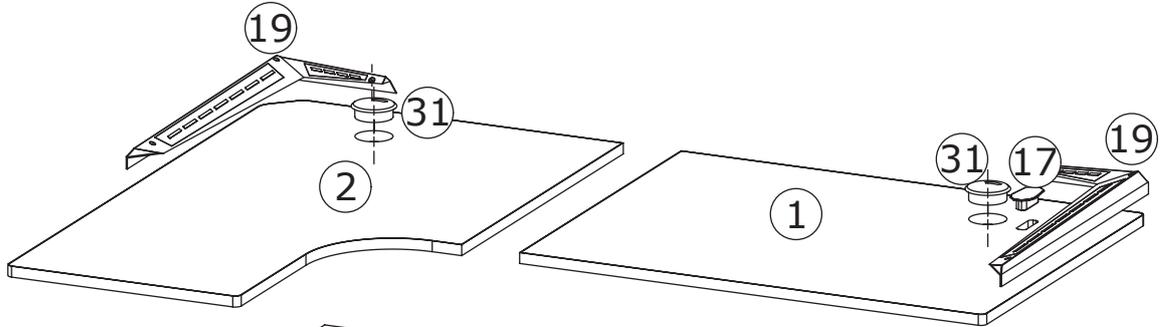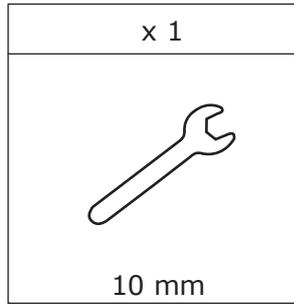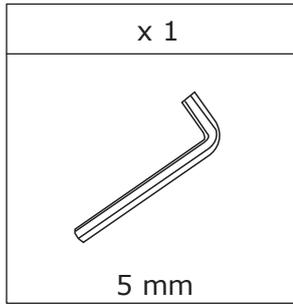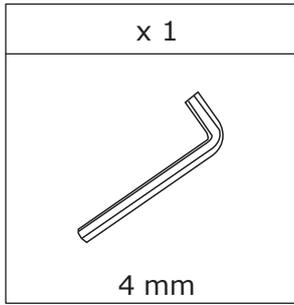


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.







This is a permanent label. Do not remove!

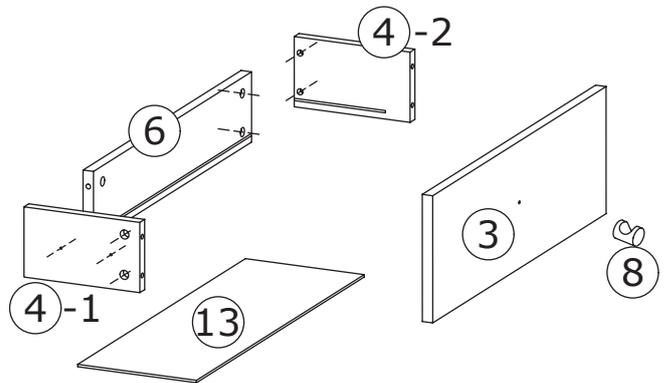

3




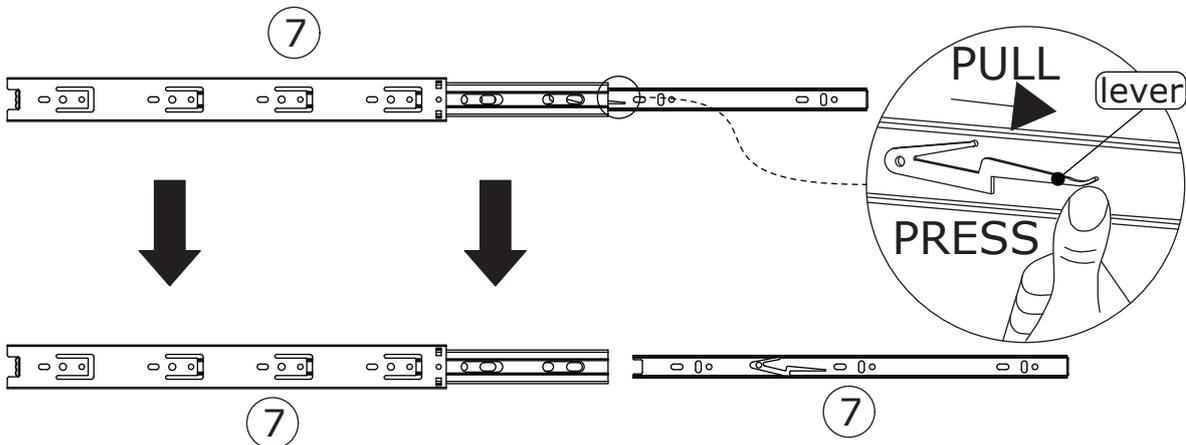
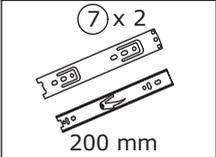


4

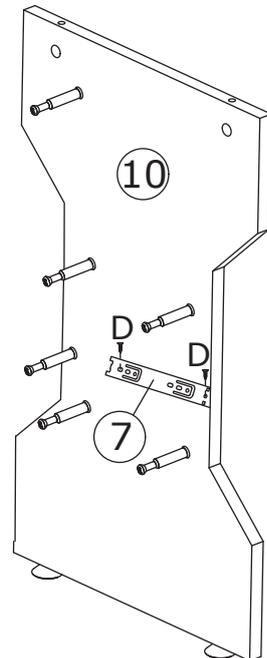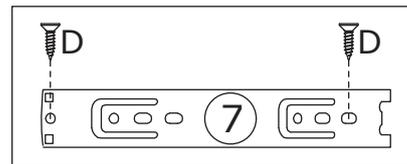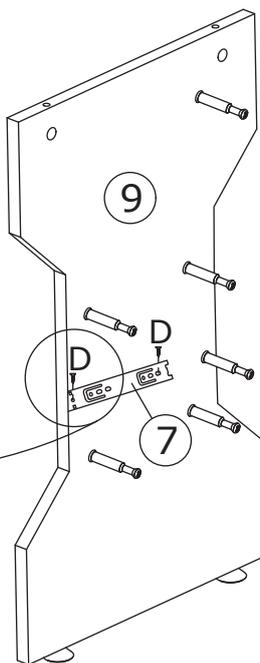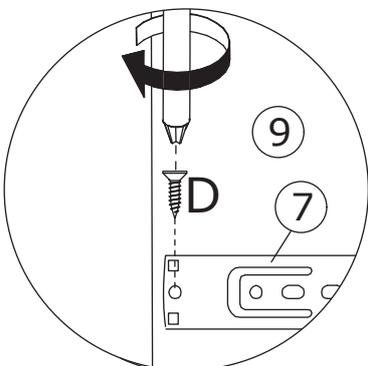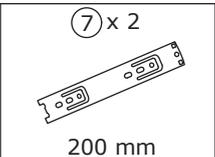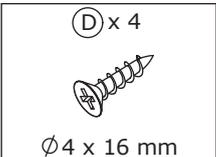






Fix rail part 7 to board 9 and 10 with screw(D) as shown.

5

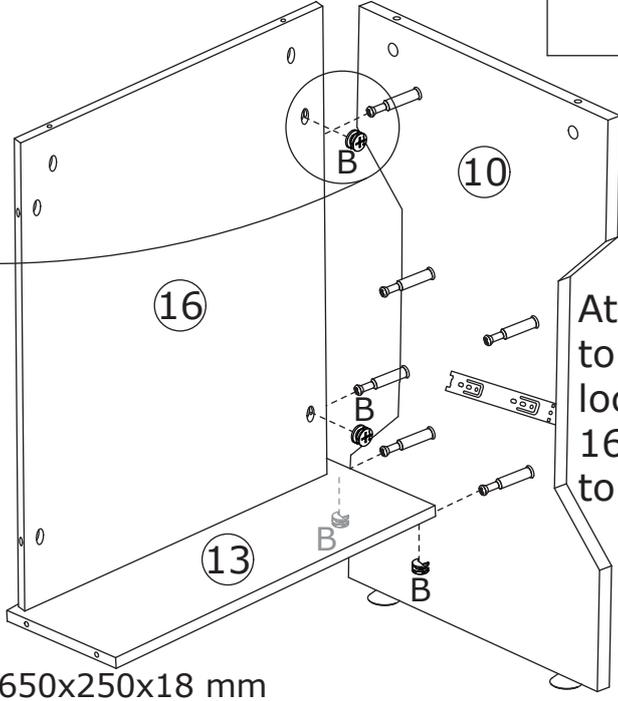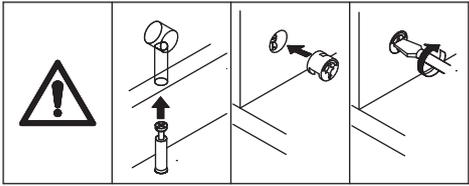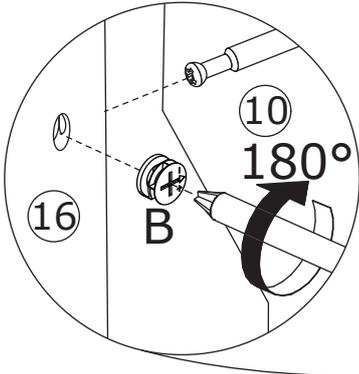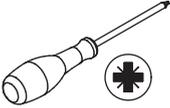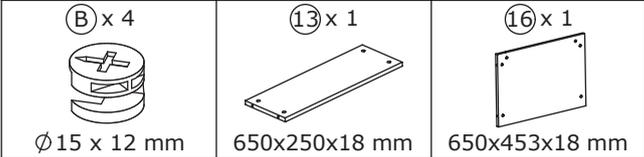





Attach board 13 and 16 to board 10, add cam lock(B) into board 13, 16 and turn clockwise to tighten as shown.

 6

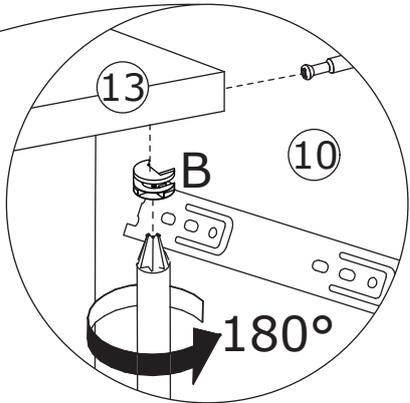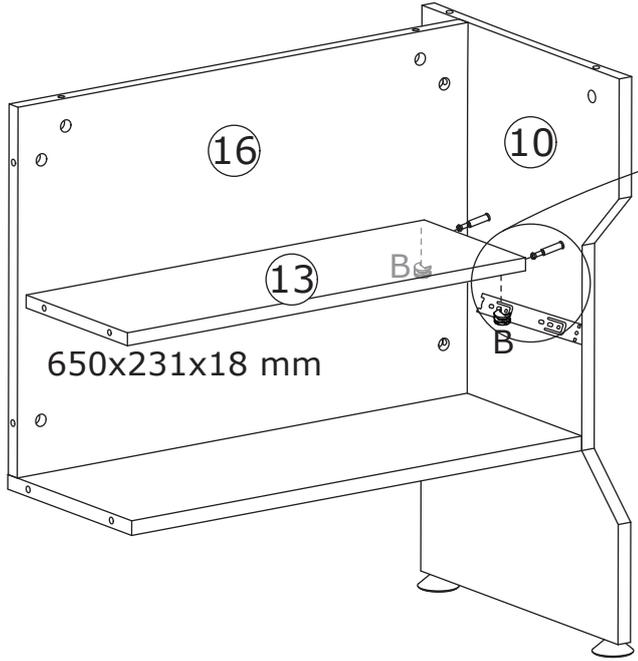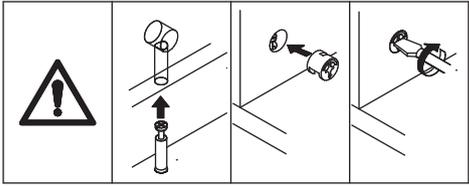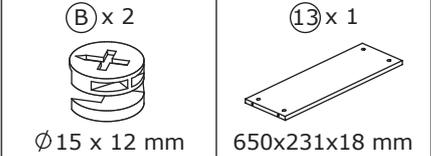


Attach board 13 to board 10, add cam lock(B) into board 13 and turn clockwise to tighten as shown.




 

7

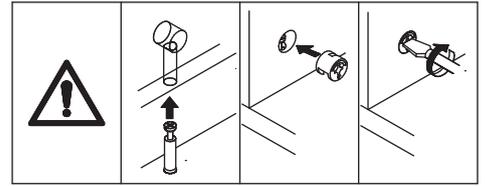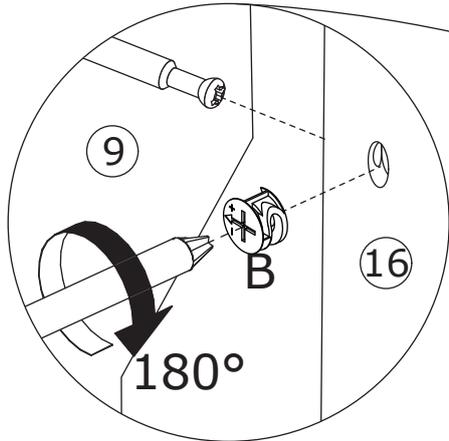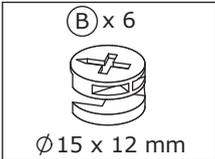

Attach board 9 to board 13 and 16, add cam lock(B) into board 13,16 and turn clockwise to tighten as shown.





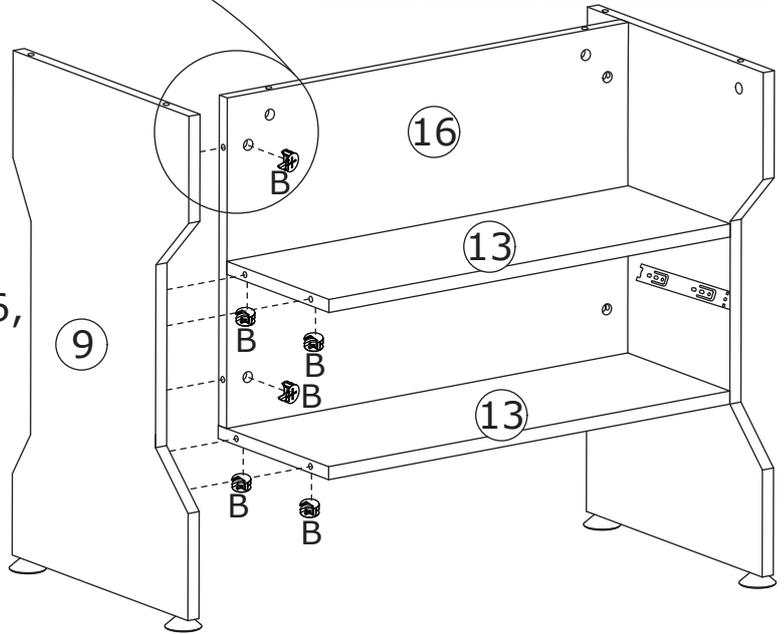


8

 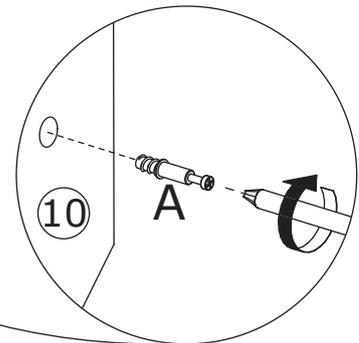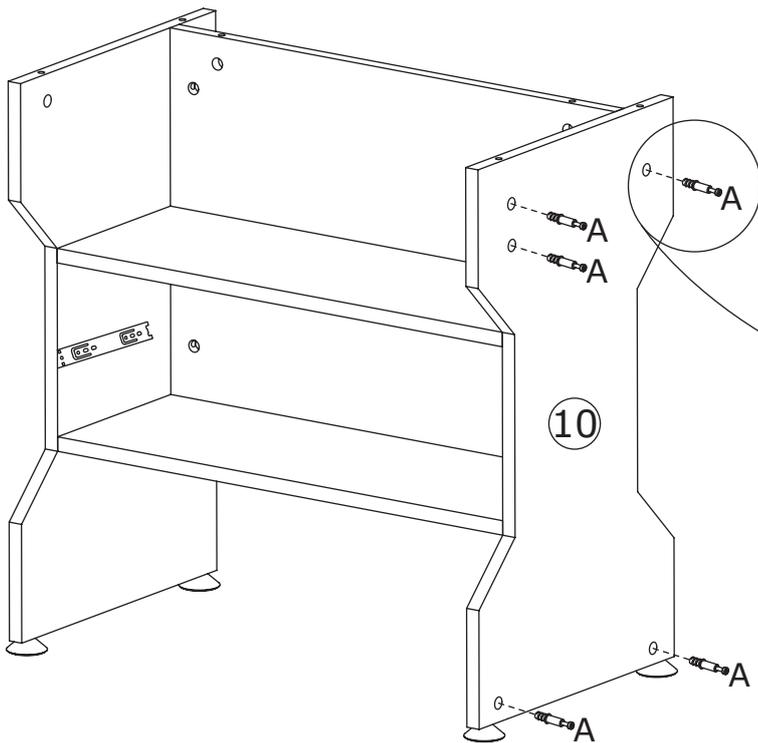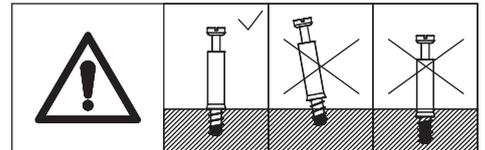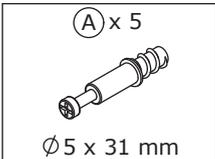









Screw eccentric rod(A) into board 10 as shown.

 9

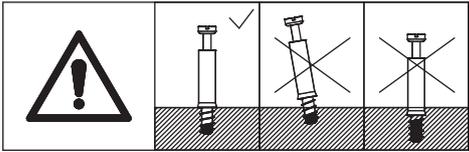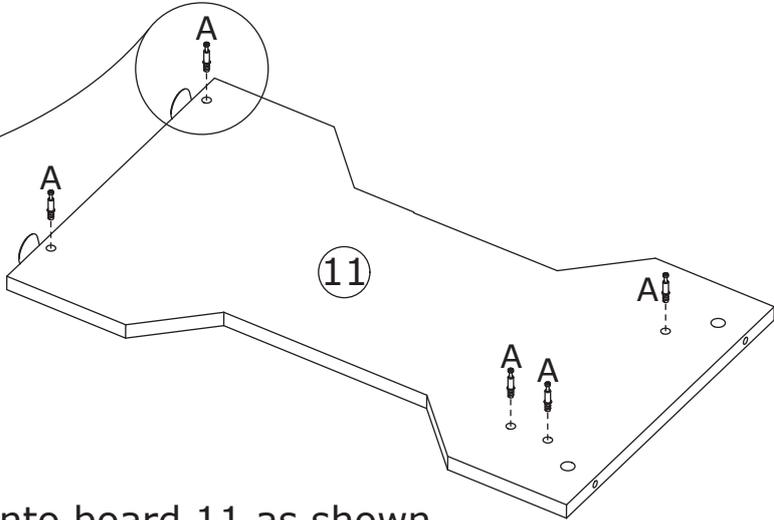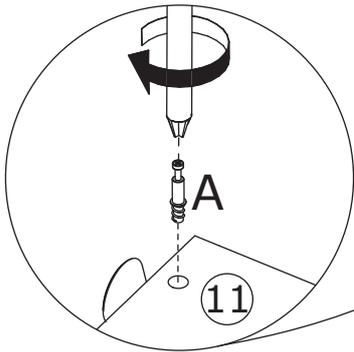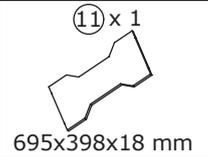





Screw eccentric rod(A) into board 11 as shown.

 10

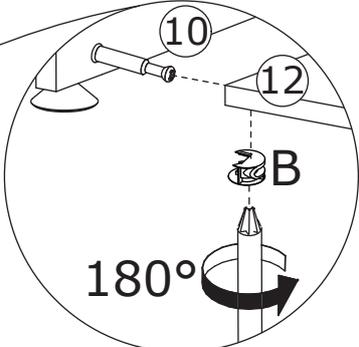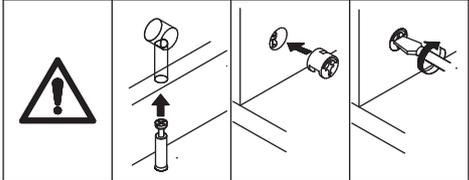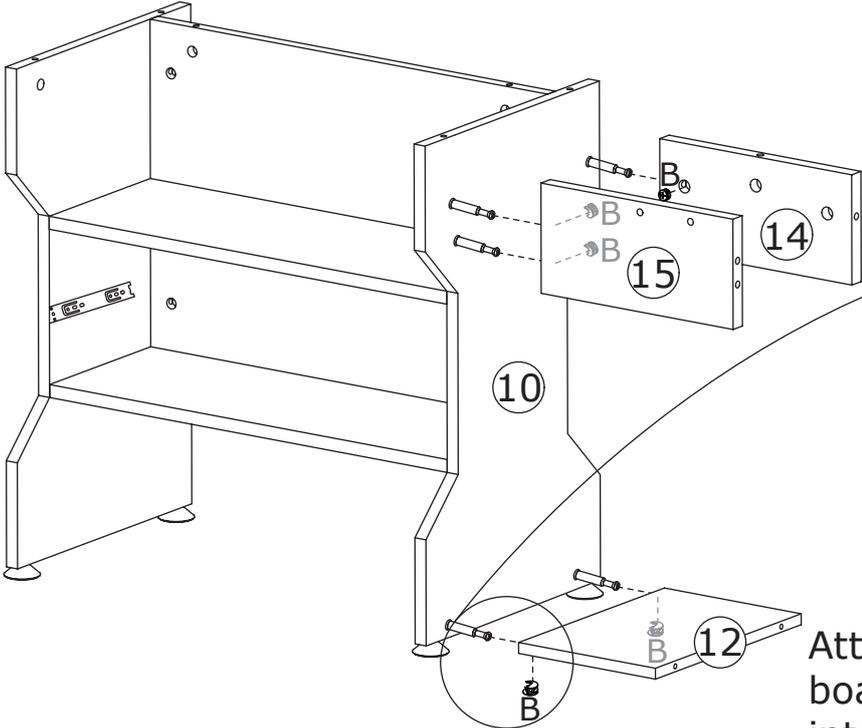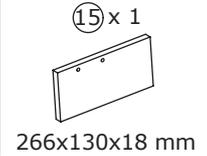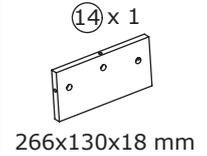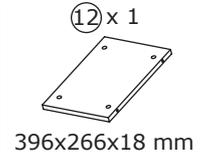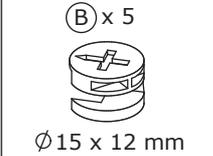


Attach board 12, 14 and 15 to board 10, add cam lock(B) into board 12,14,15 and turn clockwise to tighten as shown.

 
11

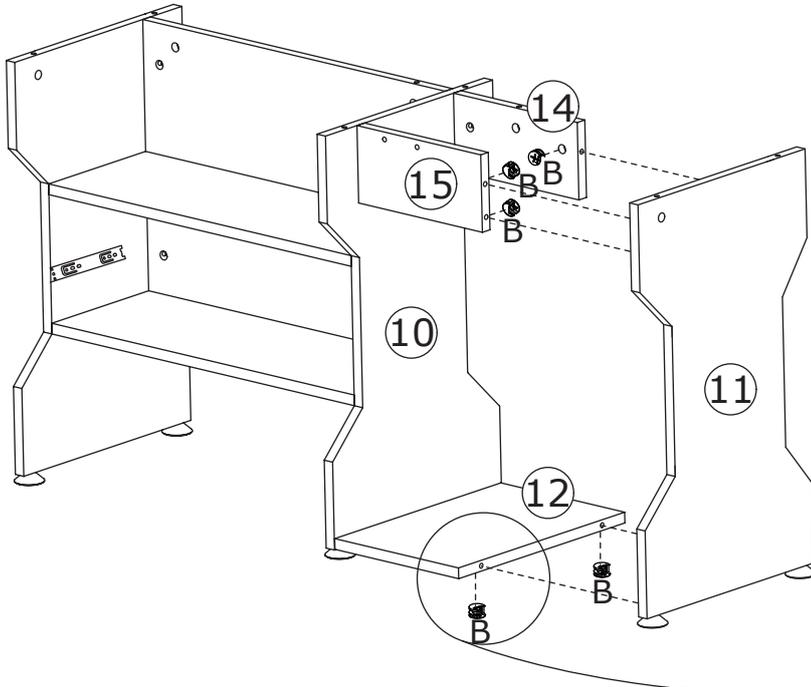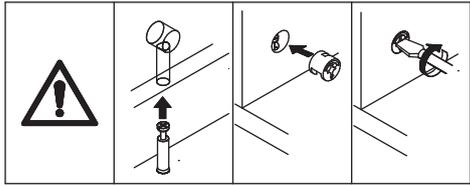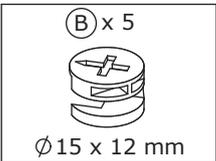



Attach board 11 to board 12, 14 and 15, add cam lock(B) into board 12,14,15 and turn clockwise to tighten as shown.

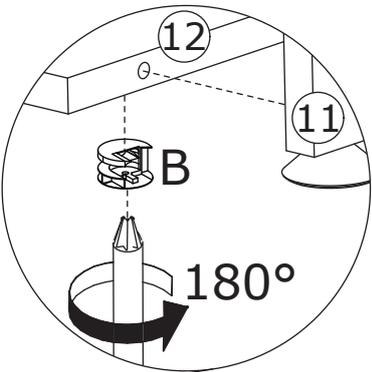




12


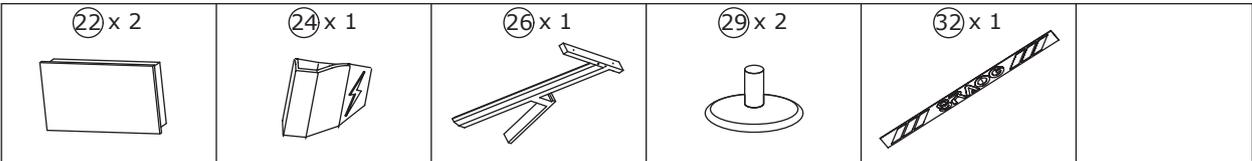


Connect part 22, 34, 39 and 32 to part 26 as shown.

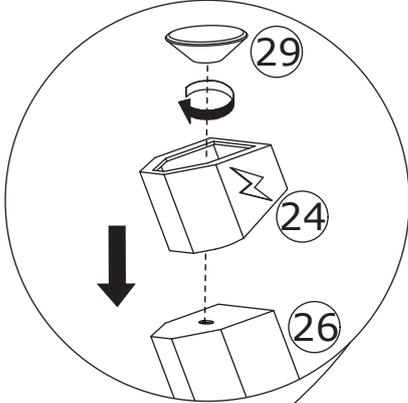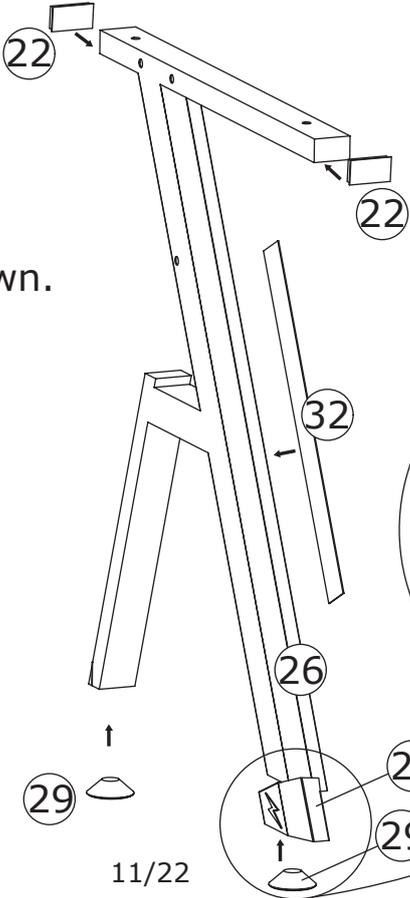



13

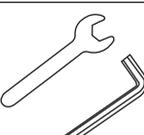
 
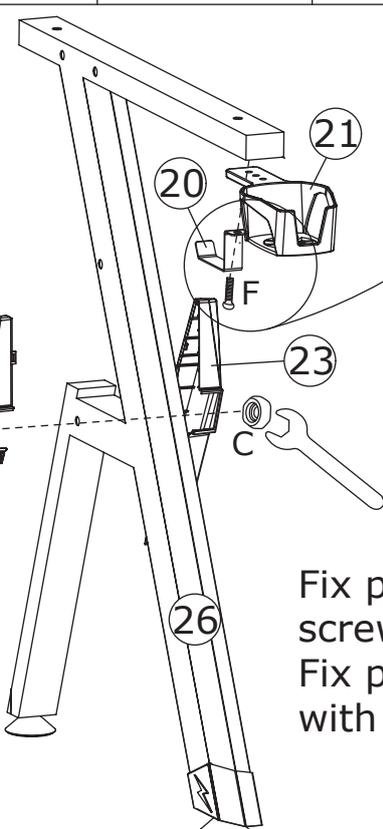
| | | | | | |
|--|--|--|--|---|--|
| <p>C x 1</p>  <p>6 mm</p> | <p>F x 1</p>  <p>Ø6 x 20 mm</p> | <p>G x 1</p>  <p>Ø6 x 50 mm</p> | <p>20 x 1</p>  | <p>21 x 1</p>  |  |
| <p>23 x 2</p>  |  | | | | |

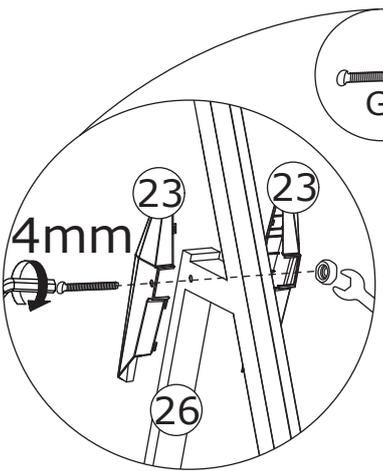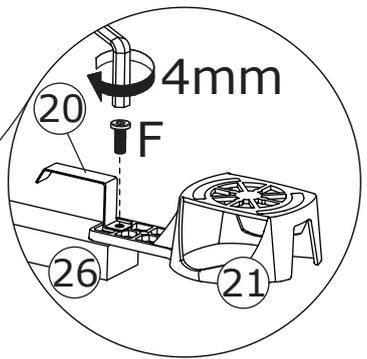

Fix part 23 to part 26 with screw(G) and nut(C) as shown. Fix part 20 and 21 to part 26 with screw(F) as shown.

14
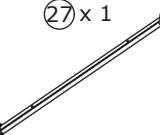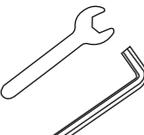
| | | | | | |
|--|--|--|--|---|---|
| <p>C x 3</p>  <p>6 mm</p> | <p>E x 1</p>  <p>Ø8 x 20 mm</p> | <p>G x 3</p>  <p>Ø6 x 50 mm</p> | <p>27 x 1</p>  | <p>28 x 1</p>  |  |
|--|--|--|--|---|---|

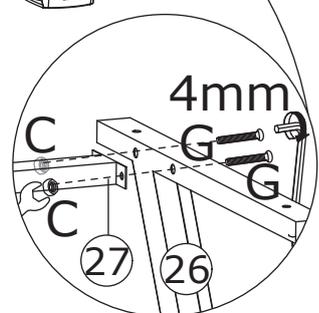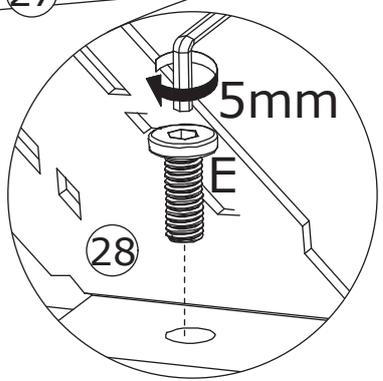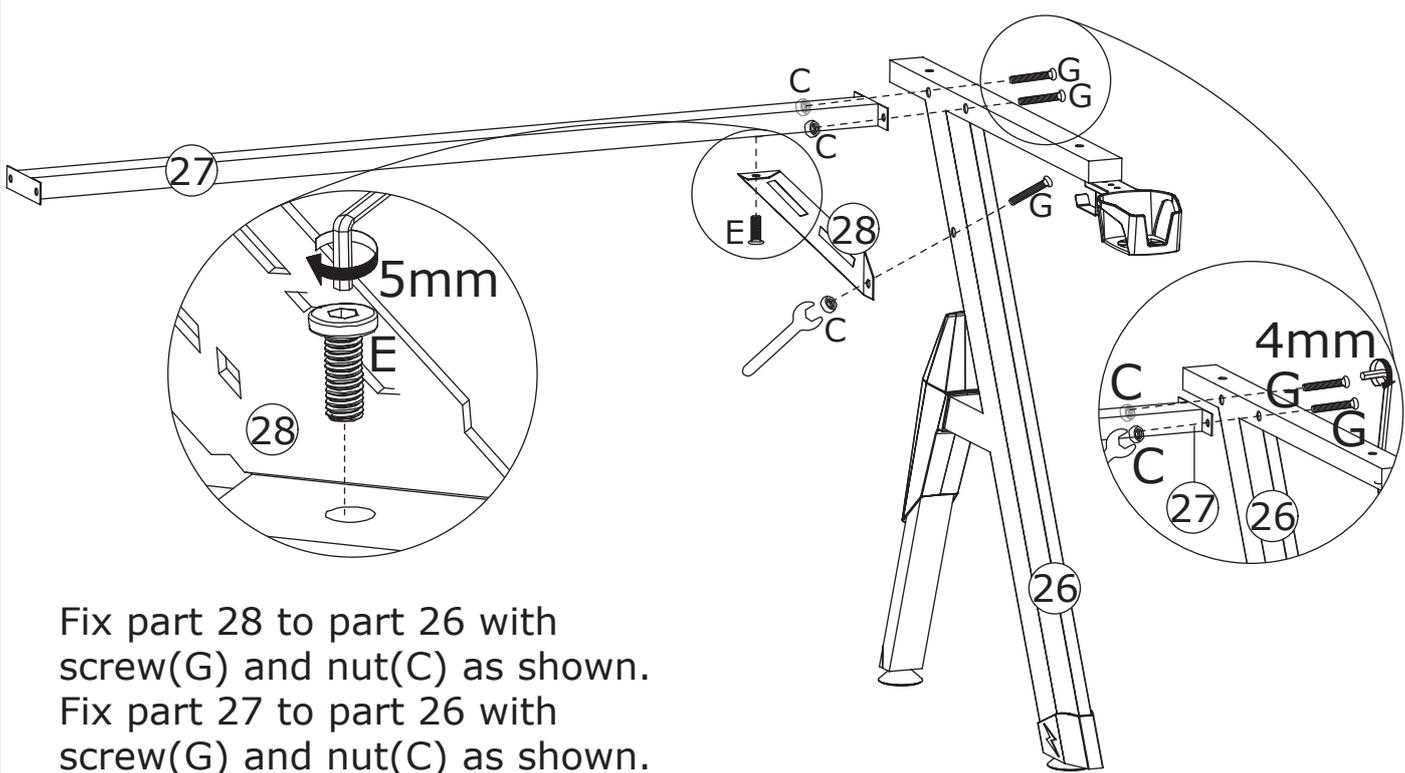

Fix part 28 to part 26 with screw(E) and nut(C) as shown. Fix part 27 to part 26 with screw(G) and nut(C) as shown.

15

C x 2




6 mm

G x 2








Ø6 x 50 mm

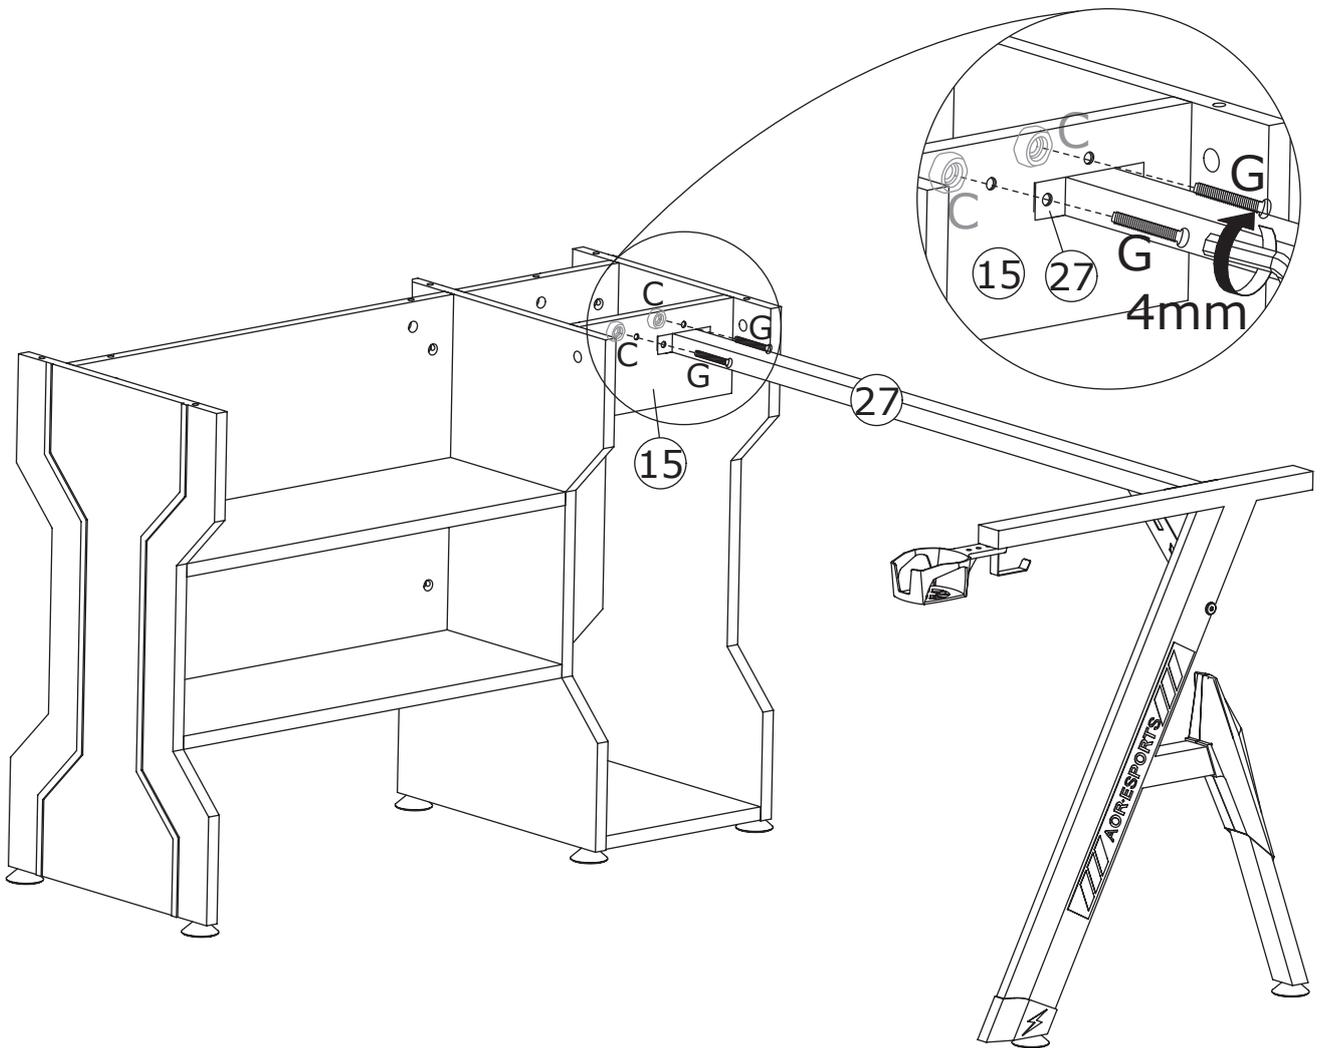

Fix part 27 to board 15 with screw(G) and nut(C) as shown.

   16




| | | | | | |
|--|--|---|---|---|---|
|  A x 9 Ø5 x 31 mm |  D x 8 Ø4 x 16 mm |  1 x 1 800x600x18 mm |  2 x 1 1000x600x18 mm |  25 x 2 |  |
|--|--|---|---|---|---|

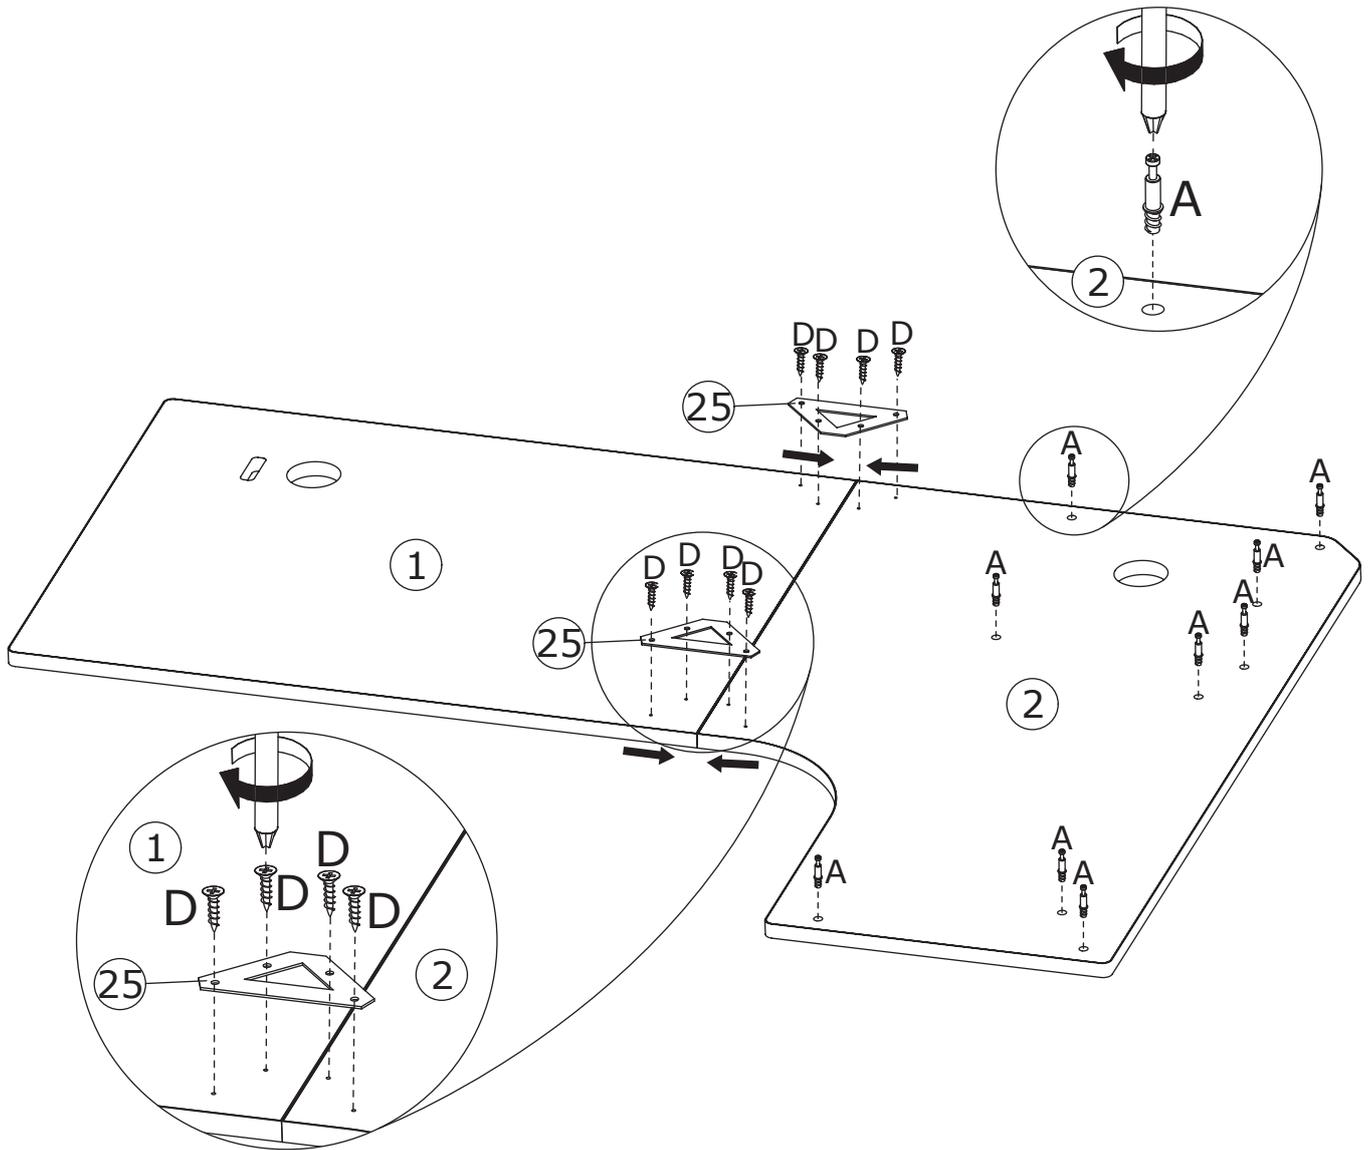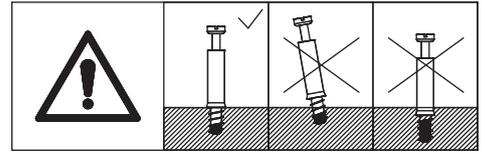

Screw eccentric rod(A) into board 2 as shown.
Fix part 25 to board 1 and 2 with screw(D) as shown.



17

(B) x 9
Ø 15 x 12 mm

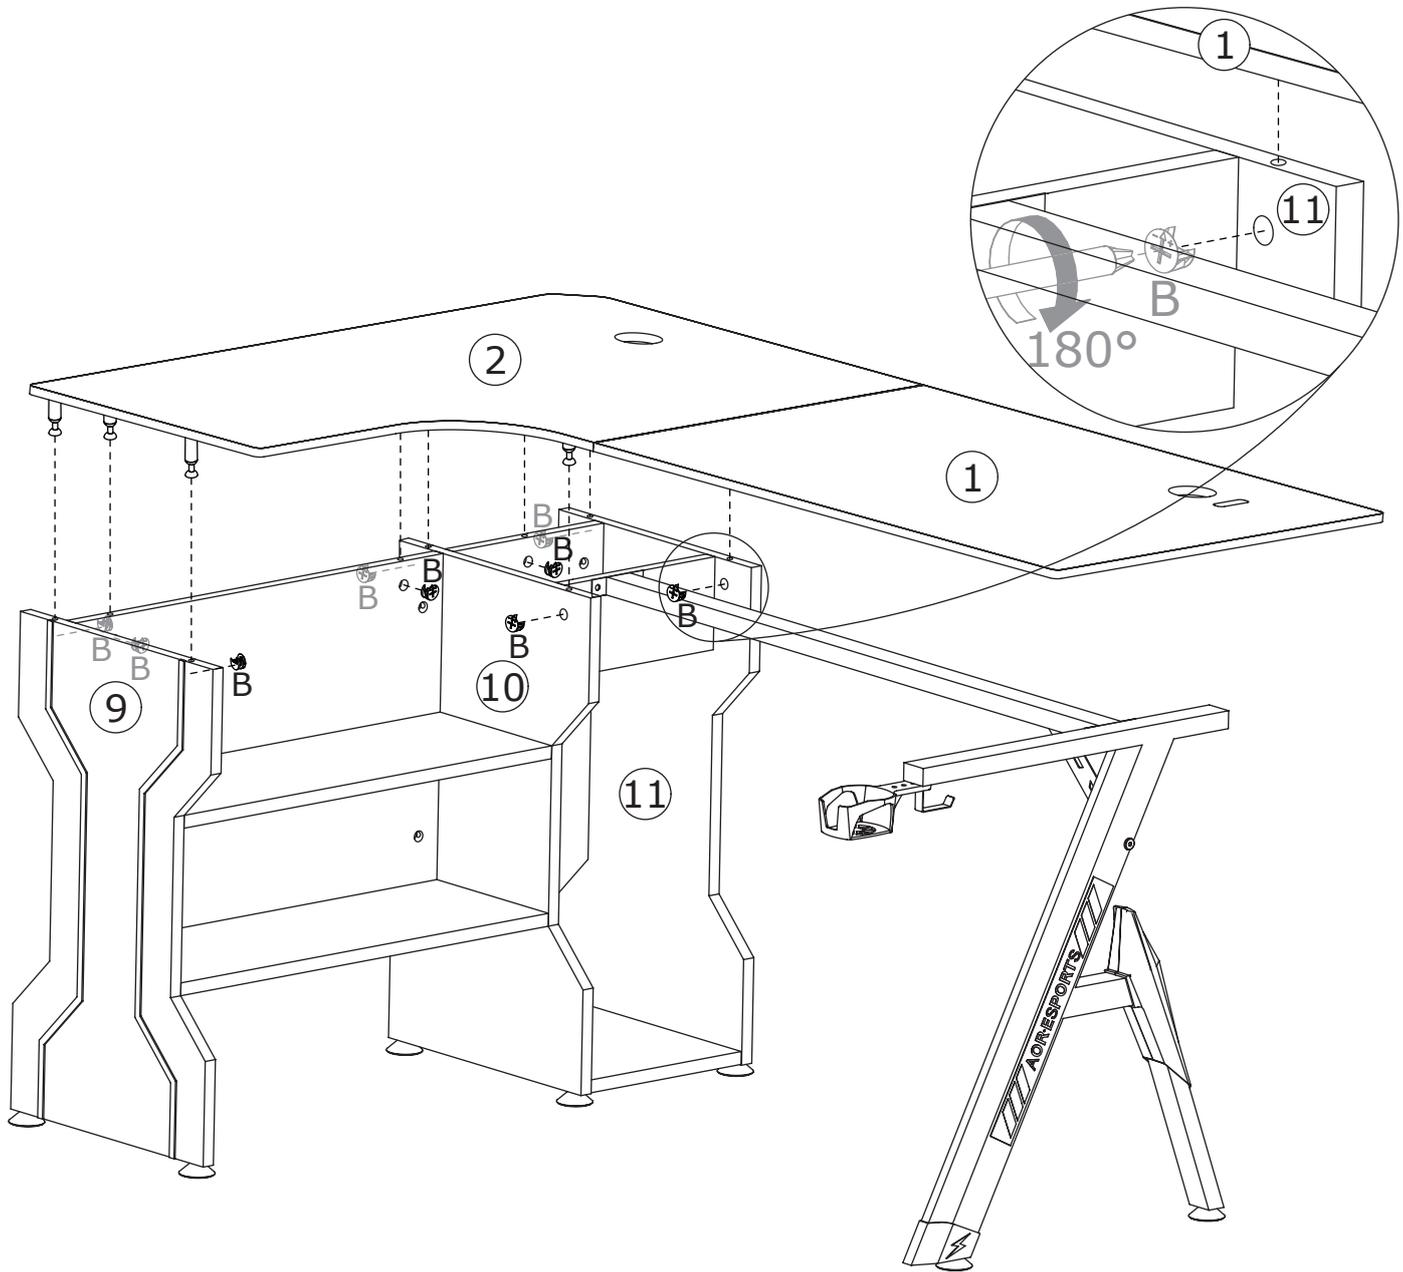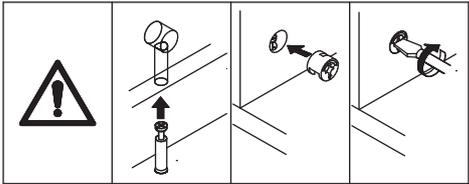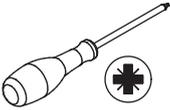


Cover board 1 and 2 to the top,
add cam lock(B) into and turn
clockwise to tighten as shown.

 

18

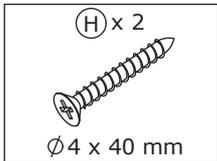


Fix board 1 to part 26 with screw(H) as shown.

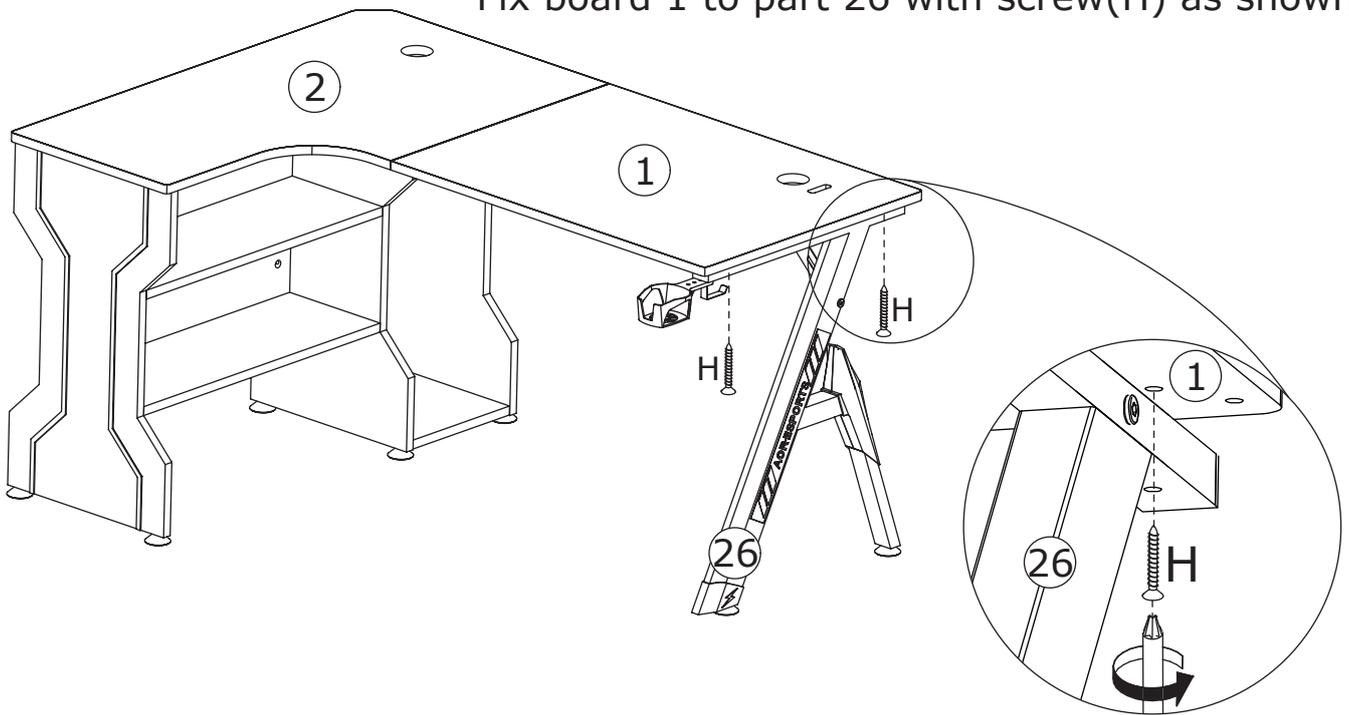





19

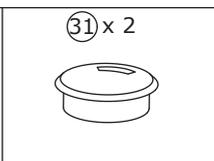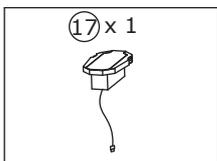

Place wire box 17 and 31 into holes.


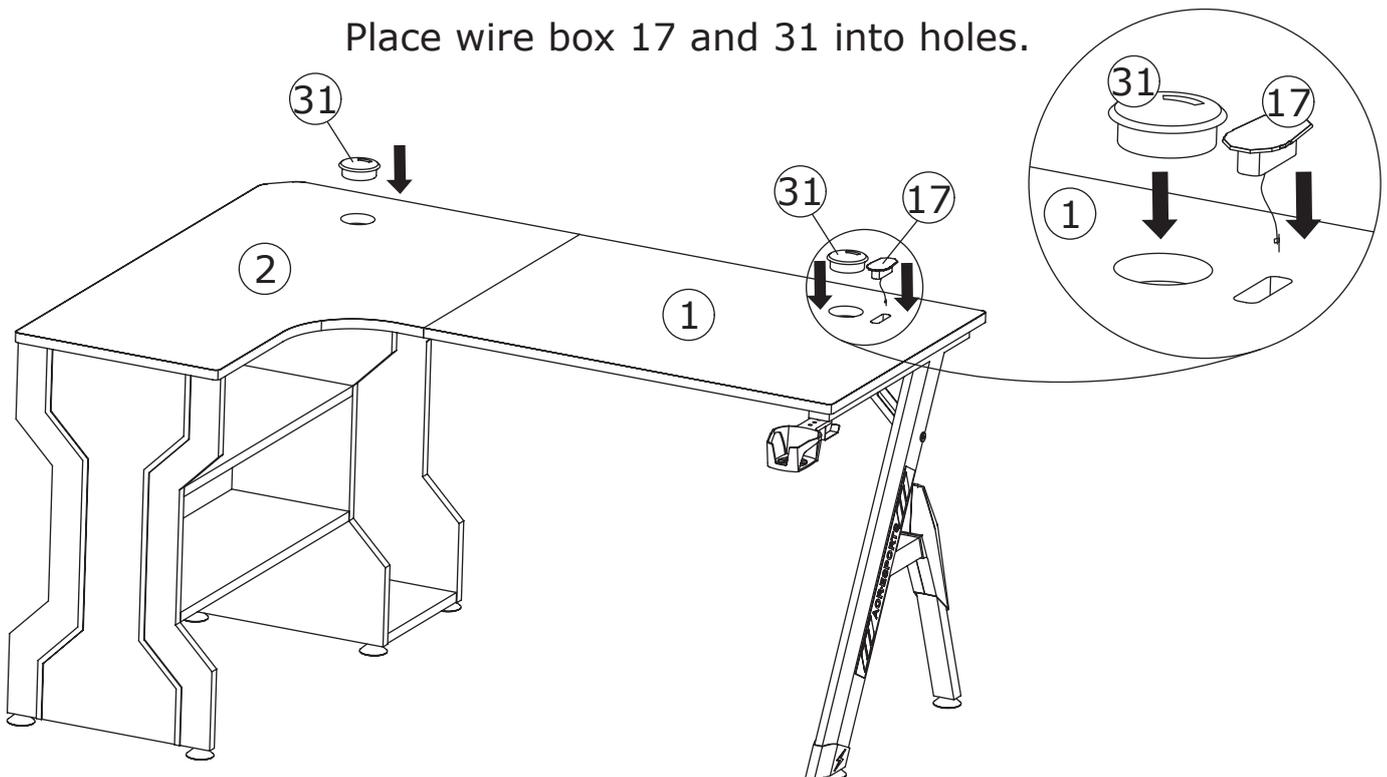


20

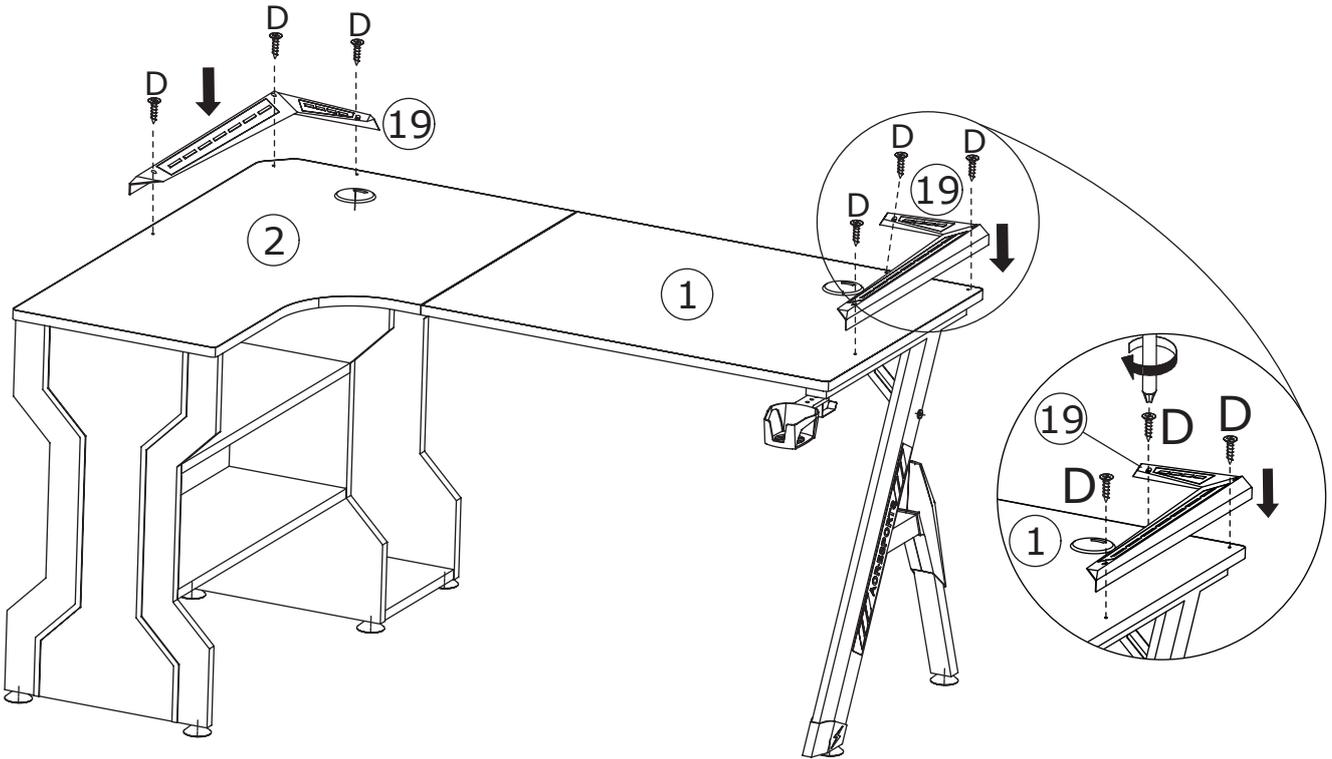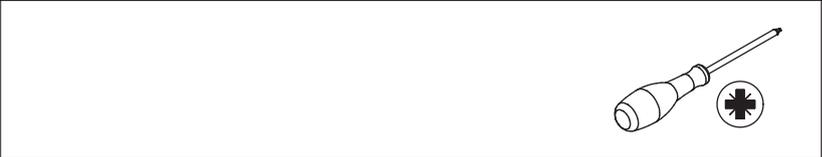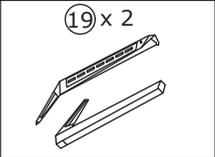
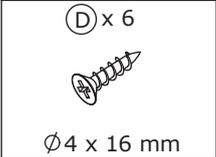


Fix part 19 to board 1 and 2 with screw(D) as shown.

21

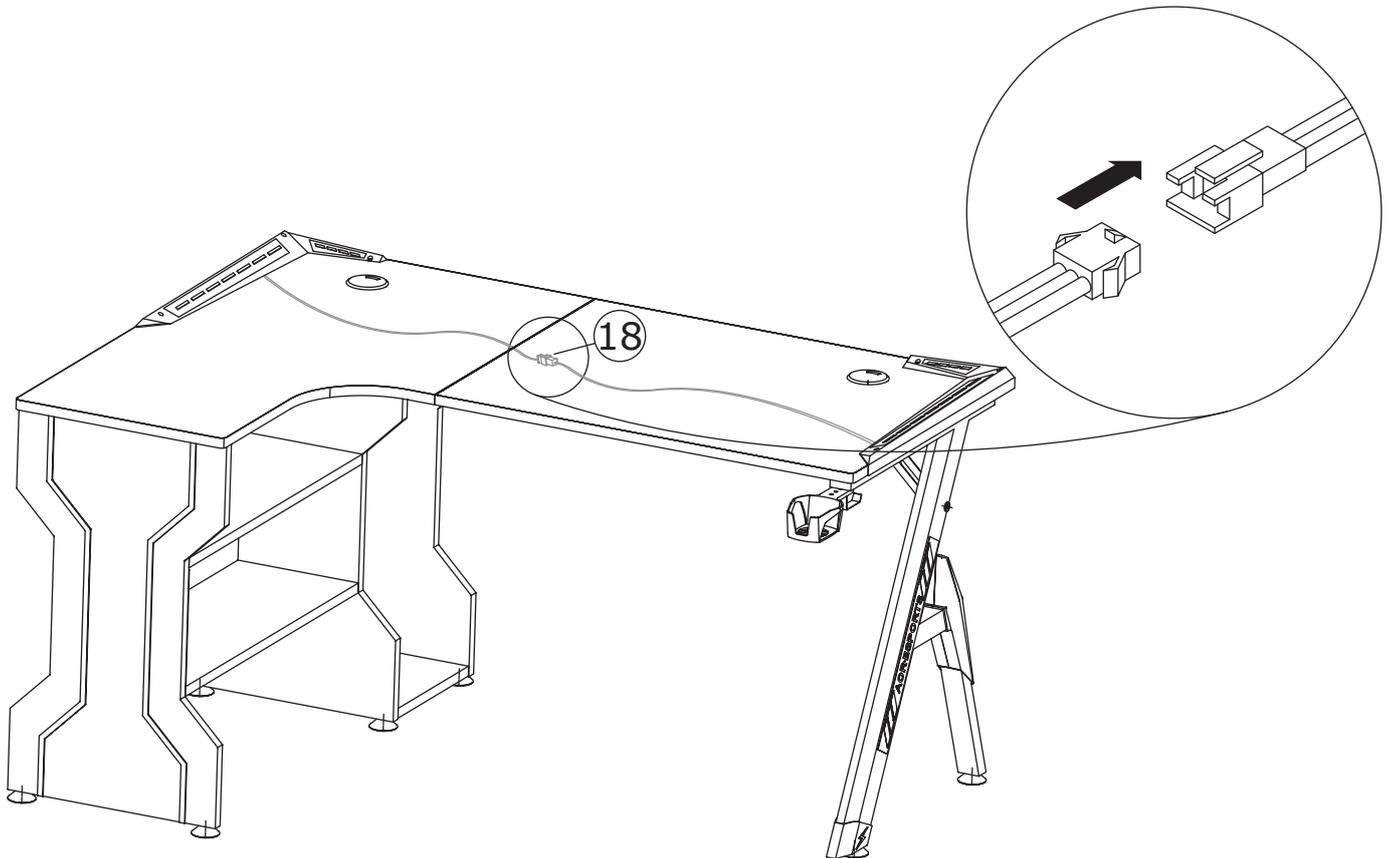
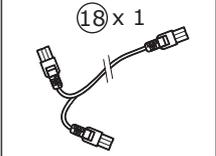


22

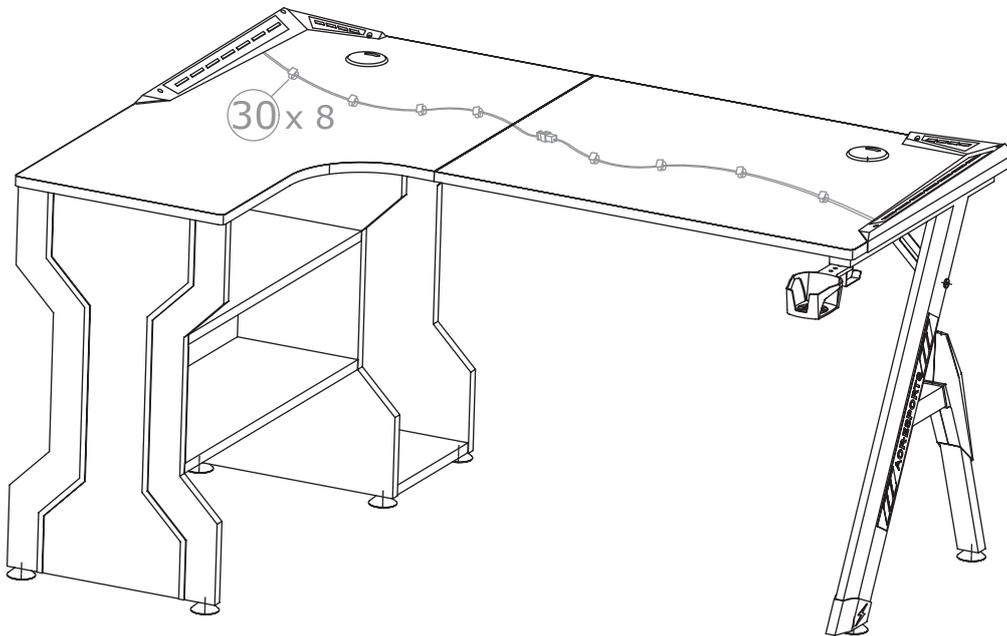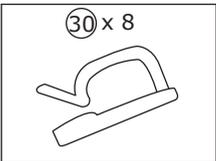

Use part 30 to fix part 18 to the item.



23

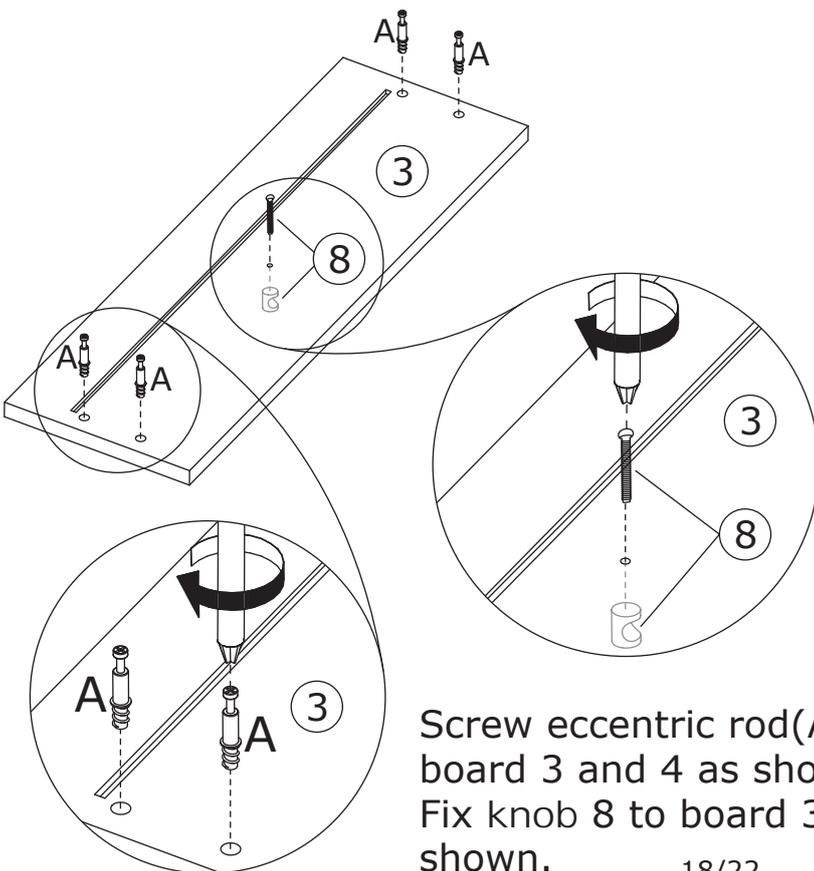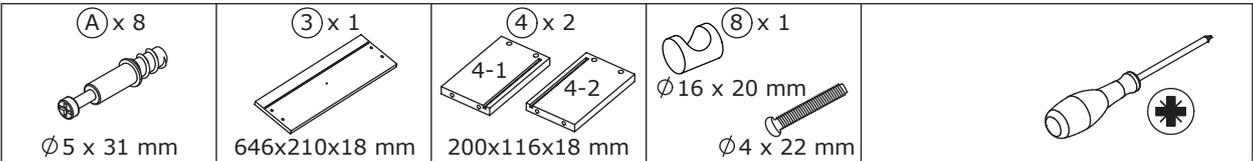


Screw eccentric rod(A) into board 3 and 4 as shown. Fix knob 8 to board 3 as shown.

24

| | | | |
|------------------------------------|------------------------------------|-------------------------------------|--|
| <p>(B) x 4</p> <p>Ø 15 x 12 mm</p> | <p>(5) x 1</p> <p>600x190x4 mm</p> | <p>(6) x 1</p> <p>589x116x18 mm</p> | |
|------------------------------------|------------------------------------|-------------------------------------|--|

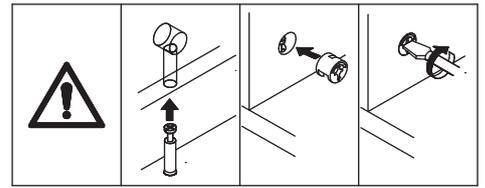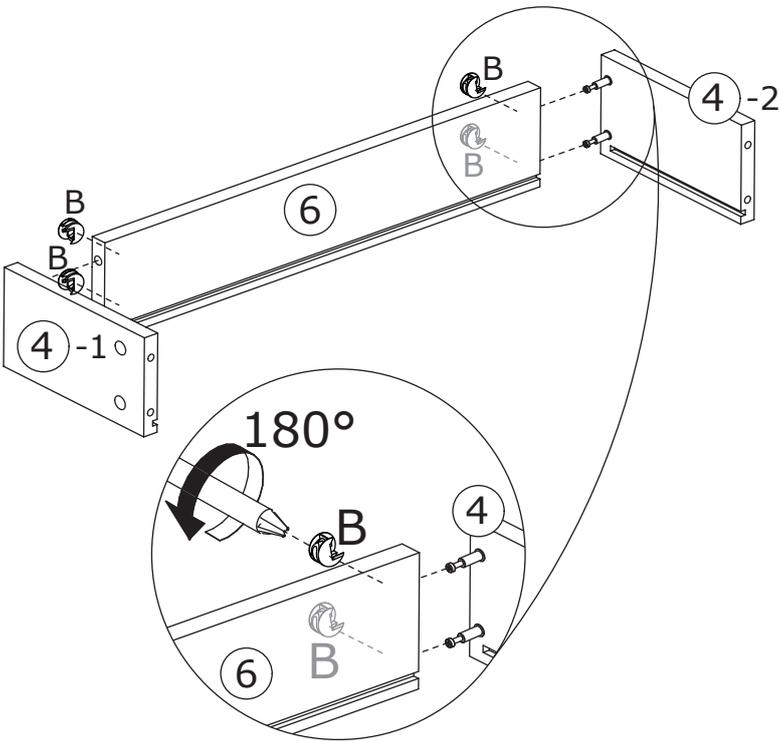




Connect board 6 to board 4, add cam lock(B) into and turn clockwise to tighten as shown. Insert bottom board 5 along grooves as shown.

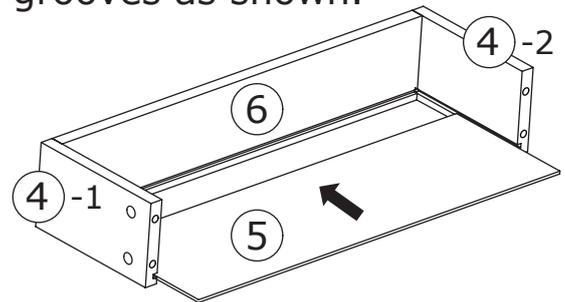





25

| | | | |
|------------------------------------|--|--|--|
| <p>(B) x 4</p> <p>Ø 15 x 12 mm</p> | | | |
|------------------------------------|--|--|--|

Connect board 3 to board 4, add cam lock(B) into and turn clockwise to tighten as shown.

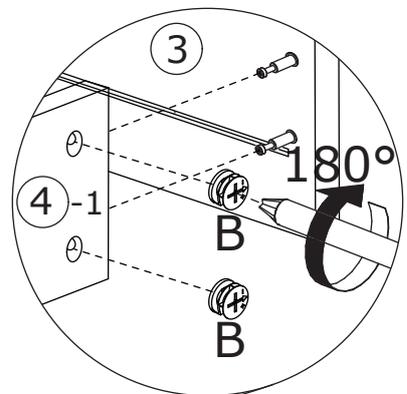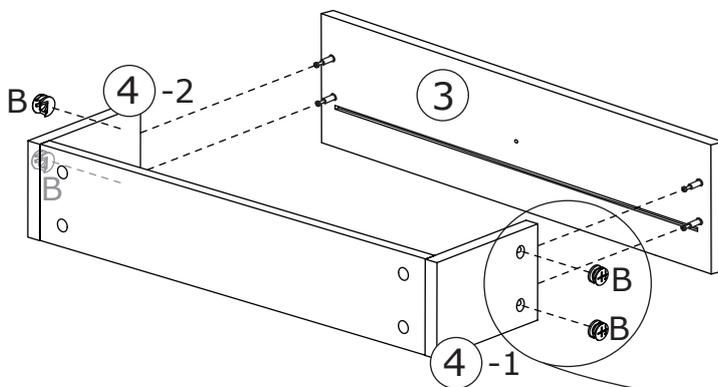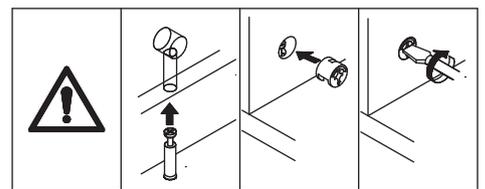

26

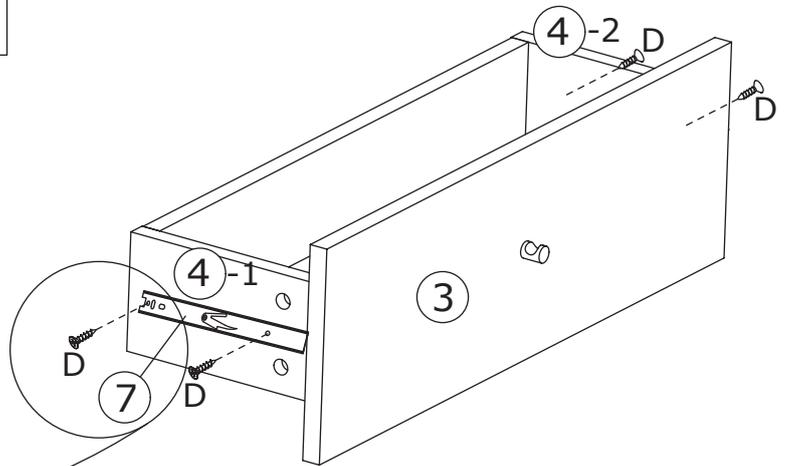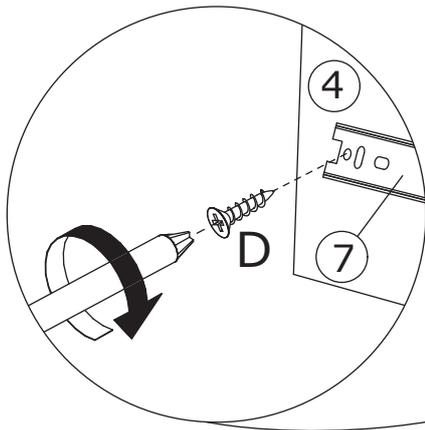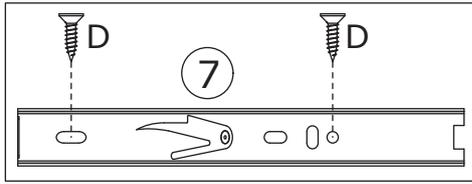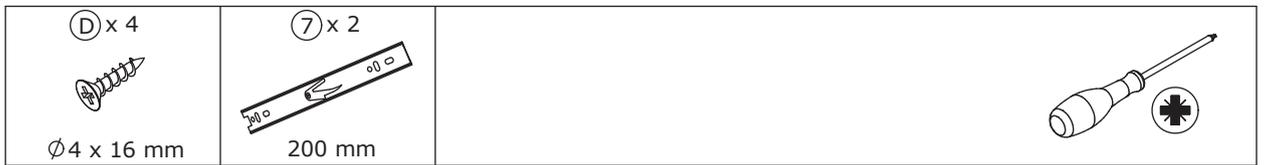



Fix runner part 7 to board 4 with screw(D) as shown.

27



Align rails, insert the drawer in.

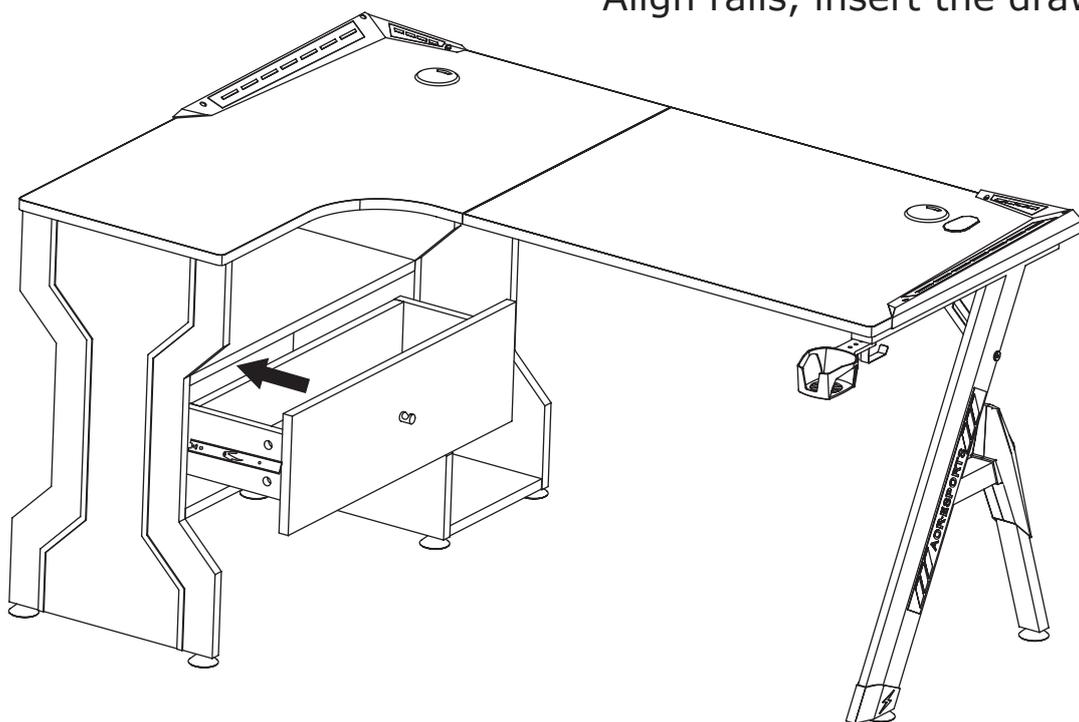

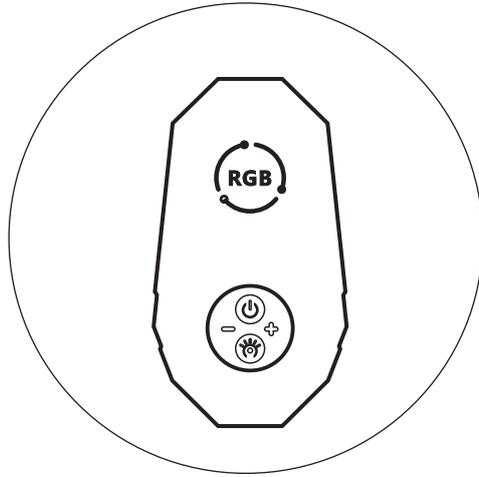

① Touch Button

①: Light button description



ON/OFF ——— Brightness Adjustment



RGB Lighting Effect Switch


②: Lighting Effect

Breathing Mode Alternate lights flicker, illuminate and darken

Dynamic Mode All lights illuminate with same colour, then all change to alternate colour

Dazzling Mode Lights illuminate in sequence around the desk

29

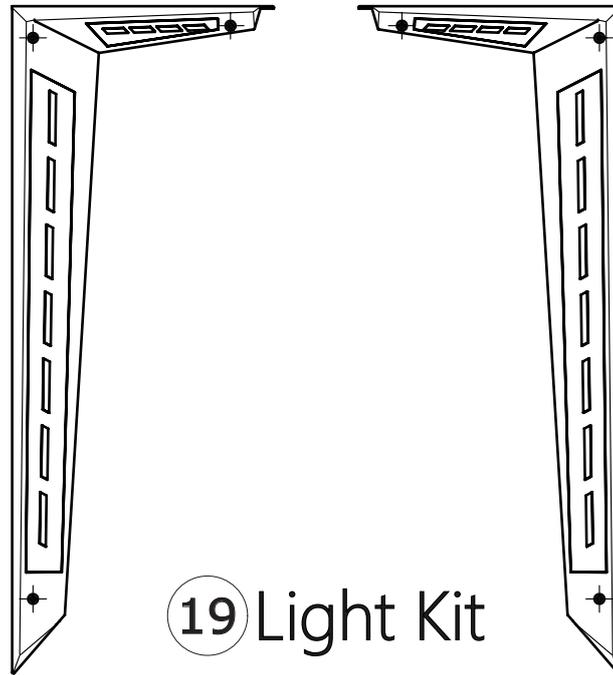

| Key Order | Button | |
|-----------|---|-------------------------------------|
| 1 |  | Press and hold to switch ON/OFF. |
| 2 |  | Press once to switch lighting mode. |
| 3 |  | Press once to adjust brightness. |

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387