



Disappearing Aquatic Garden

MODEL/MODELO #AGDB

REMINDER




CALL 1-888-755-4497
BEFORE RETURNING TO STORE.



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-888-755-4497, 8 a.m.-6 p.m., EST, Monday-Friday, or email us at customercare@smart-pond.com.

PACKAGE CONTENTS

Part	Description	Quantity
A	Pump	1
B	Reservoir	1
C	Lid	1
D	Fountain	1
E	Tubing	1

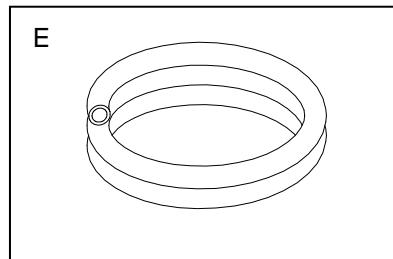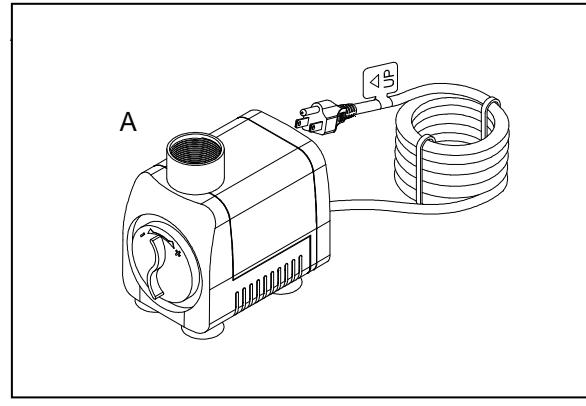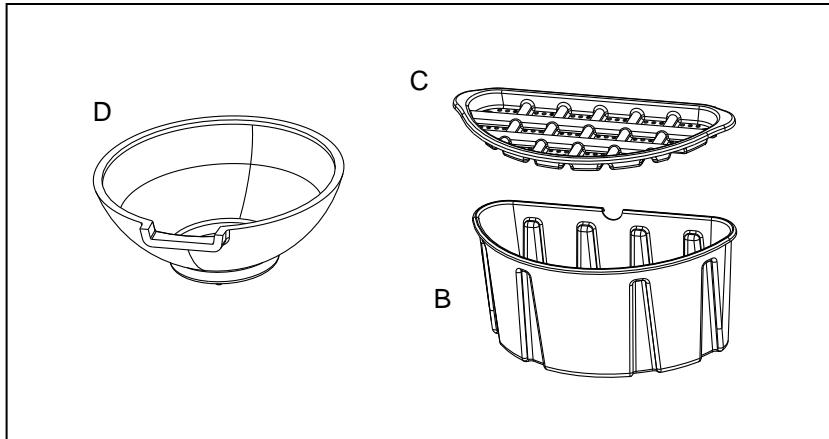

PLEASE CALL 1-888-755-4497 BEFORE RETURNING TO THE STORE.
WWW.SMART- POND.COM



WARNINGS AND CAUTIONS

WARNING

- Risk of electrical shock. This pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce the risk of electric shock, be certain that it is connected only to a properly grounded, grounding-type receptacle.
- Do not exceed the voltage shown on the pump.
- Always disconnect pump from the power source before beginning any maintenance or work on the pump.
- Inspect cord for damage before installation and/or maintenance. Replace the entire pump assembly if damage is found.
- Do not remove the grounding pin from the power cord plug.
- Risk of electrical shock: This pump has not been investigated for use in swimming pools or marine areas.

CAUTION

- This pump has been evaluated for use with water only.
- Use a proper power source as indicated on the pump label.
- Keep the cord away from high temperatures or other heat sources.
- Do not pump heated liquids.
- Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
- Operate in fresh water only. Avoid heavily chlorinated water and water with high pH levels.
- Do not lift the pump by its power cord.

PREPARATION

Before beginning assembly or operation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

- Estimated Assembly Time: 1 hour
- Tools required for assembly: shovel.

OPERATION INSTRUCTIONS

1. Dig a hole 25 inches x 13 inches x 12 inches deep. Fig. 1

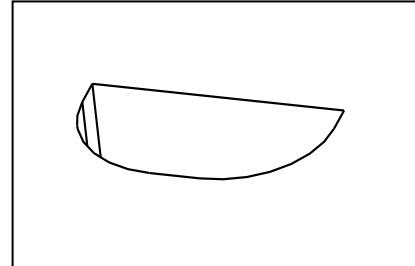


Fig. 1

2. Dig a narrow trench for the tubing (approximately 9 inches long x 2 inches wide). Fig. 2

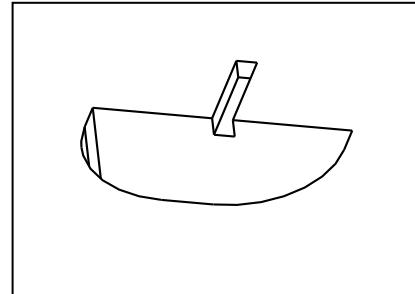


Fig. 2



PLEASE CALL 1-888-755-4497 BEFORE RETURNING TO THE STORE.
WWW.SMART- POND.COM

3. Place the reservoir inside the hole. Make sure that it is level. Fig. 3

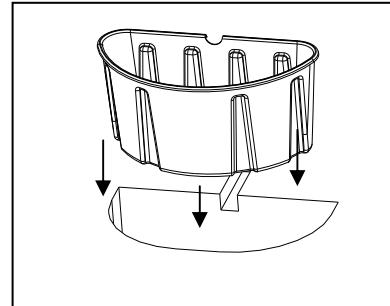


Fig. 3

4. Connect the tubing to the pump using the supplied adapter. Fig. 4

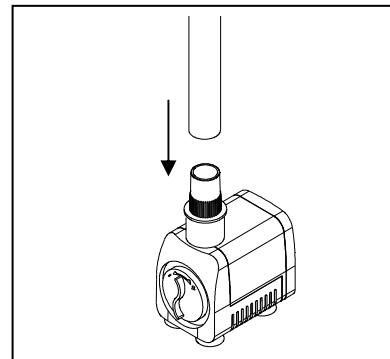


Fig. 4

5. Place the pump inside the reservoir. Route the tubing and powercord through the notch in the reservoir. Fig. 5

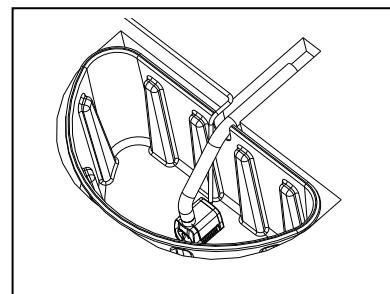


Fig. 5

6. Connect tubing to the inlet on the bottom of the fountain. Make sure that the tubing adapter is pointed in the same direction as the spillway. If not, carefully turn the adapter. Fig. 6

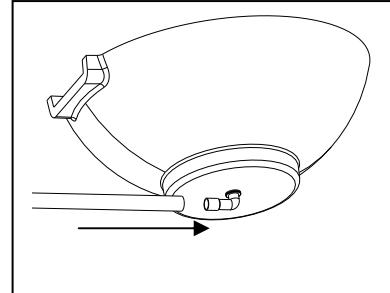


Fig. 6



**PLEASE CALL 1-888-755-4497 BEFORE RETURNING TO THE STORE.
WWW.SMART-POND.COM**

7. Place the fountain on the ground behind the reservoir. Position the fountain so that the spillway is directly above the middle of the reservoir. Check to make sure the fountain is level, front to back as well as left to right. Fig. 7

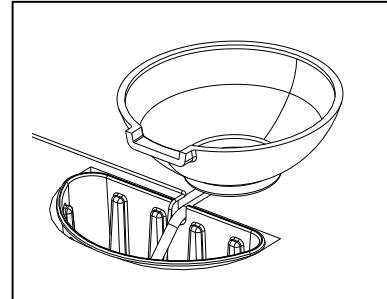


Fig. 7

8. Fill the reservoir with water then install the lid. Fig. 8

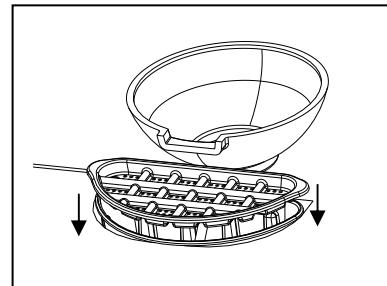


Fig. 8

9. Connect the pump to a proper power source. Check for leaks, then fill in the hole with dirt. Then decorate with rocks and plants as desired. Fig. 9

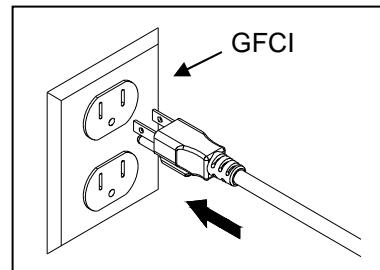


Fig. 9

CARE AND MAINTENANCE

- Regular cleaning of the pump may be necessary depending upon the environment in which it is operated. Clean the pump when it is visibly soiled or when a drop in performance is detected.
- Before cleaning, always disconnect the pump from the power source.
- Remove all parts from the pump and clean in warm, soapy water.
- Disassemble the pump cover and remove the impeller cover to expose the impeller assembly. Remove the impeller assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the impeller assembly and the inside of the impeller housing.

TROUBLESHOOTING

If the pump fails to operate:

- Check to make sure the power cord is plugged in, the pump is getting power and the pump is fully submerged.
- Check the pump outlet and any tubing, fountains, spitters etc. for kinks or obstructions.
- Remove the inlet screen and/or pump cover, and impeller cover to expose the impeller. Turn the impeller to ensure that it is not broken or jammed.

If the performance of the pump is not satisfactory or the pump does not flow evenly:

- Check to make sure the pump is completely submerged in water.
- Check to make sure the impeller and the housing are clean.
- Adjust flow control.





PLEASE CALL 1-888-755-4497 BEFORE RETURNING TO THE STORE.
WWW.SMART- POND.COM

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-888-755-4497, 8 a.m.-6 p.m., EST, Monday-Friday.

Part	Description
F	3/4 in. ID tubing adapter
G	Flow control knob
H	Front cover
I	Locking ring
J	Impeller cover
K	Large o-ring
L	Shaft support
M	Washer
N	Impeller assembly
O	Shaft
P	Check valve
Q	Gasket
R	Inlet

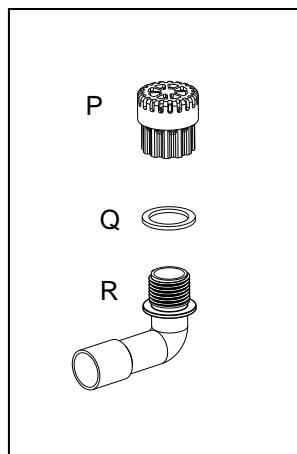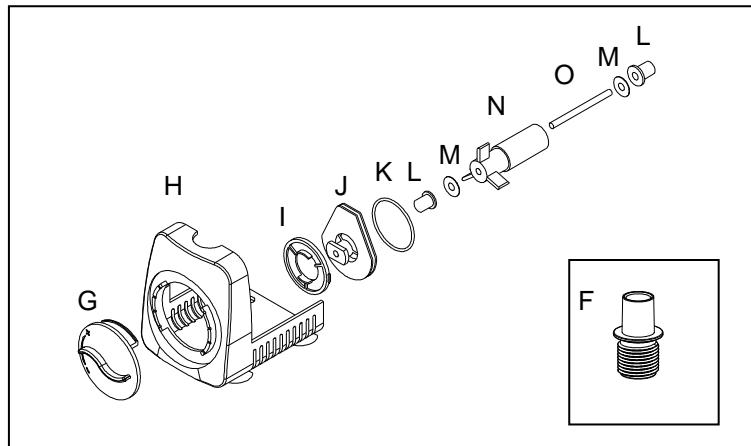

Printed in China



PLEASE CALL 1-888-755-4497 BEFORE RETURNING TO THE STORE.
WWW.SMART-POND.COM