


LXNY

New York Approved Steel Exit Sign

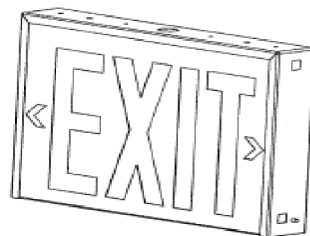

CAUTION: For safety and proper operation, read and follow instructions carefully before installation.

IMPORTANT SAFEGUARDS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND **WARNINGS:** MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE – For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations. If you do not understand these instructions or additional information is required, contact Lithonia Lighting or your local Lithonia Lighting distributor.

WARNING: RISK OF ELECTRIC SHOCK – NEVER CONNECT TO, DISCONNECT FROM OR SERVICE WHILE EQUIPMENT IS ENERGIZED.

WARNING: RISK OF FIRE – Lamps are hot. Keep combustibles material away from hot parts. Observe lamp manufacturer's warnings, recommendations and restrictions on lamp operation and maintenance. Make sure lamps are correctly installed.

WARNING: DO NOT USE ABRASIVE MATERIALS, OR OTHER SOLVENTS. USE OF THESE SUBSTANCES MAY DAMAGE FIXTURE, WHICH MAY RESULT IN PERSONAL INJURY.

WARNING: RISK OF PERSONAL INJURY – This product may have sharp edges. Wear gloves to prevent cuts or abrasions when removing from carton, handling, installing and maintaining this product.

(WHERE APPLICABLE)

- Before wiring to power supply, turn off electricity at fuse or circuit breaker.
 - Disconnect A.C. power and unplug battery before servicing.
 - Consult your local building code for approved wiring and installation.
 - Do not use outdoors.
 - Do not let power supply cord touch hot surfaces.
 - Do not mount near gas or electric heater.
 - Do not install a damaged fixture.
 - This product must be installed in accordance with the applicable installation codes and ordinances.
 - Proper grounding is required to ensure personal safety. (WHERE APPLICABLE)
 - All service shall be performed by qualified service personnel. This product must be installed and maintained in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.
 - Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
 - The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
 - Do not use this equipment for other than intended use.
- CAUTION:** Halogen cycle lamp(s) may be used in this fixture. To avoid shattering, do not operate lamp in excess of rated voltage. Protect lamp against abrasions and scratches and against liquids when lamp is operating. Dispose of lamps with care. Halogen lamps operate at high temperatures. Do not store or place flammable materials near lamps.

SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

Warranty Three-Year

This three year warranty covers any defect in manufacturing, provided the defect develops under normal and proper use. This liability extends only to replacement of the defective part. Labor charges will be honored by the factory only with prior written approval from an authorized Post Sales representative.



One Lithonia Way, Conyers, GA 30012, Ph: 1-800-334-8694, Fax: 770-981-8141

EMCSA00746 REV A

SAVE THESE INSTRUCTIONS!

GENERAL


1. This Exit is shipped with an EXTRA FACE PLATE & RED LENS to make the sign double face. Replace the BACK PLATE with the extra face plate & lens at the start of the installation process if the application calls for a double face sign.

CEILING or END WALL MOUNT


1. Slide out front exit panel face plate & lens/filter by removing the screw on the bottom of the unit.
2. Remove the (3) K/O s in either the side (for end wall mount) or top (for ceiling mount) of the fixture that line up with the same holes on the CANOPY/J-BOX COVER.
Note: FOR CEILING MOUNT, remove the INTERNAL TRANSFORMER/BATTERY COVER on the inside top of the fixture. Please re-insert after installation.
3. Using the (2) long 8-32 screws and lock nuts, attach the canopy to the proper area of the exit sign (as shown in figure 1)
4. Determine if ROUND ADAPTER PLATE will be needed for proper orientation of the exit sign. If it is needed, install it now with the remaining (2) / lo ng 8 -32 screws (as show in figure 2)
5. Mount sign to the J-BOX using the (2) 1-1/2 long 8-32 screws (figure 2), making sure to route the AC SUPPLY wires into the fixture. Use of the included 20" jumper wires if needed for this step.
6. Connect AC Supply wires to fixture input wires. BLACK is for 120 Volt. RED is for 277 Volt. WHITE is the COMMON.
7. For EL N Exits-Connect bi-pin BATTERY CONNECTOR to PC board.
8. Replace front panel and red lens and secure with bottom screw.

BACK MOUNTING

1. Slide out front exit panel face plate & lens/filter by removing the screw on the bottom of the unit.
2. Determine which mounting holes will be used to mount fixture to J-BOX, then punch out proper K/O s from the K/O pattern on the back panel of the housing.
3. Mount sign to the J-BOX using the (2) 1- / long 8-32 screws, making sure to route the AC SUPPLY wires into the fixture. Use the included 20 jumper wires if needed for this step.
4. Connect AC Supply wires to fixture input wires. BLACK is FOR 120 Volt. RED is for 277 Volt, WHITE is the COMMON.
5. For EL N Exits-Connect bi-pin BATTERY CONNECTOR to PC board.
6. Replace front panel and red lens and secure with bottom screw.

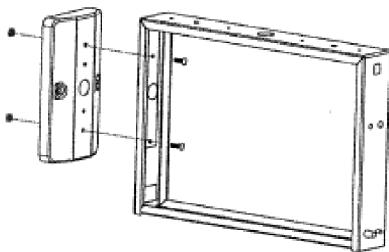


(Figure 1)

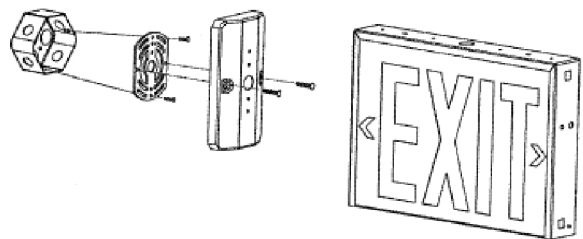

(Figure 2)

AC Only Wiring Diagram

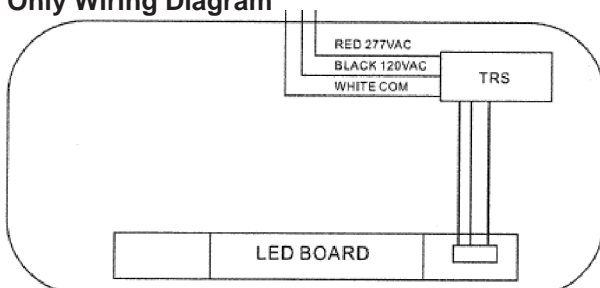

EL N Wiring Diagram

