

Galanz

SENSOR COOK			SENSOR REHEAT			AUTO MENU		WEIGHT DEFROST			TIME DEFROST		
CODE	PORTION		CODE	PORTION		CODE	PORTION	CODE	PORTION				
SC-1	5oz - 16oz	Oatmeal	SH-1	5oz-24oz	Chili		3.5oz	dEF-1	1-96oz	Meat	Press DEFROST button once for time defrost. Turn the dial to select time (00:10-95:00), then press the dial to start program.		
SC-2	7oz - 21oz	Fresh Vegetable	SH-2	7oz-24oz	Frozen Entrée		8 / 10 / 12 / 14oz	dEF-2	1-96oz	Poultry			
SC-3	7oz - 21oz	Fish	SH-3	5oz-16oz	Frozen Pizza		8 / 12 / 16 / 20 / 24 / 28oz	dEF-3	1-32oz	Seafood			
SC-4	5oz - 24oz	Ground Meat	SH-4	5oz-24oz	Mac and Cheese		8 / 12 / 16 / 20 / 24oz						
			SH-5	5oz-24oz	Mashed Potatoes		8 / 12 / 16 / 20 / 24 / 28oz	· Press DEFROST button twice for weight defrost. · Turn the dial to select food type. Press to confirm. · Turn the dial to select weight. Press to confirm.			HAVE QUESTIONS?		
			SH-6	5oz-24oz	Pasta		4 / 8 / 12 / 16 / 20 / 24 / 28oz						
			SH-7	5oz-28oz	Rice								
												Please Call : 1-800-562-0738	