

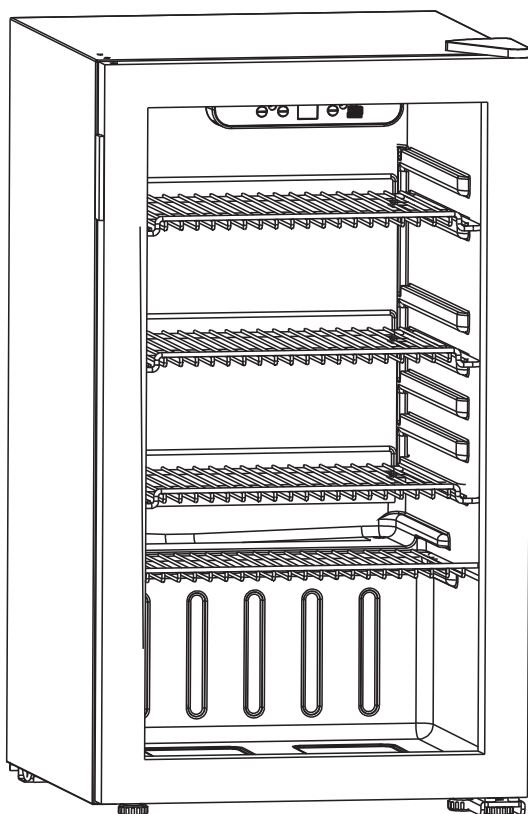 
BR-110

BEVERAGE REFRIGERATOR

User Manual

SKU: BR001-110SH-USZX / BR001-110SI-USZX

MODEL: BR-110



support@homyd.com



1-833-632-0897

Contents

Important Safety Instructions	01
Key Components And Structure	05
Installation Guide	06
Door Reversal Instructions	07
Getting To Know Your Beverage Refrigerator	09
FAQs	11
Troubleshooting	13
Specification	16
Warranty Policy	17

IMPORTANT SAFETY INSTRUCTIONS

 *To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:*

1. Read all instructions before using the appliance.
2. **DANGER** or **WARNING**: An empty beverage refrigerator can be hazardous for children or small pets. If disposing of the beverage refrigerator, remove all gasket seals, latches, lids, or the entire door from your unused appliance, or take other actions to ensure the beverage refrigerator is harmless.
3. Never allow children to operate, play with, or crawl inside the appliance.
4. Never clean appliance parts with flammable fluids or harsh chemicals. The fumes can create a fire or explosion.
5. **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

SAVE THESE INSTRUCTIONS

6. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
7. **DO NOT** use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
8. **DO NOT** store explosive substances in this appliance, such as aerosol cans with a flammable propellant.
9. **DO NOT** use extension cords or ungrounded (two-prong) adapters.
10. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; hotels, motels, and other residential-type environments; bed and breakfast environments; catering and similar non-retail applications.

INSTALLATION OF YOUR APPLIANCE

11. The appliance is designed for freestanding installation.
12. **WARNING: DO NOT** store or install the appliance outdoors.
13. **CAUTION:** This appliance is designed for storing and cooling beverages or wines. **DO NOT** store perishable food, medicine, or other medical products.
14. Place your appliance on a hard, level floor that is strong enough to support it when fully loaded.
15. To level your appliance, adjust the leveling legs at the bottom of the appliance, if necessary.
16. Allow at least **2 inches (50mm)** of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. We **DO NOT** recommend installing the appliance on a rug or carpet.
17. **DO NOT** install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating, and heat sources may increase electrical consumption. For best performance, **DO NOT** install the appliance behind a cabinet door or block the base grille. Extreme cold ambient temperatures may also prevent the appliance from performing properly.
18. Avoid locating the appliance in an area that may be exposed to excessive moisture.
19. **WARNING:** We **DO NOT** recommend using beverage cabinets outdoors, as this accelerates aging and malfunctions. Avoid direct sunlight exposure if necessary when using outdoors.
20. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-Listed, **3-wire** grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least **15 amperes**.

WARNINGS RELATED TO ELECTRICITY

Use a Properly Grounded Dedicated Outlet: This appliance requires a standard **115V/120V AC ~/60Hz** electrical outlet with a reliable three-prong grounding connection (rated 15A or more). Have a qualified electrician check the wall outlet and circuit to ensure they are properly grounded.

Dedicated Circuit Required: Always plug the appliance into its own electrical outlet with a matching voltage rating (per the appliance label). **DO NOT** share the outlet with other electrical appliances. This ensures the best performance and prevents overloading house wiring circuits, which could create a fire hazard from overheating. Handle the Power Cord & Plug Safely:

21. **DO NOT** damage the power cord under any circumstances. Be careful not to damage it when moving the appliance.
22. **DO NOT** plug or unplug power plugs with wet hands.
23. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
24. Immediately repair or replace all power cords that have become frayed, cracked, abraded, or otherwise damaged. **DO NOT** use a damaged cord.
25. To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.
26. Voltage Requirements: The beverage cooler uses an AC power supply of **115V/60Hz**. If the voltage fluctuation exceeds the range of **115V ±10%**, it can cause accidents or damage the cooler.
27. Gas Leak Procedure: In case of leaking gas, turn off the leaking valve and open all doors and windows. **DO NOT** unplug the cooler yourself, as it may cause a fire. Contact customer support immediately.
28. No Items On Top: For your safety, **DO NOT** place any electric devices (like microwaves) on top of the cooler.
29. Grounded Plug Warning: Improper use of the grounded plug may result in the risk of electrical shock.

WARNINGS RELATED TO USE

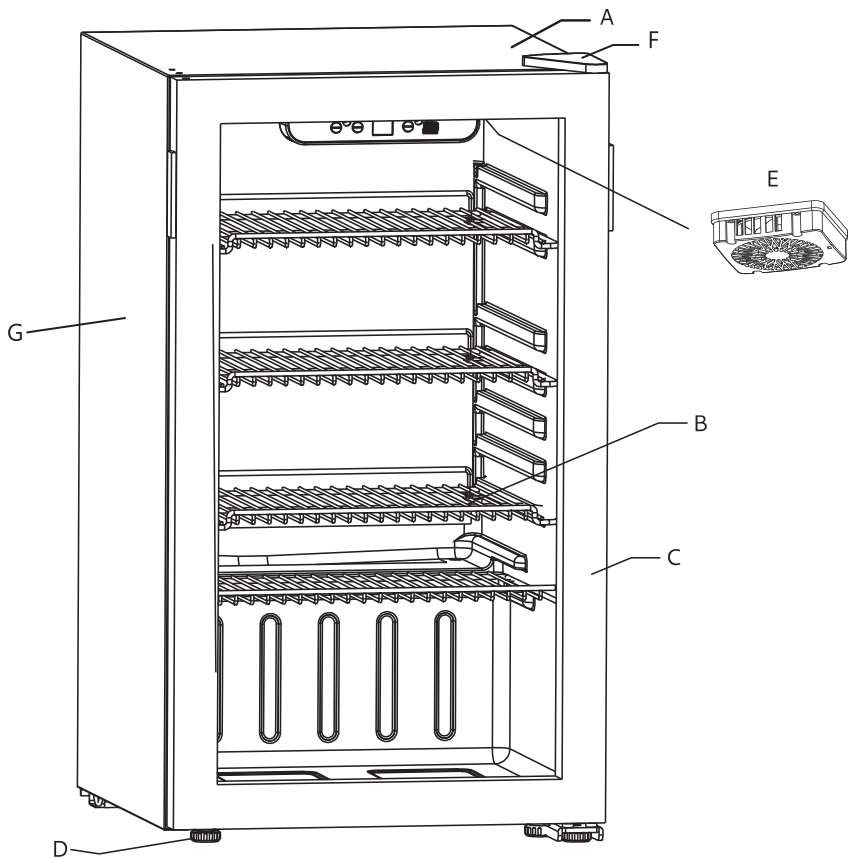 
30. Make sure there is ample ventilation space surrounding the beverage cooler.
31. Be careful not to get your fingers or any dangling accessories caught in the cooler door.
32. This cooler and its packaging are not intended to be played with or used by children. If a child uses the cooler, it must be supervised by an adult to avoid injury.
33. Children are strictly prohibited from climbing or entering the internal components of the equipment.

- 34. Keep the cooler away from moist,damp or, humid environments and situations so as not to damage the electrical insulation.
- 35. **DO NOT** use the base, cooler door, etc., as pedal or support.
- 36. **DO NOT** place heavy objects on top of the cooler to prevent accidental damage or injury.

WARNINGS RELATED TO PLACING ITEMS

- 37. **DO NOT** put flammable, explosive, volatile, or highly corrosive items in the cooler to prevent damage to the product or fire accidents.
- 38. **DO NOT** place flammable items near the cooler to avoid fires.
- 39. **DO NOT** cover or close ventilation and exhaust holes.

KEY COMPONENTS AND STRUCTURE



Part	Description
A	Base
B	Shelf
C	Reversible double-pane glass door
D	Adjustable front leveling legs
E	Fan
F	Hinged cover
G	Protective film (The machine is covered with a protective film that does not affect its functionality. You may remove it if desired.)

INSTALLATION GUIDE

BEFORE USING YOUR APPLIANCE

- 1.Remove the exterior and interior packaging.
- 2.Before connecting the appliance to the power source, let it stand upright for approximately **24 hours**. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- 3.Clean the interior surface using lukewarm water and a soft cloth.

INSTALLATION LOCATION

The beverage refrigerator should be placed in a dry, well-ventilated area with convenient access for daily use.

DO NOT install the appliance where the temperature will go below **15.5°C (60°F)** or above **32°C (90°F)** because it will not maintain proper temperatures. Be sure to install your beverage refrigerator on a floor strong enough to support it when it is fully loaded

FREESTANDING INSTALLATION

A freestanding installation will allow you to install the beverage refrigerator anywhere you desire, provided the required clearance space around the appliance is respected. In every setting, there must be adequate ventilation and access for service. Never install or operate the unit in an enclosed area, such as a closed cabinet. Allowance of at least **5cm (2 inches)** of space between the back and sides of the appliance is suggested, which allows the proper air circulation to cool the compressor and condenser.

Suggesting an open and ventilated space:

Sides: **5cm (2 inches)**


Top: **5cm (2 inches)**

Back: **5cm (2 inches)**

DOOR REVERSAL INSTRUCTIONS



#2 Phillips
screwdriver

 

0.8cm(5/16-inch)
Socket tool

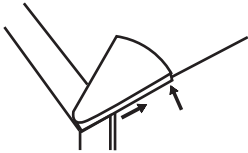 
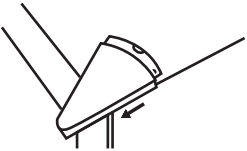 
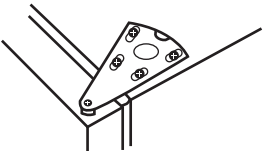 







Flat head
screwdriver



Hex wrench

TOOLS NEEDED: Phillips screwdriver **#2 or 0.8cm(5/16 inch)** socket tool and hex wrench. The beverage refrigerator is shipped with the door hinge brackets attached on the right side. The door maybe reversed to allow opening from the right side. If you plan on reversing the door hinges, **DO NOT** plug the beverage refrigerator into the power outlet.
REMOVE METAL SHELVES BEFORE REVERSING THE DOOR.
IMPORTANT: **DO NOT** place the beverage refrigerator upside down during installation, as this may cause damage to the appliance.

 ①	 ②
Using a thin flat-head screwdriver, gently remove the plastic plugs from the left side of the top of the beverage refrigerator.	Loosen the triangular bracket cover by pushing it toward the back of the refrigerator while simultaneously lifting it upward.
 ③	 ④
Then, slide the cover toward the front of the unit and lift it off completely.	Unscrew and remove the metal top hinge bracket by loosening the three screws.

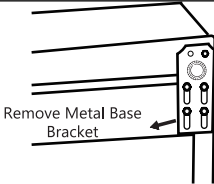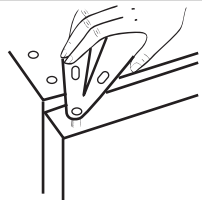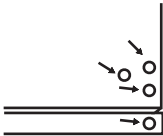      5	 6
Carefully place the unit backward so that the door is facing upward. Remove the bottom metal base bracket. Unscrew the axle insert using a hex wrench, and install it into the corresponding hole on the opposite side of the base bracket.	Remove the two screws and the adjustable leveling legs from the left side of the cabinet door. Reattach the removed metal base bracket on the new hinge side.
 7	 8
Reinstall the screws and the adjustable leveling legs on the opposite side accordingly. Carefully lift the unit back to its upright position.	Place the top bracket into the door and align the metal bracket holes over the holes in the top of the unit cabinet. Tighten the three screws to hold in place.
 9	 10
Carefully slide the triangular bracket cover back onto the metal bracket and press it down until fully seated.	Reinstall all plastic hole insert plugs.

IMPORTANT:

After completing the door reversal process, do not plug in the beverage refrigerator for **at least 24 hours**. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR



PROPER USE OF BEVERAGE COOLER

Startup

Connect the power cord to a standard wall outlet. After the connection, you will immediately hear a short beep.

Display Controls

The default temperature is **6°C (43°F)**. Use the $\oplus$ and $\ominus$ buttons to set the desired temperature between the range of **0°C-16°C (32°F-61°F)**.

The display will flash while the temperature is being set. The numbers displayed on the screen will indicate the current internal temperature value. The digital display reading will adjust as the unit cools.

While the unit is adjusting to the new setting, press the $\oplus$ or $\ominus$ buttons to view the selected temperature setting.

If there is a power outage, the unit will revert to the last temperature setting once power is restored.

LED LIGHT

Press the 💡 button to turn the LED light on and off.

To extend the lifespan of the LED light and conserve energy, it is recommended to turn on the light only when selecting or placing beverages. At other times, please keep the light turned off.

Loading Beverages

When first loading the beverage cooler to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Use the Adjustable Thermostat Control to set the temperature to **6°C (43°F)** (also the default temperature).
2. Allow the beverage cooler to cool for a minimum of two hours.

3. Load the beverages.
 4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
 5. Once the beverage cooler has cooled the beverages to **6°C (43°F)**, select a desired cooler internal temperature using the Adjustable Thermostat Control.
 6. Allow several hours for the beverage cooler to cool to the desired lower temperature.
- Note:** Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior.

MAINTENANCE

DISCONNECTING THE BEVERAGE COOLER

Unplug the power plug from the socket to disconnect the cooler.

CLEANING YOUR BEVERAGECOOLER

Dusting behind the cooler and on the ground will improve the cooling effect and save energy. The interior of the cooler should be cleaned to avoid any odors. Follow the cleaning procedure below.

1. Unplug the cooler and empty the beverages from the beverage cabinet.
2. Wipe the door seal clean with warm water.
3. Use soap and warm water to clean the cooler.
4. Reconnect the cooler when the cooler is clean and dry.

Note: DO NOT use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items as this may damage the surface and interior of the cooler.

FAQs

1. Is this rated for outdoor use? I see pictures of an outdoor island.

This beverage refrigerator is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3. Will the beverage refrigerator go to 34 degrees?

The temperature of the beverage refrigerator can be set between **0°C (32°F) and 16°C (61°F)**. **However**, due to the influence of the internal and external environment, there may be slight variations in the actual displayed temperature.

4. Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

5. Is it possible to change the direction of the door?

The orientation of the beverage refrigerator door can be changed. Our manual contains detailed tutorials.

6. Does this beverage refrigerator need to be installed?

The beverage refrigerator does not require installation. After receiving it, let it stand for 24 hours before powering it on for use.

7. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team.

8.Can the shelves inside the refrigerator be moved?

The shelves inside the refrigerator are adjustable and can be moved.

9.Is it normal for a beverage cooler to get hot outside?

It is normal for a refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

10.Does it keep food securely cold?

Hi there, our beverage refrigerator is primarily designed to store drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that need to be frozen, we recommend the safest practice is to use a freezer that is specifically designed for food storage.

TROUBLESHOOTING

Problem	Possible causes	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	A house fuse has blown, or the circuit breaker is tripped	Replace the broken fuse or reset the breaker
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature.Keep the appliance away from sunshine or other heat sources
	The door is opened too often, or the door is not closed completely	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
The appliance frequently turns on and off	The ambient (room) temperature is too low or high	Decrease or increase the ambient (room) temperature
	A large amount of content has been added to the appliance	To minimize internal temperature fluctuation, DO NOT overstock the appliance
	The door is opened too often or the door is not closed completely	Close the door tightly,and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose.It is normal for the fan to come on and turn off to circulate the air inside of the unit for even temperature distribution and to save energy
The appliance makes too much noise	The noise may come from the flow of the refrigerant, and expansion of the inside walls may cause popping and crackling noises	It is normal that as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound

Problem	Possible causes	Solution
	Contraction and expansion of the inside walls may cause popping and crackling noises	Some popping or cracking noises are normal . They are caused by the expansion and contraction of the inside walls due to temperature changes
	The appliance is not level	Make sure the unit is placed on a hard and level surface. DO NOT place the appliance on carpet.
The door does not close properly	The appliance is not level	Make sure the appliance is on a hard and level surface. Avoid placing the appliance on a carpeted or soft surface
	The door was reversed and not properly installed	Reinstall door
	The shelves are out of position	Correctly install the shelves
Condensation builds up on the glass door	Ambient temperature or humidity is high	Lower the room humidity by a dehumidifier or air conditioner
Frost forms on the interior back panel of the unit	The temperature setting is very low and the unit is not fully stocked with beverages	To defrost the beverage cooler: 1.Use the ⊕ and ⊖ buttons to increase the temperature until the compressor turns off. 2.Allow the internal ice/frost build-up to melt. Ensure the internal drain (located at the middle back of the lower shelf) is not clogged. 3.During this time, the melted frost flows through an internal drain into a holding pan on top of the compressor. The heat of the compressor evaporates the liquid. 4.Reset the temperature to 6°C (43°F) and allow it to cool for at least one hour. 5.Adjust to the desired temperature setting.

Problem	Possible causes	Solution
The machine is not cooling at all	The refrigerant hasn't completely settled	Let the unit stand upright for 24 hours before plugging it in (to stabilize after transportation)
	The temperature wasn't set correctly for the first use	After powering on, set the temperature to 6°C (43°F) (default) using the adjustable thermostat. Before fully loading beverages, pre-cool the unit for 2 hours at the default temperature
	The door is not closed properly	Check the door seal for any damage. If not, close the door tightly and wait for more than 2 hours. If it does not resolve the issue, please check if the display still works and contact the after-sales team for assistance

SPECIFICATIONS

SKU	BR001-110SH-USZX/BR001-110SI-USZX
MODEL	BR-110
VOLTAGE	115V~60HZ
RATED CURRENT	1.2A
REFRIGERANT	R600A 0.78Oz/22g
FOAMING	CYCLOPENTANE
DIMENSIONS	17.4*18.9*31.1 in
NET WEIGHT	50.7LBS
GROSS WEIGHT	57.1LBS

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

SKU: BR001-110SH-USZX /
BR001-110SI-USZX

