


Instructions

NOTE :



1. Please Check whether the accessories are missing in time after unpacking. (Bulbs not included)
2. We offer 12 months guarantee. If you find any damaged or missing parts in transit, please feel free to contact us in your " Order " of the Amazon, we will solve it as soon as possible.

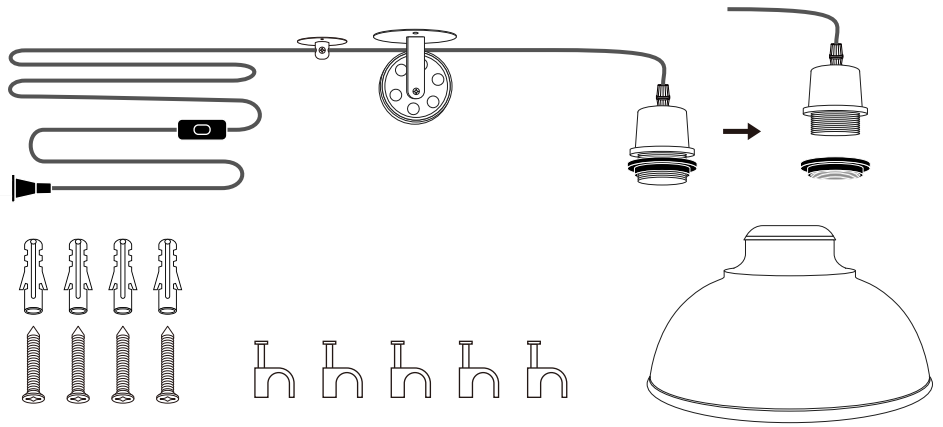

wall



Screw the hooks to the ceiling, using them to fix the fixture wire, adjust the hanging height of switch.

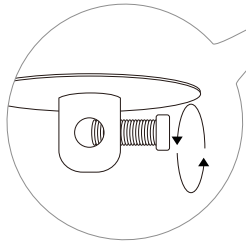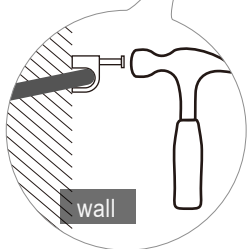

Rotate to adjust the tightness of the wire

