

Installation and Operating Manual

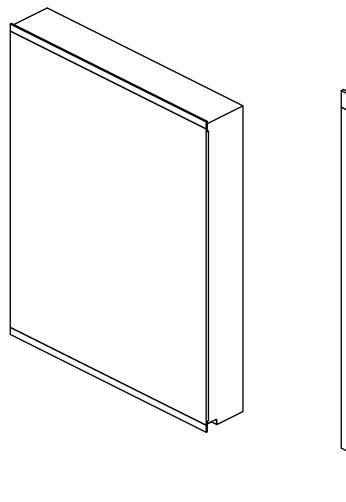

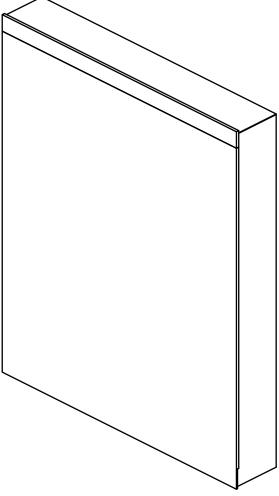

INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. We reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information please leave instructions for the consumer.
- Before installation carefully inspect the new fixture for any signs of damage.



WARNING: Risk of injury or product damage. Be careful when opening the door to avoid pinching fingers.



WARNING: Don't use acidic or alkalic cleaners or alcohol to clean the surface. Use a dampened cloth to clean.



CAUTION: Risk of electric shock. Electrical wiring may need to be relocated.



CAUTION: Risk of property damage. Use anchors (not provided) rated for the loaded weight of this product. Refer to the anchor manufacturer's instructions.



Important Information: This cabinet is designed for either right or left door swing. Check the wall cavity for obstructions.

Grounding Instructions


• This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

WARNING: Risk of electric shock. Improper use of the grounding plug can result in a risk of electric shock.


- If repair or replacement of the cord is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.
- Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.
- This product is factory equipped with a specific electric cord. If the product must be reconnected for use on a different type of electric circuit, the connection should be made by qualified service personnel.

Hotline: +1 302 336 8180

TOOLS REQUIRED

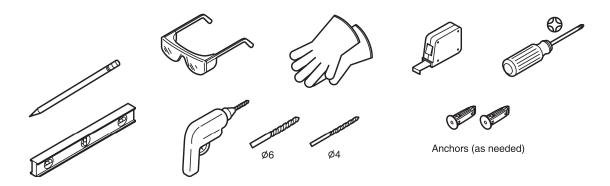

PARTS SUPPLIED

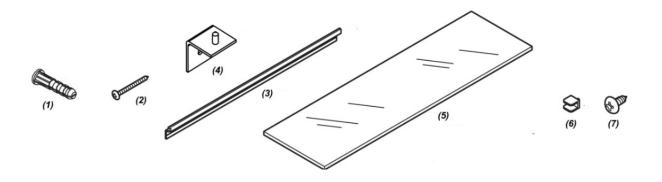

Item		(1) Anchors	x 6PCS
(2) Screws for wall	x 4PCS	(3) Mounting Bar	x 1PCE
(4) Support Angle	x 2PCE	(5) Glass panel	x 2PCS
(6) Clips	x 8PCS	(7) Screws for Support Angle	x 2PCS

Hotline: +1 302 336 8180


SIZE – MM & INCH


Reference Value 11FXMC1526V2L1 11FXMC2026V2L1 11FXMC2026V2R1 11FXMC1526V2R1 Luminous area ~ Luminous area~ इत्यार प्राप्त कर का प्राप्त कर कार्य का कार्य **अ**ति के का कार्य का कार्य का कार्य का Adjustable shelf Adjustable shelf 660.0(26") 660.0(26") Adjustable shelf Adjustable shelf Luminous area Luminous area. 380.0(15") $105(4\frac{1}{8}")$ 510.0(20") $105(4\frac{1}{8}")$ 11FXMC2030V2L1 11FXMC2430V2L1 11FXMC2030V2R1 11FXMC2430V2R1 Luminous area < Luminous area < TO SO WEET ON ENGANGED CONTRACTOR Adjustable shelf Adjustable shelf 760.0(30") Adjustable shelf Adjustable shelf 610.0(24") 510.0(20") ₈105(4¹") $105(4\frac{1}{8}")$


We reserves the right to change marked dimensions without prior notice.


INSTALLATION for


11FXMC1526V2L1 and 11FXMC2026V2L1 11FXMC1526V2R1 and 11FXMC2026V2R1

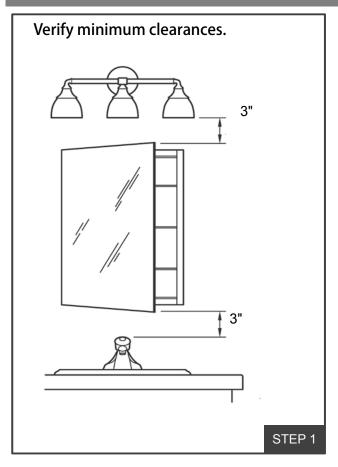


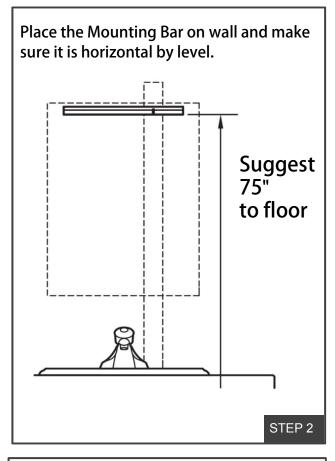


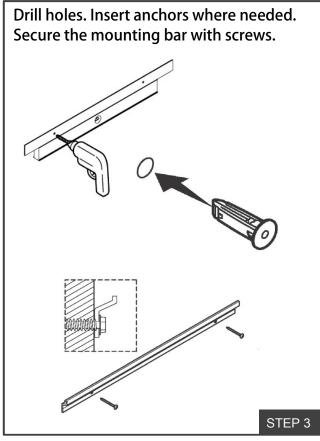


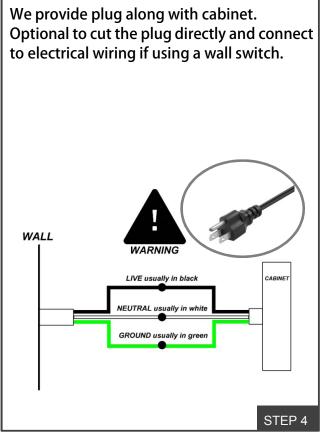


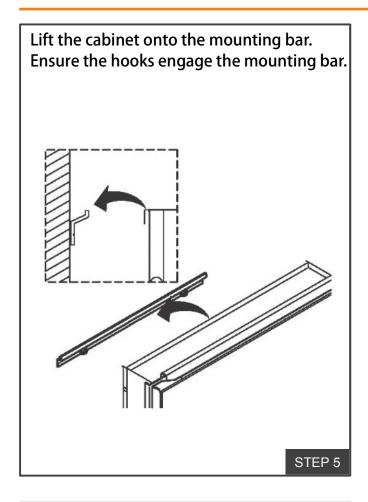

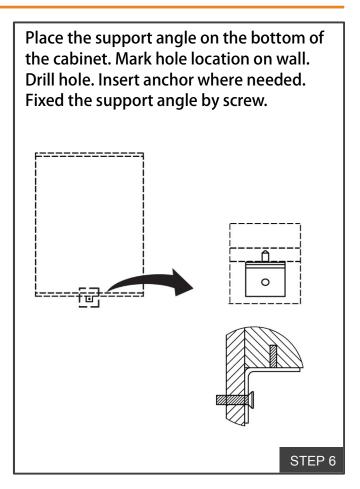

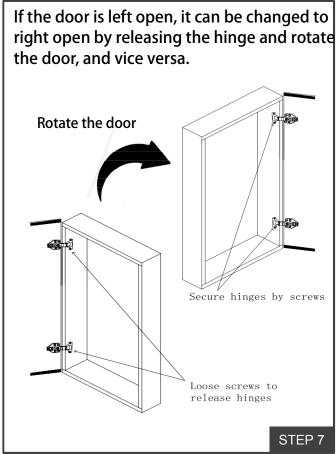


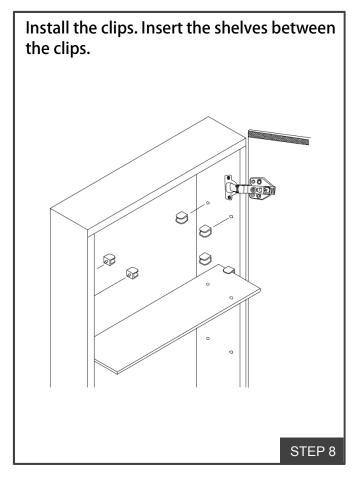

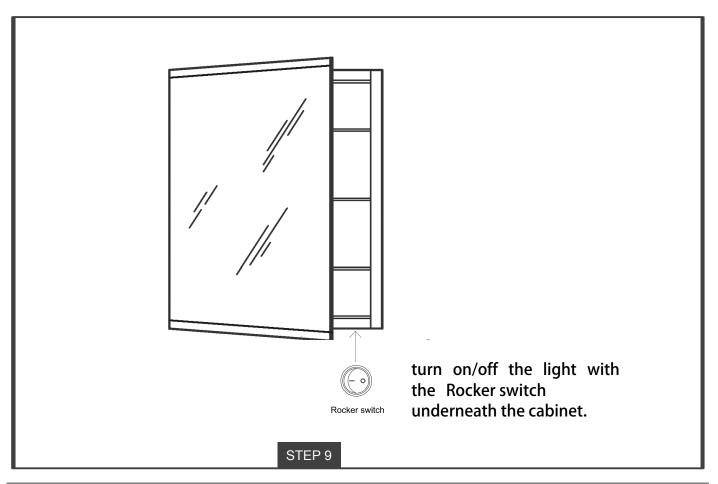


DOOR ADJUSTMENT (IF NEEDED)

Adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly.

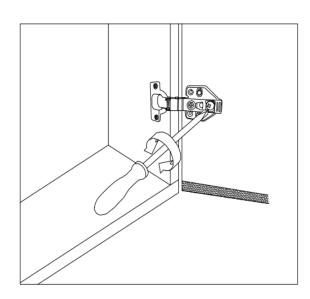

Adjust door gap

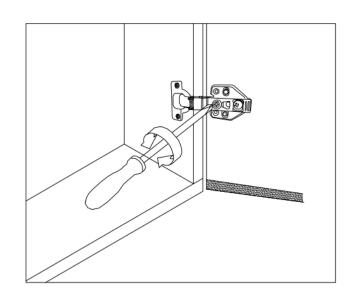


Adjust gap between door and cabinet


INSTALLATION for


11FXMC2030V2L1 and 11FXMC2030V2R1 11FXMC2430V2L1 and 11FXMC2430V2R1


We separate left-open door and right-open door for these models, they are not interchangeable. Luminous area is on top of the cabinet.

 
Make sure you are installing correct one.

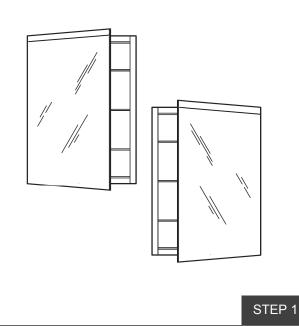



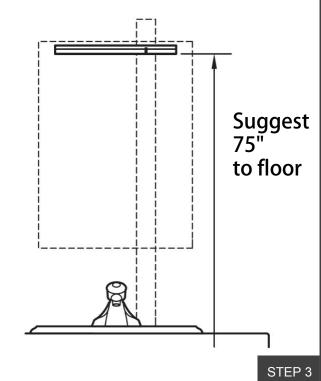

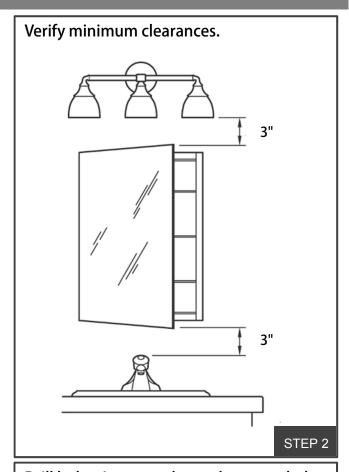


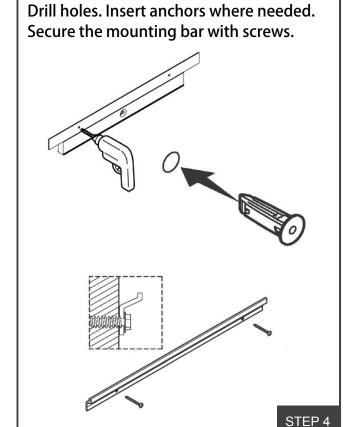


Wall warning if using a wall switch.


Wall warning if using a wall switch.

Wall warning if using a wall switch.

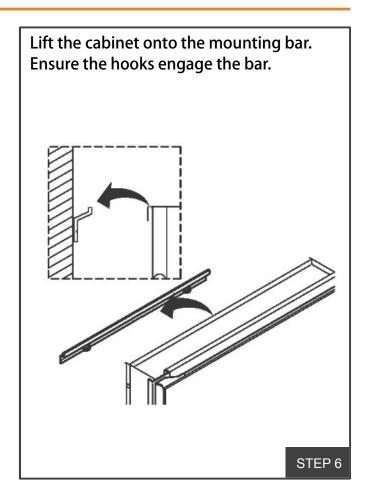


Place the support angle on the bottom of the cabinet. Mark hole location on wall. Drill hole. Insert anchor where needed. Fixed the support angle by screw.

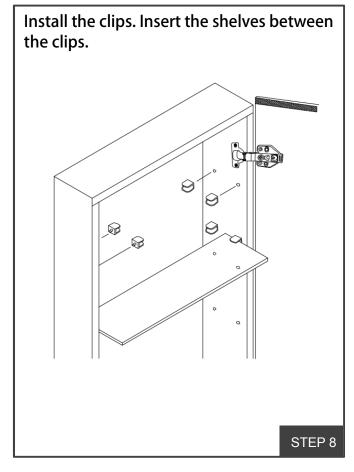

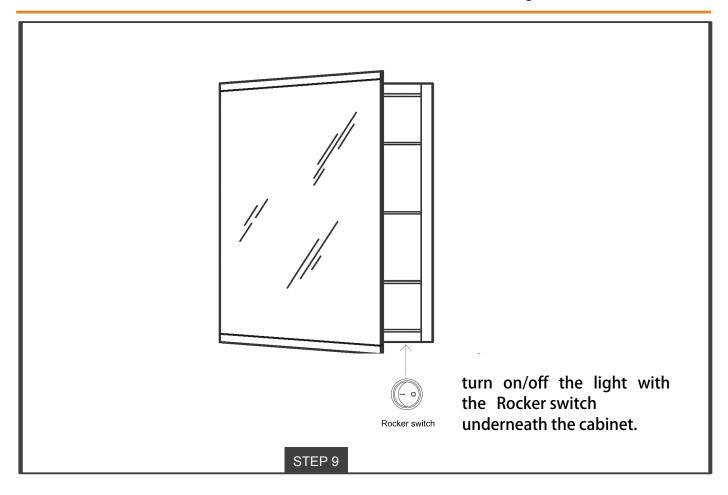


DOOR ADJUSTMENT (IF NEEDED)

Adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly.

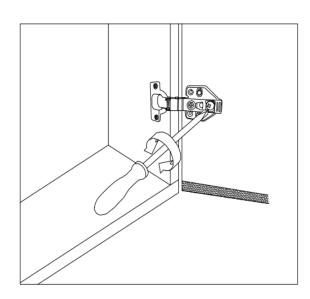

Adjust door gap

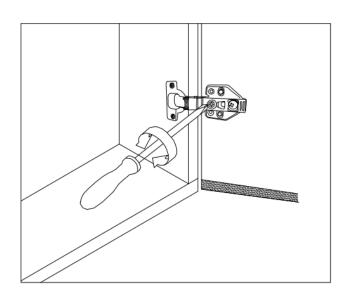

Adjust gap between door and cabinet