

INSTALLATION

Product Manual

Version: 460029-01-24A-HY



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

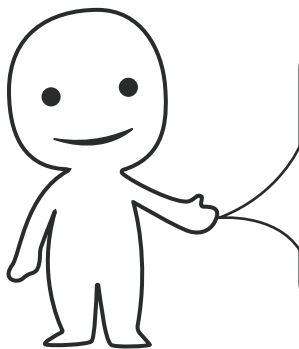


Please prepare the following tools

 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 82



M6 x 35 mm

 B x 82



Ø 12 x 9.5 mm

C x 35



M5 x 40 mm

D x 66



M3.5 x 12 mm

E x 5



SKLS-64

F x 10



 
M4 x 14 mm

G x 4




GZLS-270

H x 4




Ø 6 x 40 mm

 J x 4



DWJL

 K x 8




Ø 5 x 16 mm

L x 60




M3 x 12 mm

 
M x 4



ZWJL

  P x 4

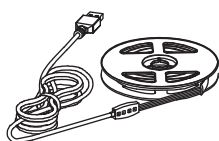

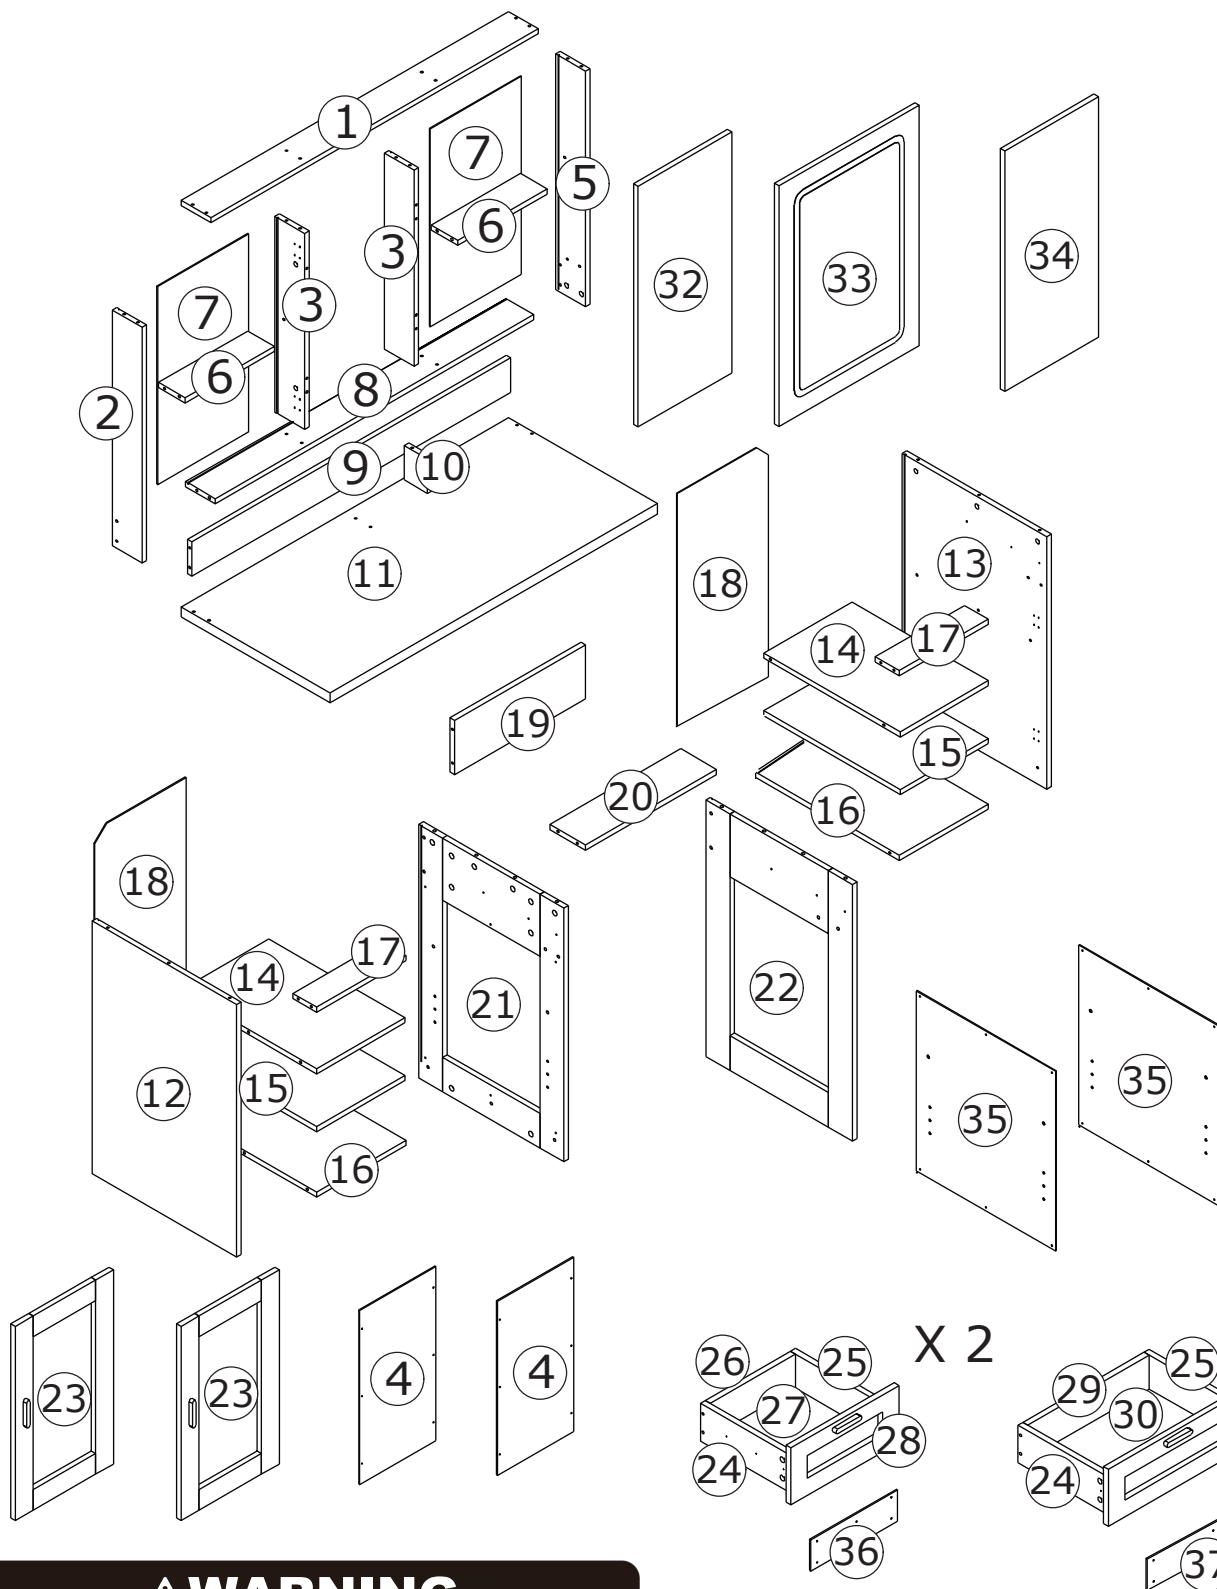

⚠ WARNING

 
 
 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

X 2

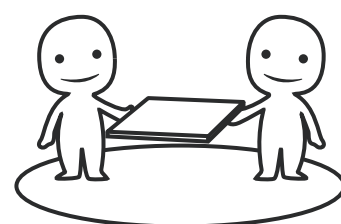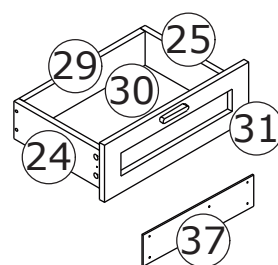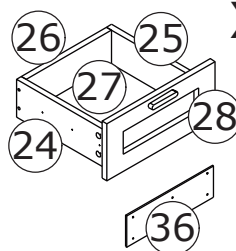


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

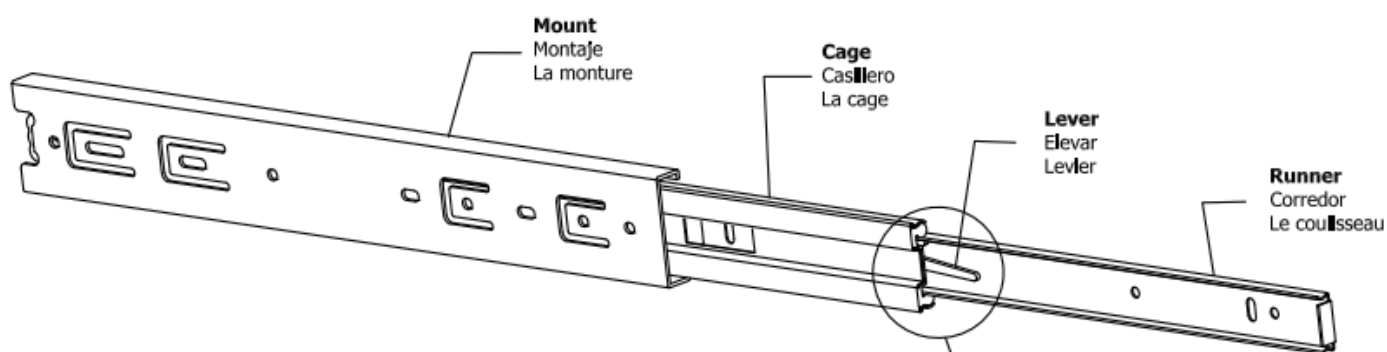

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

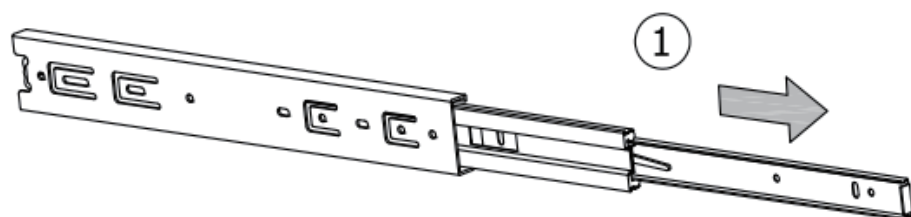

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

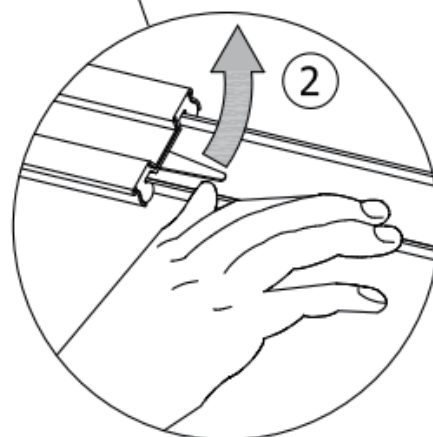

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur







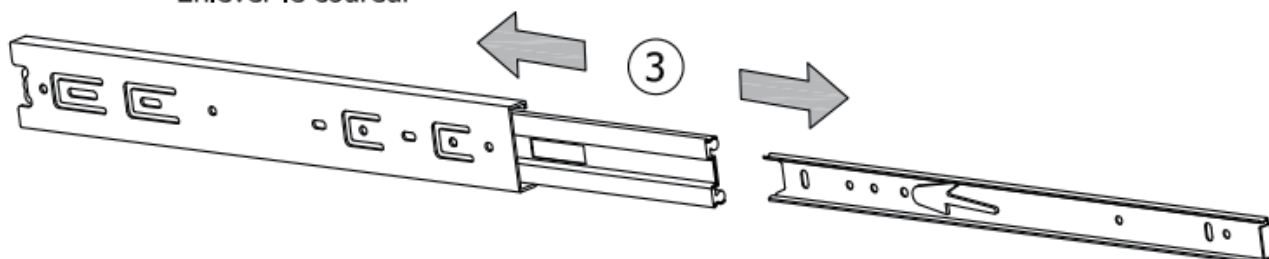


1

A x 16
M6 x 35 mm

G x 2
GZLS-270

       L x 6
M3 x 12 mm

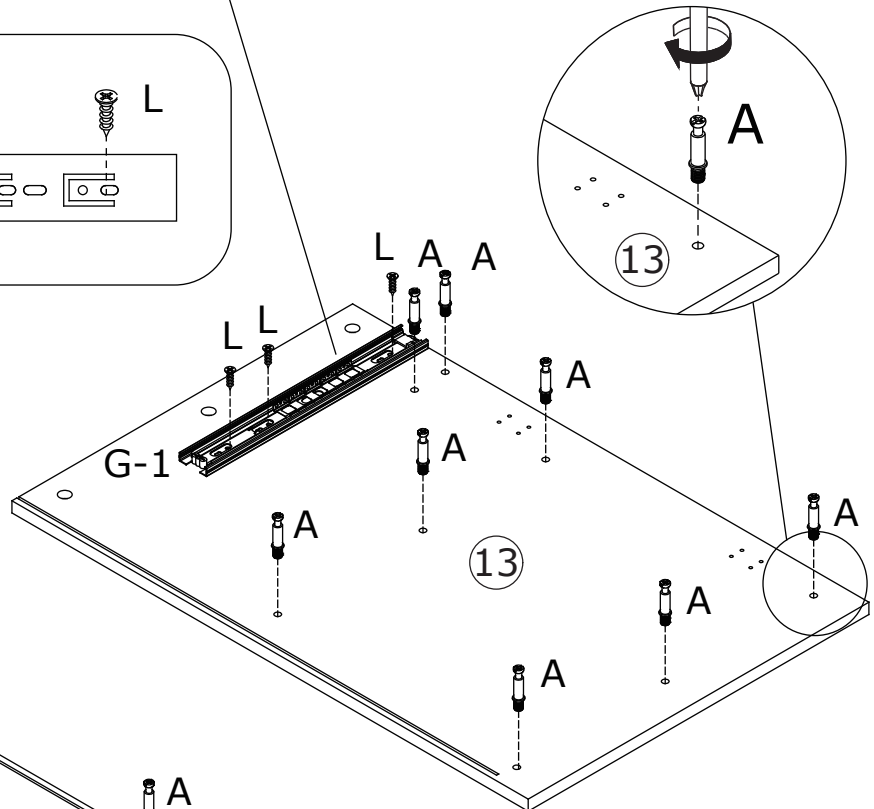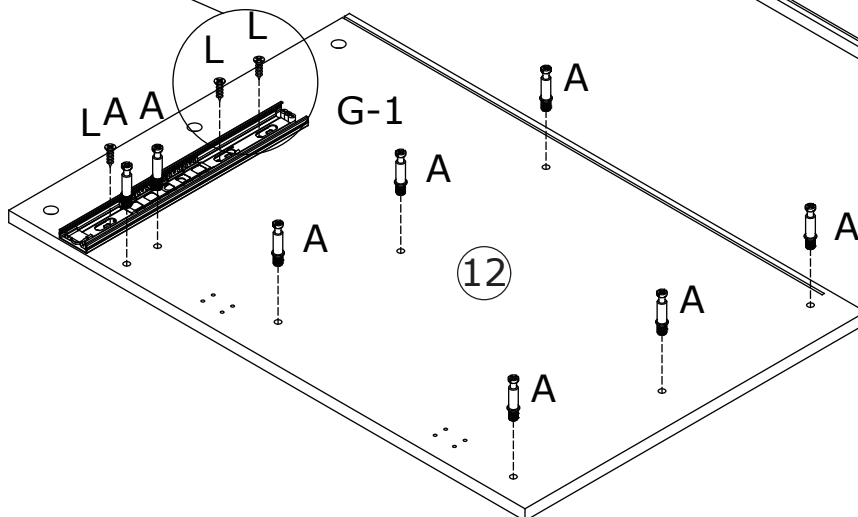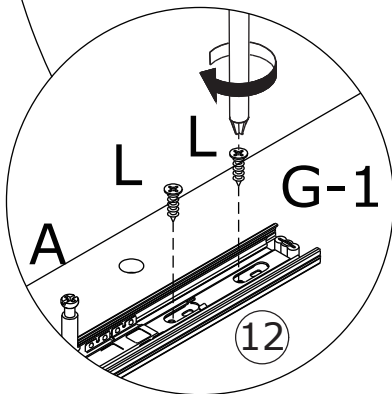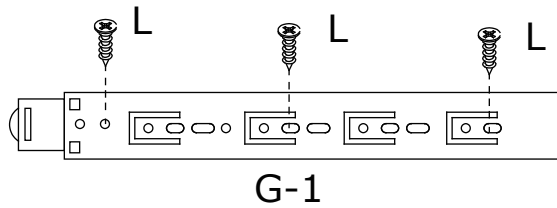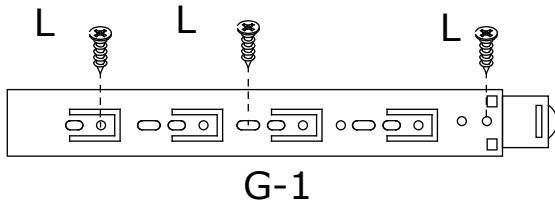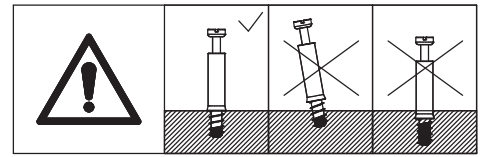




Screw eccentric rod(A) into board 12 and 13 at first.
Fix rail(G-1) to board 12 and 13 with screw(L) as shown.

2


A x 9
M6 x 35 mm

G x 2
GZLS-270

   
L x 12
M3 x 12 mm

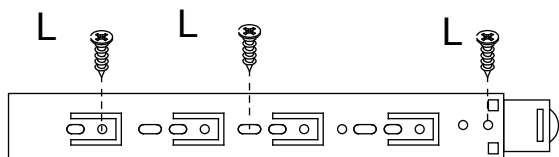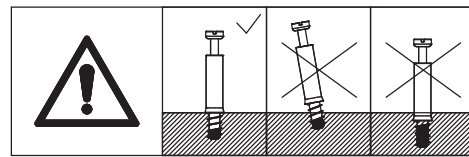




G-1

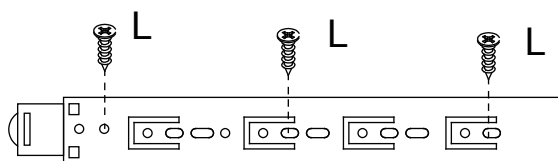 

G-1

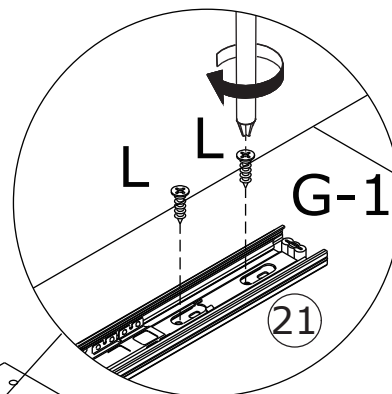 

180°

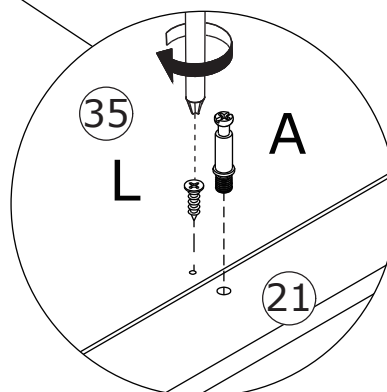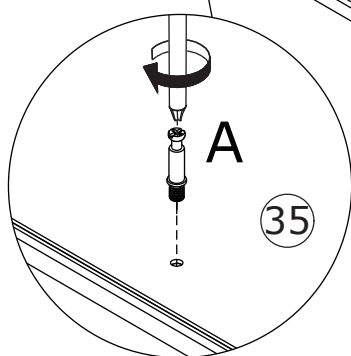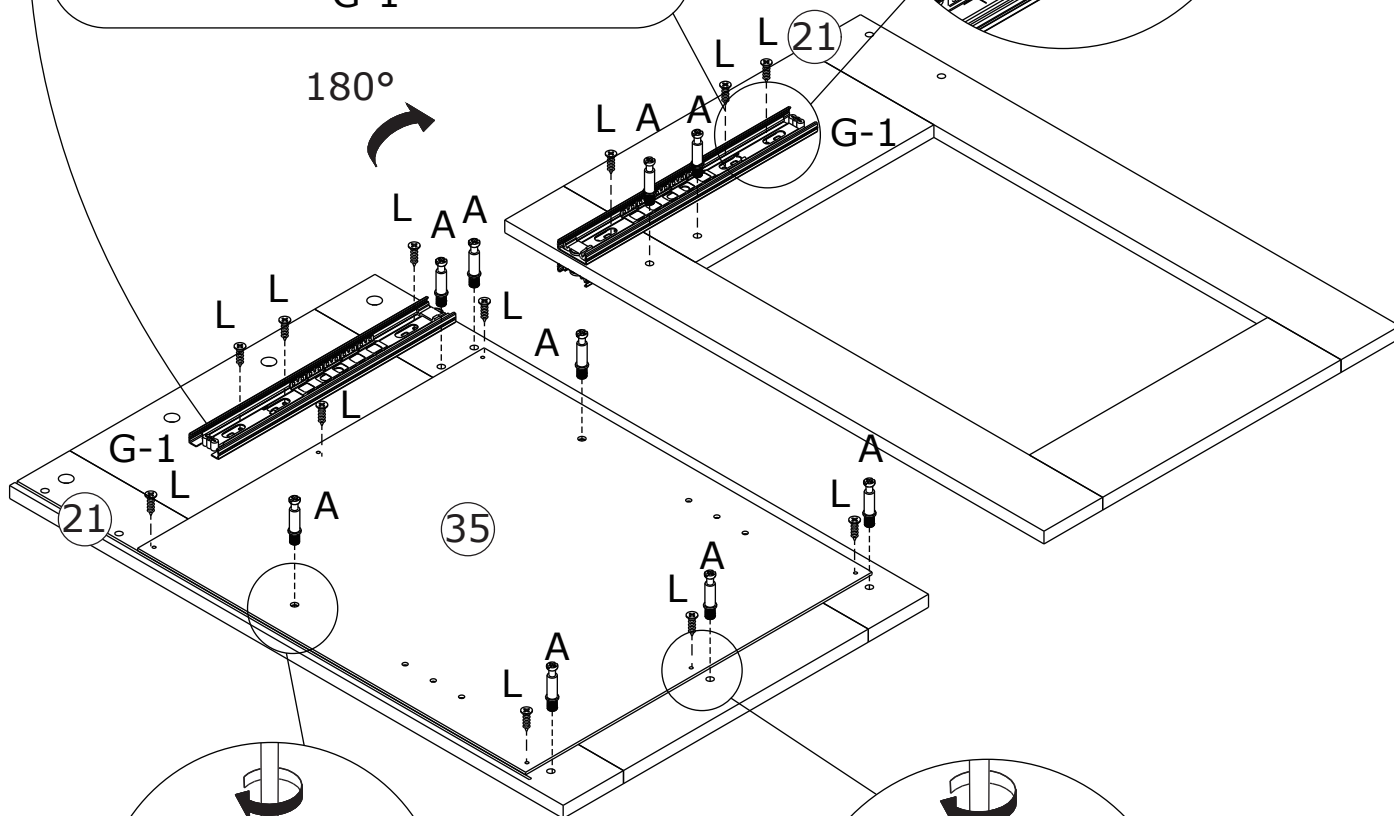   



Fix rail(G-1) and glass panel 35 to board 21 with screw(L), and screw eccentric rod(A) into at first.

Flip to back, screw eccentric rod(A) into and fix rail(G-1) as well.


3

B x 15

   Ø12 x 9.5 mm

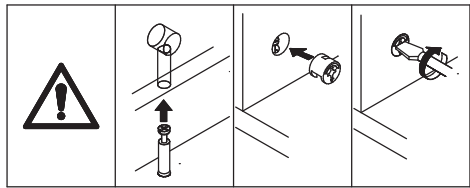


 Connect board 17, 14 and 16 to board 12 and 21, add cam lock(B) into board 17,14,16 and turn clockwise to tighten as shown.

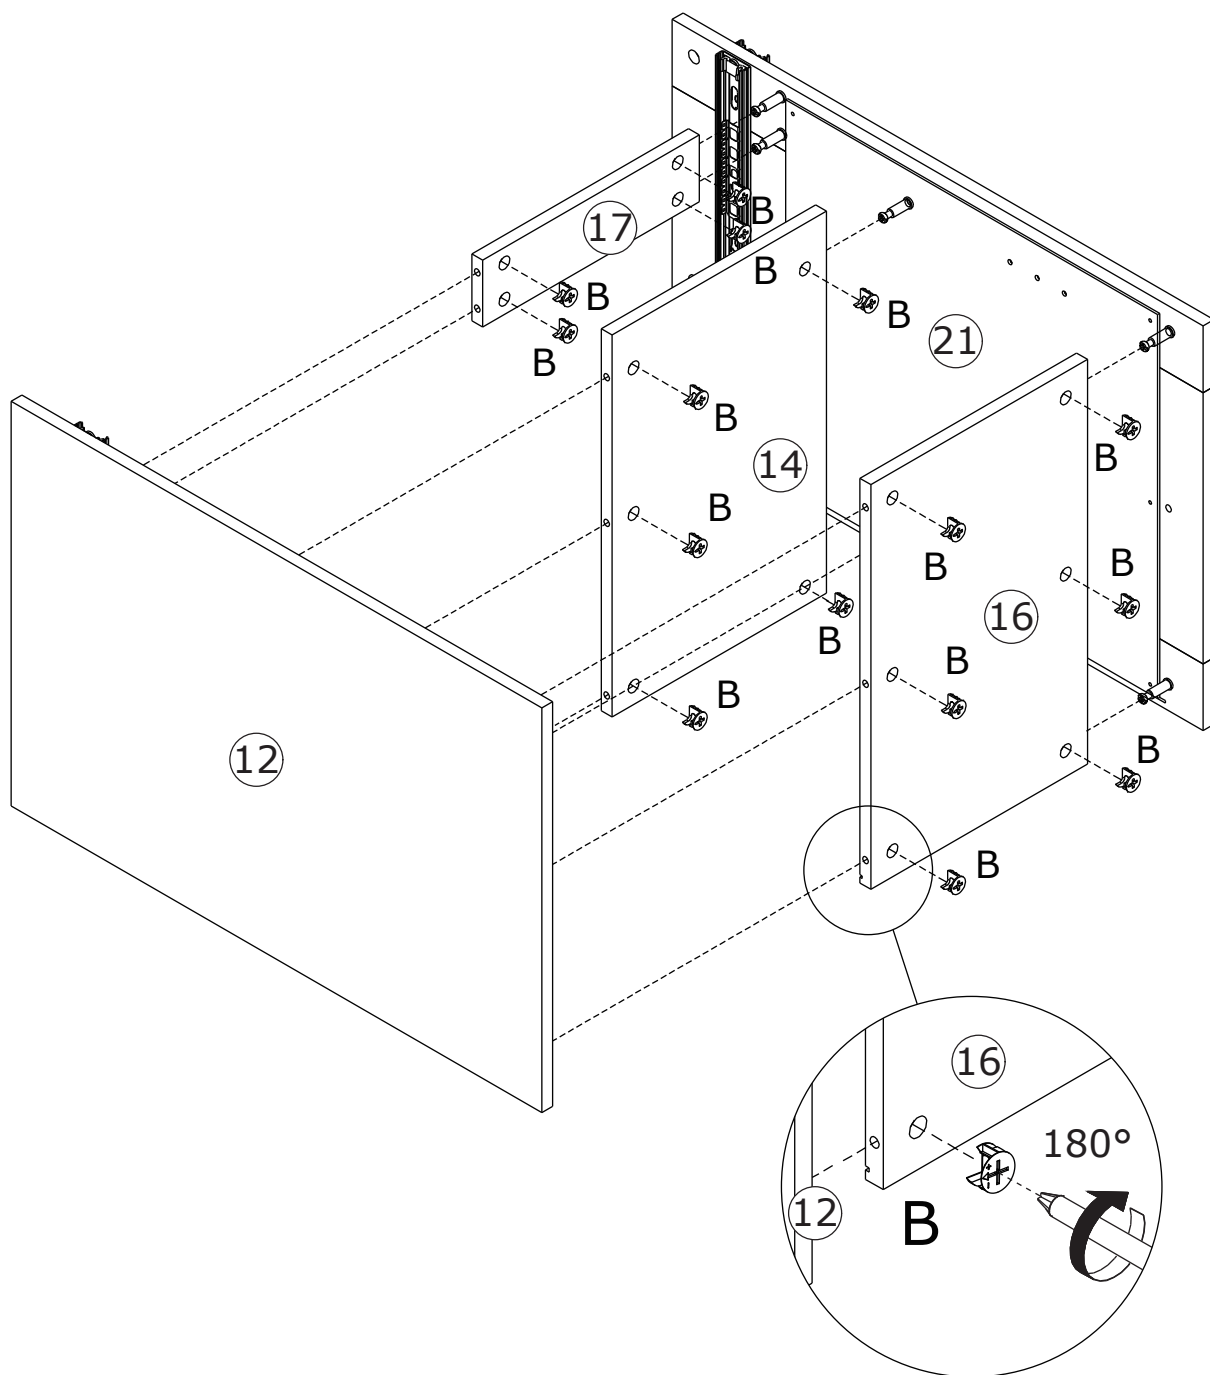

4

 A x 9



M6 x 35 mm

G x 2

 
 
 


GZLS-270


L x 12





M3 x 12 mm

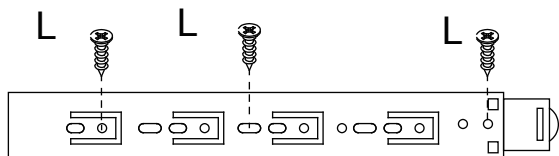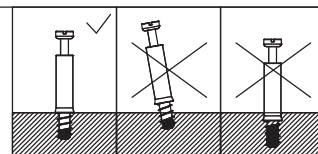



G-1

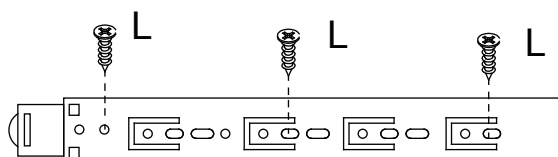 

G-1

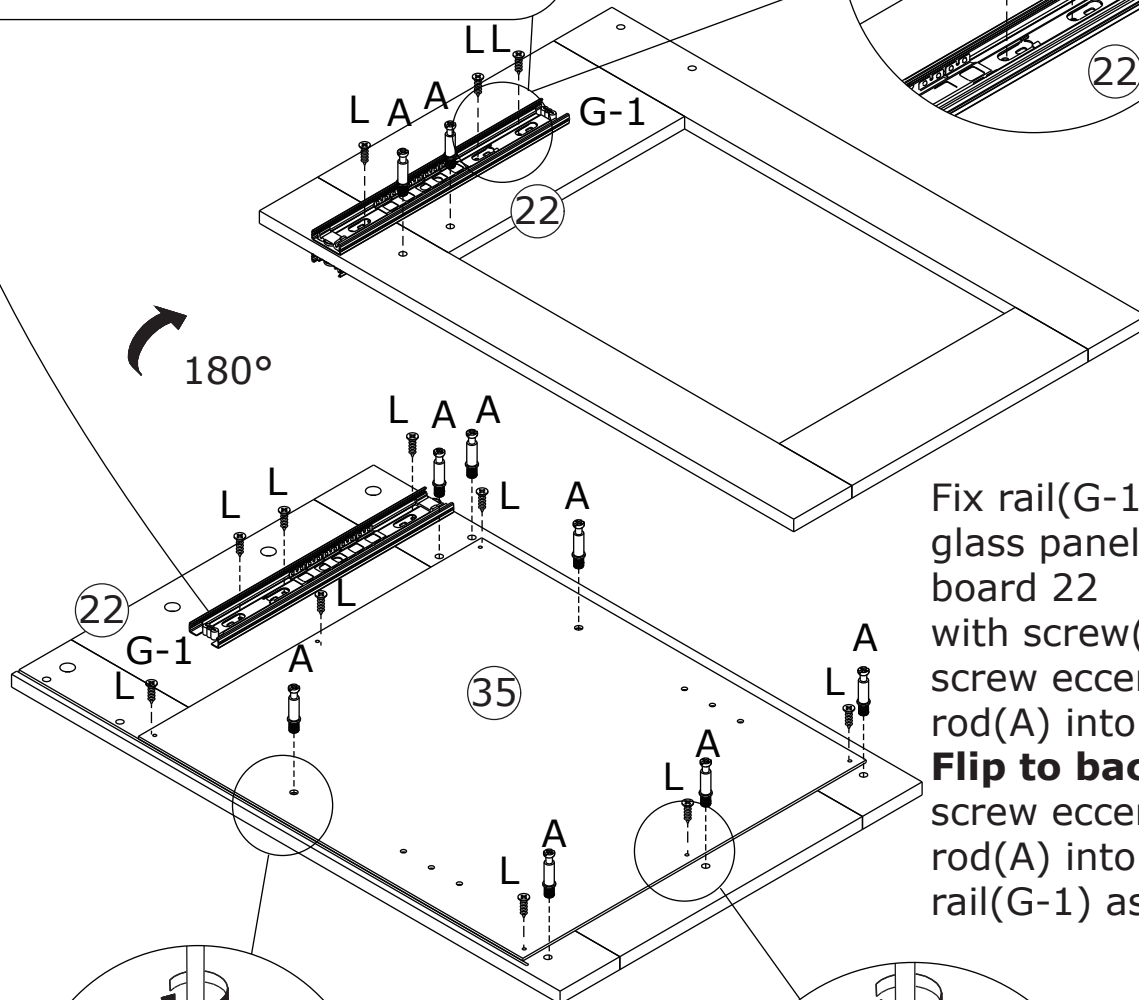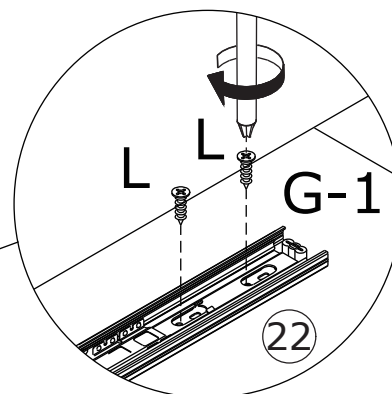  

  Fix rail(G-1) and glass panel 35 to board 22 with screw(L), and screw eccentric rod(A) into at first. **Flip to back,** screw eccentric rod(A) into and fix rail(G-1) as well.





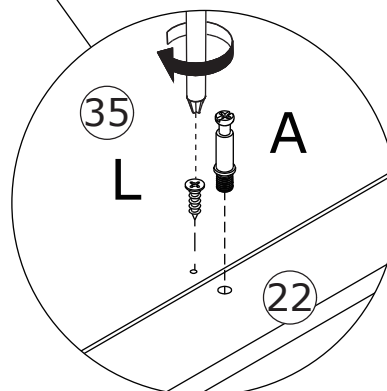
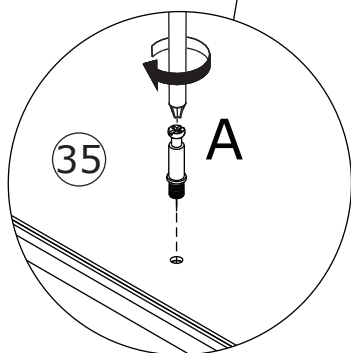


5

B x 15



     
 
Ø 12 x 9.5 mm

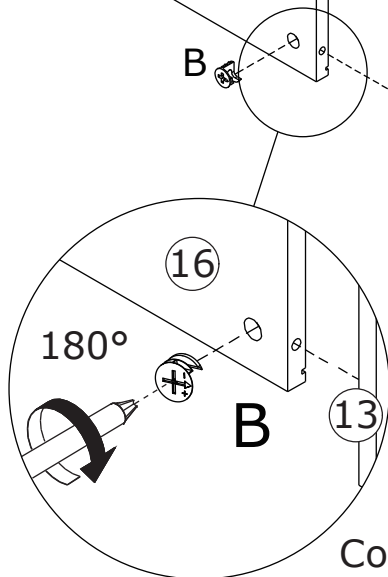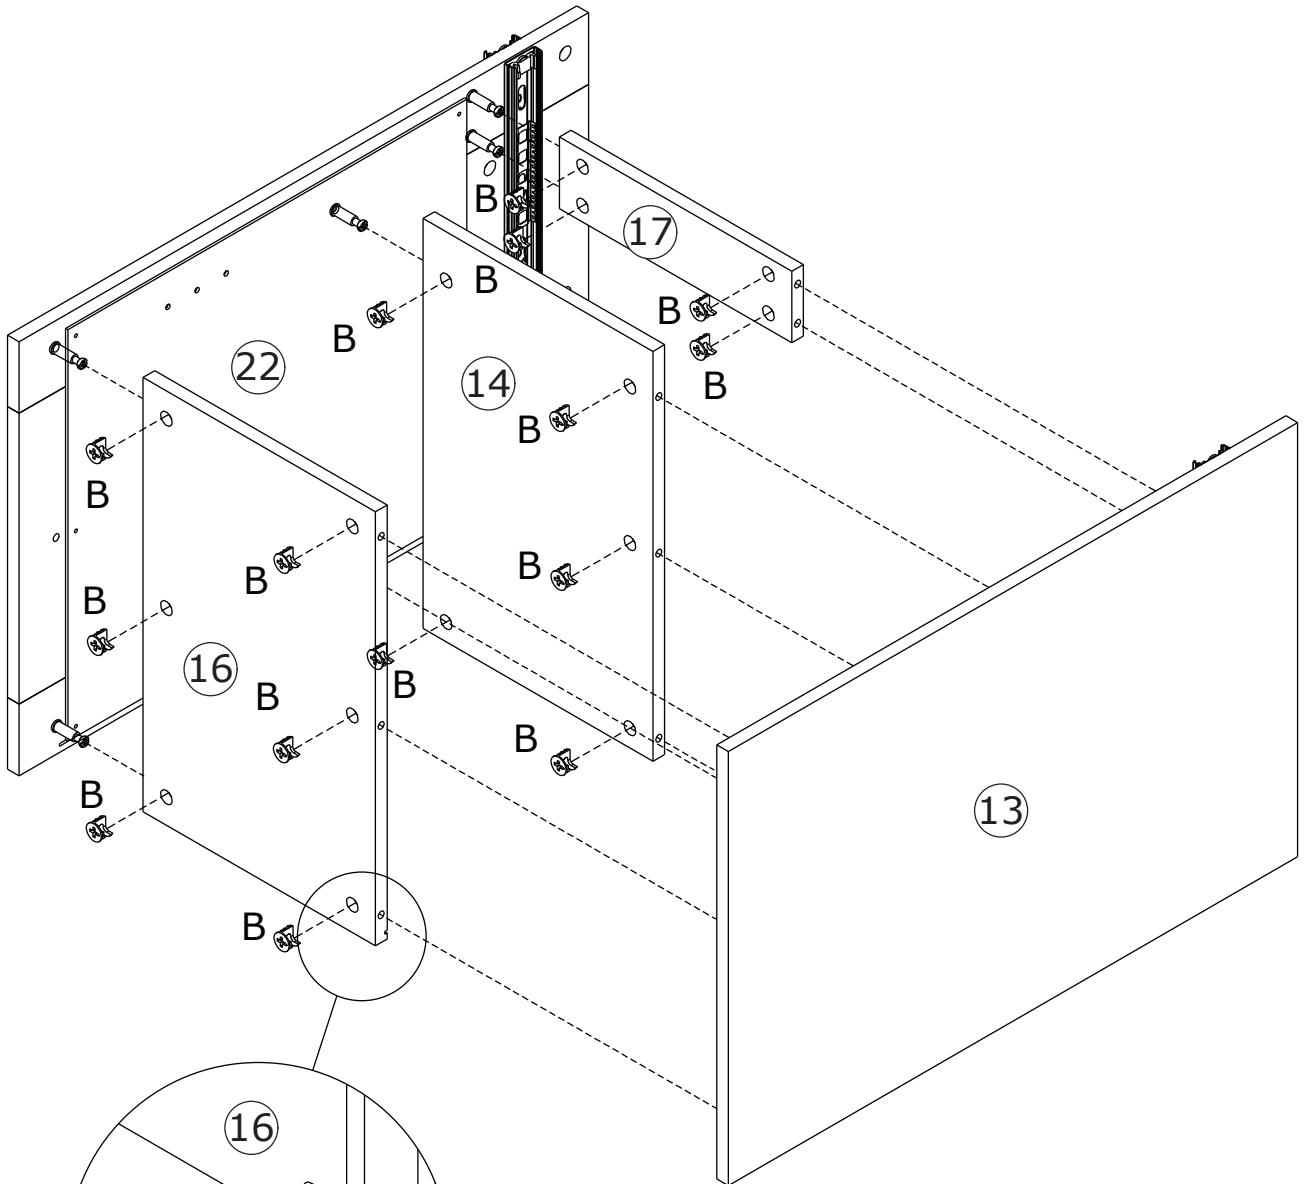


Connect another board 17, 14 and 16 to board 13 and 22, add cam lock(B) into board 17,14,16 and turn clockwise to tighten as shown.

6

  Insert back board 18 along available grooves.

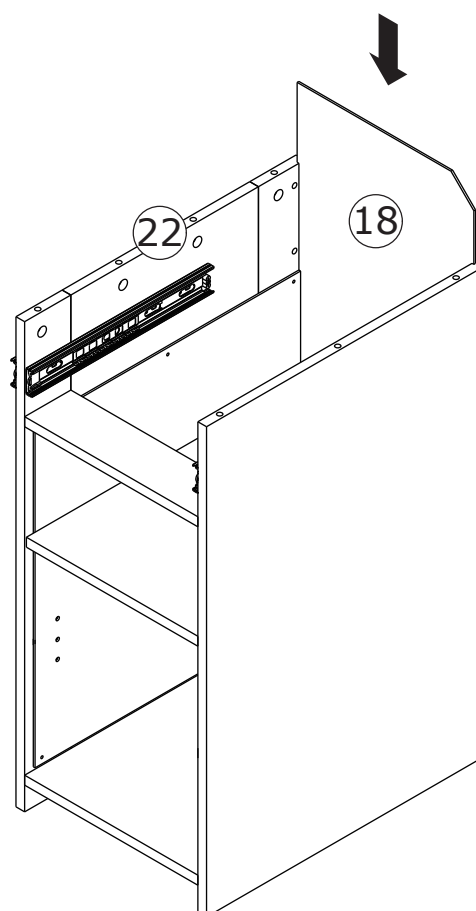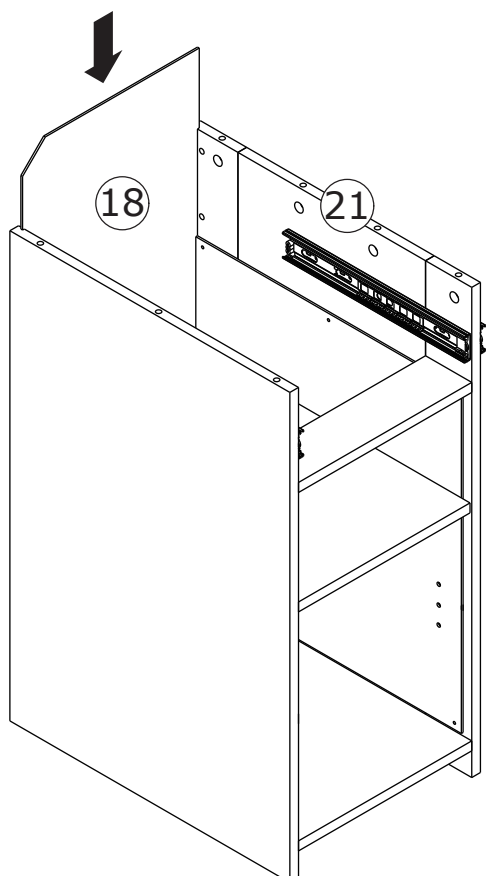



7

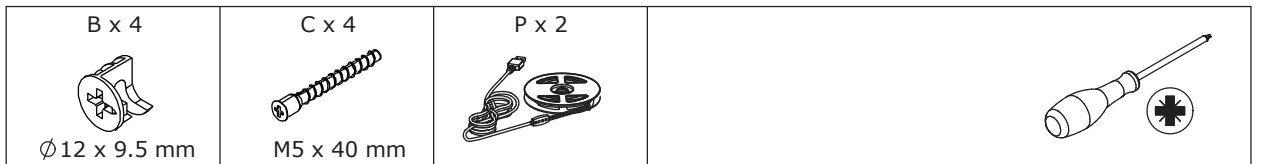 



Connect board 19 and 20 to the two components. Add cam lock(B) into board 20 and turn clockwise to tighten as shown.

Fix board 19 to board 21 and 22 with screw(C) as shown.

  Stick light strip(P) to board 12 and 13.

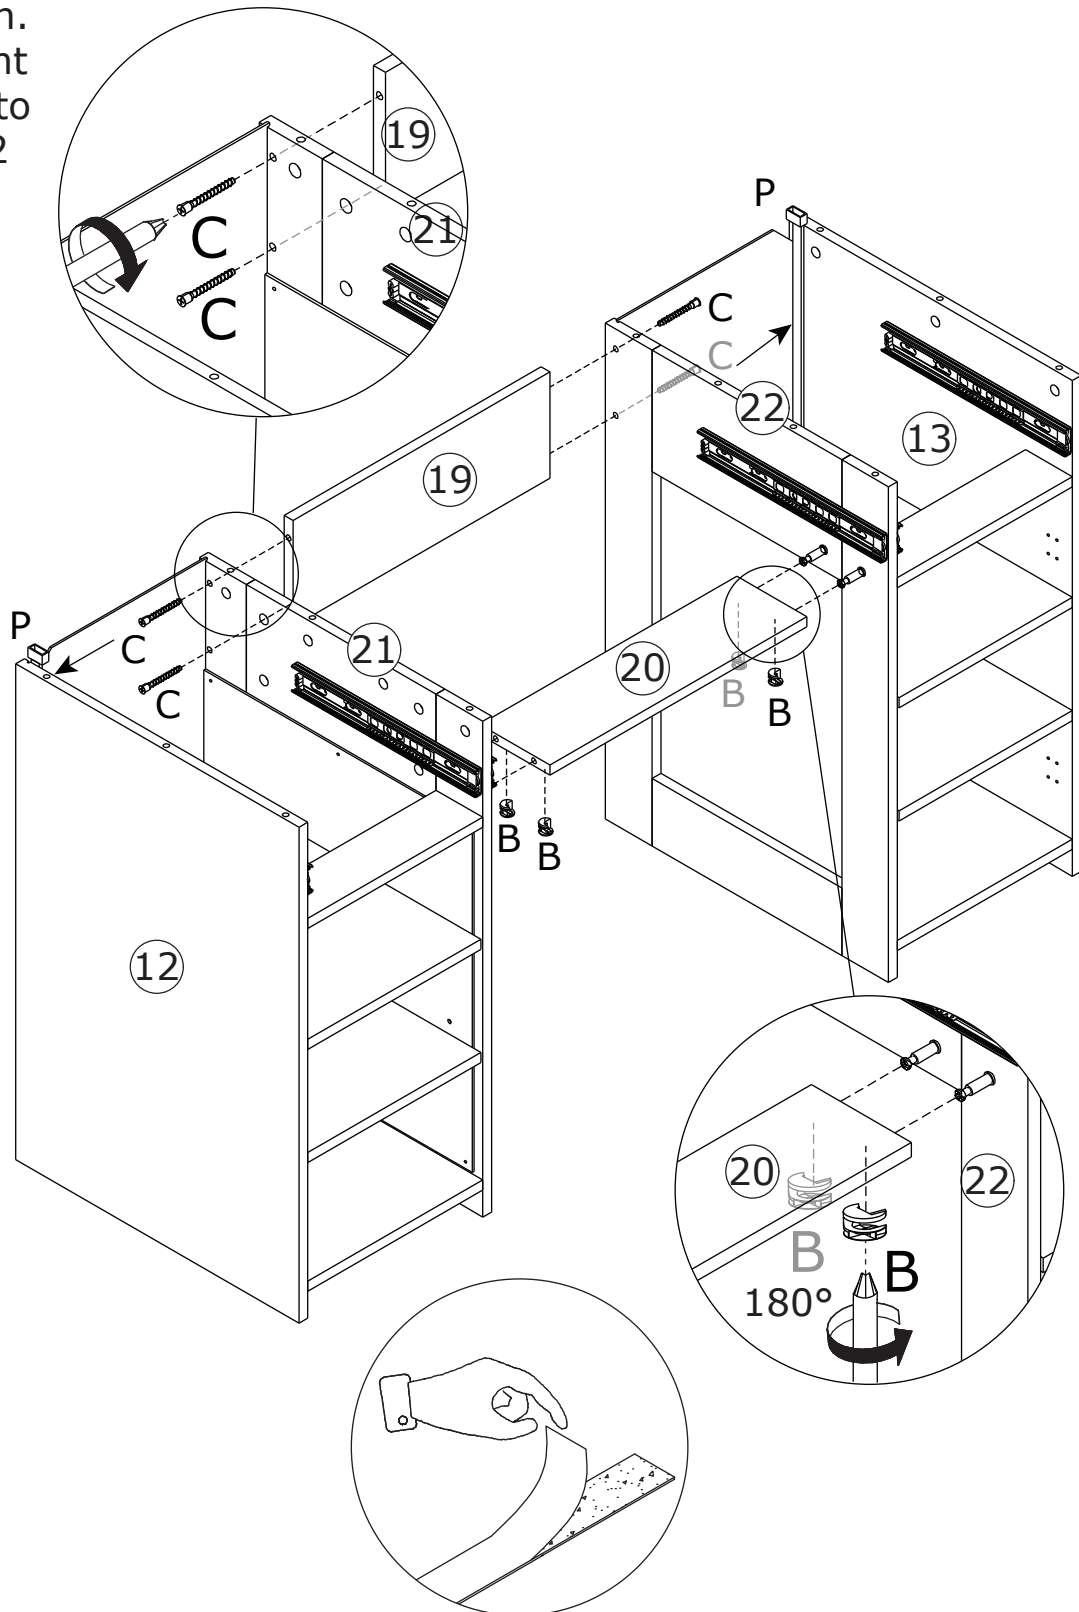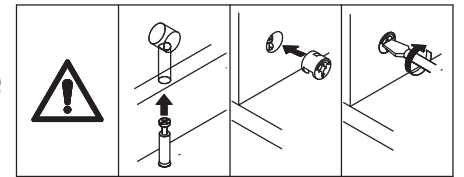


8

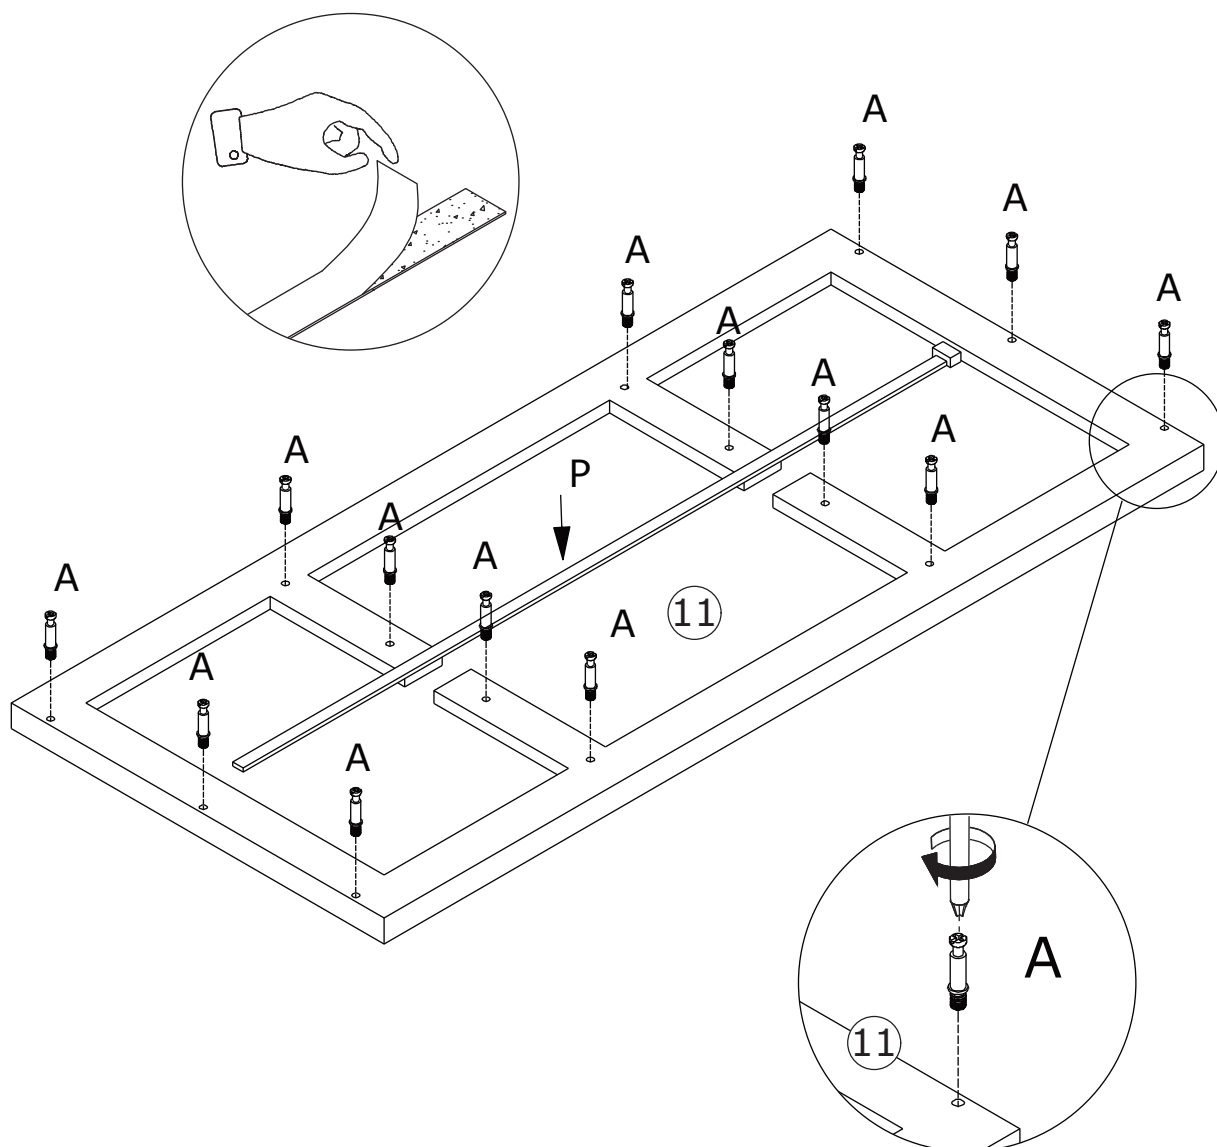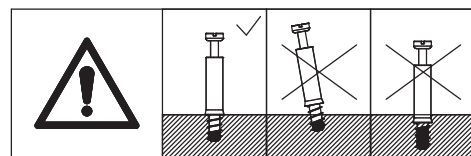  

Stick light strip(P) to board 11.
Screw eccentric rod(A) into board 11 as shown.

9

 A x 6






M6 x 35 mm

B x 14



   
Ø12 x 9.5 mm

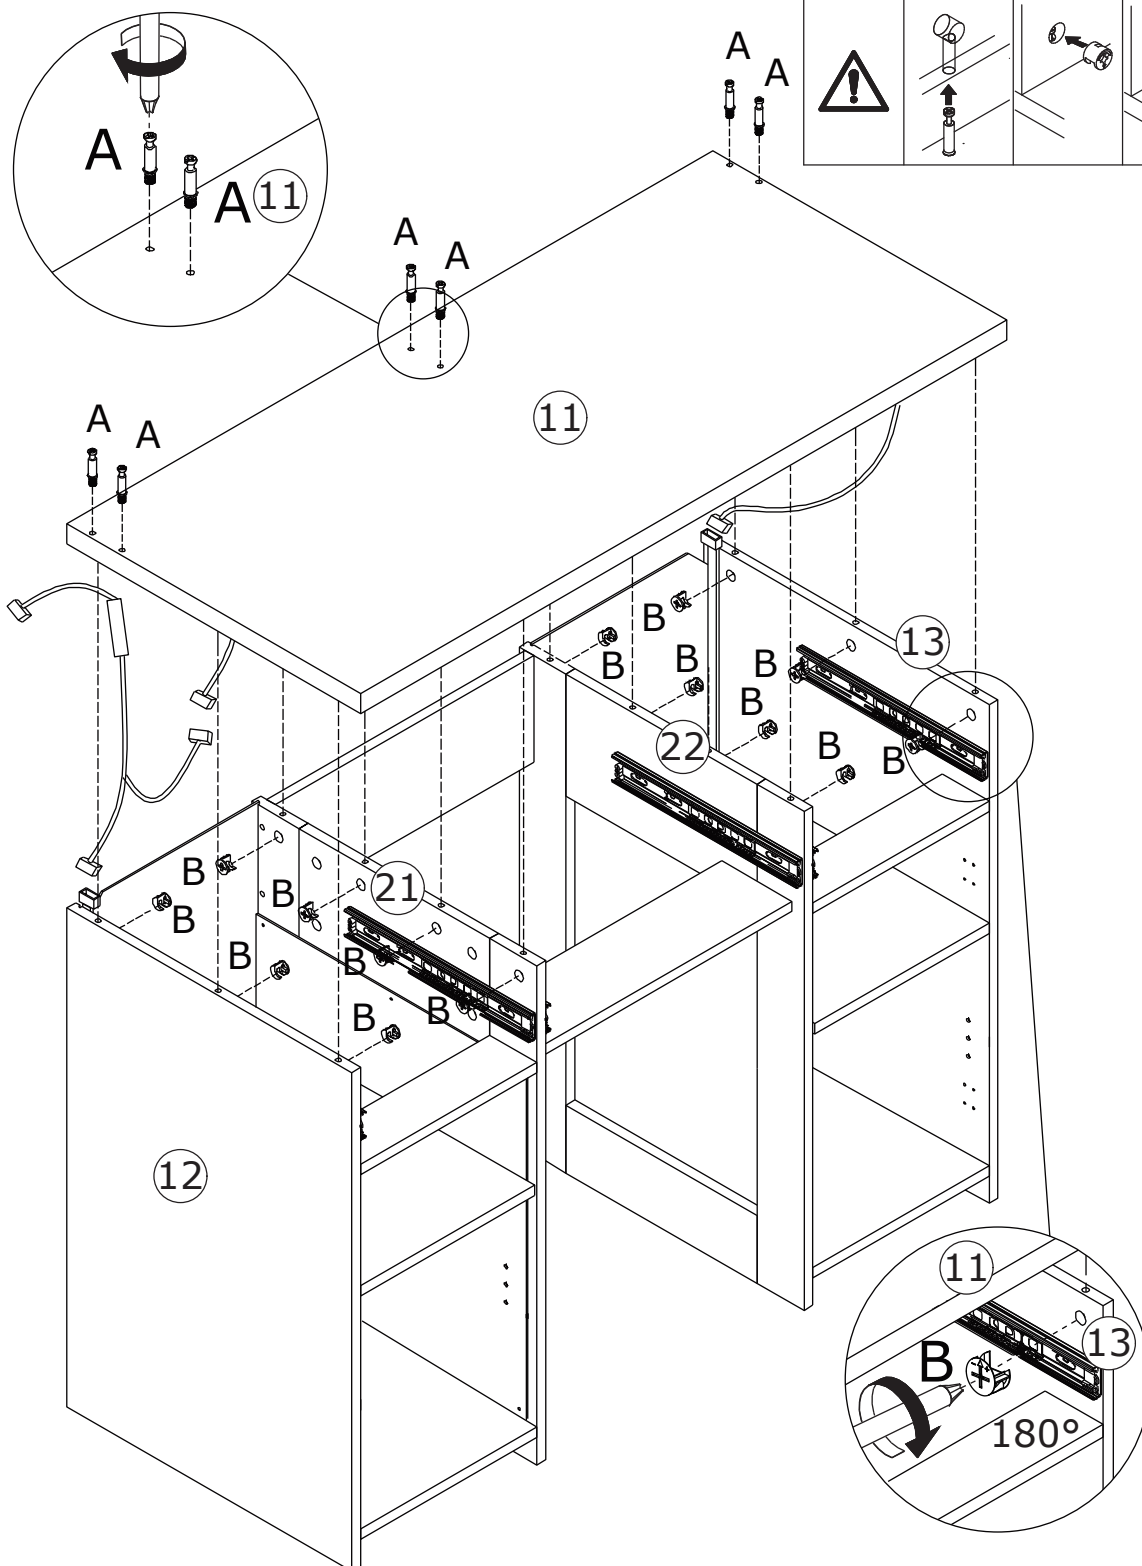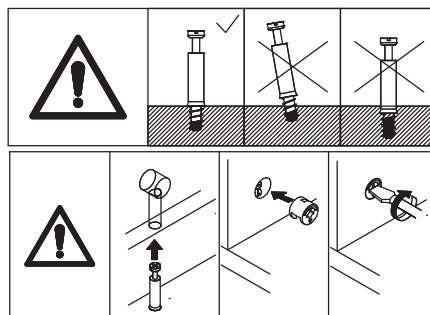




Cover board 11 to top, add cam lock(B) into and turn clockwise to tighten as shown. Connect light strips. Screw eccentric rod(A) into board 11 as shown.

10

 A x 12



M6 x 35 mm

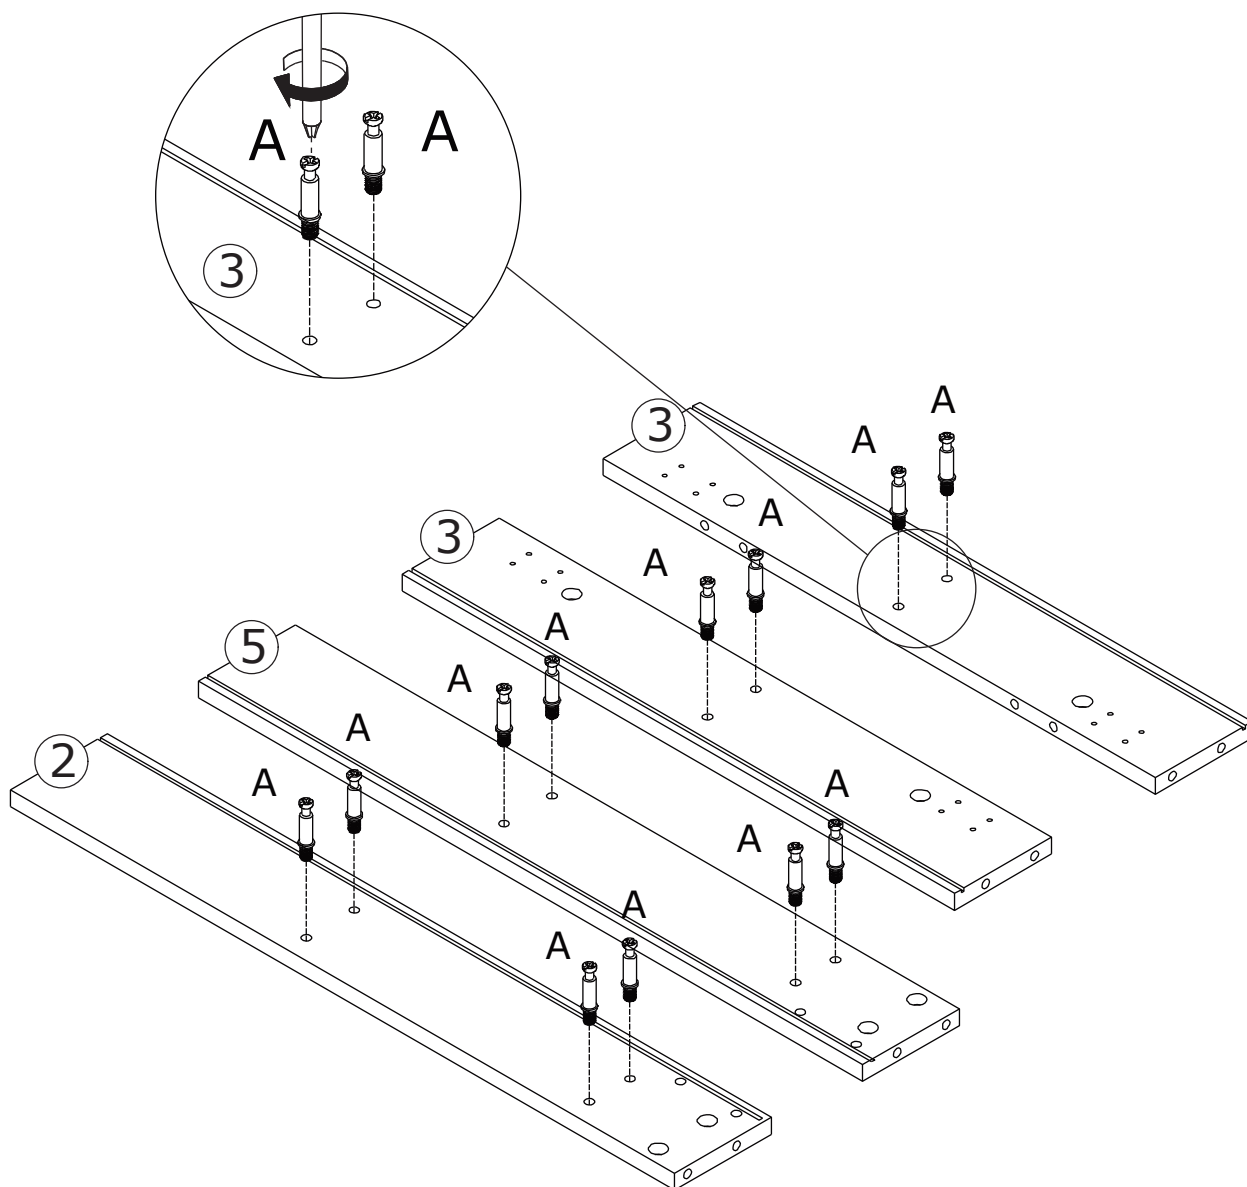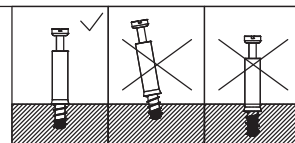   

Screw eccentric rod(A) into board 2, 3 and 5 as shown.

11

B x 4

 
 


Ø 12 x 9.5 mm

C x 4




M5 x 40 mm

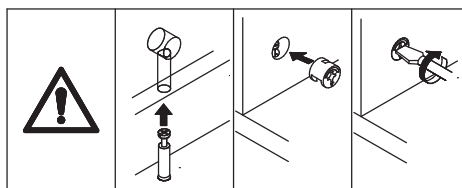

Attach board 6 to board 3, add cam lock(B) into board 6 and turn clockwise to tighten as shown.

 Fix board 8 to board 3 with screw(C) as shown.

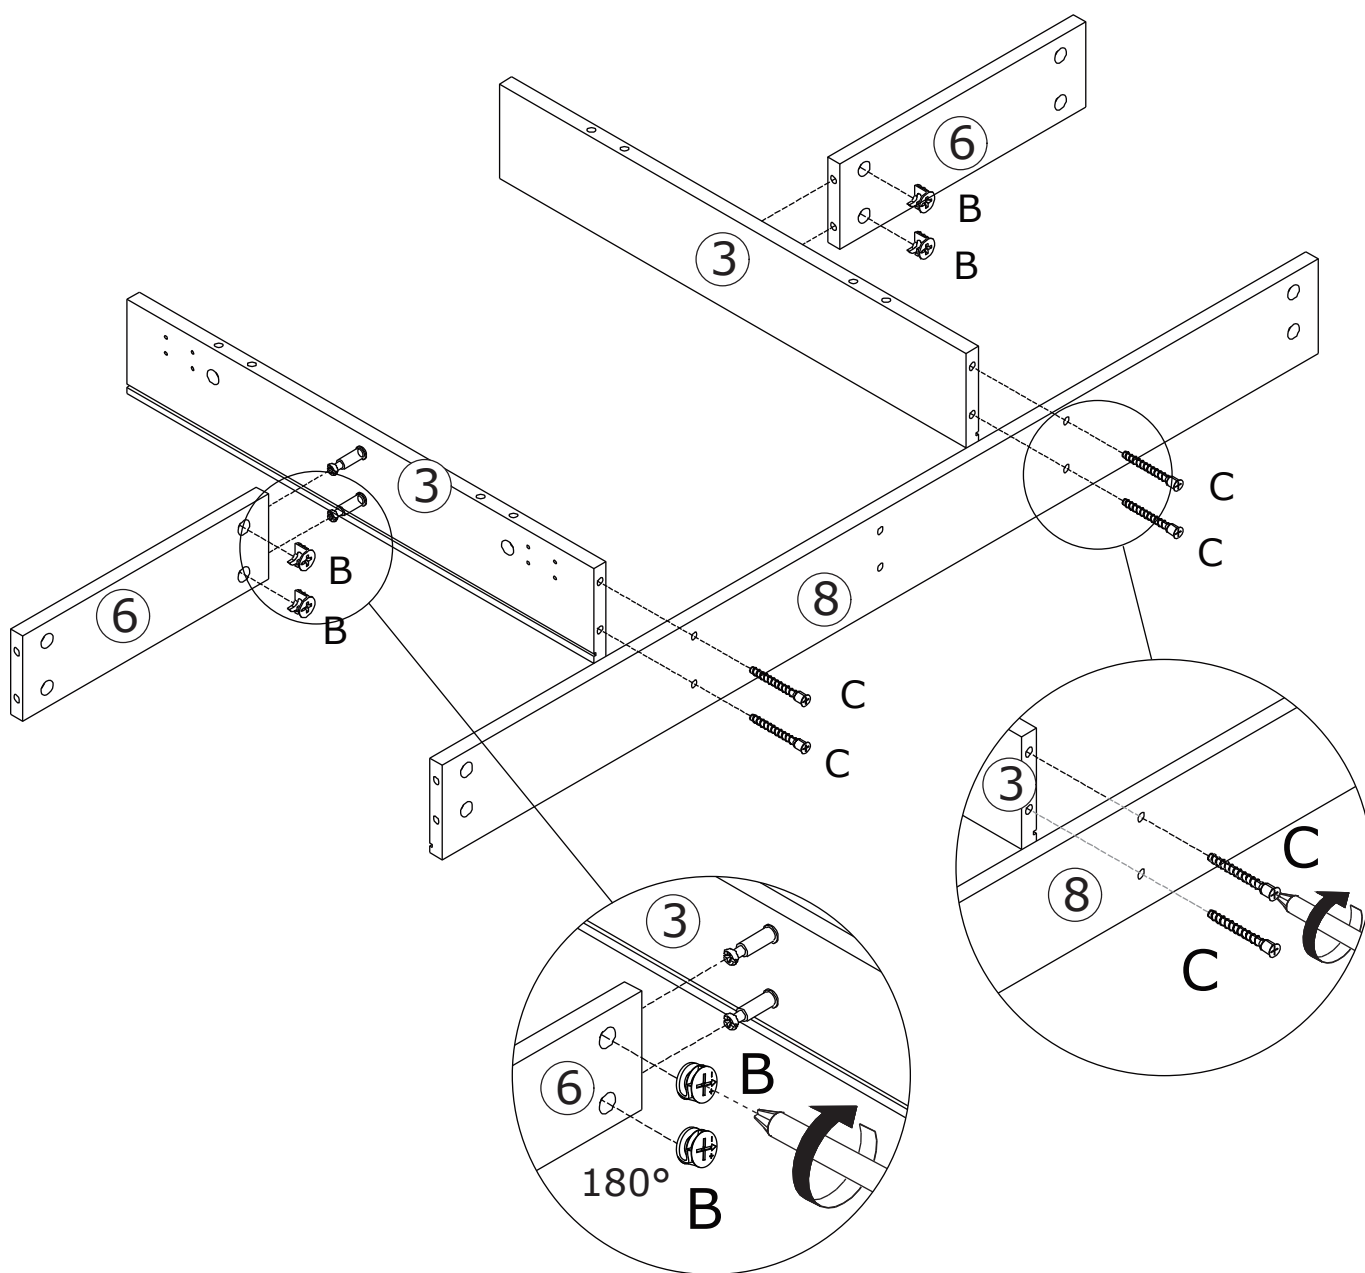

12

B x 8

 
 
 


Ø 12 x 9.5 mm

C x 6



M5 x 40 mm

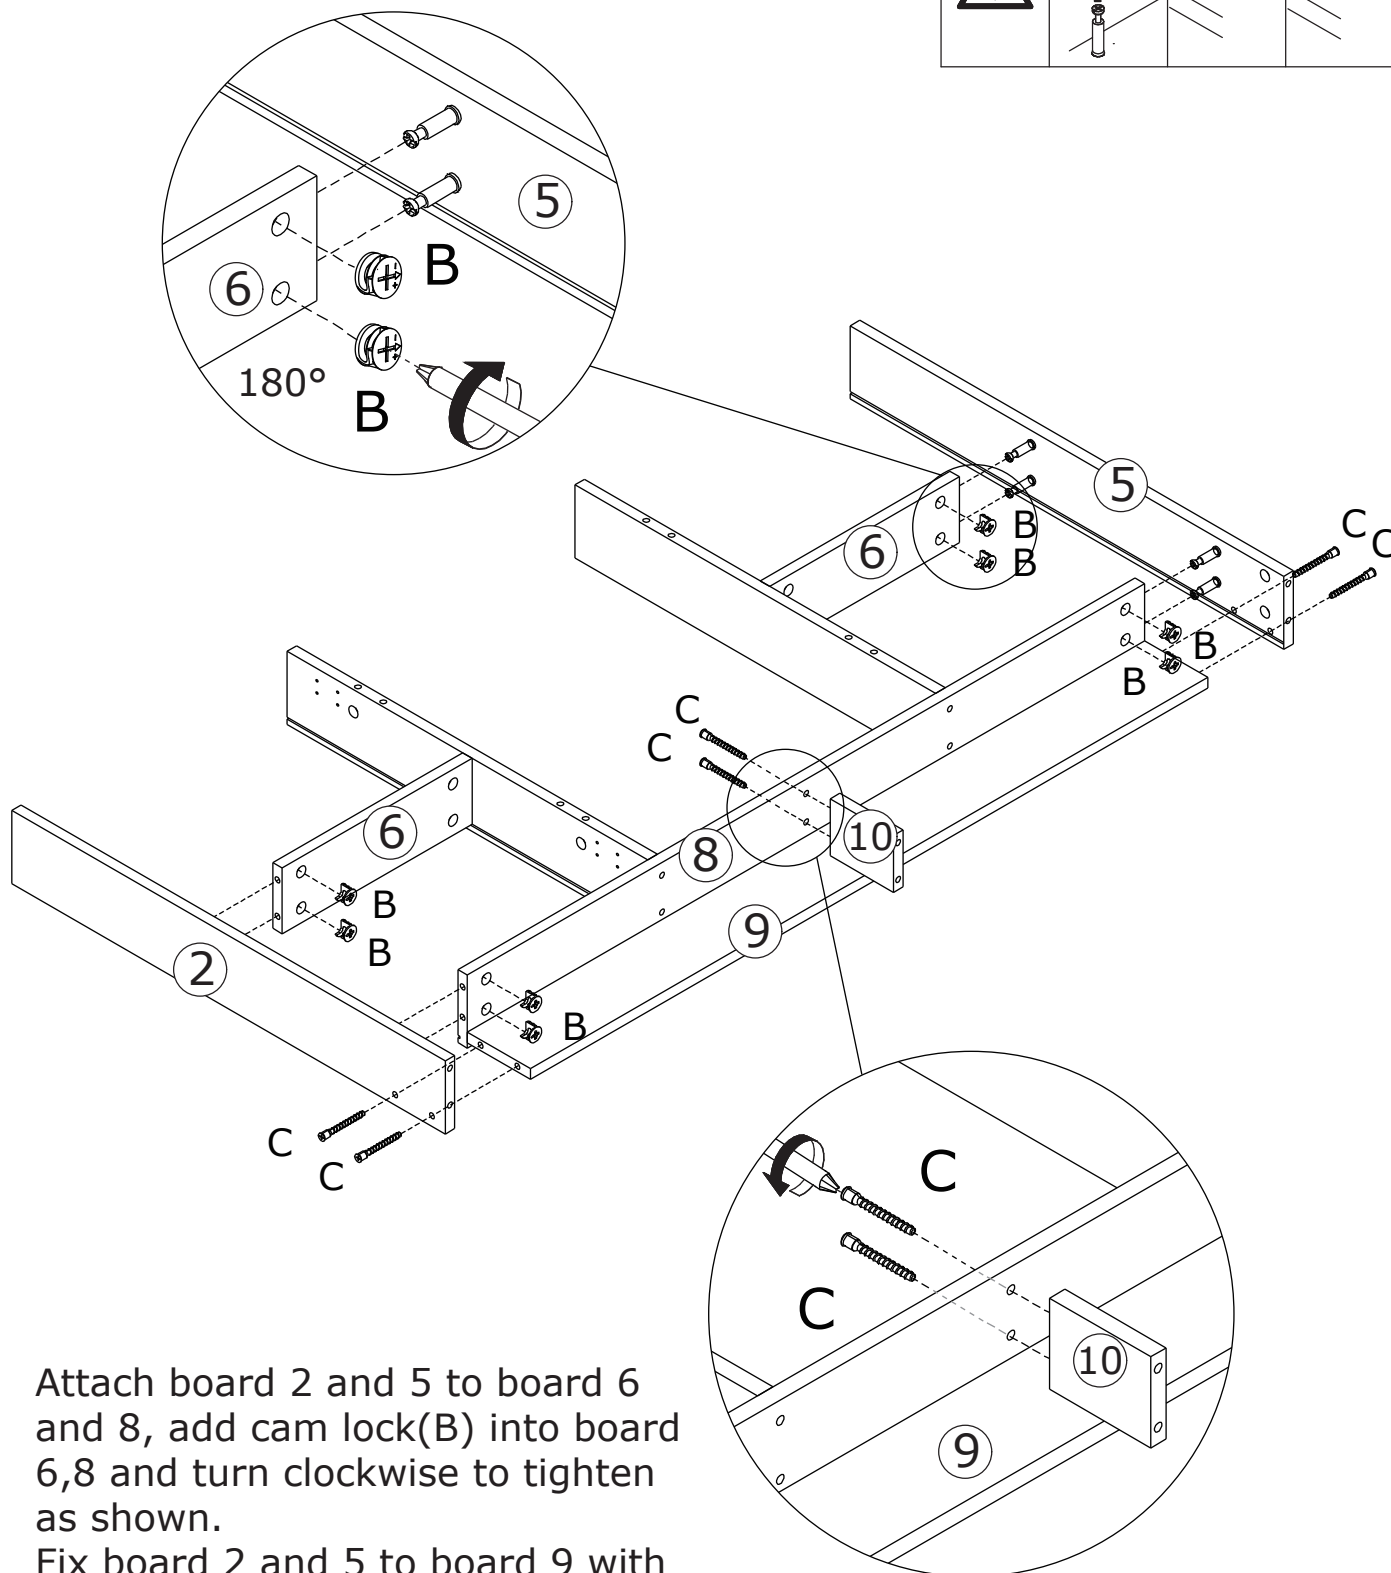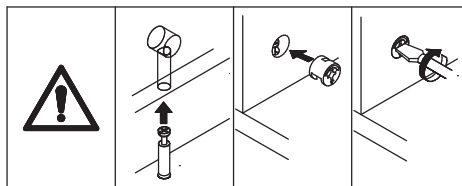

Attach board 2 and 5 to board 6 and 8, add cam lock(B) into board 6,8 and turn clockwise to tighten as shown.

Fix board 2 and 5 to board 9 with screw(C) as shown.

 
Fix board 10 to board 8 with screw(C) as shown.

13


C x 1



M5 x 40 mm



 Insert back board 7 along available grooves.
Fix board 9 to board 10 with screw(C) as shown.


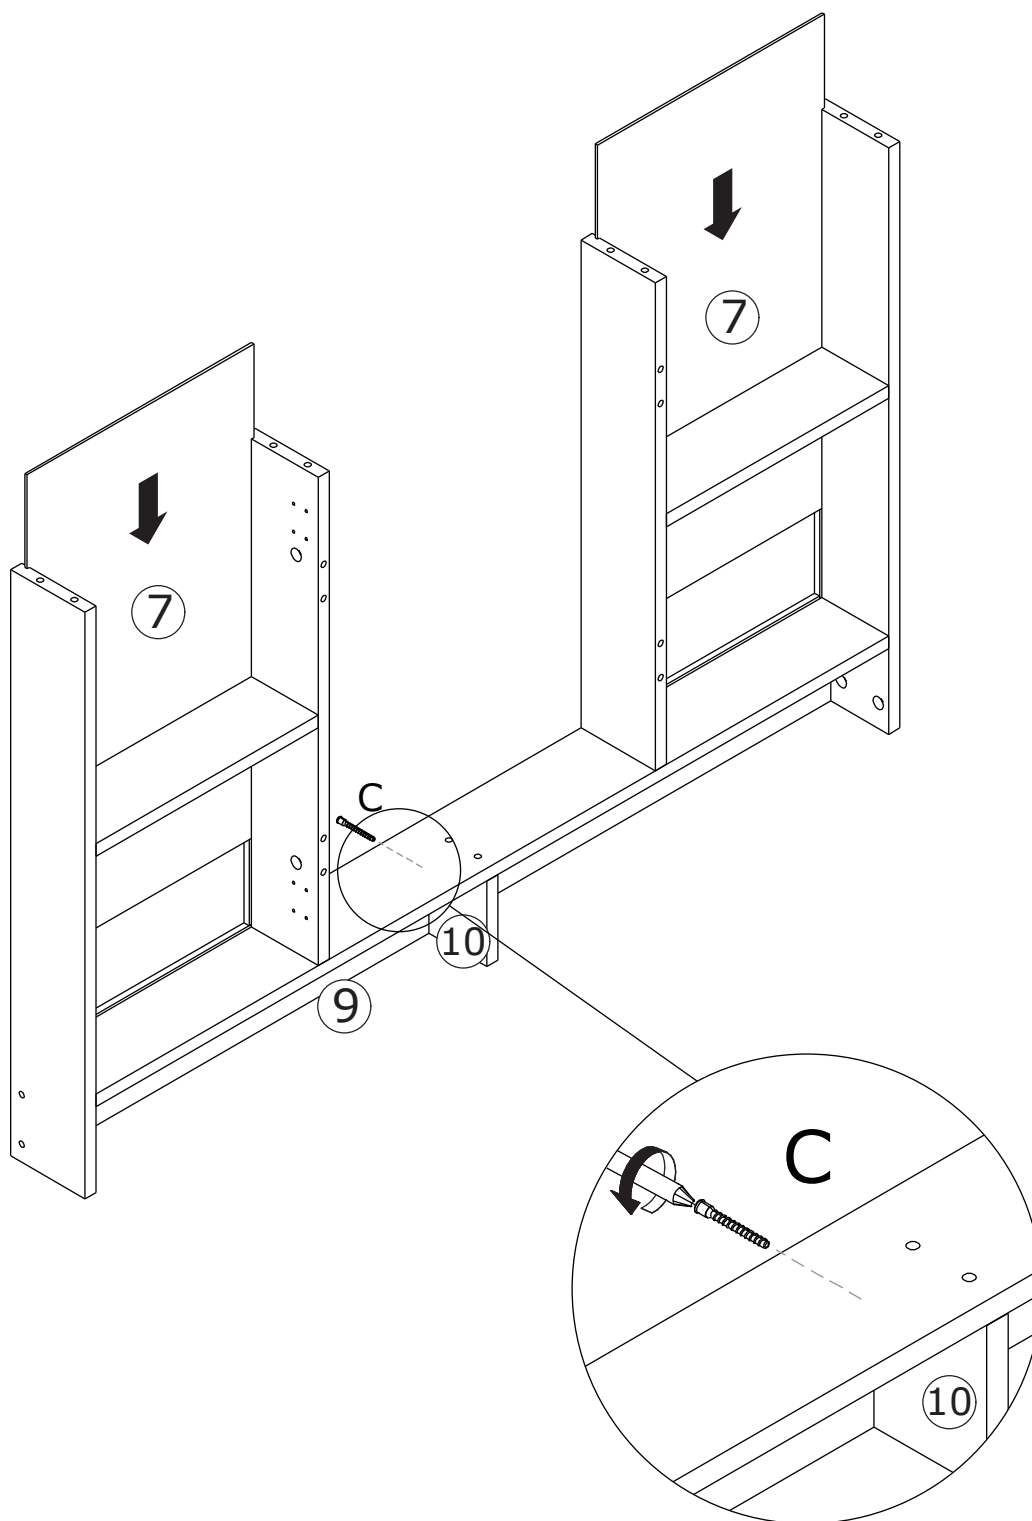


14

C x 8



  M5 x 40 mm

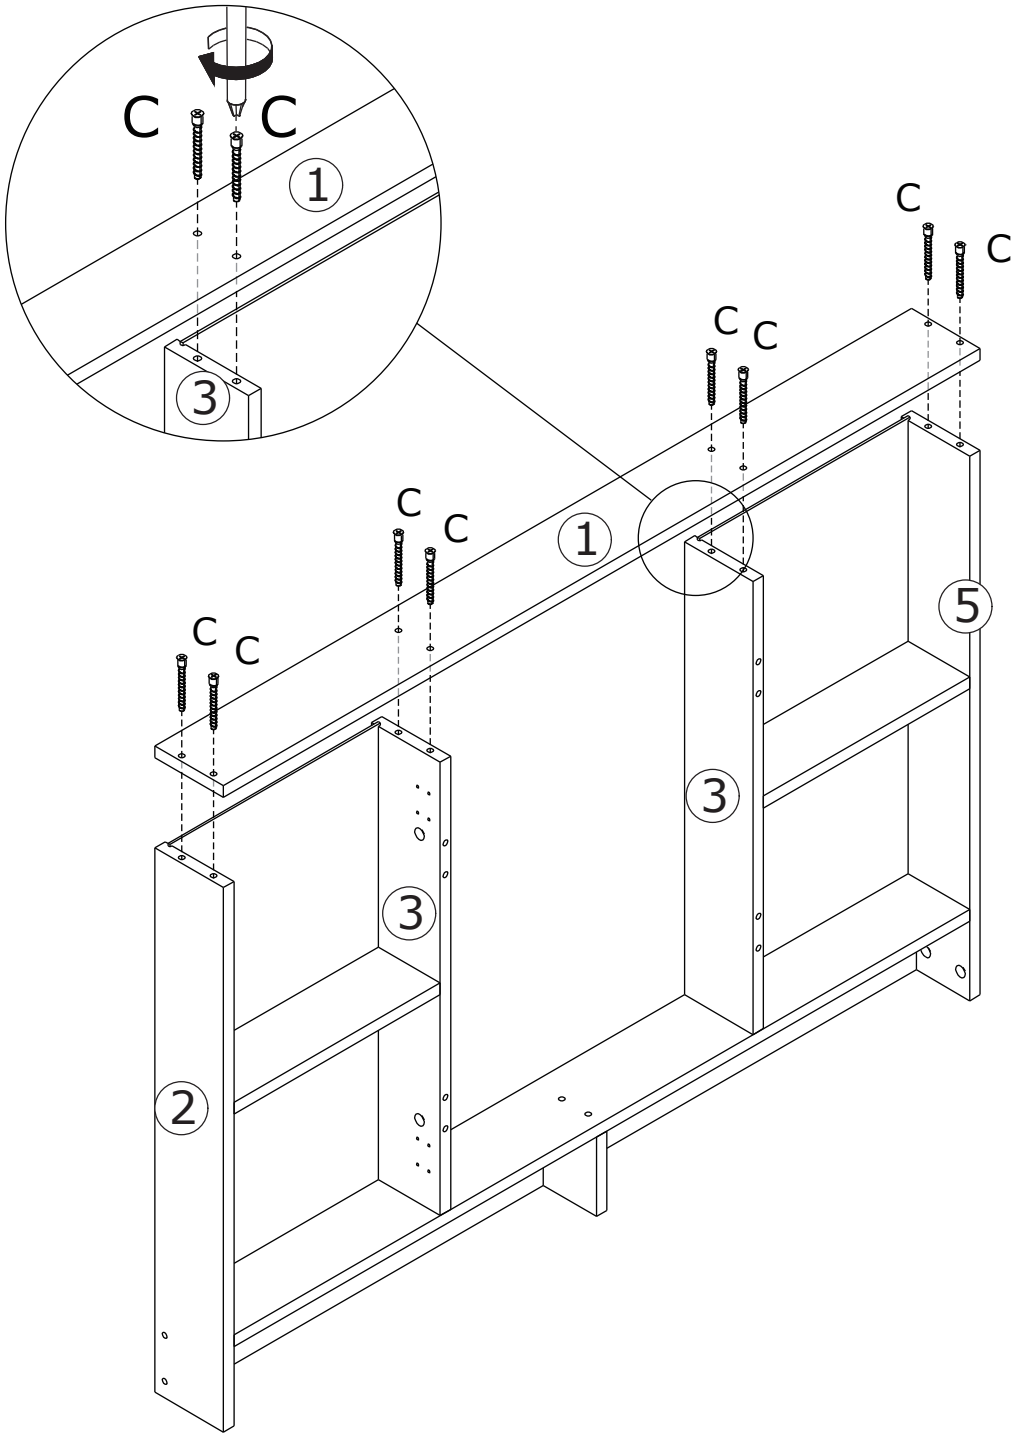




Fix board 1 to board 2, 3 and 5 with screw(C) as shown.

15

B x 6



   
Ø12 x 9.5 mm

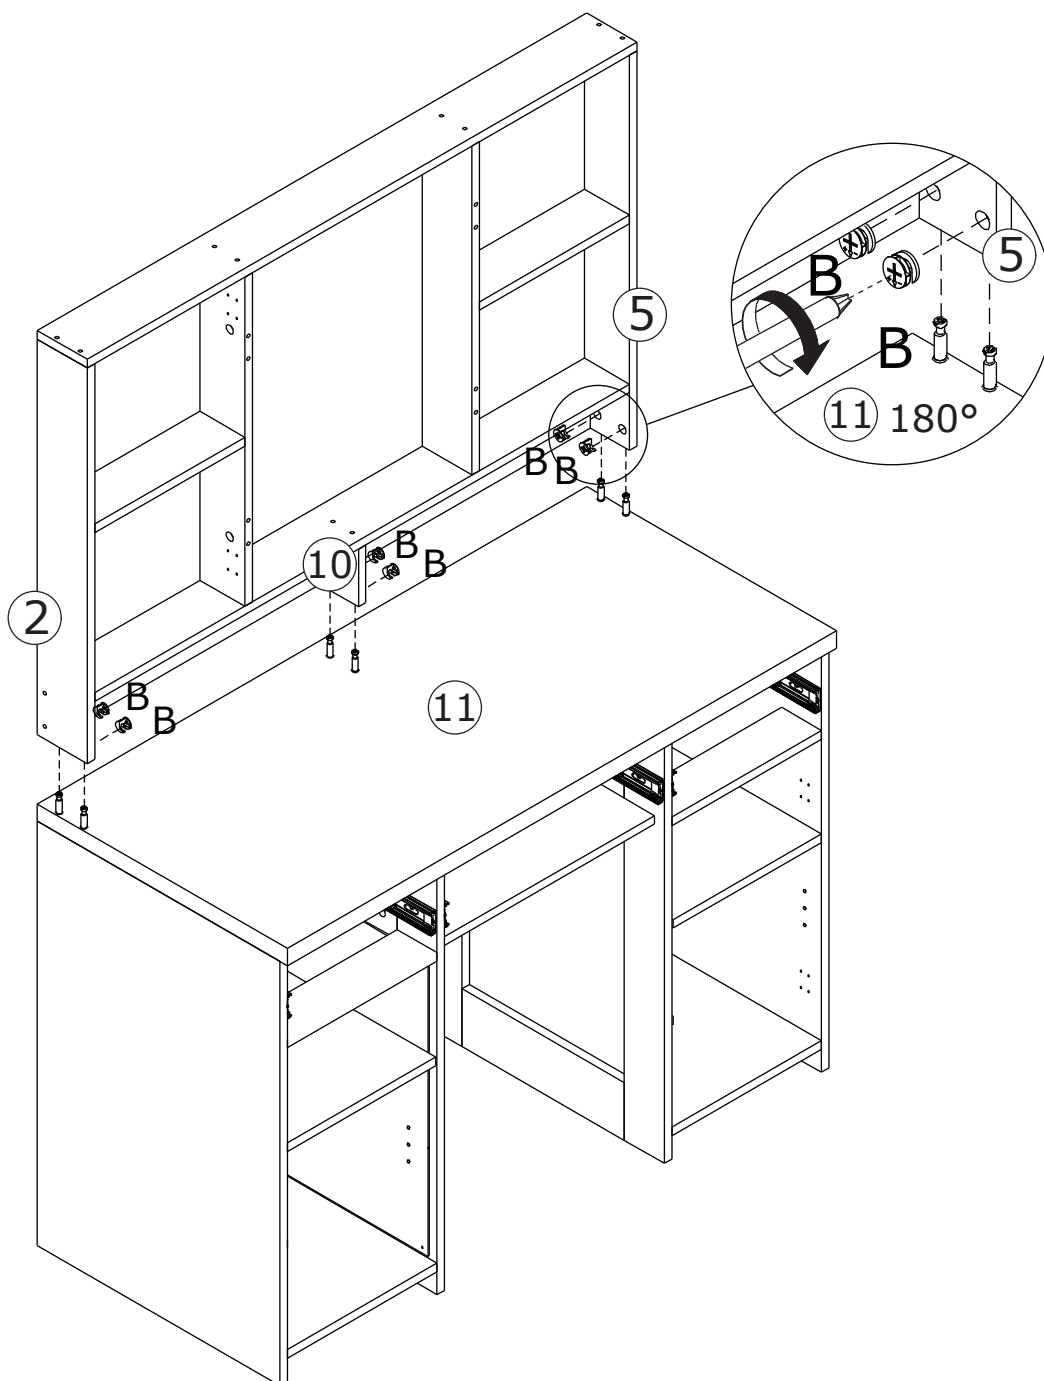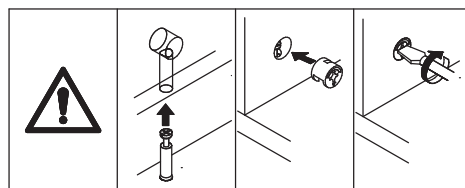

Connect the two assembled components, add cam lock(B) into and turn clockwise to tighten as shown.

16

 A x 4




M6 x 35 mm

D x 8





Ø 3.5 x 12 mm

 
J x 4



DWJL

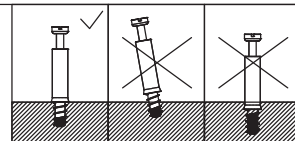  

 Screw eccentric rod(A) into board 33 at first.

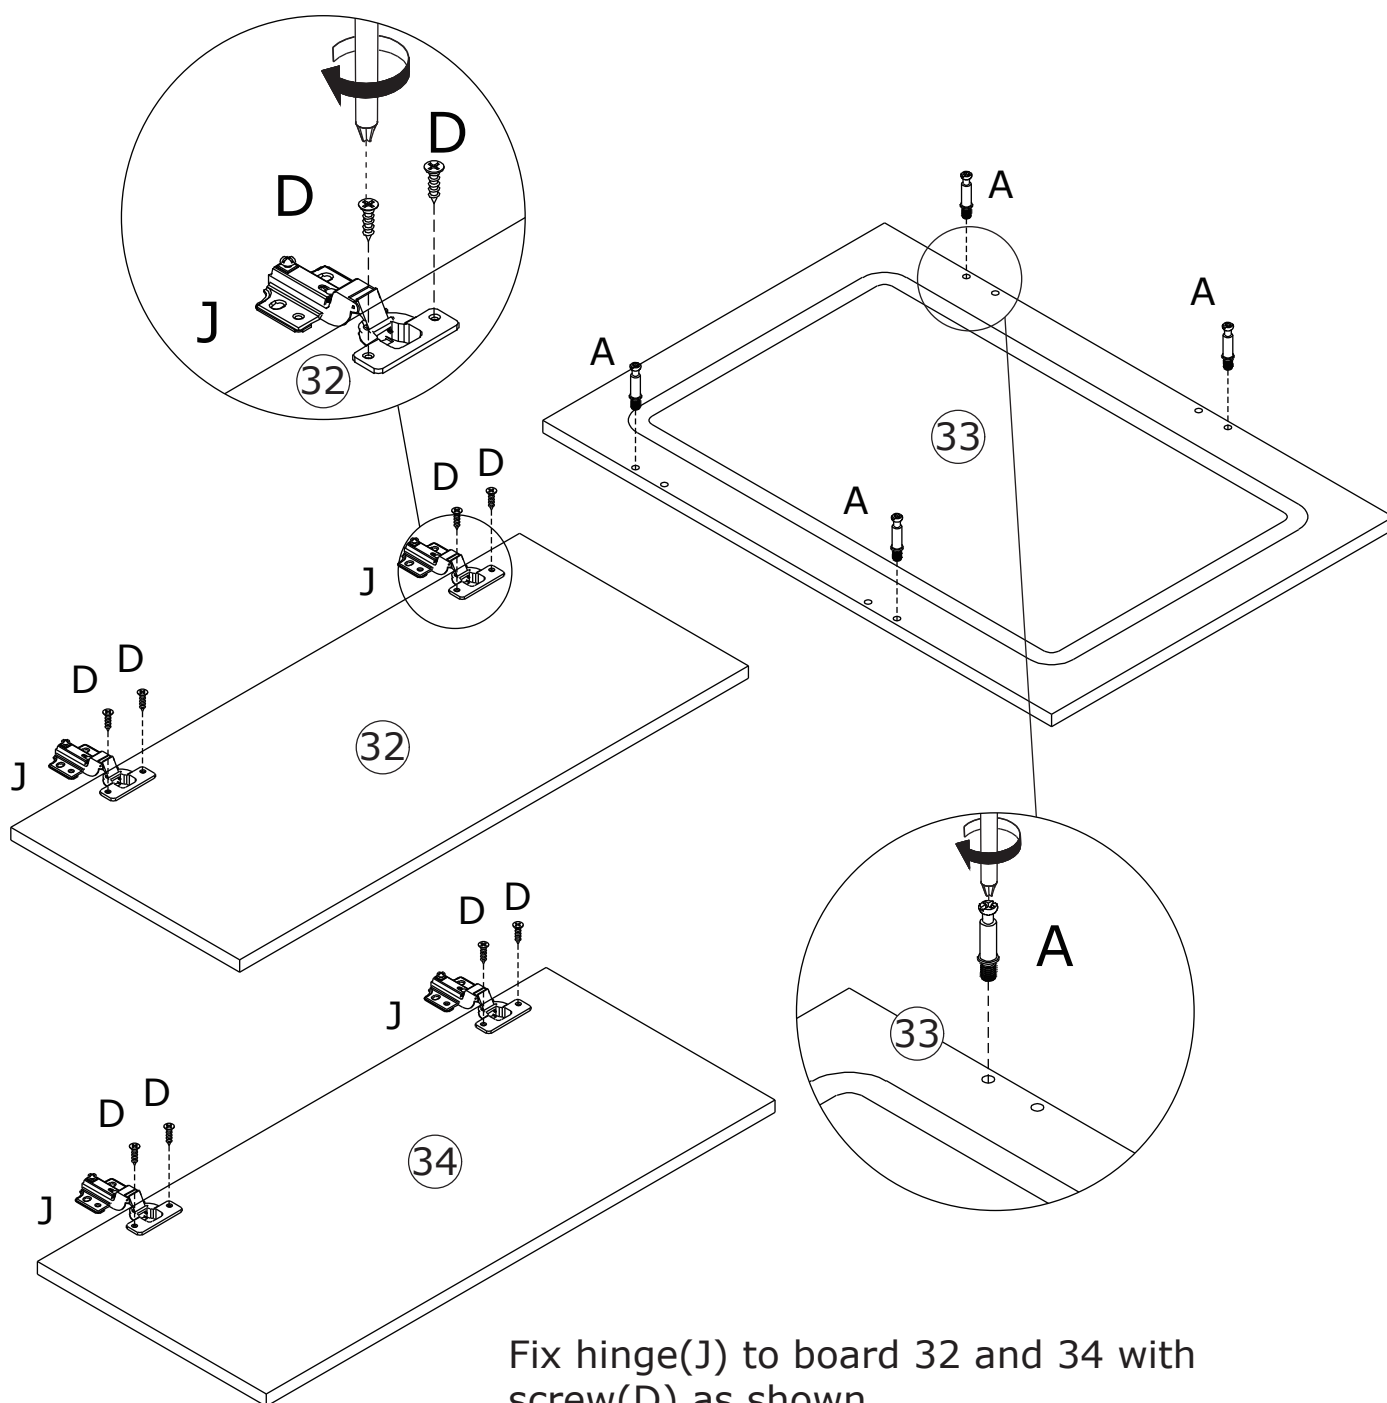

Fix hinge(J) to board 32 and 34 with screw(D) as shown.

17

B x 4



Ø 12 x 9.5 mm

D x 16

 
 
 
 


Ø 8 x 30 mm


H x 4




Ø 6 x 40 mm

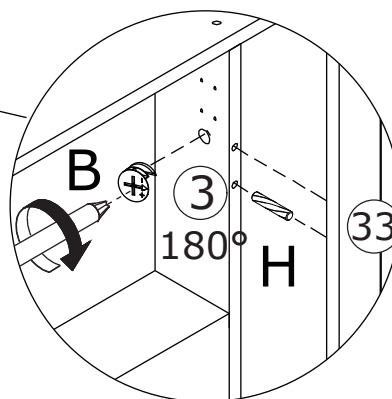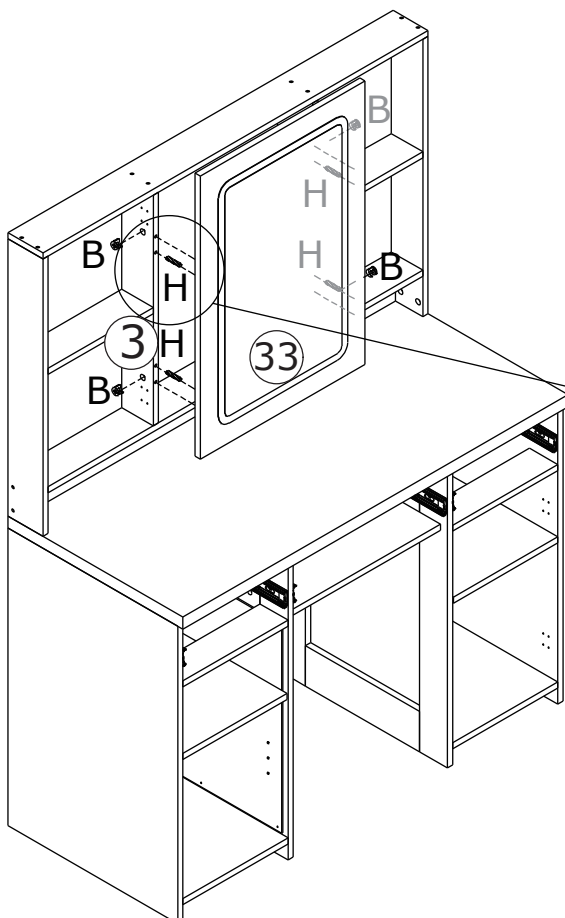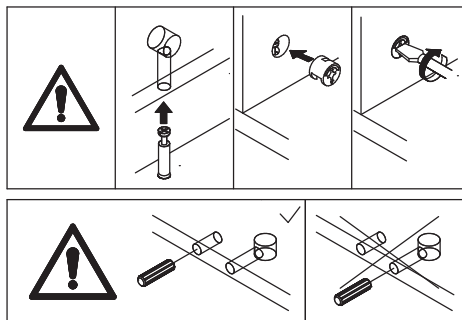




 
Attach mirror panel 33 to the unit using wooden dowel(H), add cam lock(B) into board 3 and turn clockwise to tighten as shown.

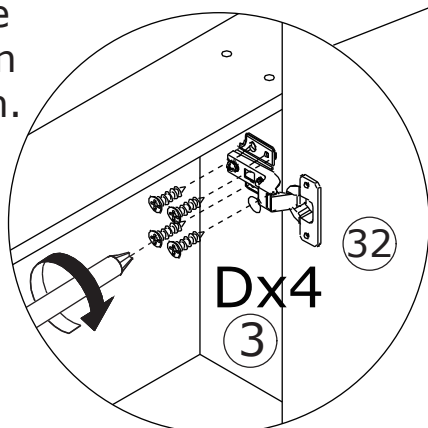

 Assemble door plate 32 and 34 to board 3 by fixing hinge with screw(C) as shown.

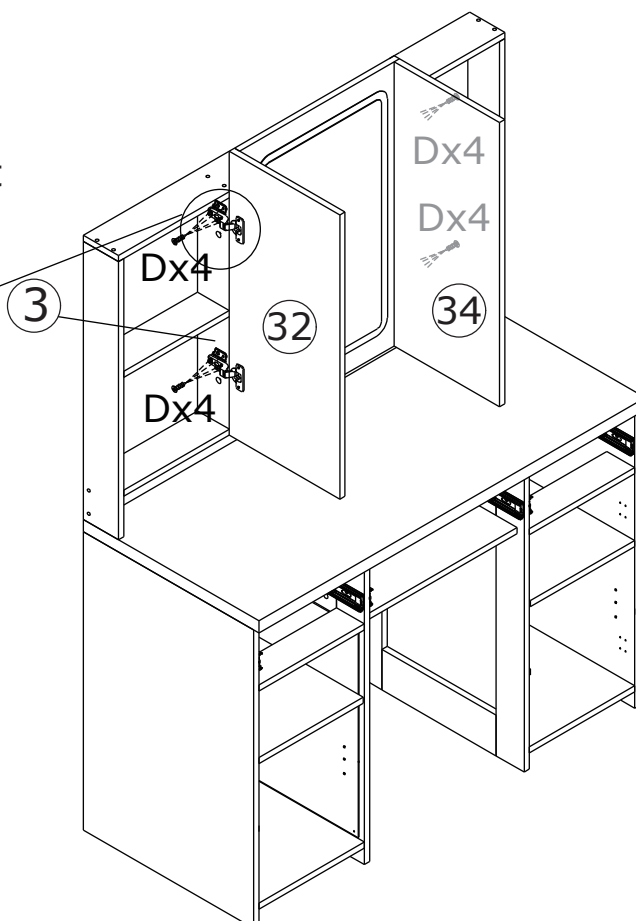


18

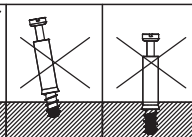    A x 8  M6 x 35 mm	D x 12  M3.5 x 12 mm	E x 2  SKLS-64	F x 4  M4 x 14 mm	
G x 4  GZLS-270	L x 12  M3 x 12 mm	  		

Fix runner (G-2) to board 24 and 25 with screw(L) as shown.

Fix panel 36 to board 28 with screw(D) at first.

 Screw eccentric rod(A) into board 28 and fix handle(E) with screw(F) as shown.

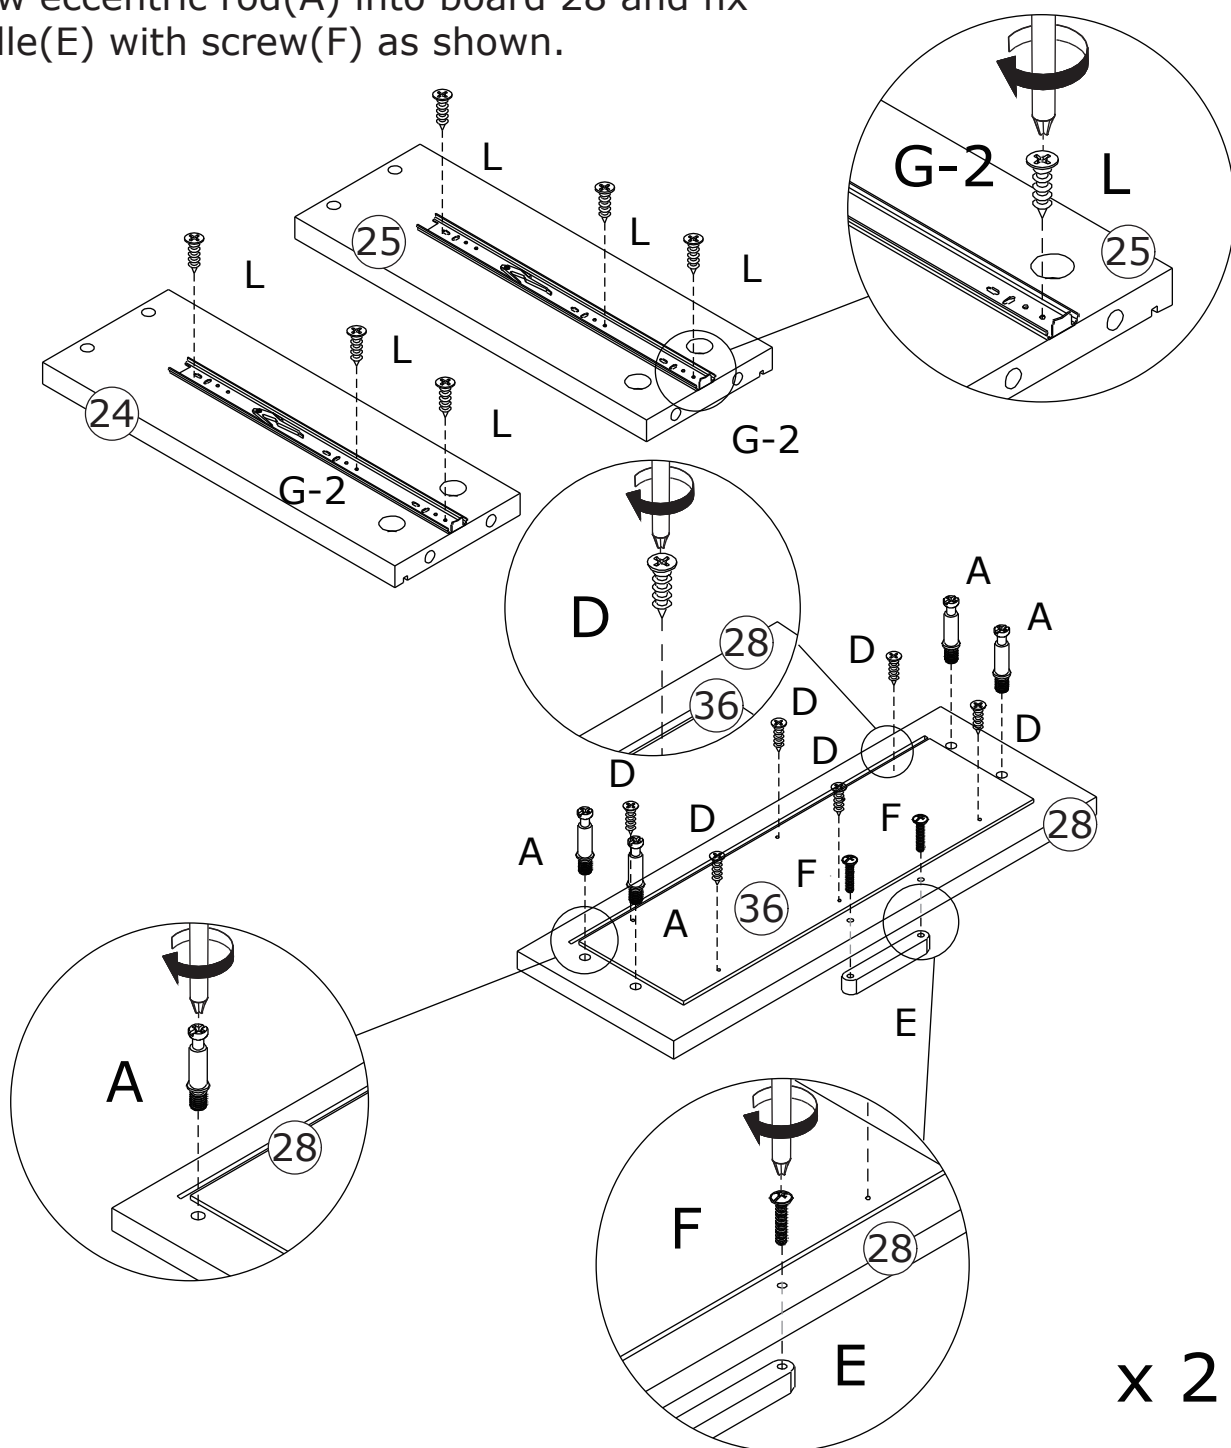

19

B x 8

 
 
 
 


Ø 12 x 9.5 mm


C x 8



M5 x 40 mm

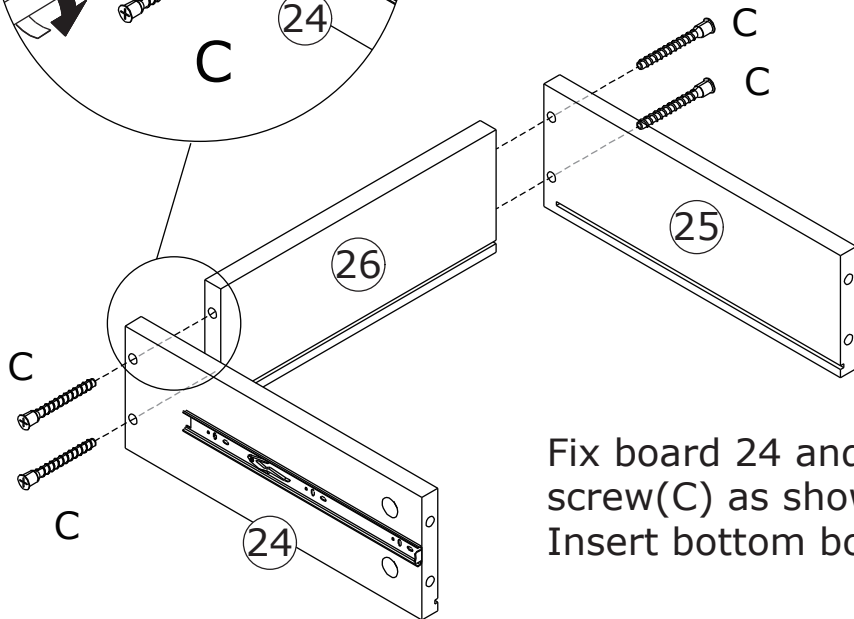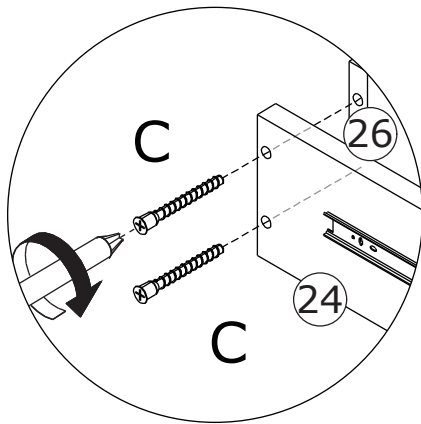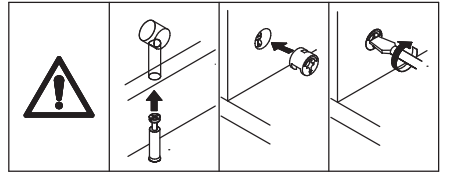



 
Fix board 24 and 25 to board 26 with screw(C) as shown.
Insert bottom board 27 along groove.

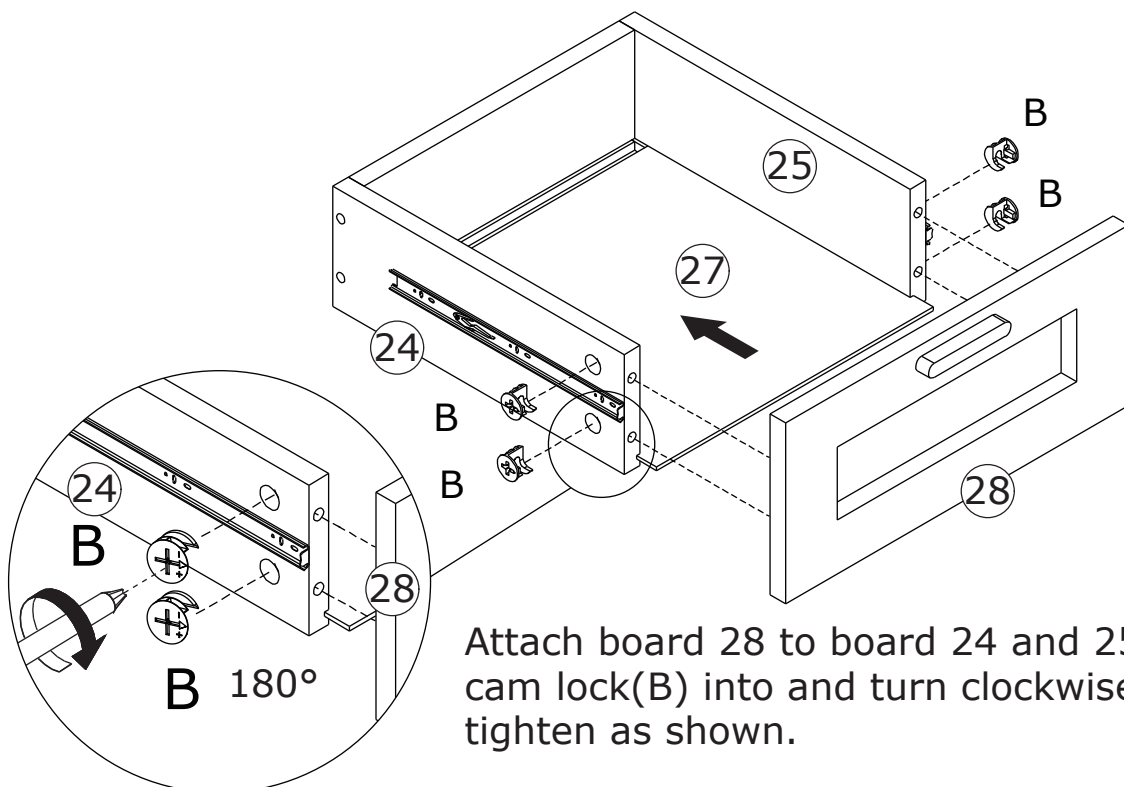

Attach board 28 to board 24 and 25, add cam lock(B) into and turn clockwise to tighten as shown.


x 2

   20

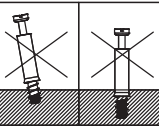A x 4  M6 x 35 mm	D x 6  M3.5 x 12 mm	E x 1  SKLS-64	F x 2  M4 x 14 mm	
G x 2  GZLS-270	L x 6  M3 x 12 mm	  		

Fix runner(G-2) to board 24 and 25 with screw(L) as shown.

 Fix panel 37 to board 31 with screw(D) at first. Screw eccentric rod(A) into board 31 and fix handle(E) with screw(F) as shown.

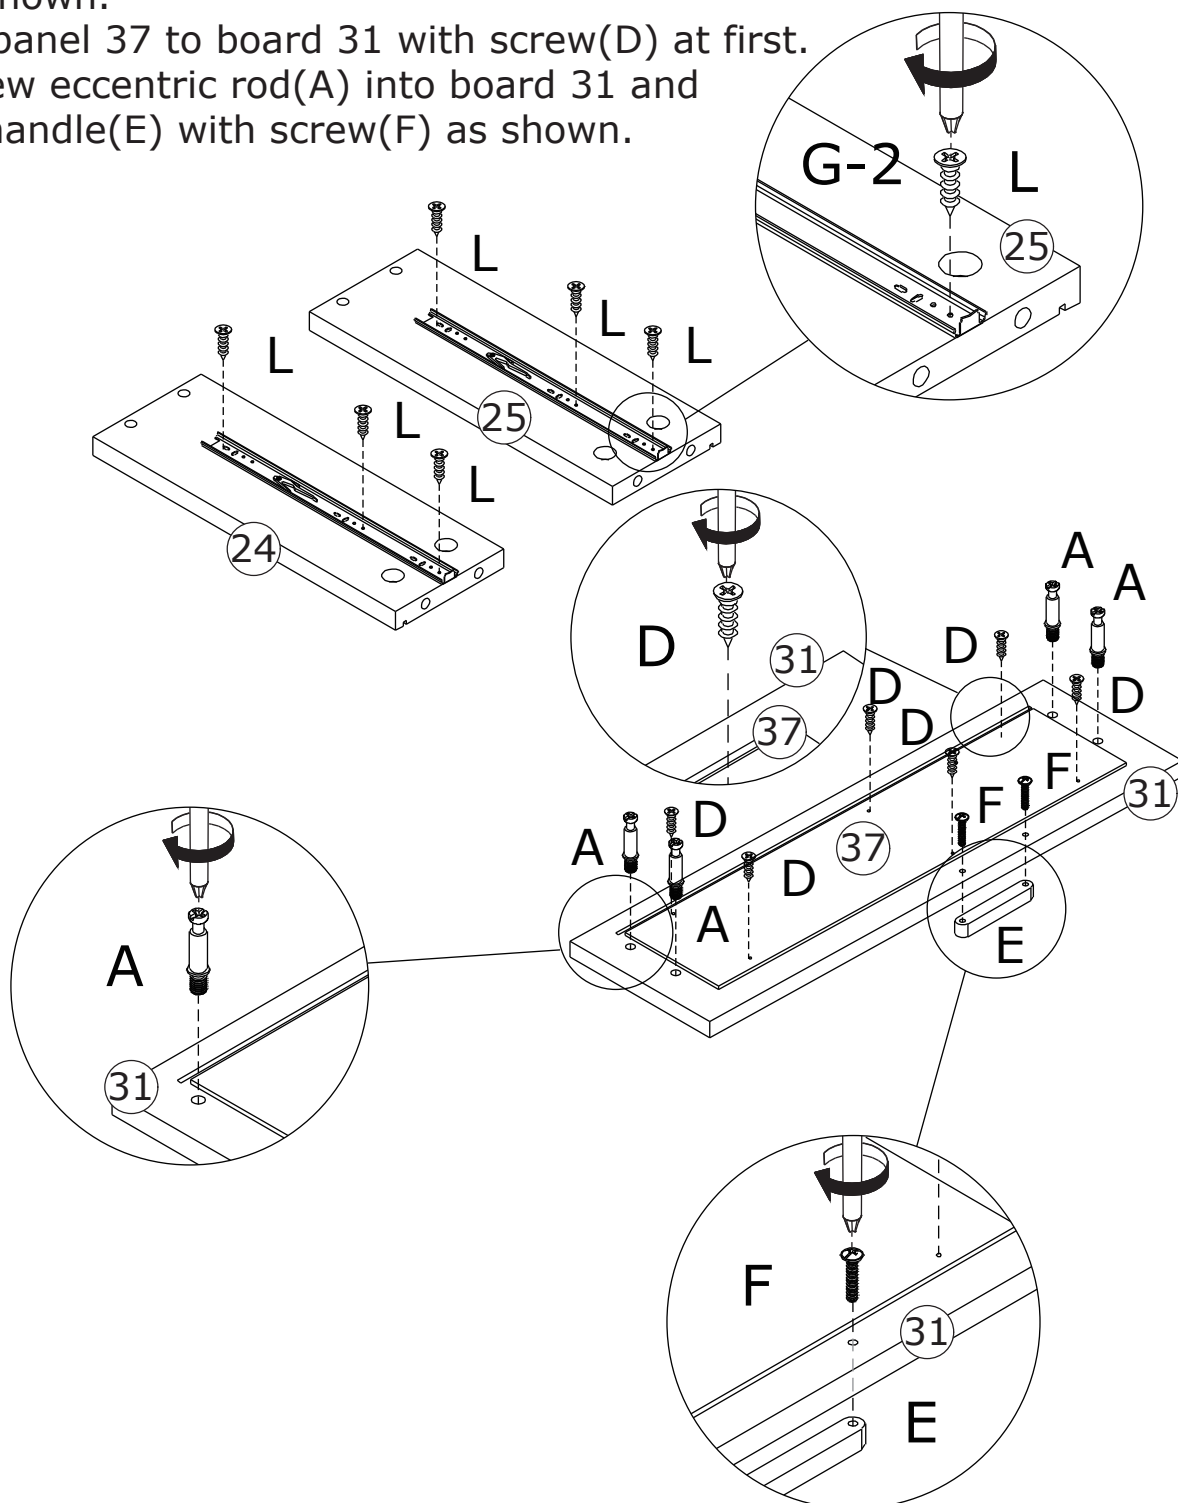

21

B x 4

 
 
 
 


Ø 12 x 9.5 mm



C x 4



M5 x 40 mm

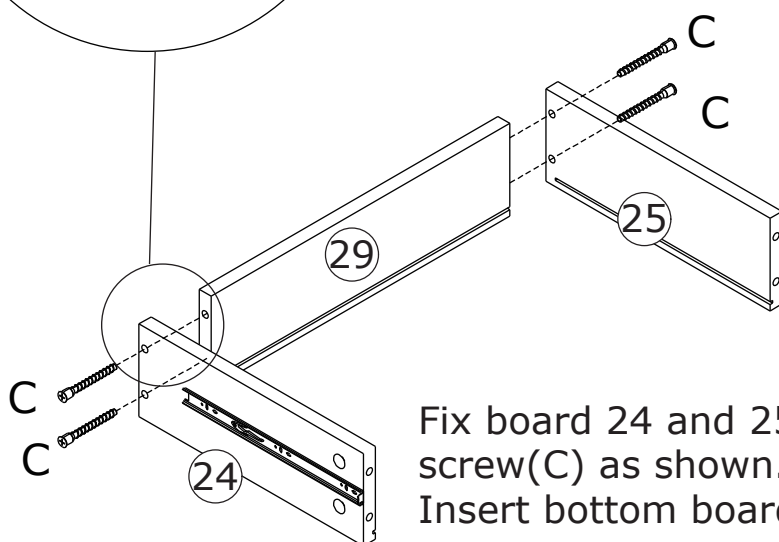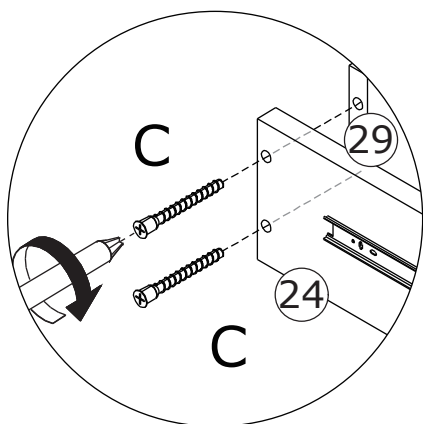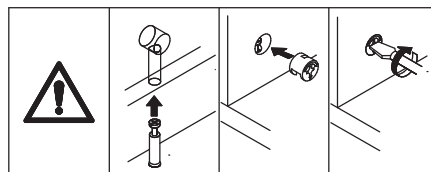

  Fix board 24 and 25 to board 29 with screw(C) as shown.
Insert bottom board 30 along groove.

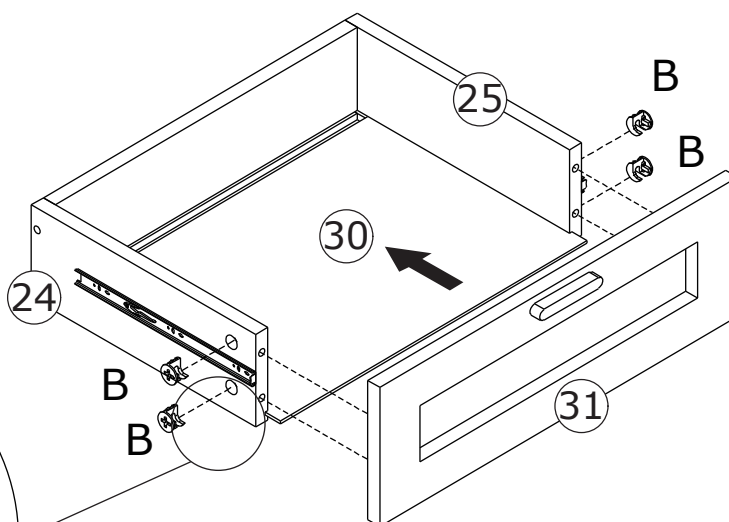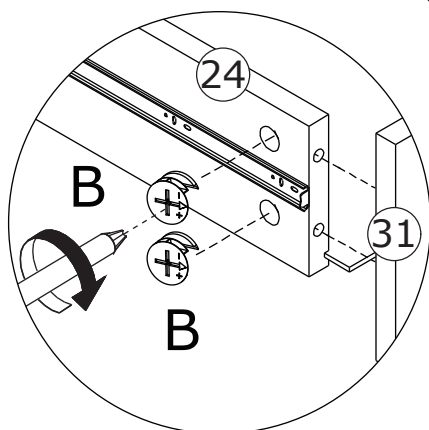


Attach board 31 to board 24 and 25, add cam lock(B) into and turn clockwise to tighten as shown.

22


K x 8



 
Insert layer pin into board 12, 13, 21 and 22, then place shelf board 15 on as shown.

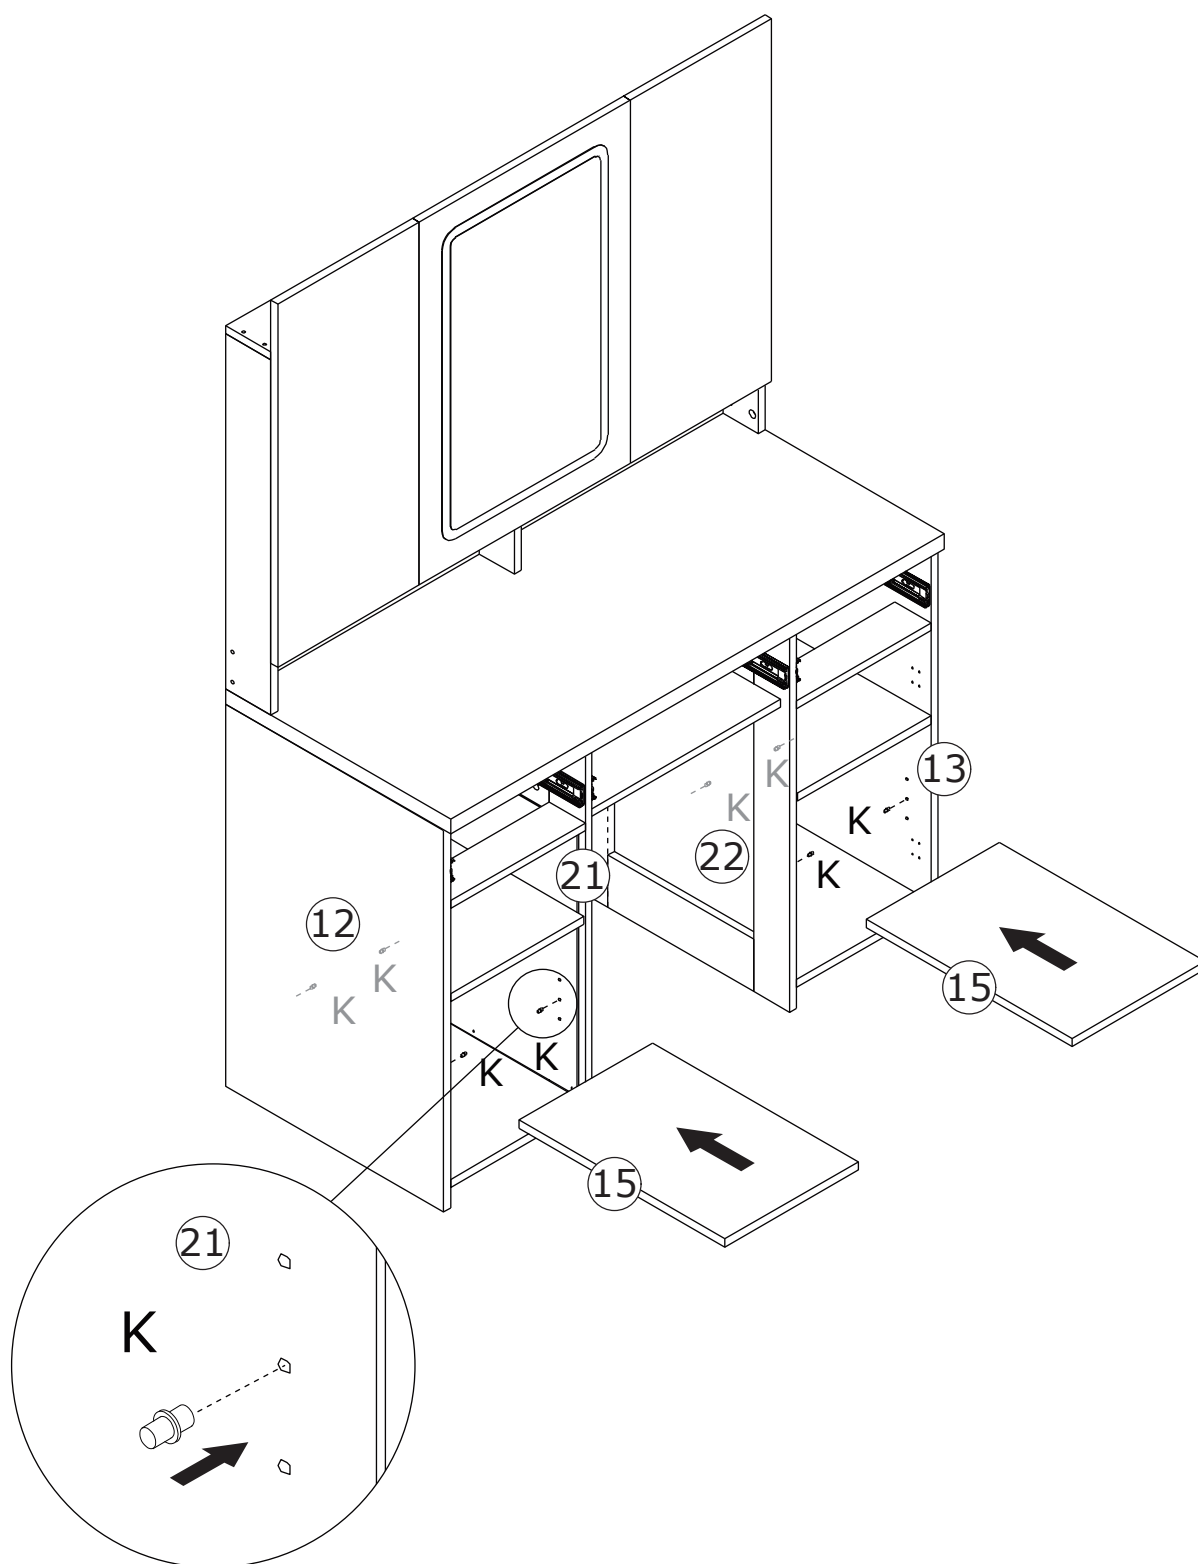


Align rails, insert all drawers in.

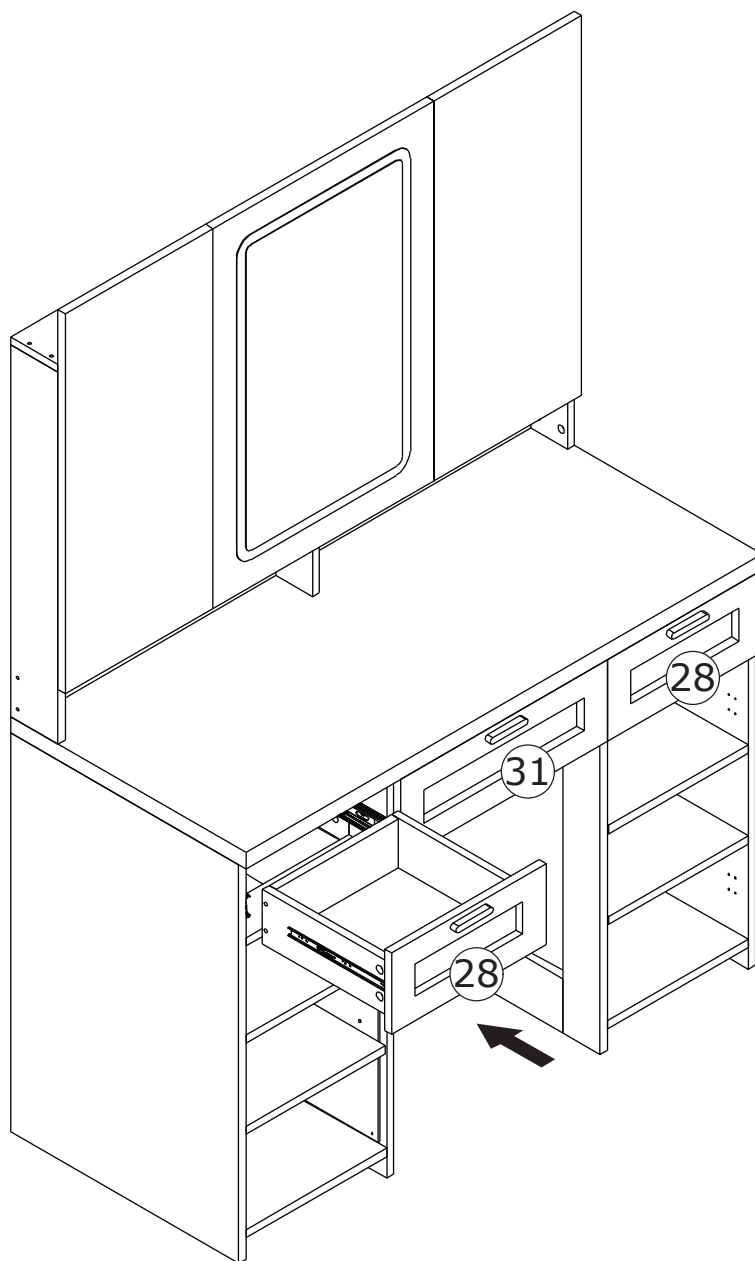 

24

 D x 8  M6 x 35 mm	E x 2  M3.5 x 12 mm	F x 2  SKLS-64	L x 12  M3 x 12 mm	M x 4  M4 x 14 mm	
--	--	---	--	--	---

 Fix hinge(M) to board 23 with screw(D) as shown.
 Fix panel 4 to board 23 with screw(L) as shown.
 Fix handle(E) with screw(F) as shown.

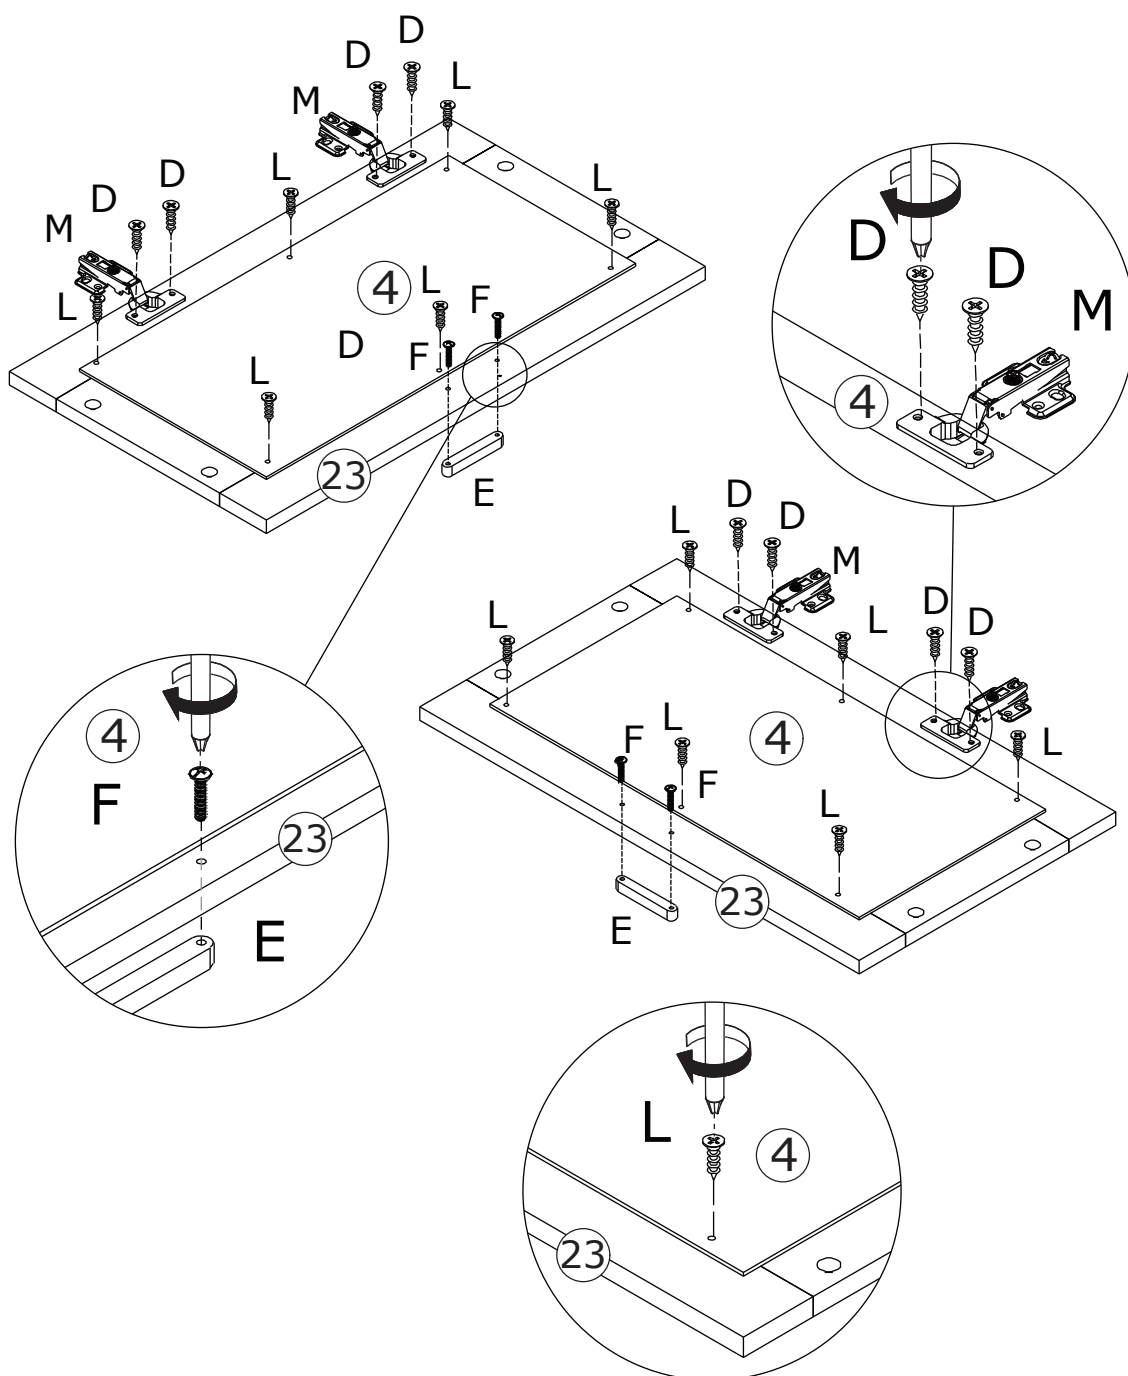


25


D x 16



 M3.5x 12 mm



 Assemble door plate 23 to board 12 and 13 by fixing hinge with screw(D) as shown.

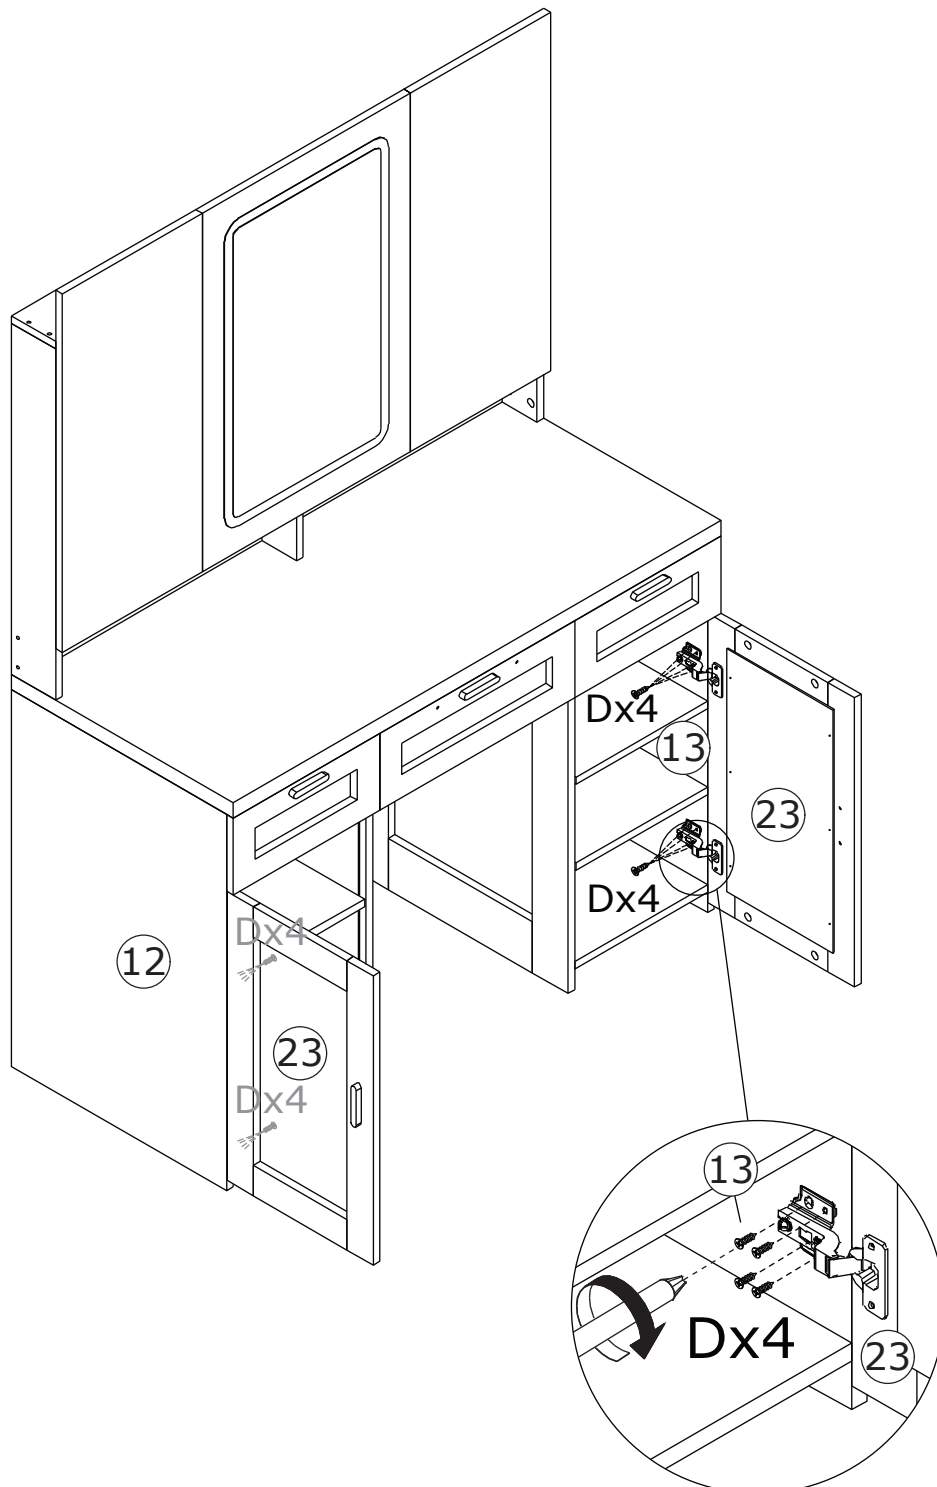

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387