# **INSTRUCTION MANUAL**



## **!** NOTICE

#### Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.

1 PC

- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.



1 PC

1 PC

# PARTS











Attach the part A right side and part B left side to the part C base with four part 1 screws and four part 3 washers, two screws/washers per side.





Attach the part D front with four part 2 screws, two part 1 screws, and six part 3 washers.





screws and four part 3 washers.

3

Attach the part F tabletop with four part 2 screws and four part 3 washers.





Attach the part G rack to the tabletop with four part 4 screws.



## ENJOY YOUR PRODUCT!

