




# PAD-PPM

CTA DIGITAL


## Portable Projector Stage and Photo Studio Mount for 7-14 Inch Tablets

### INSTRUCTION MANUAL

Thank you for choosing CTA Digital's product. We hope that you will enjoy using it. Please follow the guidelines and instructions as laid out in this instruction manual.

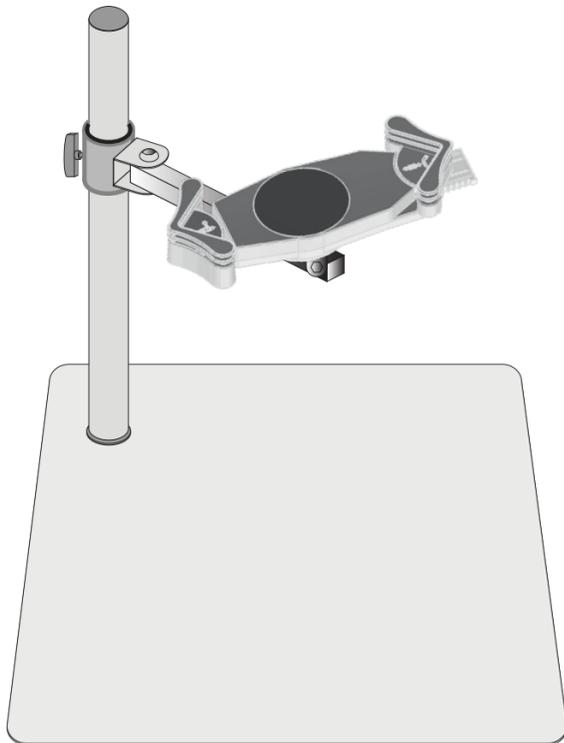


#### Package Contents:

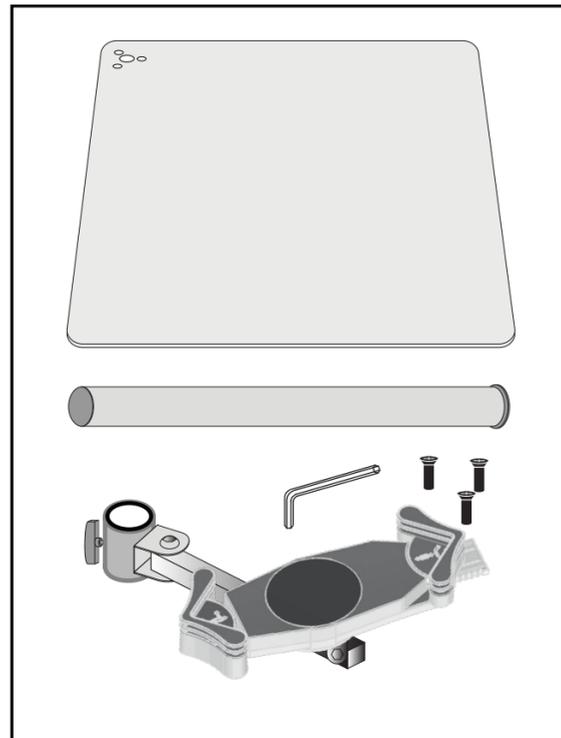


#### Instructions:

##### 1. Connecting the Portable Projector Stage and Photo Studio Mount:

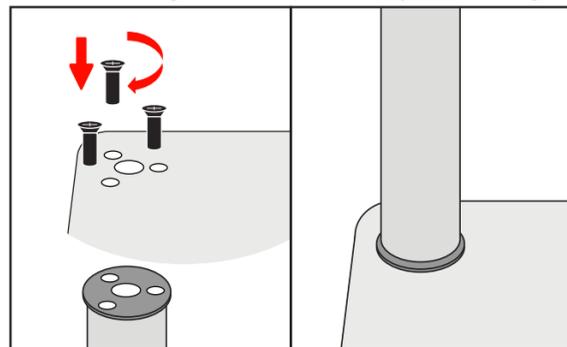


1. Align the pole and plate using the three holes. Screw them together from the bottom up using included screws.

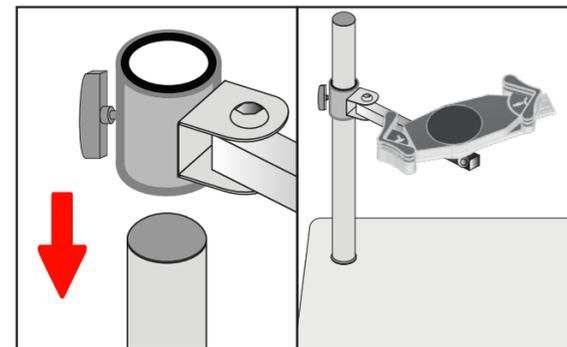

2. Go through the ring of the Arm and Holder unit to the pole. Place it at your preferred height then turn the handle rod to tighten.

*Note: if the handle rod of the ring is already in too much, unscrew before going through to the pole.*

##### 2. Attaching Foam Pad to Tablet Holder

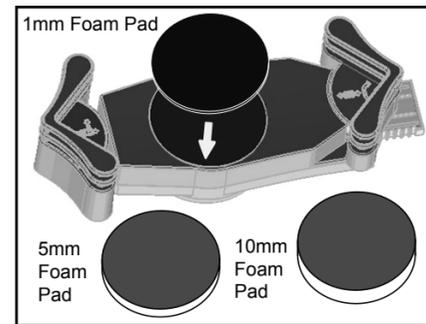


Select the appropriate foam pad according to the thickness of your tablet or case. Press adhesive side into center of tablet holder.

Use this table to determine the appropriate foam pad to use with your tablet. **Note:** sizes refer to total tablet size with or without a case.



Foam Pad Thickness	Tablet Thickness
1mm	0.67-1.06in / 17-27mm
5mm	0.51-0.91in / 13-23mm
10mm	0.31-0.71in / 8-18mm

##### 3. Installing your Device:

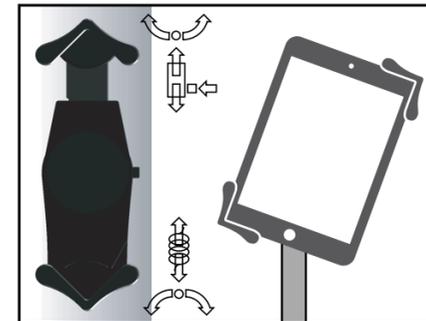


Press button on side of tablet holder to slide open. Insert your tablet against spring arm. Slide other end back to secure device.

##### 4. Adjustment:

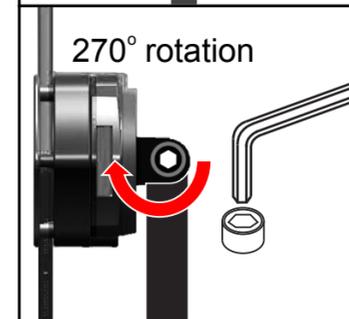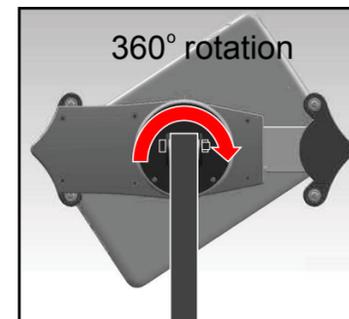

1. Use the Allen key to tighten and loosen the connection between the arm and the holder, adjusting ease of rotation in the tablet holder.

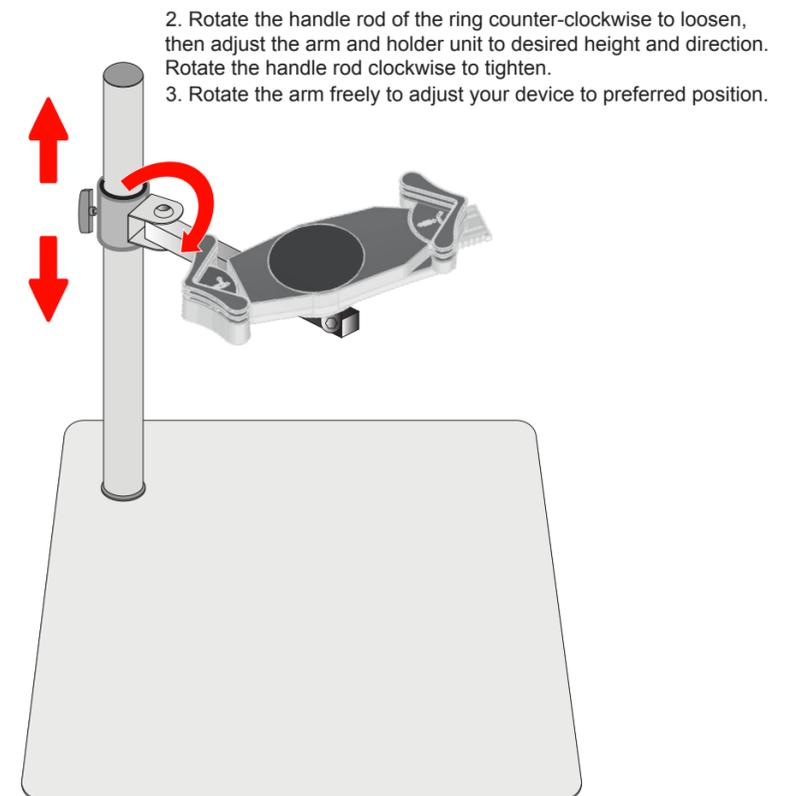

2. Rotate the handle rod of the ring counter-clockwise to loosen, then adjust the arm and holder unit to desired height and direction. Rotate the handle rod clockwise to tighten.  
3. Rotate the arm freely to adjust your device to preferred position.

SUPPORT@CTADIGITAL.COM