



USE AND CARE GUIDE

GA028-BL



Questions, problems, missing parts? Before returning to the store
please contact our Customer Service

• service@alphamarts.com •

1-877-606-2818

Questions, problems, missing parts? Before returning to the store
please contact our Customer Service

• service@alphamarts.com •

THANK YOU

We appreciate the trust and confidence you have placed in us through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

Table of Contents

Table of Contents	2	Pre-assembly	4-5
Safety Information	2	Assembly	6-7
Warranty	2	Features	8
Troubleshooting Guide	3	Cleaning and Maintenance	9
Introduction	3		

Safety Information

- This recreational item is not intended for use as a permanent structure.
- This tent/shelter has been developed and is intended to provide protection from sun and light rain. This product is NOT WATERPROOF.
- DO Not use any gas or flame sources under or near this product.
- Excess water build-up can cause the frame system to become unstable, and collapse, causing injury.
- Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc.
- This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury.
- This product is not a toy, this product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belonging or similar valuables.

 **WARNING:**
KEEP ALL FLAME AND HEAT SOURCES
AWAY FROM THIS TENT FABRIC!

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Warranty

LIMITED WARRANTY

This warranty is a limited warranty, and applies to the original purchase is required. This is a residential warranty and does not apply to commercial use. This collection carries a (1) year limited warranty and is valid from original date of purchase to the original owner (proof of purchase required).

WHAT IS COVERED

We warrant the frame to be free of Manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive.

In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Troubleshooting Guide

Problem	Solution
1. Condensation	This is caused by lower temperatures on outside of product combined with body heat on inside of product. When this occurs, avoid touching walls to reduce contact leakage. Leaving doors and windows open will reduce condensation.
2. Mildew	To avoid mildew, never store your product wet or damp. However, if mildew occurs, use a soft bristle brush or sponge with mild soap to clean. Let dry in the sunlight and apply seam sealer compound on inside seams.
3. Repairing a Tear	For small tears use a self-adhesive patch kit. We recommend a repair shop for larger tears.
4. Faulty Zipper	All of our tents come with self-repairing nylon coil zippers. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper. Local awning and upholstery repair shops may be able to assist you.
5. Floor Condensation (Only applicable on products with floor)	To prevent floor condensation use a ground cloth. Placing a ground cloth under your product will prolong its life. Ground cloth size should be slightly than product floor size.

Introduction

- We advise you to assemble this product at least once at home before going on a trip. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself up setting up in the dark and adverse weather conditions.
- Get the most enjoyment from your product by reading this owner's manual thoroughly; then follow our camping suggestions outlined below. Note the symbols we use and why.

Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.



 
NOTE: Identify all parts packed in the carton against the parts list. Remove all the protective material carefully and DO NOT use a knife to prevent scratching the furniture.

PACKAGE CONTENTS




NOTE: Hardware not shown to actual size.


A
X1

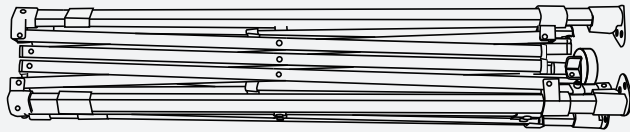

B
X1

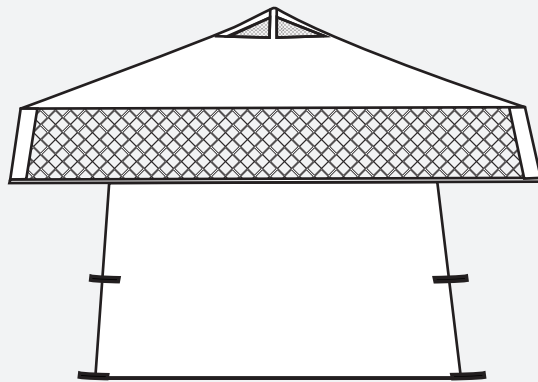 

C
X1

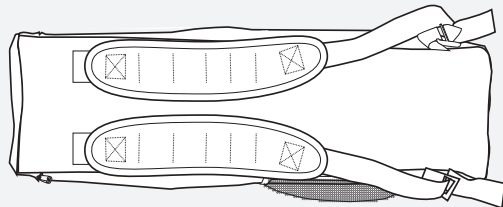 

Pre-assembly (continued)

 
D
X8




E
X4



F
X4

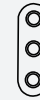


G
X4

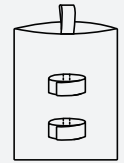 

NOTE: All accessories of above pictures are not actual size

Assembly

 Canopy set up

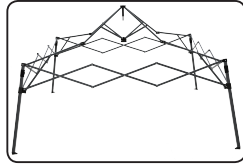

Place the canopy frame in the center of the setup area. Pull opposite legs away from each other to expand canopy frame.

 
1

2

Lift the side of the frame up and bend slightly down underneath the center of the canopy frame. Then, push up on the center Quick Lift mechanism until it snaps into place and the entire frame is fully extended.



3

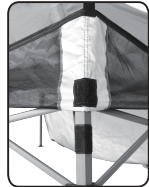

Place the canopy over the top of the frame. Use velcro secure each corner of the cover to the upper position of each leg.

4

Extend canopy legs to the height which you need.



5



Stake (D) down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.

Assembly

6

Measure out from the leg to a proper distance and secure the four nails to ground at a 45 degree angle. Tie the another end of each rope to the corner of canopy fabric top. Make sure the guy ropes have the proper tension via adjusting buckle(F).



7



Fixed the Velcro on both sides of the side wall to the two leg tubes.

8

The side wall can be rolled up if you need.



9



Fixed the sandbag (I) to each leg tube.

10

Your instant canopy is now complete!



Features

This canopy has the following usage scenarios



Usage scenarios -1



Usage scenarios -2

Cleaning and Maintenance

Not complying with these warning will void your instant canopy warranty!

- Do not set-up or leave your instant canopy assembled in rain, hail, sleet, snow, drizzle, lightning, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use tie-downs, stakes or weight bags to secure your instant canopy in windy conditions. Commercial stake kits to needs to be purchased as accessories separately.
- Always follow directions when setting-up your instant canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove cloth from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the cloth in a washing machine-serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on cloth and gently clean by hand, then rinse off with a garden hose.
- Do not use detergent clean by hands if cloth has custom silk-screened graphics.
- Allow cloth to dry completely before storing.
- Keep your canopy off of steep slopes and inclines.
- Do not use your instant canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your instant canopy unattended.