STEP 1


Remove Dust Caps, attach Line Set to Valves Liquid

Suction -

Service Valve


Allen — Wrench

Service

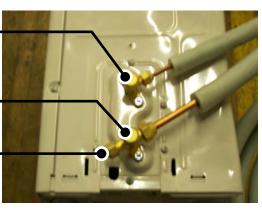


STEP 2

Open Liquid Valve
¼ turn counter-clockwise;
wait 10 sec. before Step 3

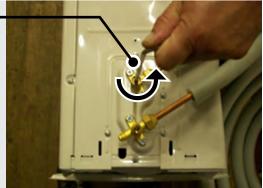

STEP 3

Press Service Valve for 2 sec. then release

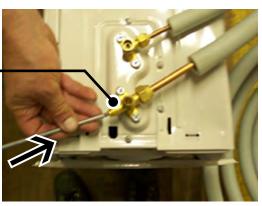

STEP 4

 Fully open the Liquid Valve by turning counter-clockwise



STEP 5

 Fully open the Suction Valve by turning counter-clockwise

