

140mm

Safety Warning

1. Please use it indoors, avoid placing it in direct sunlight, and keep it away from any

2. Please use the 5V/1A adapter provided with this product to charge the water fountain. Using any other adapter may cause the machine to malfunction or be

3. Before installing or replacing the filter, please rinse the filter by soaking it in water for


4. When using the machine for the first time, the water pump has a 30-second air-exhausting process, the water flow is relatively small; After 30 seconds, the water

5. In order to prevent pets from knocking over the water fountain, it is recommended to place it against the wall or placed in a safe location.

6. Please replace the filter element regularly and thoroughly clean the pump. 7. When cleaning the whole machine, please disconnect the power supply and turn off


8. Do not rinse or soak the master control module with water; if accidentally getting wet during the cleaning process, please dry it in time to avoid damage to the

9. When you go out for vacation, please ensure the water fountain is fully charged and

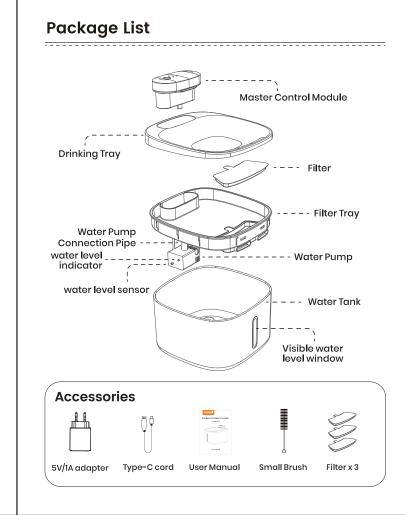

Specifications

Product Name	oneisall Wireless Pet Water Fountain
Model	PW04
Product Size	7.87*7.87*6inch/20*20*15.3cm
Rated Voltage/Current	DC 5V1A
Battery	5000mAh
Capacity	3.5L
Material	304 Stainless Steel+ABS

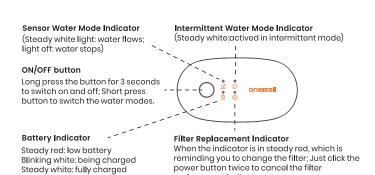

Water Level Indicators Introduction



 
replacement indicator.

Operating Instructions

1.Fully Charged Before Using the New Fountain

Remove the Master Control Module from water fountain(or just plug in without removing). Connect the Type-C cable to the power port and the adapter (5V/1A adapter included), then turn on the power. The charging time is about 7 hours.






2.Assemble the Fountain

1.Install the water pump to the filter tray, then fixed the filter tray on the top of stainless water tank, and put Cover the stainless steel drinking tray to the filter tray.

 3. Fill in water to the tank, switch on, 2.Plug in the Master Control Module.



The filter must be fully soaked for 5 minutes before using the fountain. Otherwise, the water may not be able to expand through the filter into the tank to create circulation, which may result in overflow directly from the drinking tray.

3.Star to Work

Constant Mode:

Plug in the power cable, the water fountain enter constant water mode in default, it flows without interruption while in charging.





Please Note: constant water mode only works when plugged in, wireless mode does not support constant water outlet.

Sensor Mode:

Short press the on/off button to switch to sensor water mode. When pets move within 1m/39in in front of the water fountain (induction angle 120°), it triggers the sensor mode and water flows for 30 seconds. Sensor mode works both when plugged in, and unplug after battery



Intermittent Mode

Short press on/off button to switch to intermittent water mode. The water fountain flows 30 seconds every 30 minutes. Intermittent mode works both when plugged in, and unplug after battery





Cleaning & Maintenance 1. Daily cleaning and maintenance

Turn off the fountain and unplug the power before cleaning. Take out the Master Control Module of the water fountain, drinking tray, filter and the filter tray. Put the stainless steel tank, stainless steel drinking tray and PP filter tray into the water, rinse them (also could be put into dishwasher to clean except the Master Control Module and pump). Do not immerse the Master Control Module into water nor in the dishwasher, keep it dry.



2.Filter Replacement

 
①For the health of your pet, it is recommended to change the filter every 15 days. When filter replacement indicator lights up in red, please replace the filter. Double-click the power button to cancel the filter indicator light.



②Before replacing the filter, please soak the new filter in water for 5 minutes to remove the powder produced by the activated carbon during transportation.



3.Water Pump Cleanup (It is necessary to clean it once a week for the longevity of the pump.) Step 1. Open and remove the pump cover.



Step 2. Remove the pump cover. Try to open the impeller cover with the notched corner of the pump cover, or with other tools.



Step 3. Use small brush with soap to clean the parts under running



lease scan QR code to check the video about ow to clean water pump.

Troubleshooting

re-insert it tightly.

please refill water in time.

1.Where to find the replacement filter and pump. Here is the replacement filter with ASIN: BODDT58LNN, and pump with ASIN: BODDT4XR5N.

2.Water fountain not working Please check if the water pump is be clogged. Please clean the pump Or check if the pump connection pipe is connected tightly. Please

3.Red indicator lights up through the water level The water volume is below the minimum level or runs out of water,

4. Charging indicator does not light up after plugging in the Type-C charger.

Check the adapter is full connected with the outlet, ensure they are in a good power connection.

5.Pump noise increases and water output The pump may be clogged, please disassemble the pump and clean it thoroughly.

Warm Tips

If your cats are wary of new things and it's their first time using a flowing water fountain, here are some tips to help them adjust:

1. Start by placing the new fountain a few inches away from their usual water dish.



3. Gradually move the old water dish closer to the new fountain each day until they're side by side.



4. Keep the old water dish in its spot for a few days to let your cats get used to the fountain's features like lights, sounds, and moving water.



5. Over time, your cats will grow comfortable with the fountain and begin drinking from it. Be patient and allow both yourself and your cats time to



GPSR Product information

Name: Apex CE Specialists GmbH Add: Grafenberger Allee 277-287,40237 Düsseldorf,DE Contact Person: Wells Yan Zip Code: 40237 Tel: +353212066339 E-mal: Info@apex-ce.de

UK REP

Name: APEX CE SPECIALISTS LIMITED Add: 6f East Union Street, Manchester, England, M16 9AE E-Mail: Info@apex-ce.com

Product Name: Wireless Pet Water Fountain Brand: oneisall Product Model; PW04 Rated Voltage/Current: DC 5V= 1A

GPSR Product information Business Name: Shenzhenbenfendianzishangwuyouxiangongsi Manufacturer's Address: CN, 518000, GuangDong Sheng, Shenzhen, Longhua District, Minxin Community Bishui Longting Building 6 Unit, 7B Tel: +86 185 6587 6424

Warranty Information

WE ARE READY TO HELP

oneisall offers a standard 2-year warranty. If you have any issues with your oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing one is all.

Please note that the oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades. guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance

(US) Mon-Fri 8am-5pm(PST)

www.oneisall.com



PW04 饮水机说明书

尺寸: 105x140mm

材质: 128g双铜

印刷: 四色印刷 哑油

折叠方式: 6折页

印刷要求

表面文字和图案清晰,无切割不整齐、污渍、混点(黑 点、白点)、破损、错字、漏字、重影,印刷内容、方 **外观** 向、位置须与图纸或样板相符。

颜色与图纸或样板一致。

尺寸 须符合图纸要求或与样板一致。

CMYK:0 63 100 00

说明书/ 吊卡类