



Parts Breakdown

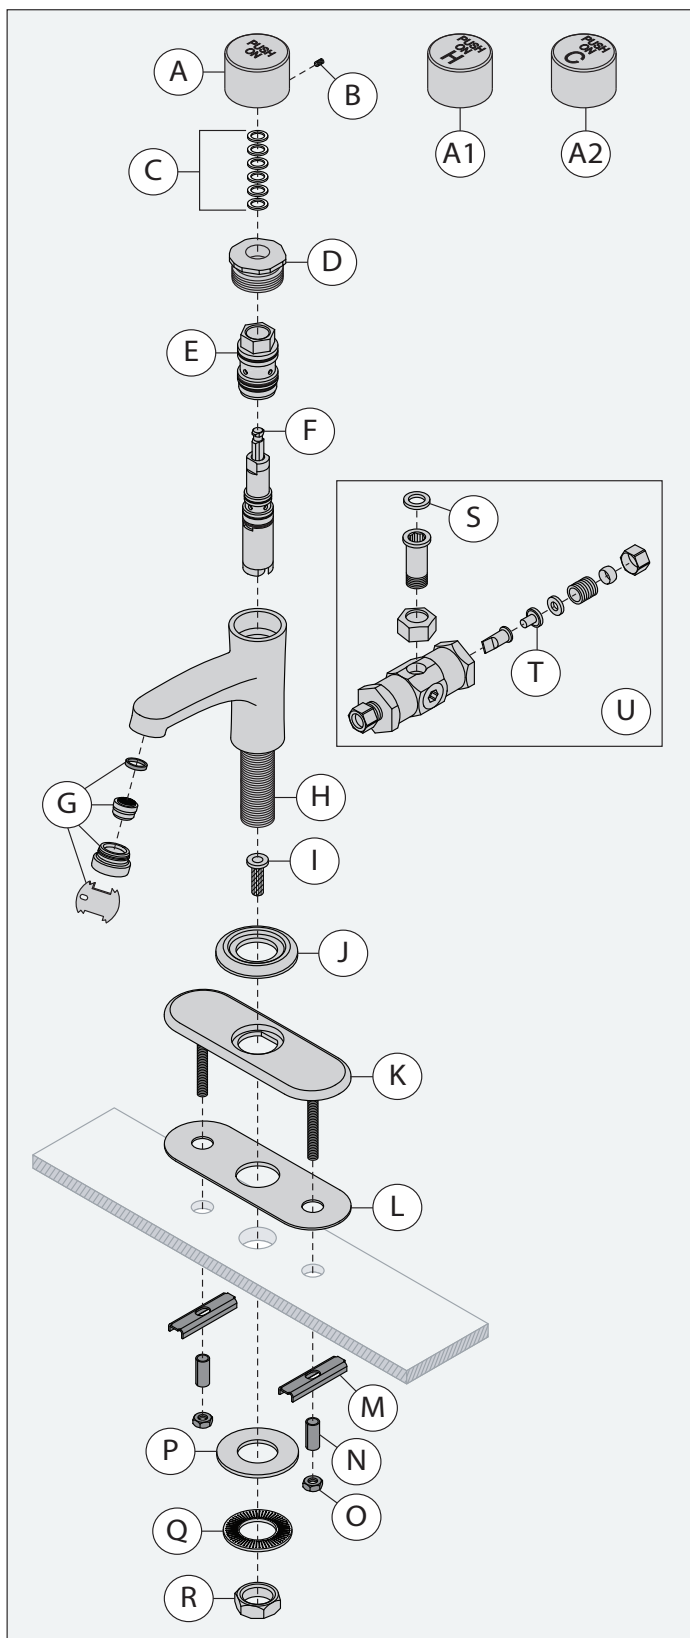

Note: Apply plumber tape to all threaded connections.

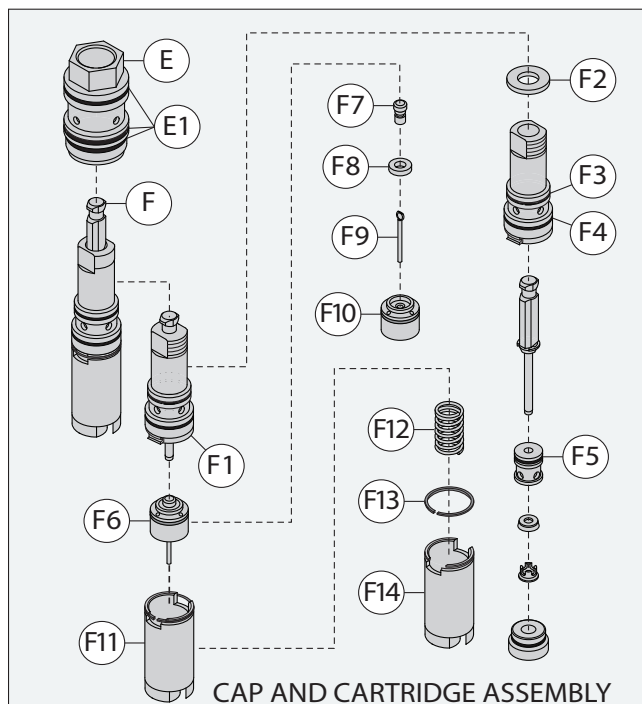

Replacement Parts

Item	Description	Part Number
A	Handle Kit	RL-293
A1	Hot Handle Kit	RL-296H
A2	Cold Handle Kit	RL-296C
B	Set Screw	LL-27
C	Cycle Timing Washers (6)	LL-28
E	Upper Housing	LL-3N
E1	Upper Housing O-rings (3)	LL-48
F3	Cartridge O-ring	RL-272
F4	Cartridge O-ring	
F5	Guide O-ring	
F10	Piston Quadring	
F	Cartridge Quick Closing Cartridge	LL-1A LL-1B
F1	Control Spindle Kit	RL-266
F6	Piston Assembly	
F6	Piston Assembly	LT-4AA
F11	Piston Spring/Cylinder	RL-267
G	0.5 gpm Vandal Resistant Aerator Kit with Key	RL-292
I	In-line screen	LL-101
K	Optional 4" or 8" Deck Plate	4": RL-294
L	4" or 8" Deck Plate Gasket	8": RL-295
M	Mounting Bracket	SPF-KIT
N	Spacer	
O	Mounting Nut	
S	Washer	MV-10
T	Checks	MV-107
U	Mechanical Mixing Valve	4-10C