


# TRUE INDUCTION 1 + 1 GAS COMBO COOKTOP MANUAL

---

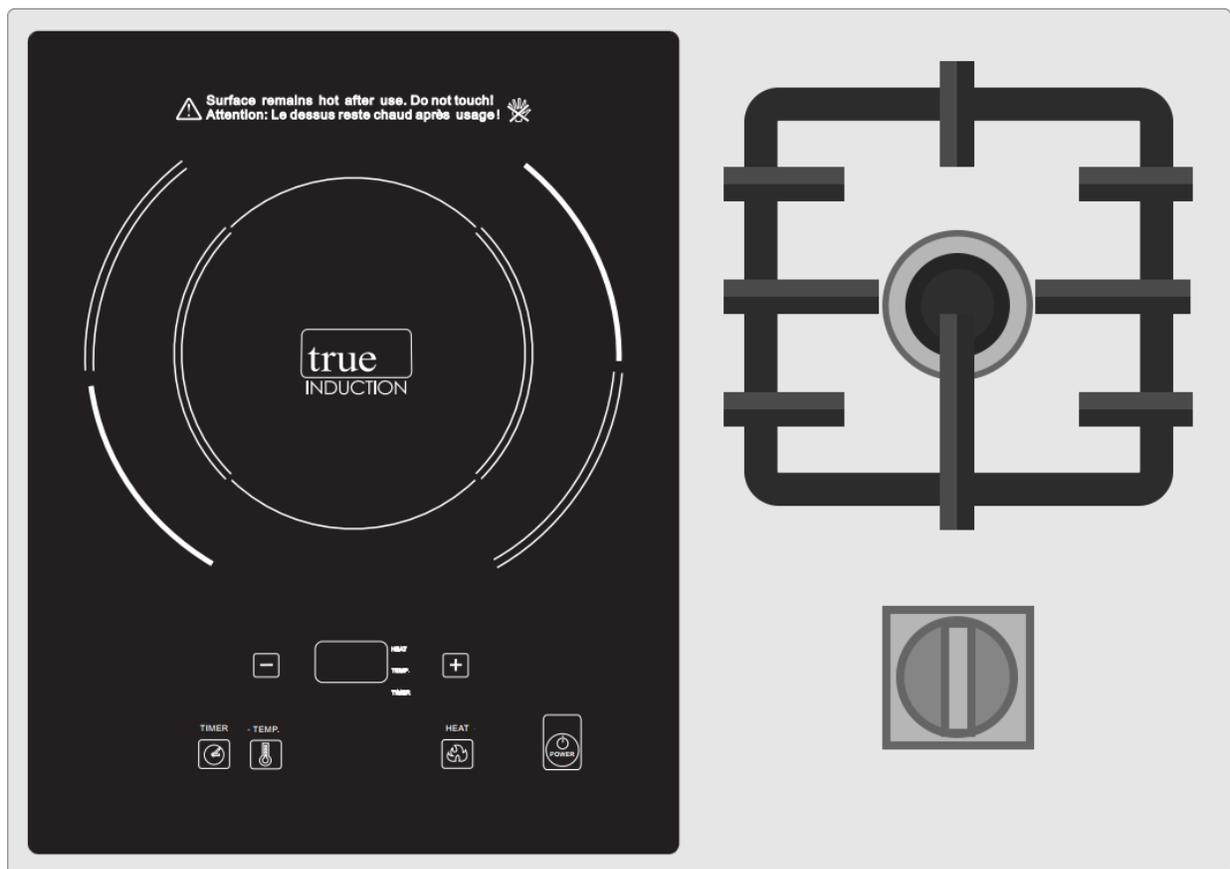

# TABLE OF CONTENTS

---

I.	Cooktop Installation .....	1-3
II.	Important safety Information.....	4-5
III.	Product Specifications .....	5



Thank you for purchasing the **True Induction 1 + 1 Gas Combo cooktop**. Please read the entire instruction manual prior to using your unit. If you have any questions regarding the True Induction cooktop please visit <http://www.TrueInduction.com> or call: **1-877-862-7049**.



# I. Cooktop Installation

## Dimensions and Placement for Cut-out in Countertop

- Cut a rectangle hole in the countertop where the cook top is to be placed. The dimensions for the cut-out are 14 1/4" x 23 3/4"
- The cut-out must be placed at least 2 1/2" from any side of the countertop.
- To achieve flush mounting installation, use a router tool to round the corners of the hole cut into the countertop.
- Leave a minimum of 16 1/2" of clearance between the cooktop and any upper cabinetry with a vent hood application.

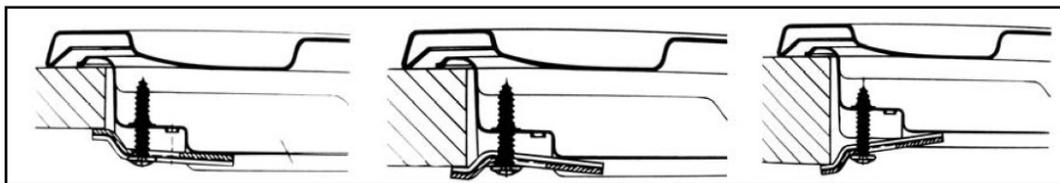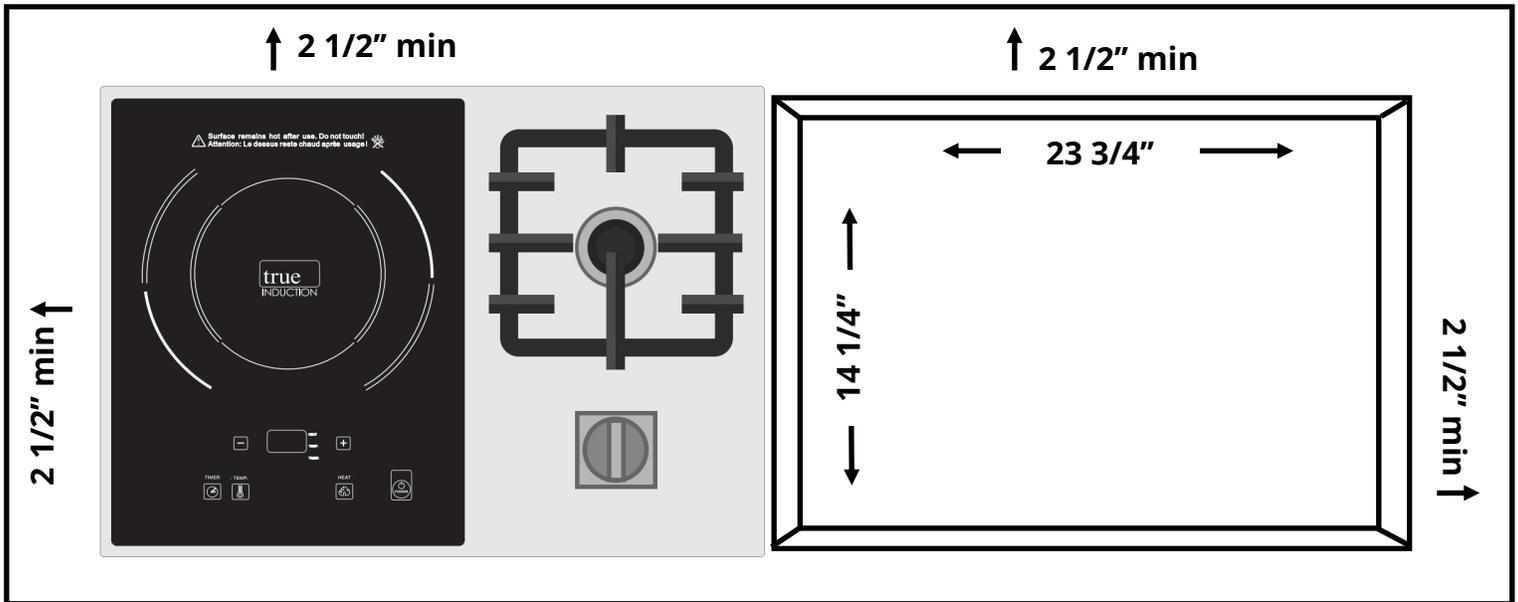

# I. Induction Cooktop Installation Continued...

---

- First feed the power wire through the hole and to the location of the power receptacle underneath the cabinet.
- The 'h' overhang on the induction cooker comes with pre-installed foam gasket. Peel off the adhesive protector on the bottom of the gasket and set the induction cooker into the cut-out. Gently press down on the induction cook top to secure the adhesive gasket to the countertop. The cook top should be sitting on the supports previously installed.
- For RV use, apply butyl tape instead of the supplied foam tape. Butyl tape will provide adequate adhesion and still allow for removal if the unit needs to be serviced.



# I. Cooktop Installation Continued...


## Clearance Needed for Air Circulation

---

- Below you will see a diagram of the air flow. Be sure not to block either the intake or exhaust



- For proper air circulation, allow at least 3" of clearance from the bottom of the induction cooker to any shelving or storage. The underside of the countertop should not be closed off from the cabinetry underneath for better air flow.

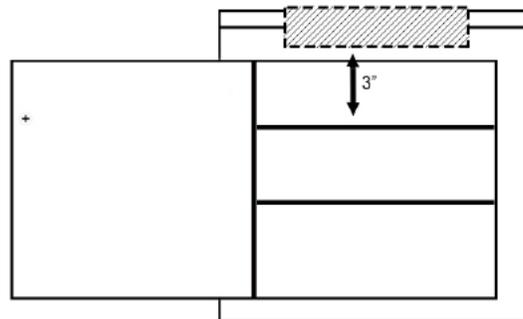

## II. Important Safety Information

---

When using electrical appliances, basic safety precautions should always be followed. For the True Induction cooker, even with built-in safety features, it is essential to heed all precautions:

- When the unit is on, do not touch outside the control panel as the surface may contain residual heat.
- To protect against electric shock, do not immerse cord plugs or cooker in water (or other liquid substances).
- When using any electric appliance used around children, close supervision is strongly suggested.
- Do not operate any appliance with a damaged cord or plug, after a malfunction or if it has been damaged in any manner. Read the seller's guidelines for warranty repairs and returns.
- Do not cook on a broken or damaged cooktop as spillovers may penetrate the surface and create a risk of electric shock.
- To avoid potential injury, do not use accessory attachments which aren't recommended by the manufacturer.
- Do not let the cord dangle over the edge of the table or counter. Keep the cord away from hot surfaces.
- Do not place cooktop on or near: hot gas, electric burner or heated oven.
- To prevent accidents and achieve optimal fan ventilation, allow for sufficient space around the cooking area.
- Items with a magnetic field such as: radios, televisions, credit cards, cassette tapes etc., can affect the unit.
- The power cord provided has been sized accordingly, however, with caution and care extension cords may be used.
  - a. The marked electrical rating should be at least as great as the electrical rating of the appliance.
  - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- Do not use with empty pans/pots.
- Do not place metallic objects such as knives, forks, spoons, lids, cans or aluminum foil on the cooktop.
- To prevent accidents and achieve optimal ventilation, allow for sufficient space around the cooking area.



## II. Important Safety Information Continued...

---

- This appliance has a polarize plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit on the outlet only one way. If the prongs do not fit fully, reverse the plug. If it still does not fit, contact the seller for warranty support; do not attempt to modify the plug in anyway.
- To properly turn off unit press the Power button.
- It is important to be aware that the unit's surface will remain hot for a short period of time after use.
- Disconnect power and allow to cool before performing any maintenance or repairs.
- Clean cooktop with caution - do not clean while unit is still hot, some cleaners produce steam or fumes if applied to a heated surface.
- Do not use cooktop for any other use then directed by the manufacturer.

## III. Product Specifications

---

<b>Power</b>	1600 Watts
<b>Voltage</b>	120v/ 60Hz
<b>Temperature Range</b>	150°F - 450°F ( <b>exact temp settings</b> )
<b>Level Selection</b>	Selecting settings 1—10
<b>Max Time</b>	Set timer up to 150 minutes
<b>Material</b>	Glass ceramic top
<b>Unit Measurement</b>	<b>Overall Measurements:</b> 24 3/8" W x 15" L <b>Base Measurements:</b> 23 5/8" W x 14 1/8" L x 3" H

