


Installation & User Manual

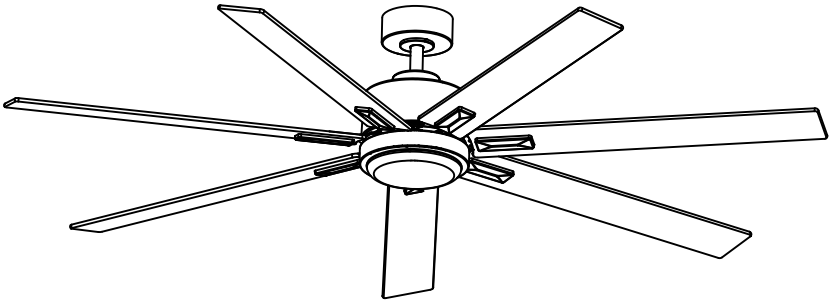

Item#42004

Customer Service: support@ceilingfanhelp.com

Thank you for purchasing this product. Please read this manual carefully before installation and use.

Table of Contents

1、 Safety Precautions Before Fan Installation-----	1
2、 Parts Checklist-----	3
3、 Installing the Mounting Bracket-----	4
4、 Installing the Blades-----	5
5、 Install the LED Light Module-----	6
6、 Installing the Downrod-----	8
7、 Hanging the Fan-----	10
8、 Wiring Instructions-----	12
9、 Installing the Light Cover-----	13
10、 Remote Control Instructions-----	14
11、 Downrod Replacement (Optional)-----	15
12、 Troubleshooting-----	16

WARNING!

	Warning High Voltage Hazard: Do not open the rear cover unless you are a qualified technician!	
Warning: Electric Shock Hazard. Keep closed. Prevent Electric Shock: Do not open the cover. No user-serviceable parts inside. Consult a professional for servicing.		



This unit contains uninsulated high-voltage components. To avoid electric shock, do not remove the cover or rear panel unless you are a qualified technician.



Some parts are marked for safety. Replace components only with original specifications. This unit contains no user-serviceable parts. For repairs, contact authorized personnel.

1、 Safety Precautions for Ceiling Fan Installation



Installation should be performed by a qualified electrician or experienced installer.

1) Turn off the power before installation or disassembly.

Follow the sequence:

Installation: Ground wire → Neutral wire → Hot wire.


Disassembly: Hot wire → Neutral wire → Ground wire.

2) Ensure all screws are securely tightened when installing the fan.


3) Keep all objects away from rotating blades during operation.

4) Maintain a minimum clearance of 7.5 ft (2.3 m) from the floor and 31 in (80 cm) from walls.


Dimensions

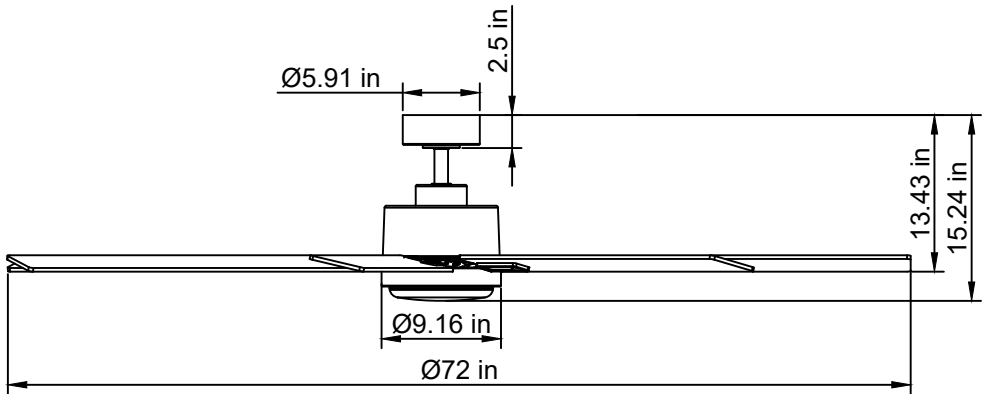


Parts Layout

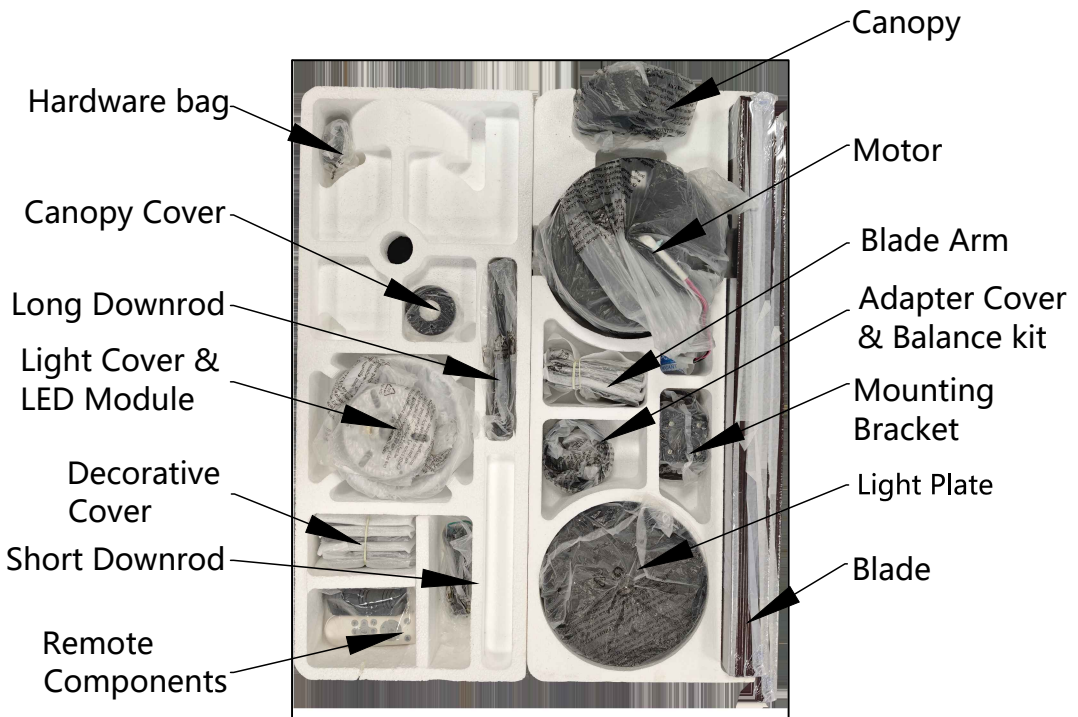

2、Parts Checklist

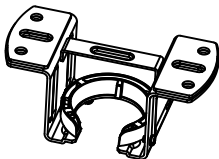



① Mounting Bracket

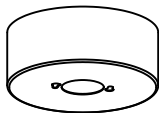 

② Canopy



  
③ Canopy Cover




④ Long Downrod
Short Downrod




⑤ Adapter Cover

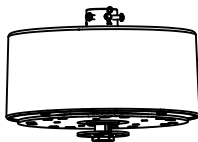


⑥ Motor

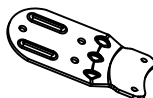 


⑦ Blade Arm x7

 


⑧ Balance Kit

 


⑨ Decorative
Blade Cover x7

 

⑩ Blade x7

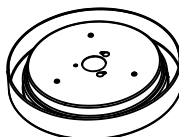

⑪ Light Plate

 

⑫ LED Light Module



Expansion Bolts x2



Flat Washers x4



Wood Screws x4



Wire Connectors x3



Blade Screws x22



Blade Arm Screws x15




Light Plate Screws x4



LED Board Screws x4

⑬ Hardware kit

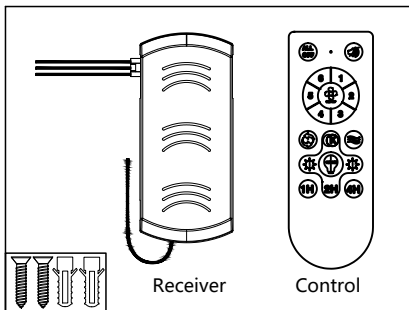

⑭ Remote Components
(Including Wall Mount Bracket)



⑮ Light Cover





Verify all parts in this list. Contact customer service if missing
Images are for reference only.

3、Install the Mounting Bracket



For Wooden Ceilings:

Use wood screws to secure the bracket to a beam or joist (minimum wood thickness: 35mm).

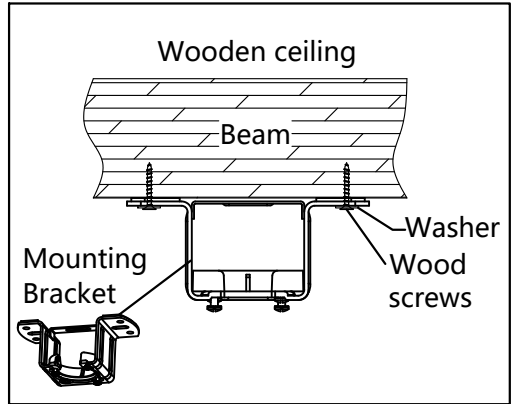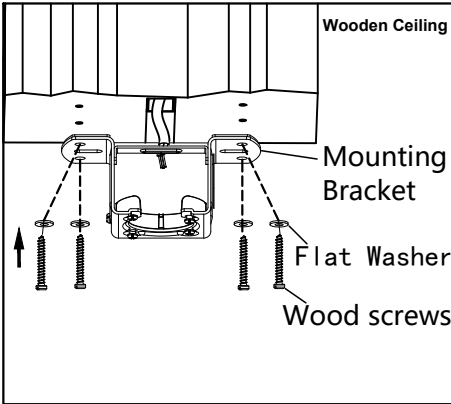

For Concrete Ceilings:

- 1) Drill an 5/16 in (8mm) hole 2 in (50mm depth) with an impact drill.
- 2) Secure the bracket using expansion bolts from the kit.

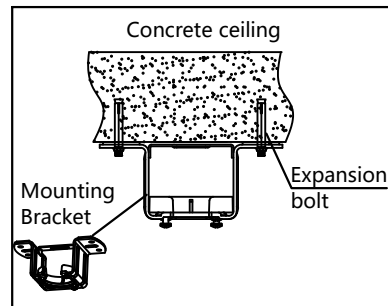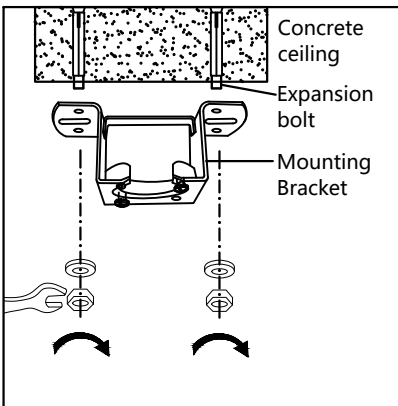

Drill an 8mm hole (50mm depth) with an impact drill first, then secure the bracket using expansion bolts from the kit.



Note:

1. Use the correct screws for your ceiling type.
2. For wooden ceilings, ensure the installation area can support $\geq 30\text{kg}$ and the wood thickness is more than 35mm (no visible deformation when pulled).


4、Installing the Blades

- 1) Align the blade arm with the screw holes of the fan blades and tighten the screws.
- 2) Align the installation holes of blade arm and Decorative cover and then use blade medallion screws to secure them.



Blade Screws

Place each blade between a Decorative cover. Install three blade screws, found in the hardware bag, to attach the medallion to the blade iron. Repeat this step for each blade.

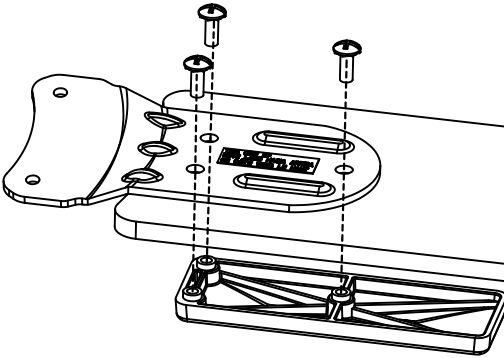


1



Blade Arm Screws


Lightly attach the Blade arm to the motor with screws found in the hardware bag, then securely tighten after both screws are attached. Repeat this step for each blade assembly.

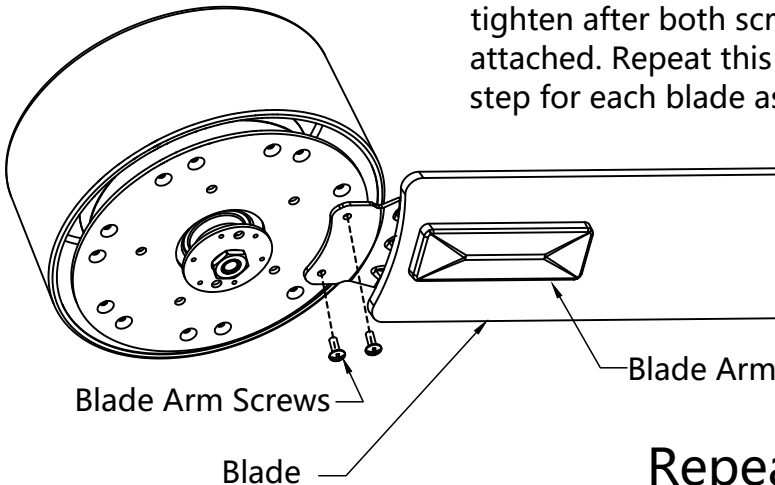

2


5、Installing the LED Light Module

1) Pass the light wire through the light plate. Align the holes on the light plate with the screw holes on the motor housing, then secure it using the light plate screws.

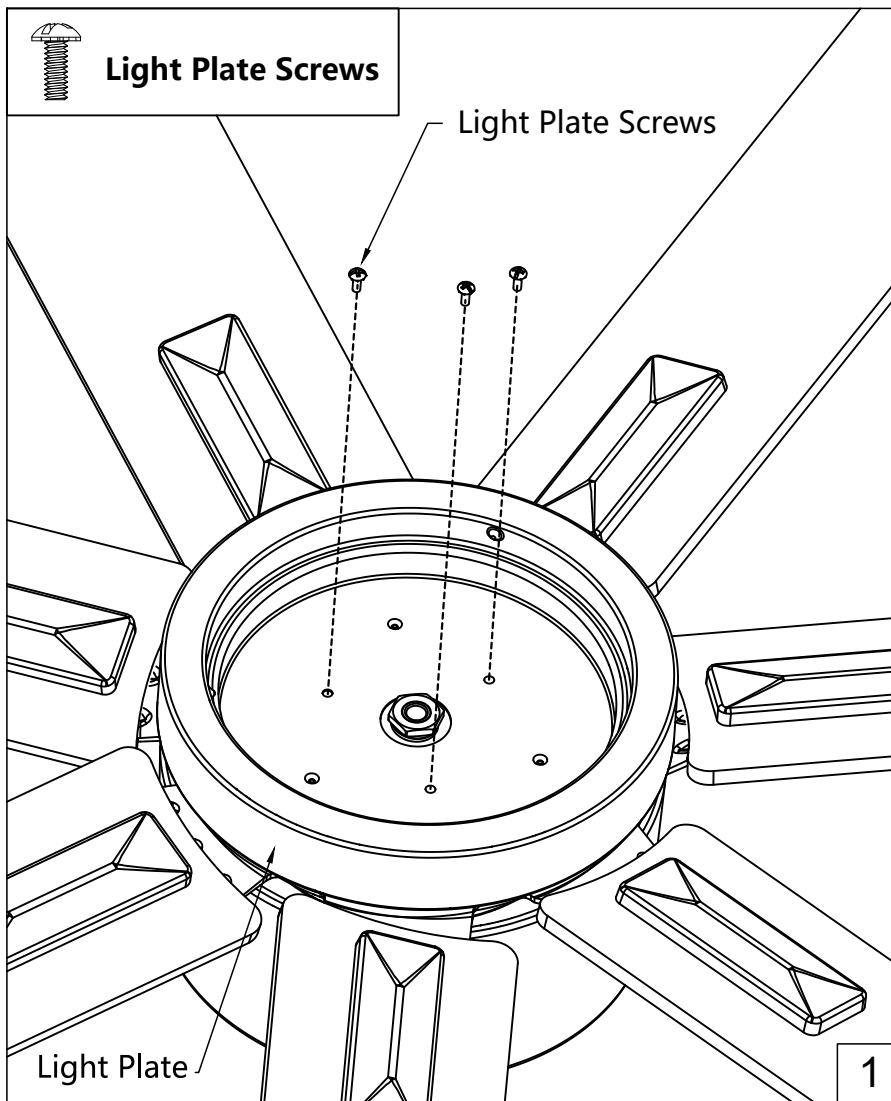


5、Installing the LED Light Module

2) Connect the light wire to the LED module. Align the LED module with the screw holes on the light plate, then secure it using the LED module screws.

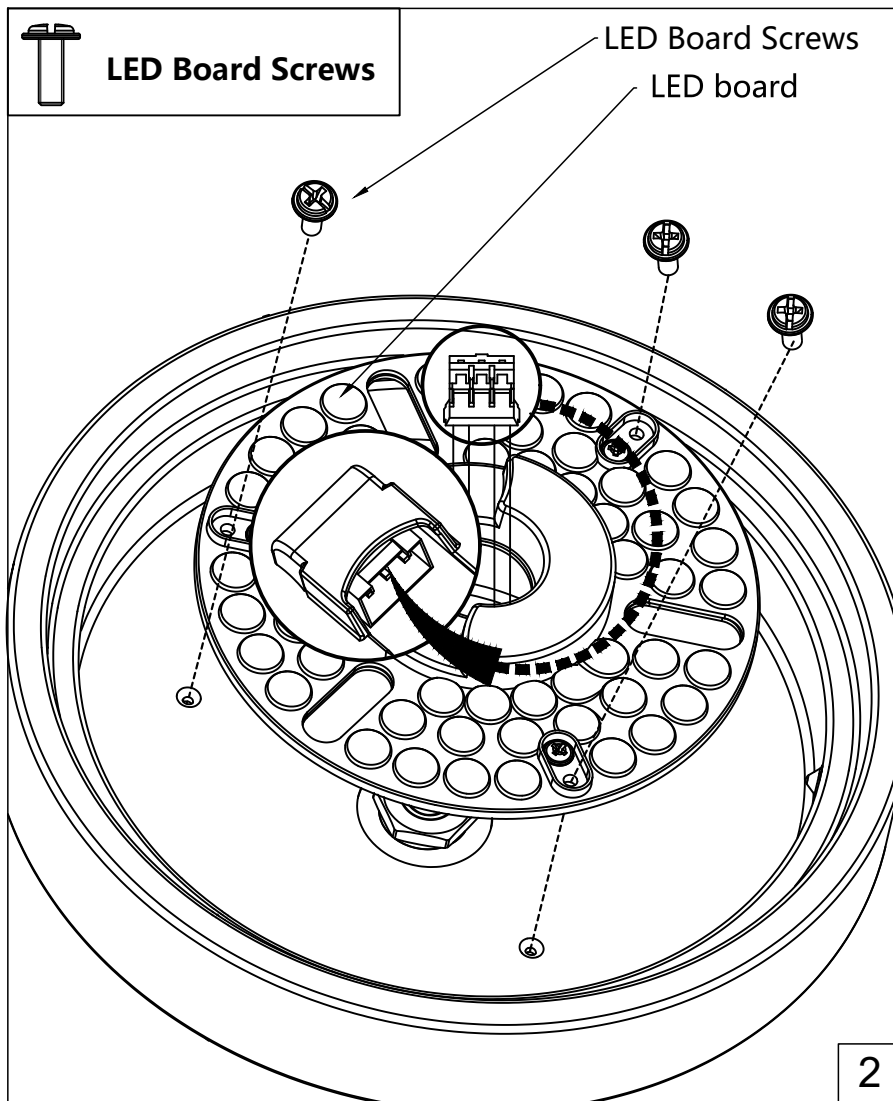


6、Installing the Downrod

- 1) Select an appropriate downrod. The hanger ball is pre-installed on the shortest downrod by default. If you need to use a different downrod length, please refer to page 16.
- 2) Remove the pin, R-pin, and hanger ball screws from the downrod.
- 3) Loosen the screws on the motor, but do not remove them completely.

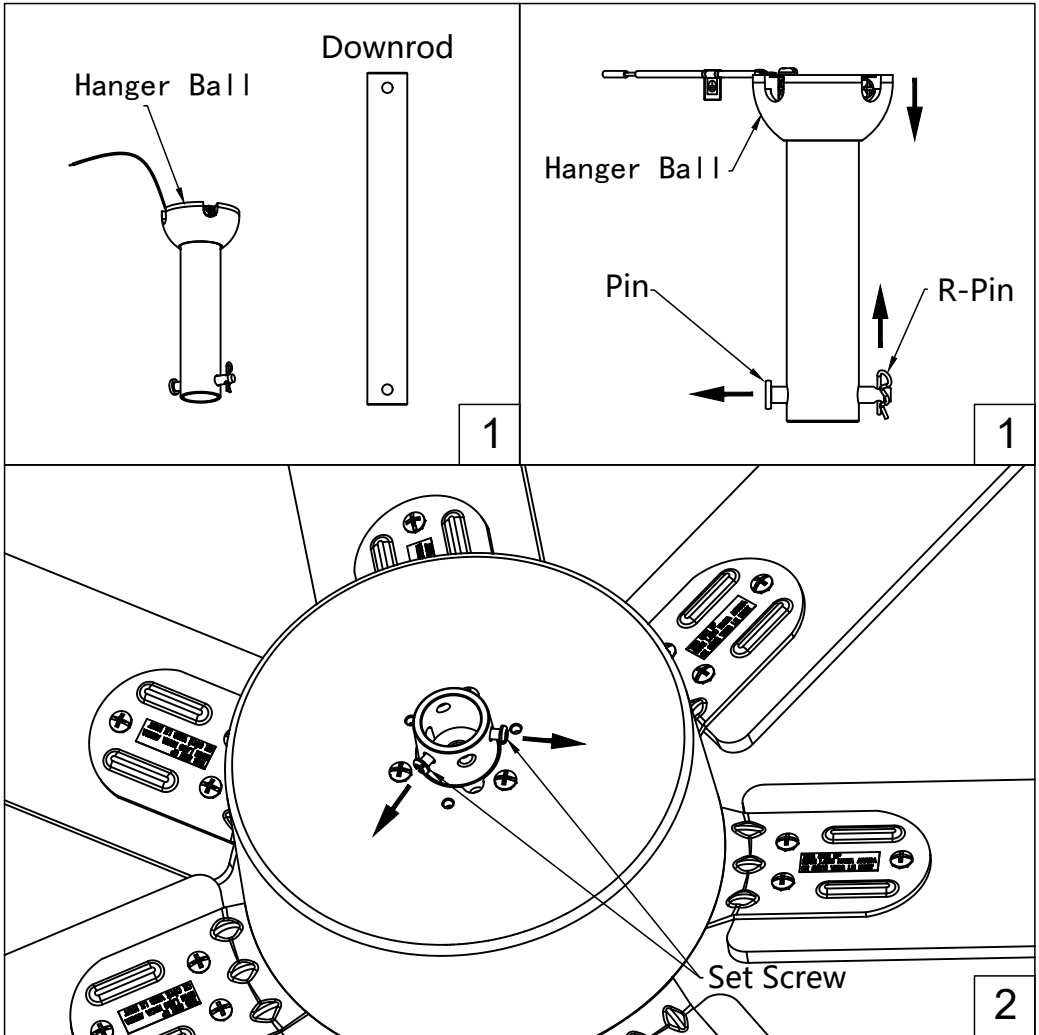


6、 Installing the Downrod

- 4) Slide the canopy, canopy cover, and adapter cover onto the downrod in sequence.
- 5) Thread the motor wires through the downrod. Insert the pin and secure it with the R-pin, then tighten the fastening screws.
- 6) Tighten the hanger ball set screws.

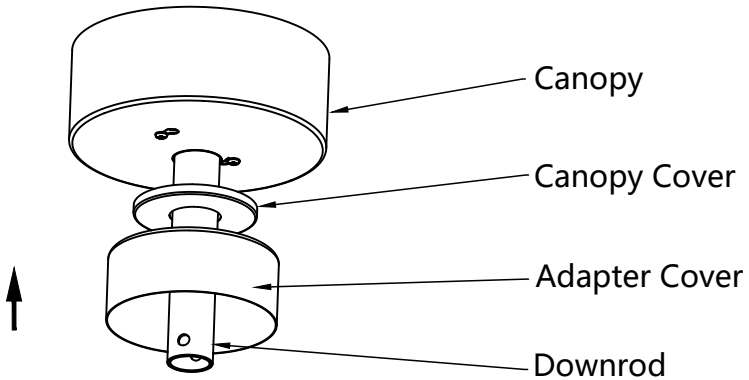


3

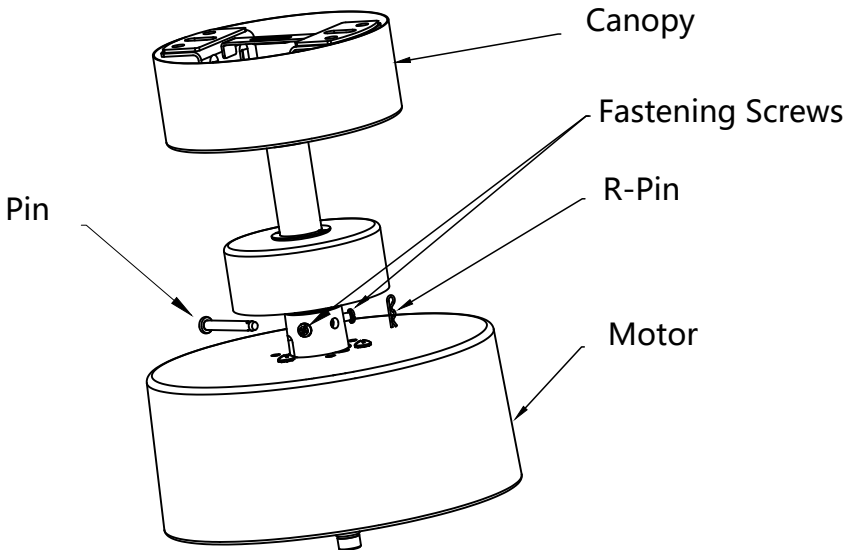

4

7、 Hanging the Fan

Carefully lift the assembled fan and place the hanger ball into the mounting bracket.

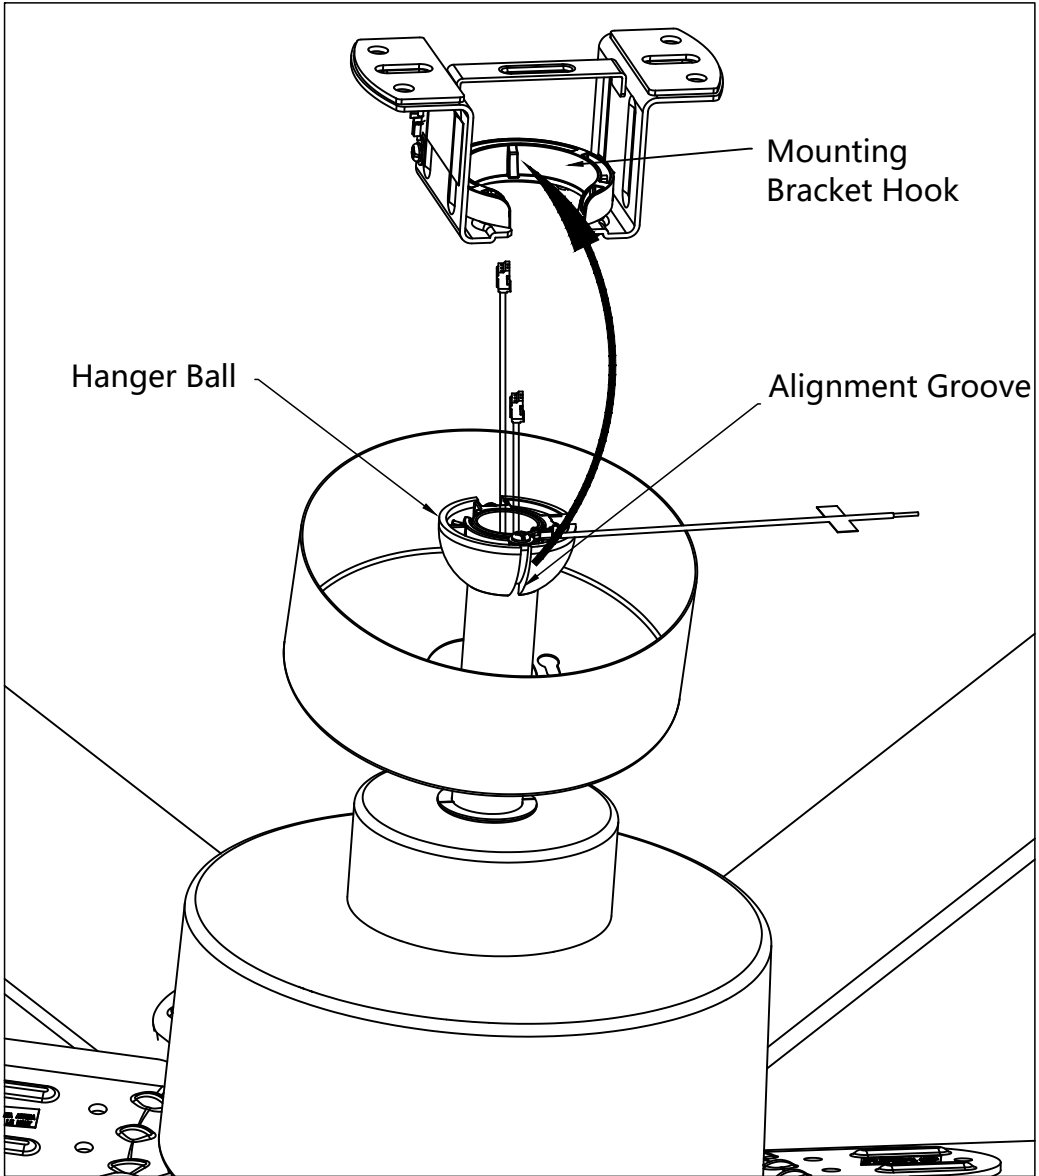


7、 Hanging the Fan

Ensure the groove on the hanger ball is properly seated in the slot of the mounting bracket.



Note:

When using the shortest downrod, inserting the hanger ball into the mounting bracket may require a slight angle. Tilt the hanger ball slightly and guide it into the bracket carefully.

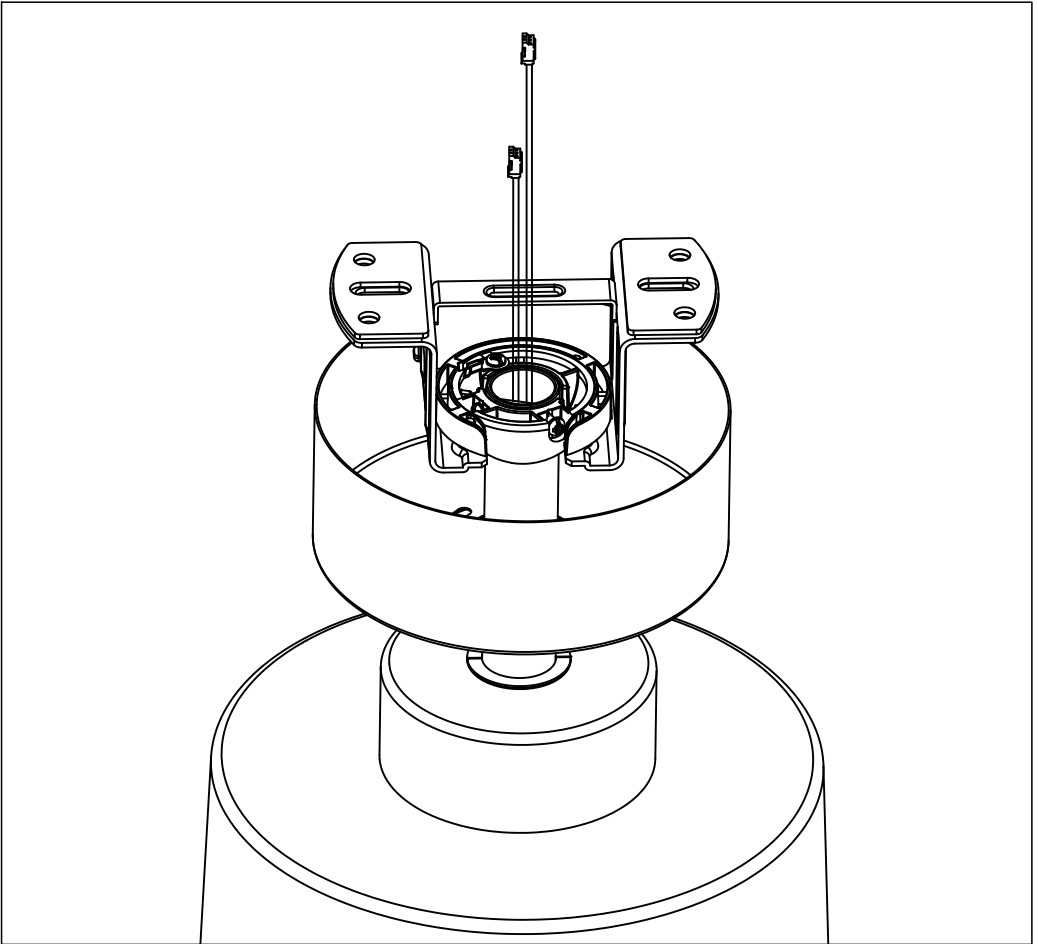

8、Wirina Instructions


- 1) Connect the neutral (white), live (black), and ground wires from the receiver to the corresponding wires from the ceiling.
- 2) Place the receiver inside the mounting bracket.
- 3) Install the canopy over the mounting bracket and secure it with screws.

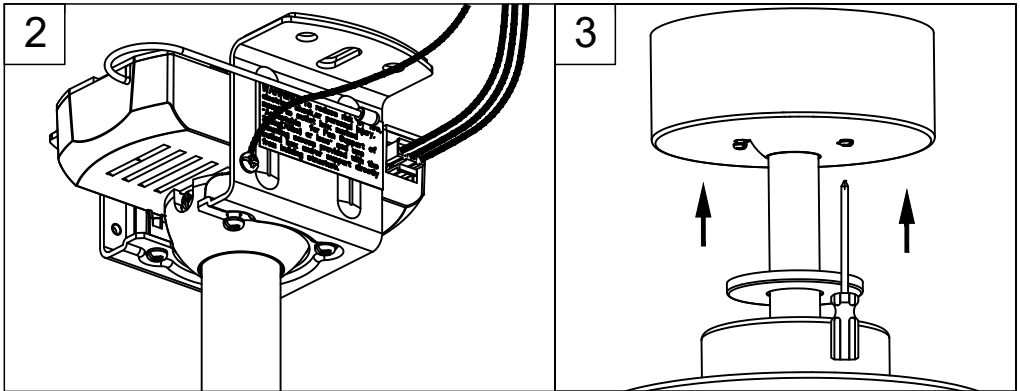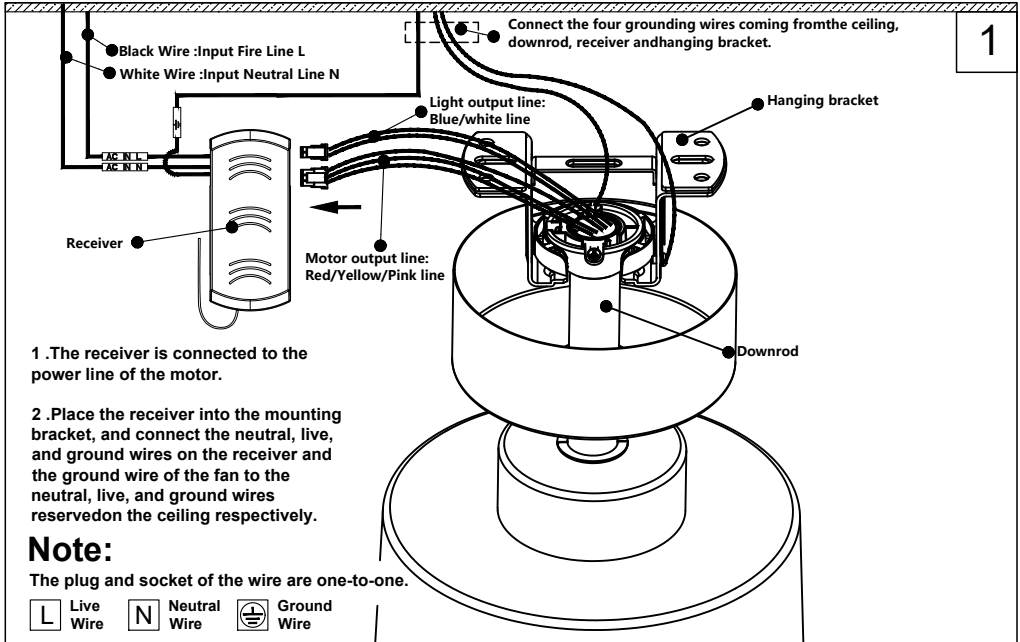


Avoid pressing the antenna and wires when installing the canopy to prevent line damage and a short circuit.

9、Installing the Light Cover

Attach the light cover to the light plate and turn it clockwise until secure.

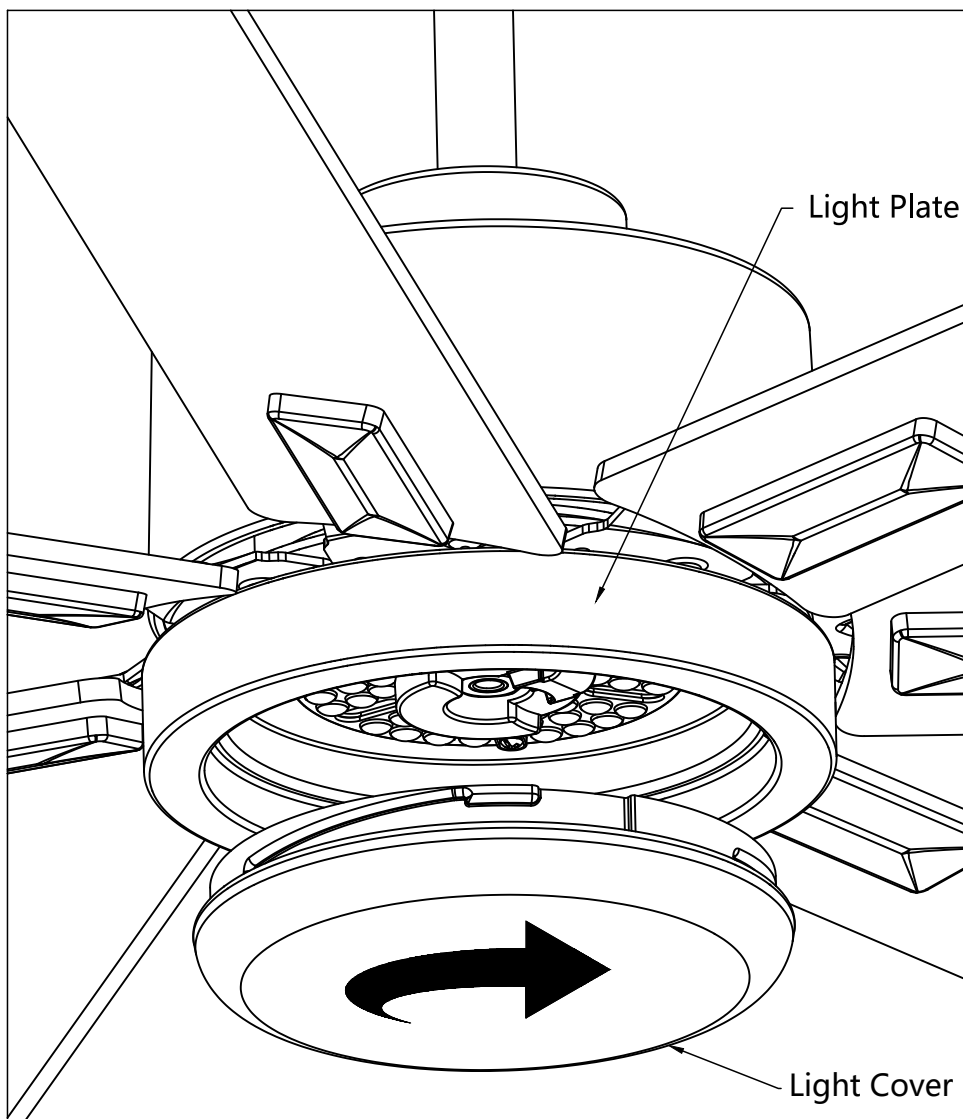

10、Remote Control Instructions

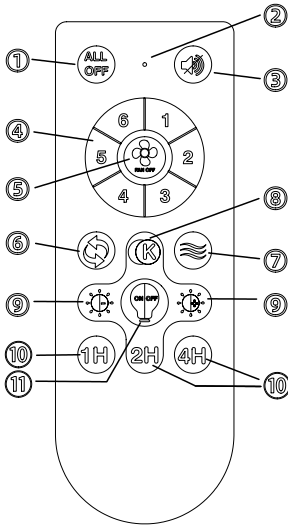

Button Functions


- ① All Off – Turn off fan and light
- ② Indicator Light
- ③ Buzzer On / Off Press and hold for 3 seconds to enable or disable the buzzer sound.
- ④ Fan Speed (1–6 Levels)
- ⑤ Fan off
- ⑥ Forward / Reverse
- ⑦ Natural Breeze Mode
- ⑧ 3CCT Color Temperature
- ⑨ Brightness Adjustment Press to adjust by 10%. Press and hold to adjust by 1%.
- ⑩ Timer (1H / 2H / 4H)
- ⑪ Light On / Off

The remote control requires two 1.5V AAA batteries (Not Included)

WARNING

1. If the remote control does not work properly, try replacing the batteries.
2. If the remote cannot control the receiver, check that the batteries are installed correctly and have sufficient power.
3. Remove the batteries if the remote control will not be used for an extended period.
4. Do not disassemble the remote control to avoid damaging internal electronic components.

WIRING SCHEMATIC DIAGRAM FOR RECEIVER

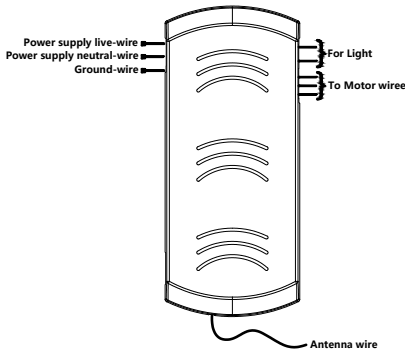

Important Notes

The Remote Control And Receiver Have Been Coded, when The Emitter Cannot Control The Receiver, Please Check The Battery Switch Touching Normally Or Not, Correction Of The Positive And Negative, Full Or Empty Of The Power. If Not, Please Matching The Code Again.

Code Pairing Process


1. Turn off the power to the fan for at least 2 minutes.
2. Turn the power back on.
3. Within 15 seconds, press and hold the fan button for 3 seconds.
4. The buzzer will beep three times to indicate successful pairing.

NOTES


1. Turn off the power before installation.
2. Make sure there are no other remote-controlled devices nearby that may cause interference.
3. Low battery power may affect remote signal transmission.
4. Do not press or damage the antenna wire inside the receiver.

11、 Downrod Replacement (Optional)


If you need to change different length downrod, please follow these steps

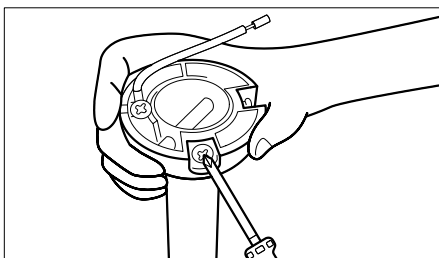


① Loosen the screws on the hanger ball.

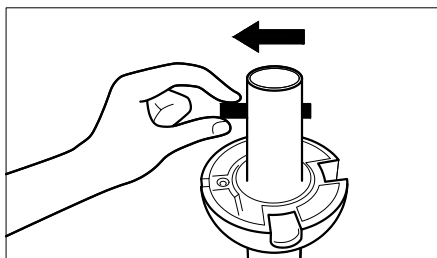


② Remove the pin.

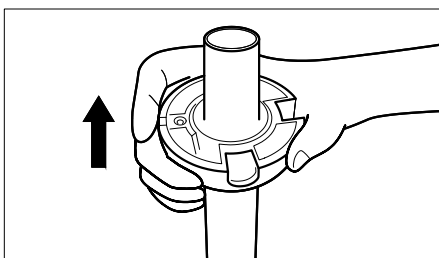

③ Remove the hanger ball from the original downrod.

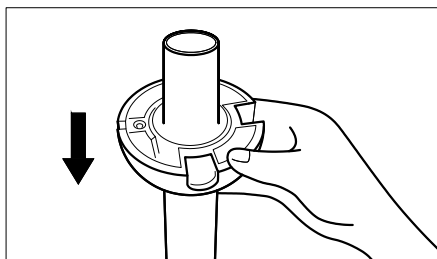

④ Install the hanger ball onto the new downrod.

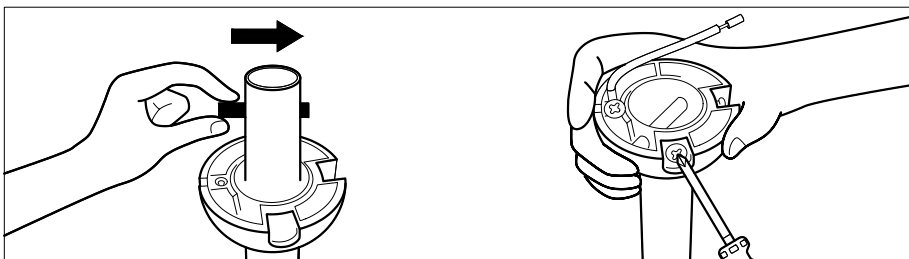

⑤ Insert the pin and tighten the screws.

12、 Troubleshooting



Before troubleshooting, make sure that the main power supply is turned off.

The Fan Does Not Respond to the Remote Control.

- Check that all wire connections are correct and secure.
- Verify that the power is turned on and reaching the receiver.
- Verify that the batteries of the remote control are installed with the correct polarity, making sure to install the + (positive) end of the batteries on the solid end and the- (negative) end on the spring.

The Fan Makes a Repetitive Ticking Noise.

- Check for obstructions in the rotor path.
- Make sure mounting hardware at the ceiling is firmly fasten.
- Make sure all other hardware and blade attachments are tight.

The Fan Makes a Humming Noise.

- Make sure the controller you use are supplied with your fan.
- Make sure all accessories are securely fastened. Loose parts often cause a vibrating noise or buzzing sound.
- Disassemble the fan and reinstalling it can sometimes remedy this resonant vibrating noise.

The Fan Wobbles.

- Make sure the mounting plate and hardware at the ceiling are firmly fasten.
- Make sure all screw fittings on the fan are tight.
- Use the provided balancing kit and instructions to balance the fan.

The Light Fixture Fails To Turn On.

- Make sure that the black wire on the fan receiver is connected to the live wire of the house.
- Make sure that the terminals connecting the power cord of the light fixture to the receiver and the LED module are free from looseness or detachment.
- Check that the wall switch corresponding to the ceiling fan light is in the on position to rule out poor switch contact.