

RETRACTABLE MOTORIZED SCREEN CARE & USE GUIDELINES:

- ✓ Keep all areas of the screen clean and free of debris and obstacles.
- ✓ Clean the screen fabric by lightly going over it with a vacuum with a soft vacuum brush attachment. Alternatively, gently brush the screen with a soft cloth with mild soapy water. Gently rinse and allow the fabric to dry before retracting the screen.
- ✓ Clean the frame using a soft cloth and mild soapy water or, a gentle multi-purpose cleaner.
- ✓ Immediately apply touch-up paint to any scratches to the metal finish.
- ✓ Retract the screen when it is not in use, during extreme weather conditions or heavy wind.