


PARTS LIST

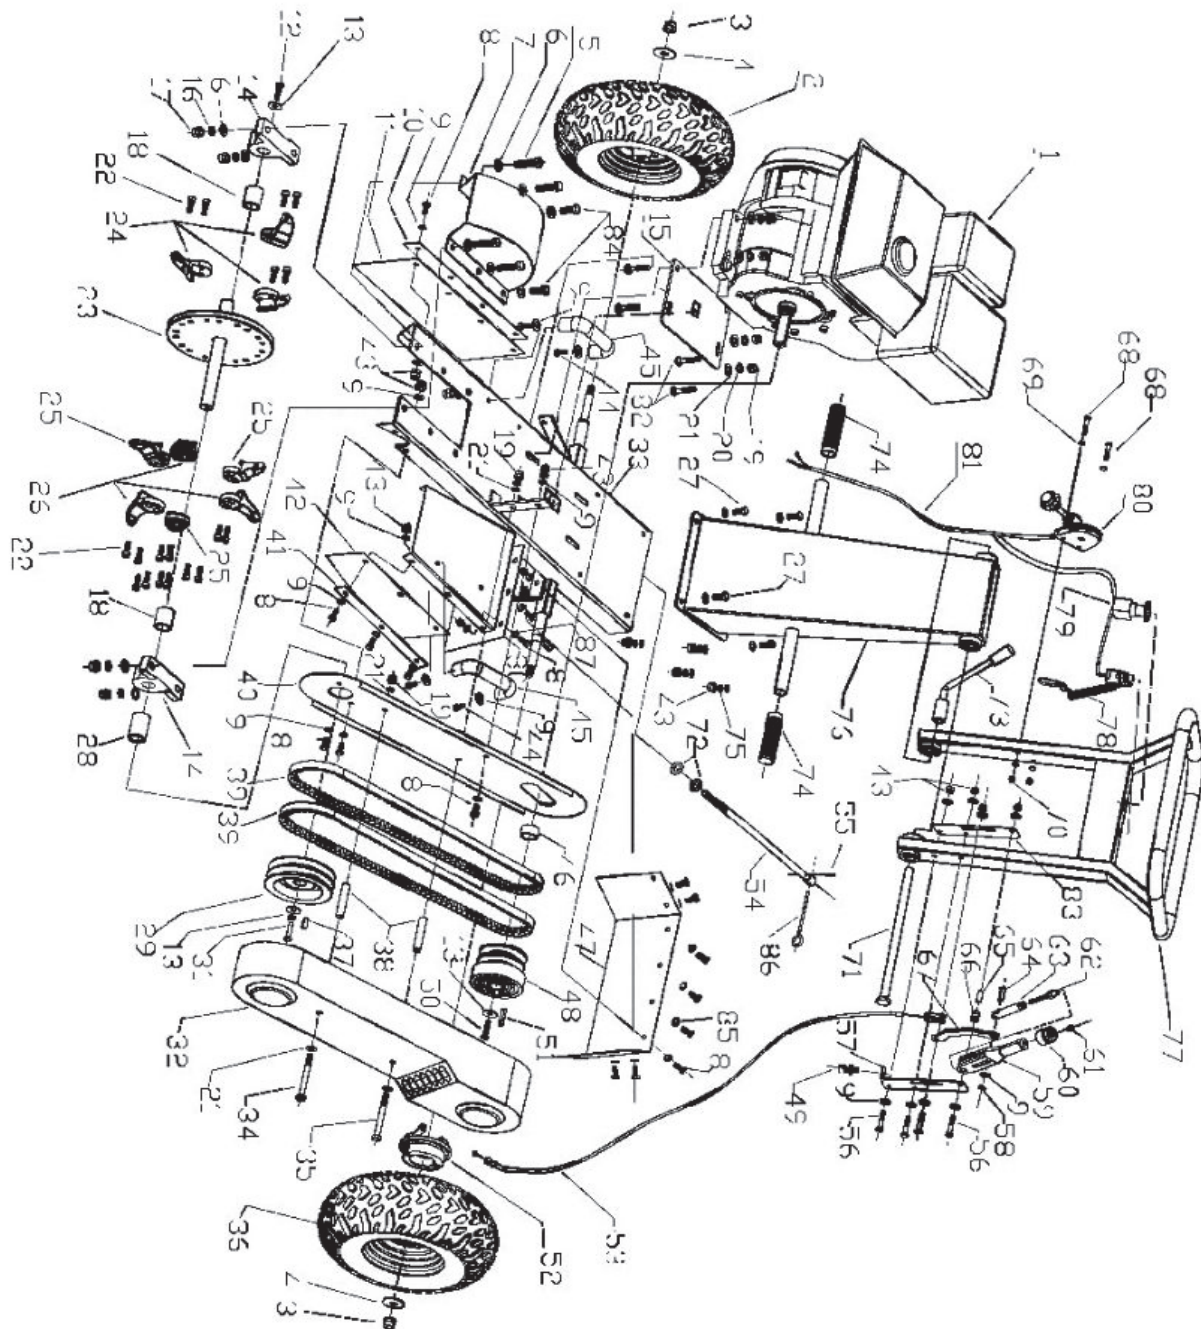


Stump Grinder

No.	spare part	Quantity	No.	spare part	Quantity
86	Rocker	1	43	Nylon locknut	25
85	Flat Washer	11	42	Inclined spacer	1
84	Hexagon socket screw	2	41	Short layering	1
83	Inner mounting plate	1	40	Deputy belt cover plate	1
82	Step bolt	4	39	belt	2
81	Throttle Cable	1	38	casing	2
80	Throttle switch	1	37	Flat key	1
79	Emergency stop switch	1	36	Left tire	1
78	safety rope switch	1	35	Hex bolt	1
77	handrail	1	34	Hex bolt	1
76	handrail support	1	33	Chassis assembly	1
75	Spring washer	1	32	Belt cover	1
74	Hand sets	1	31	Hexagon socket screw	1
73	Angle adjustment knob	2	30	Small spacer	1
72	Flat Washer	2	29	Large pulley	1
71	Hex bolt	2	28	Edge spacer	1
70	Nylon locknut	2	27	Hex bolt	1
69	Flat Washer	1	26	Left Cutter	3
68	Hex bolt	2	25	Straight Cutter	3
67	Connecting plate	2	24	Right Cutter	3
66	spacer sleeve	2	23	Cutter plate	1
65	Liner	1	22	Hexagon socket screw	
64	Axle pin	1	21	Flat Washer	30
63	Connecting pipe	1	20	Spring washer	9
62	Threaded rod	1	19	Nylon locknut	19
61	Hex round head bolt	3	18	The spacer	2
60	lid	1	17	Nylon locknut	8
59	The handbrake	1	16	Spring washer	8
58	Shaft Collar	1	15	Power holding board	1
57	Outer mounting plate	1	14	Vertical Bearing	2
56	Hexagon socket screw	4	13	Big Washer	2
55	Cylindrical spring pin	3	12	Hexagon socket screw	1
54	Adjustment screw	1	11	Long spacer	1
53	Handbrake cable	1	10	Long layering	1
52	Brake	1	9	Flat Washer	44
51	Flat washer come with Engine	1	8	Hex round head bolt	21
50	Engine Bolt	1	7	Cutter shield	1
49	Handbrake cable adjusting bolt	1	6	Flat Washer	12
48	Clutch pulley	1	5	Hexagon socket screw	4
47	Partition panel	1	4	Flat Washer	2
46	Engine spacer	1	3	Nylon locknut	2
45	Handle	2	2	The right Tire	1
44	Hexagon socket screw	4	1	Engine	1

Stump Grinder


16

Assembly

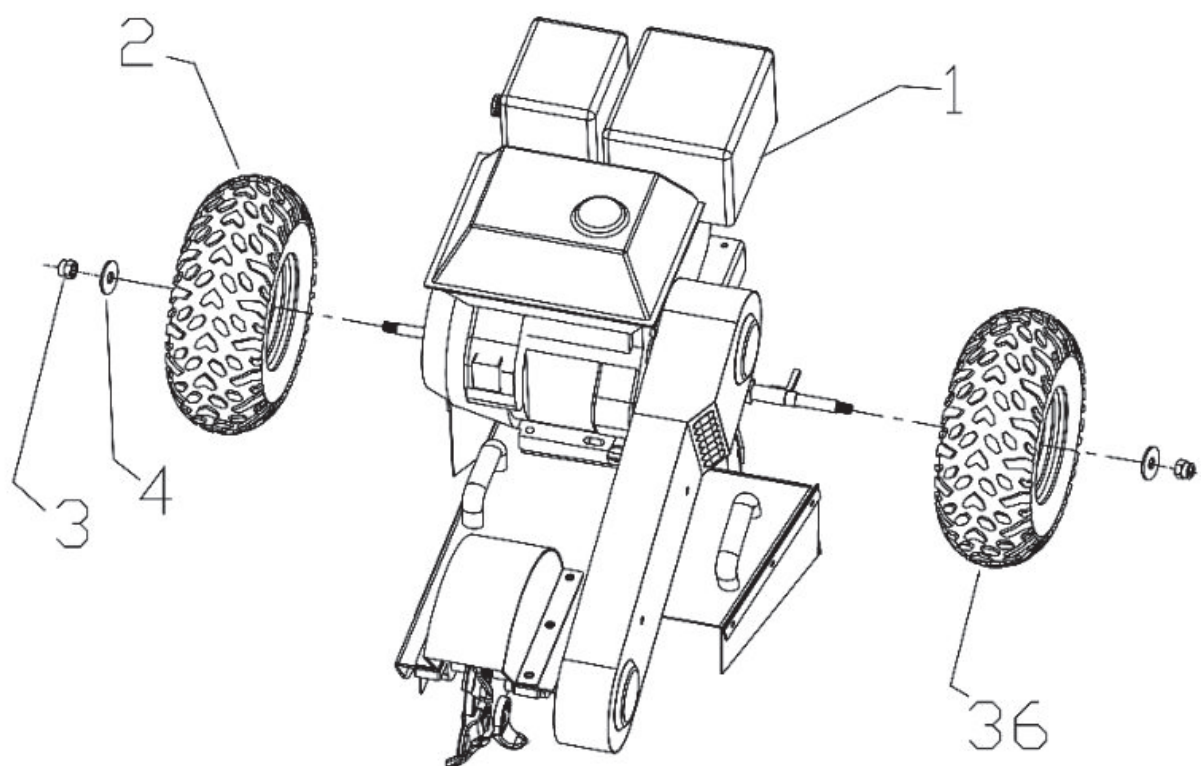


1	2	3	4	36
engine	wheel	Nylon anti loose nut	flat washer	wheel

Assembly (cont.)

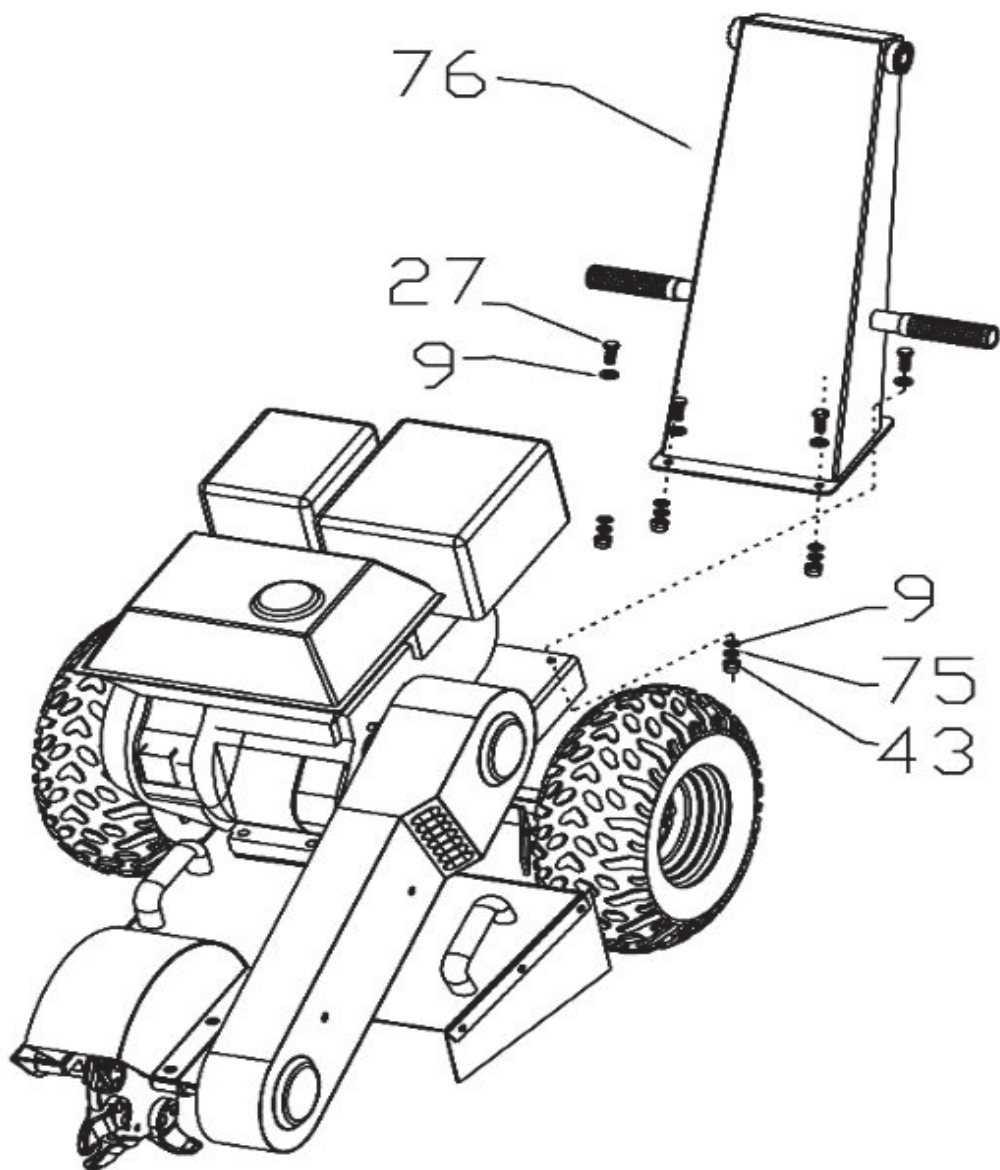


9	27	43	75	76
flat washer	outer six angle bolt	Nylon anti loose nut	spring washer	arm handle

Assembly (cont.)

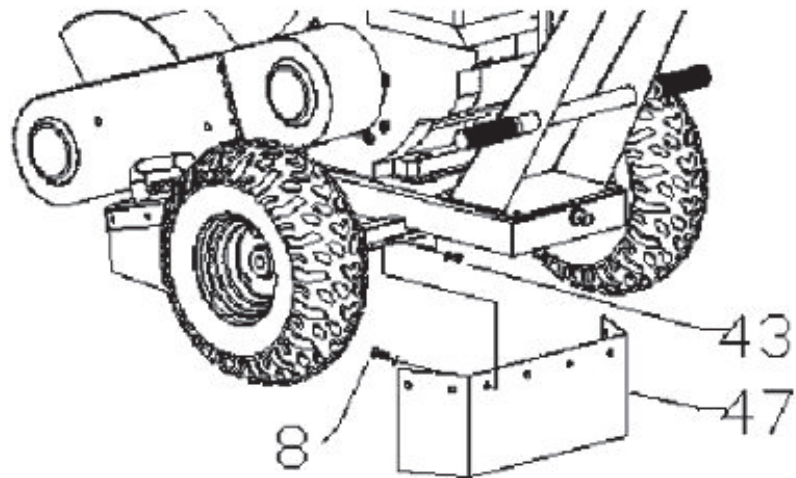


8	43	47
Bolt	lock nut	leather protector

Assembly (cont.)

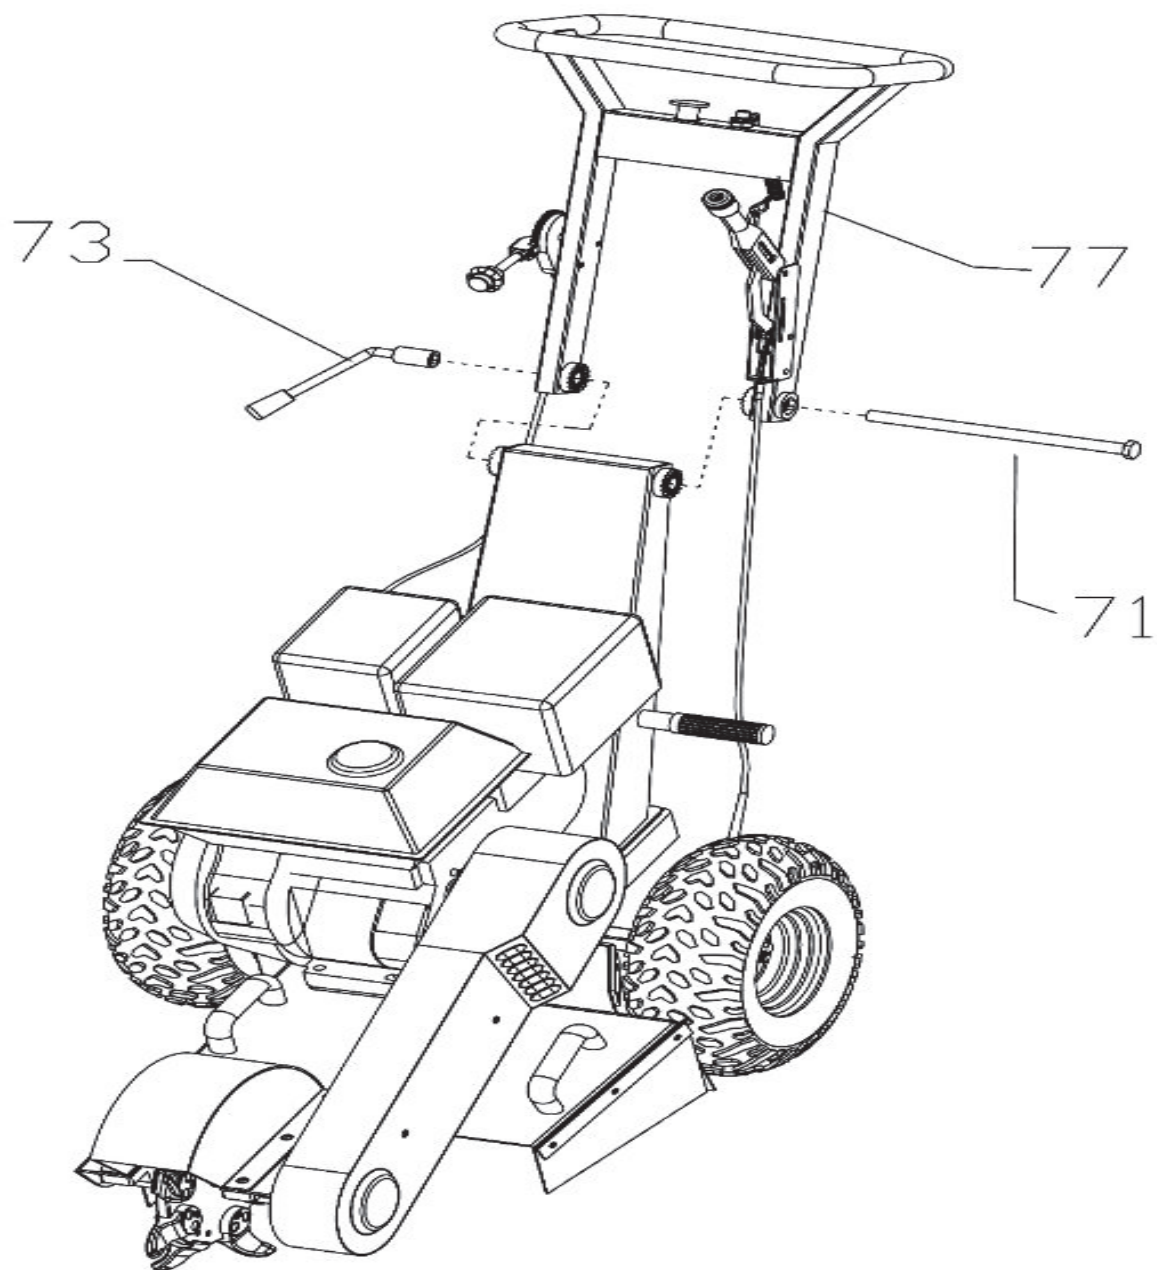


71	73	77
outer six angle bolt	Adjustable handle bar	handle

Assembly (cont.)

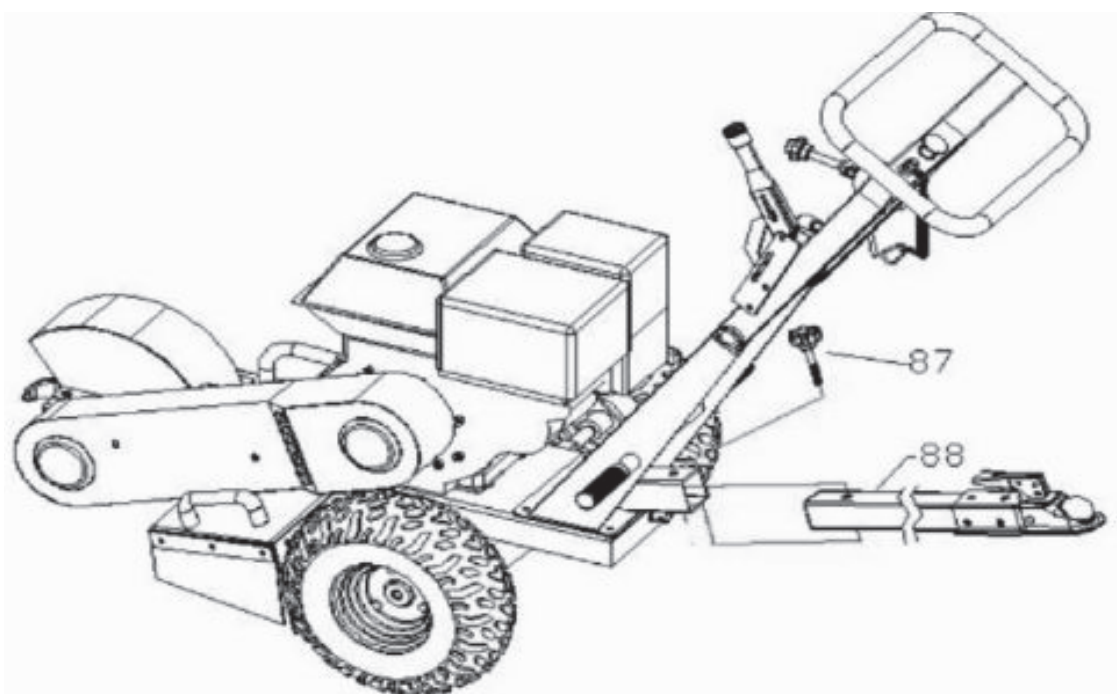

87	88
Knob	Tow bar

Assembly (battery)

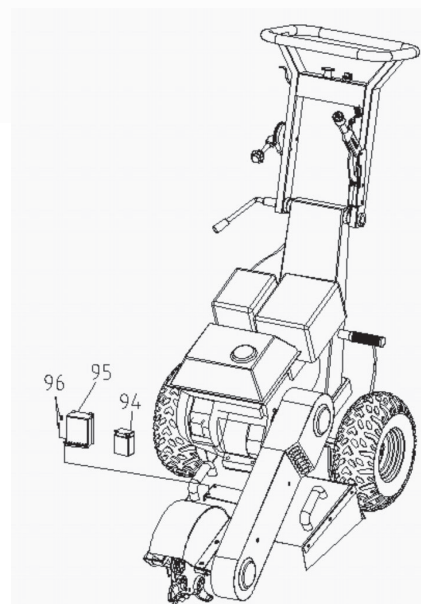

94	95	96
Battery	Battery cover	bolt