

#### For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key. \*Using an electric drill can damage the chair. Please re-tighten bolts manually.



## **Safety Information**





Do not sit at the front

edge of the chair

Sit in the center of the chair, with your back to the backrest



Do not push the chair around when a person is sitting in it



Do not push down on

the backrest when a

person is reclined





with more than one person



Do not place all your weight on only the backrest



### **Package List**







(A)\*1 Backrest

(B)\*1 Seat

(C)\*1L \* 1R Armrests



(F)\*1 Base

M6x20mm

(K)\*4 Bolts



(G)\*5 Legs

M6x35mm

(L)\*6 Bolts



M6x14mm (M)\*10 Bolts

# **INSTRUCTION** MANUAL C-3619-1B



(D)\*1 Mechanism

(E)\*1 Gas Lift





(H)\*5 Casters



(I)\*1 Headrest pillow (J)\*1 Cap

(O)\*1 Wrench

M6x20mm

(N)\*6 Bolts

### **Assembly Instruction**



Turn the Base (F) upside down, insert the Legs (G)\*5 into the Base one by one. Use Wrench (O), secure both with Bolts (M)\*10.



Press Casters (H)\*5 into the holes at the end of Legs (G)\*5.





1.Bolts (N) are only tightened 50%.

(4)

2.Armrests (C)x1Lx1R are marked with "L" (Left) and "R" (Right) to show which side they should be installed.

Using Wrench (N), install Armrests (C)x1Lx1R to both sides of the

3 Insert the Gas Lift (E) into the Base (F).



Turn the Seat (**B**) upside down . Using Wrench (**O**), install Armrests (**C**)x1Lx1R to the Seat with Bolts (**L**)\*6.

(5)



Using Wrench (O), attach Mechanism (D) to the Seat (B) with Bolts (K)\*4.

Backrest (A) with Bolts (M)\*4.



Using Wrench (O), 100% tighten the previously installed Bolts (N)\*4 on the Armrests (C)x1Lx1R. Align the hole on Mechanism (D) with Gas Lift (E), and press the Chair down until it is fully secured.





Fix the the headrest(I) into the backrest frame(A) by tightening the Bolts (N) $^{2}$  100%. Clik the Cap (J).



9 Finish the installation.

### **Instructions For Use**



### CAUTION

\* Before using the chair, check to ensure that all bolts are fully tightened.

\* Lubricate all parts and tighten all bolts every 6 months or whenever needed.