
Kitchan Island Cart

Assembly Instructions - Please keep for future reference N707P266184

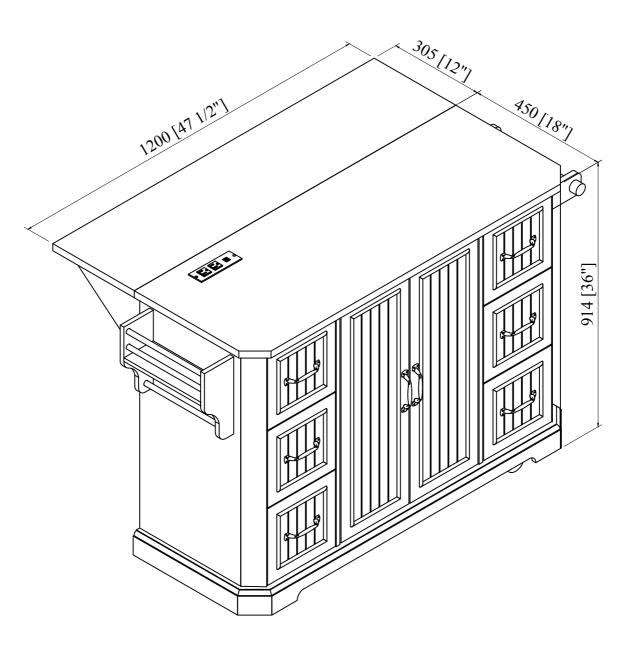

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

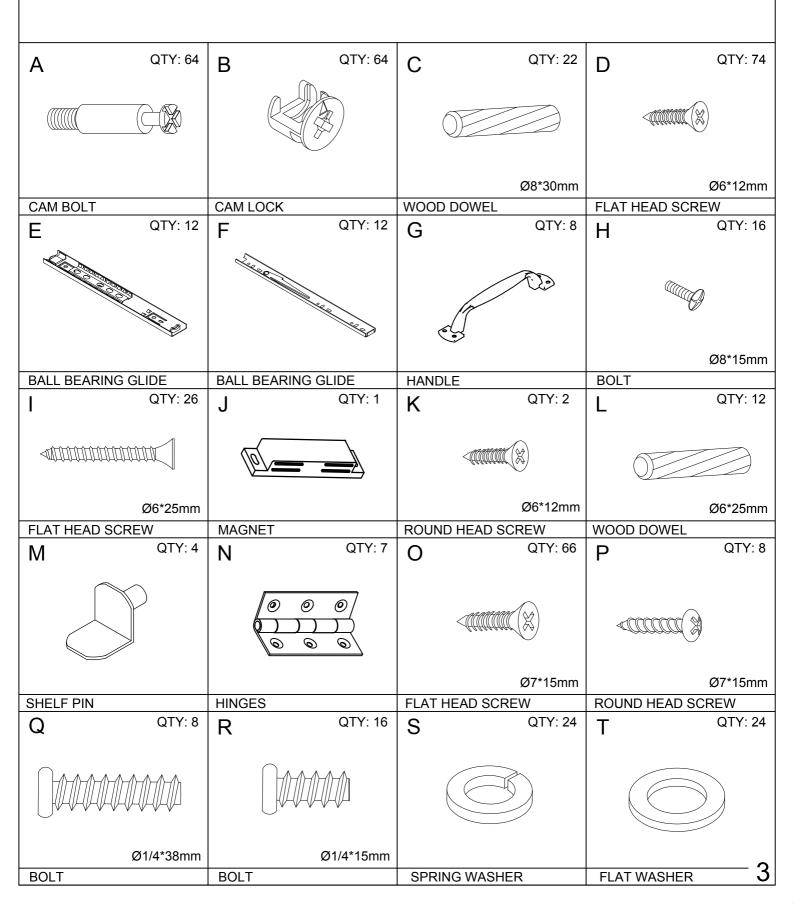

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

U QTY: 4	V QTY: 1	X QTY: 1	Y QTY: 1
LOCK CASTER	CAM TOOL	ALLEN WRENCH	SOCKET
Z QTY: 2	W QTY: 4		
SPRING BALL LATCH	HINGES		

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

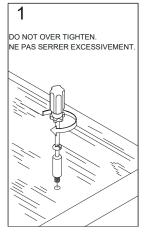

Step 2

Push the male camlock into the entry hole.

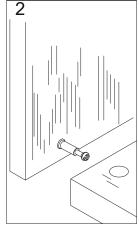

Step 3

Insert the female camlock as shown in the instruction.


Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.


Step 4


Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.


The joint is now secure.

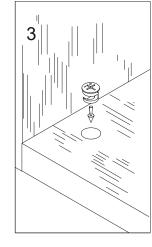


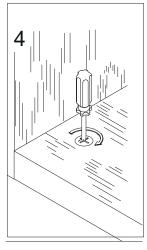


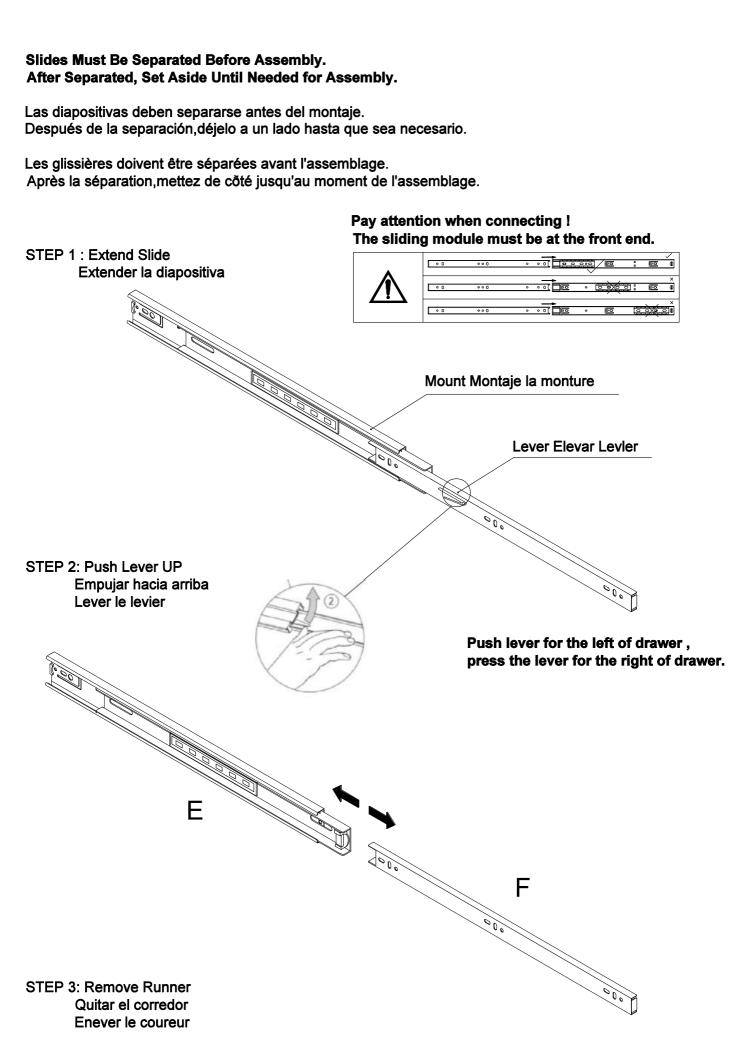


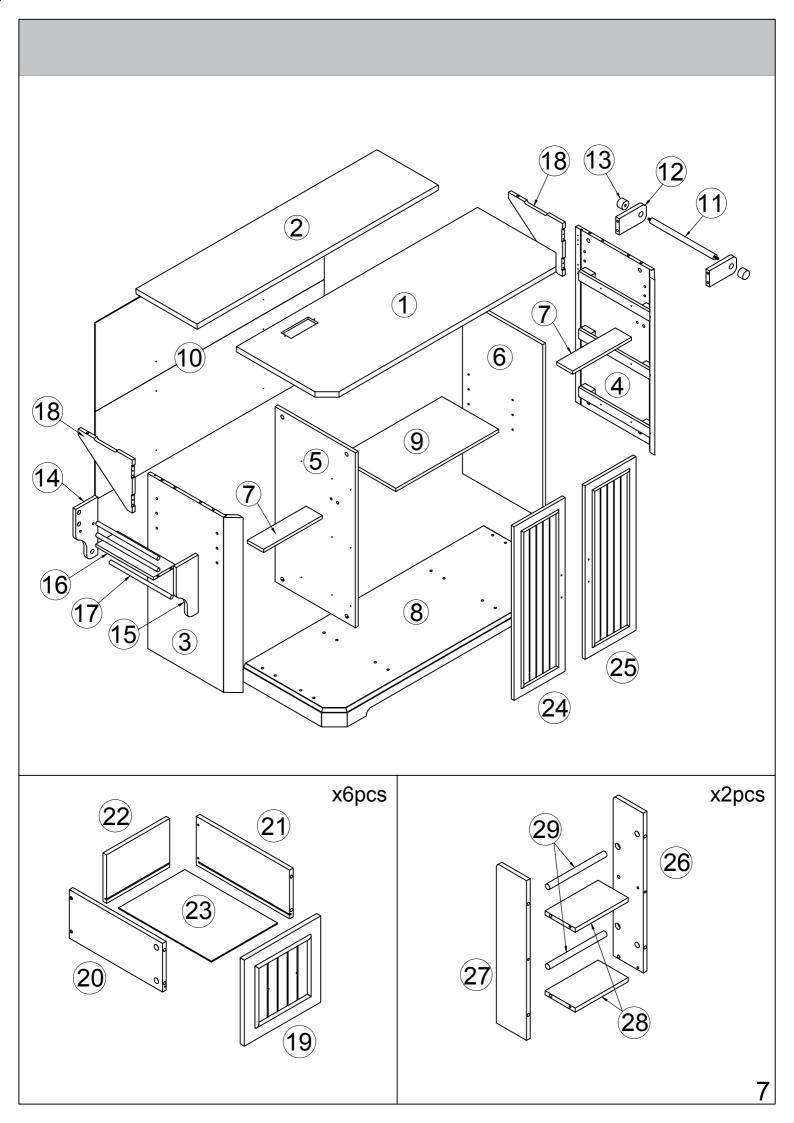


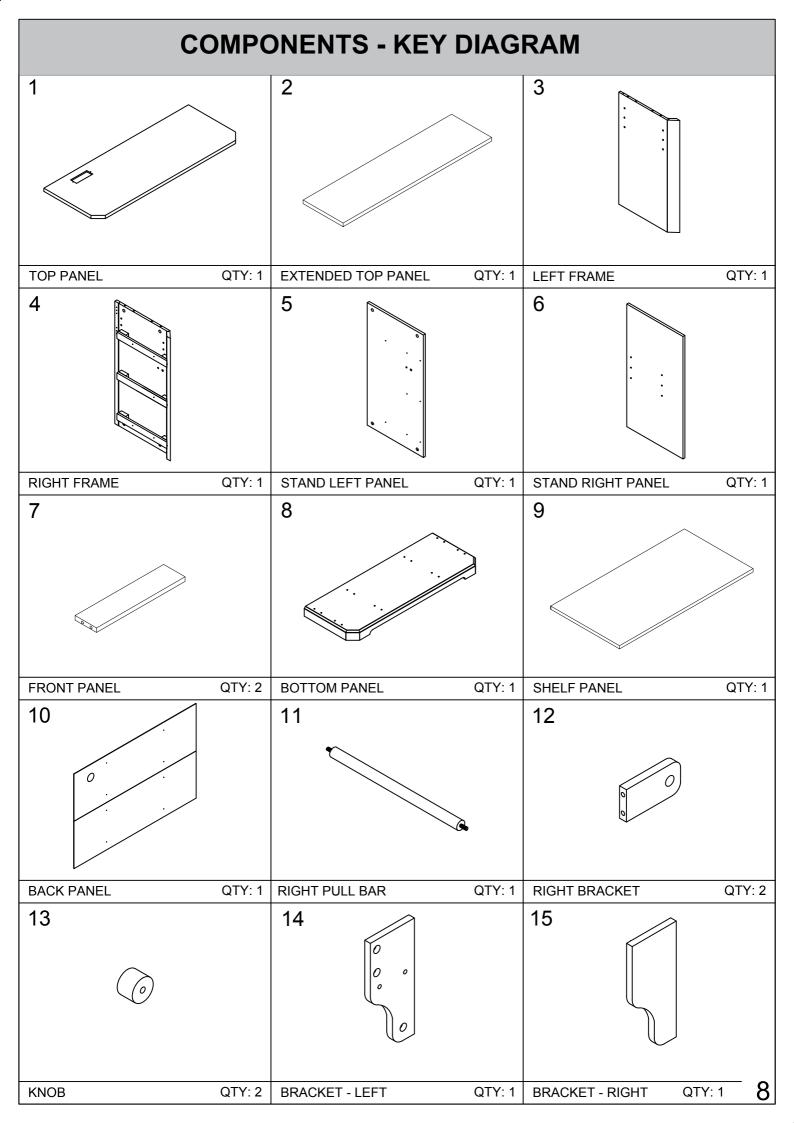

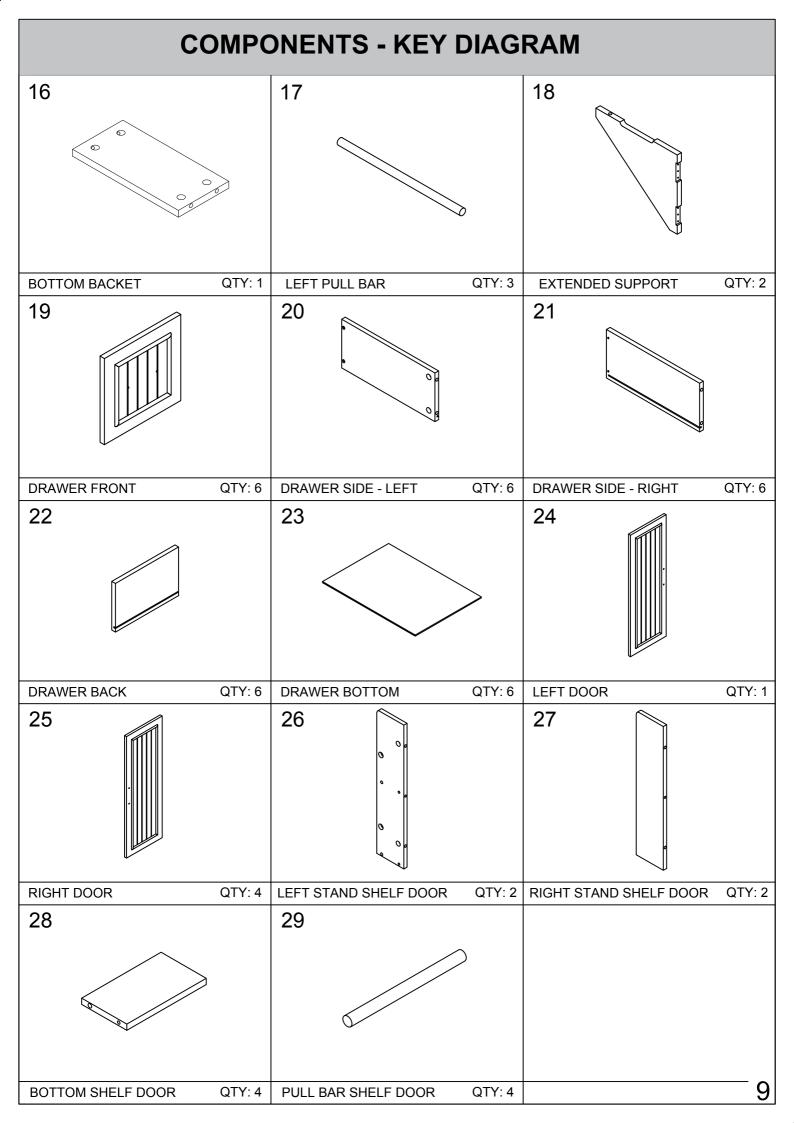

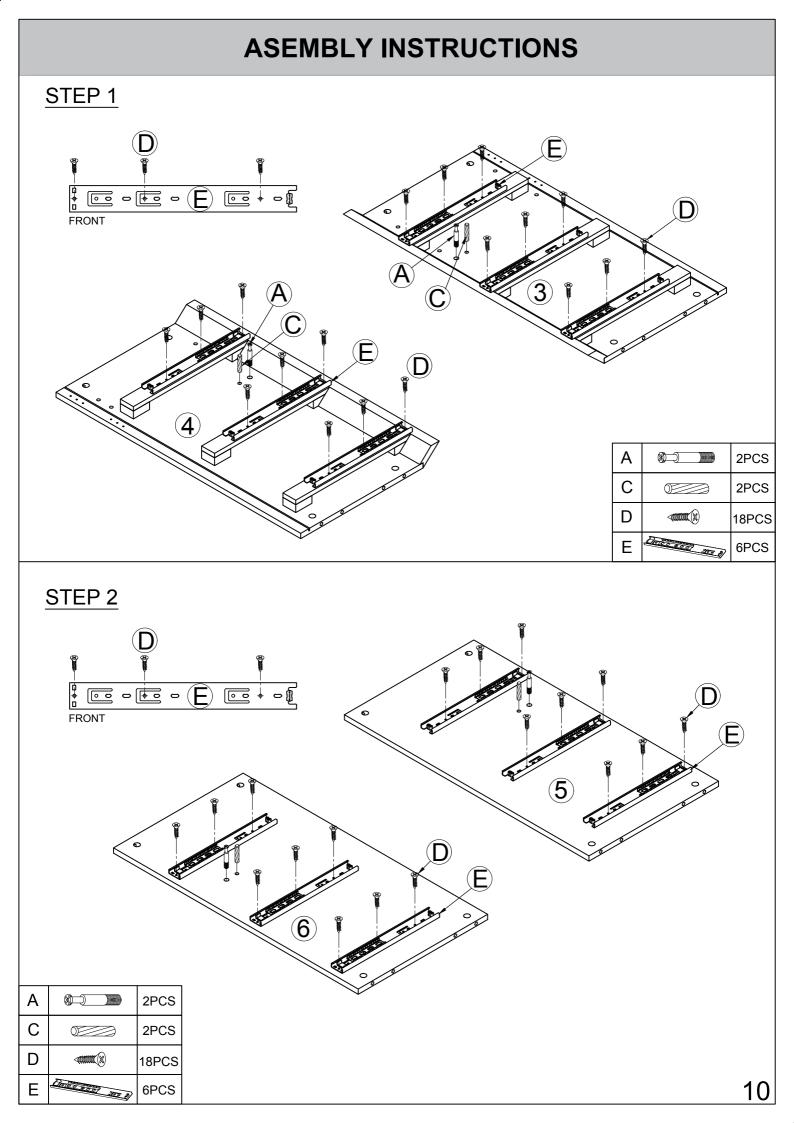


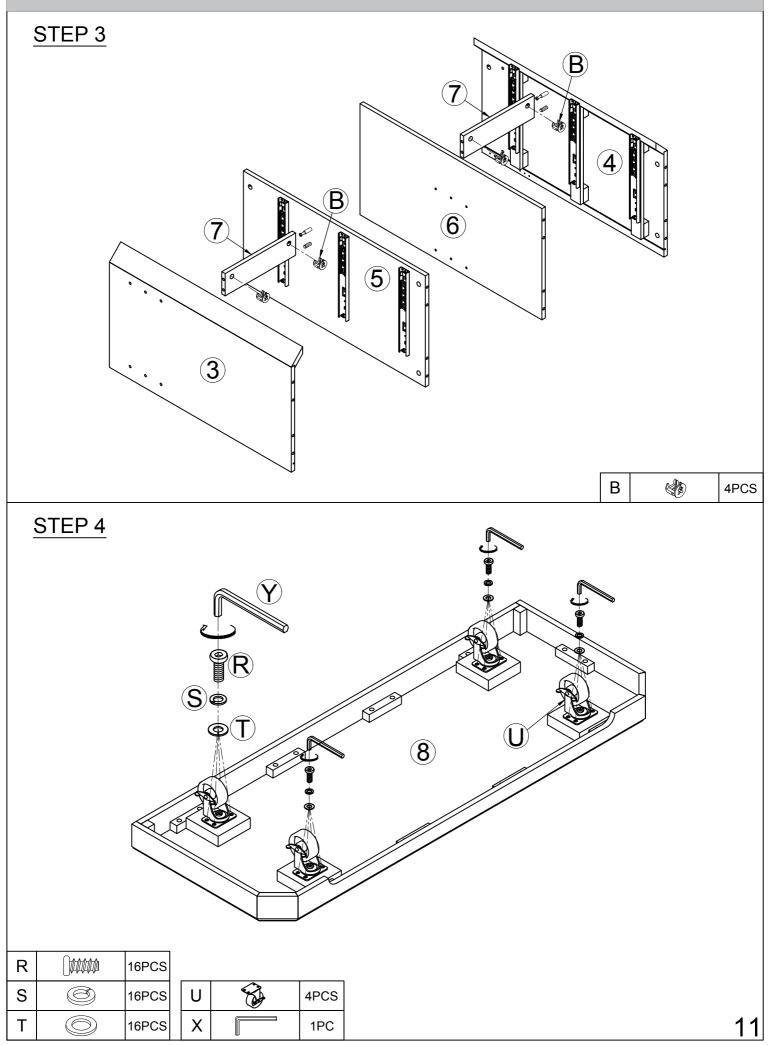

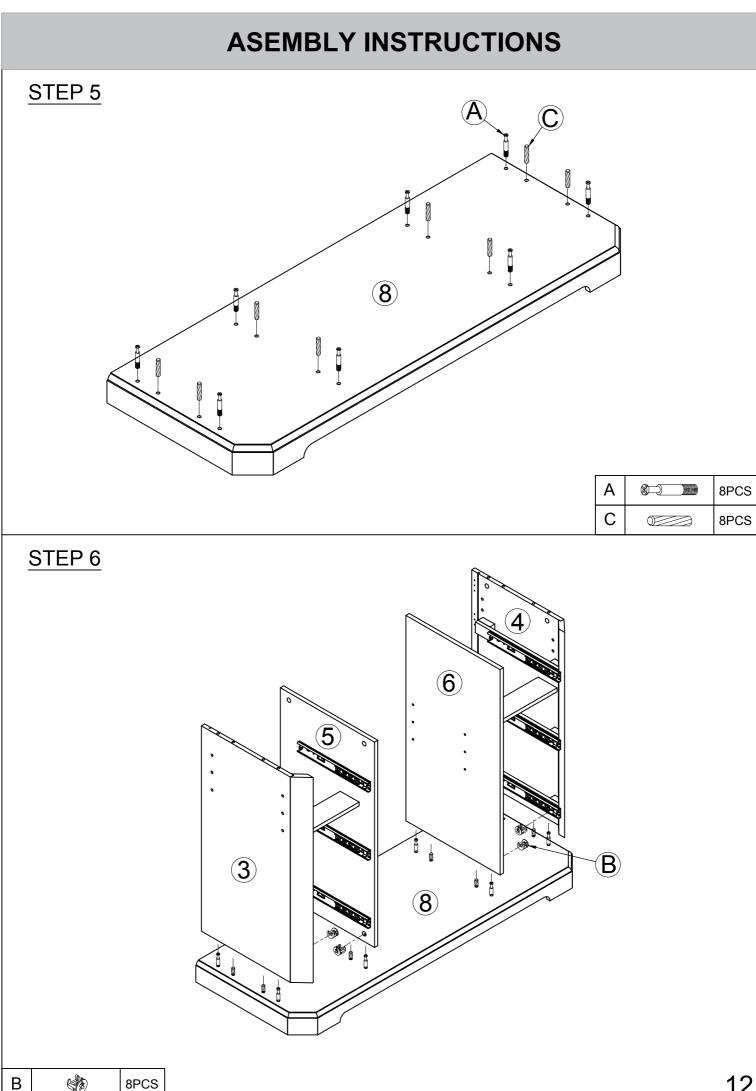



STEP 7

Ρ

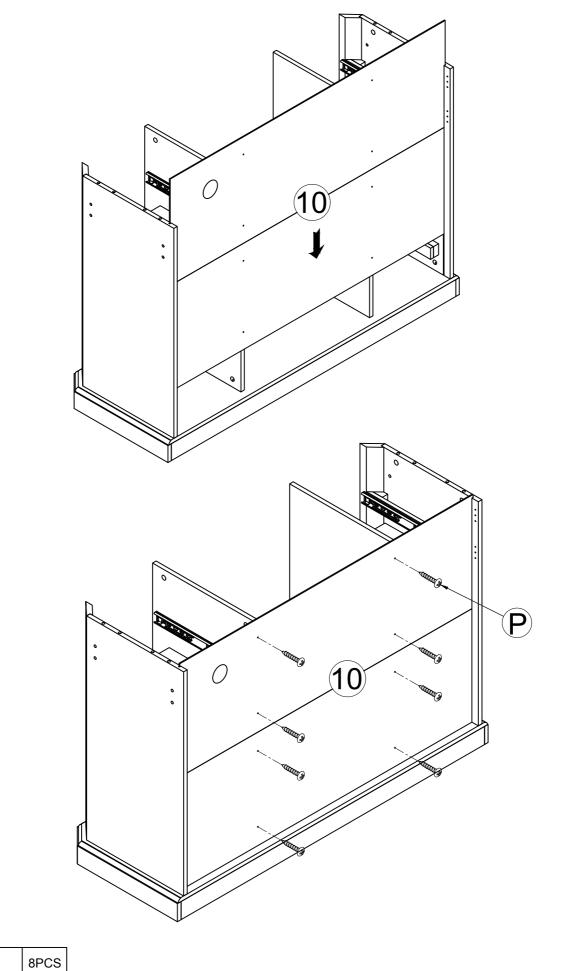


13

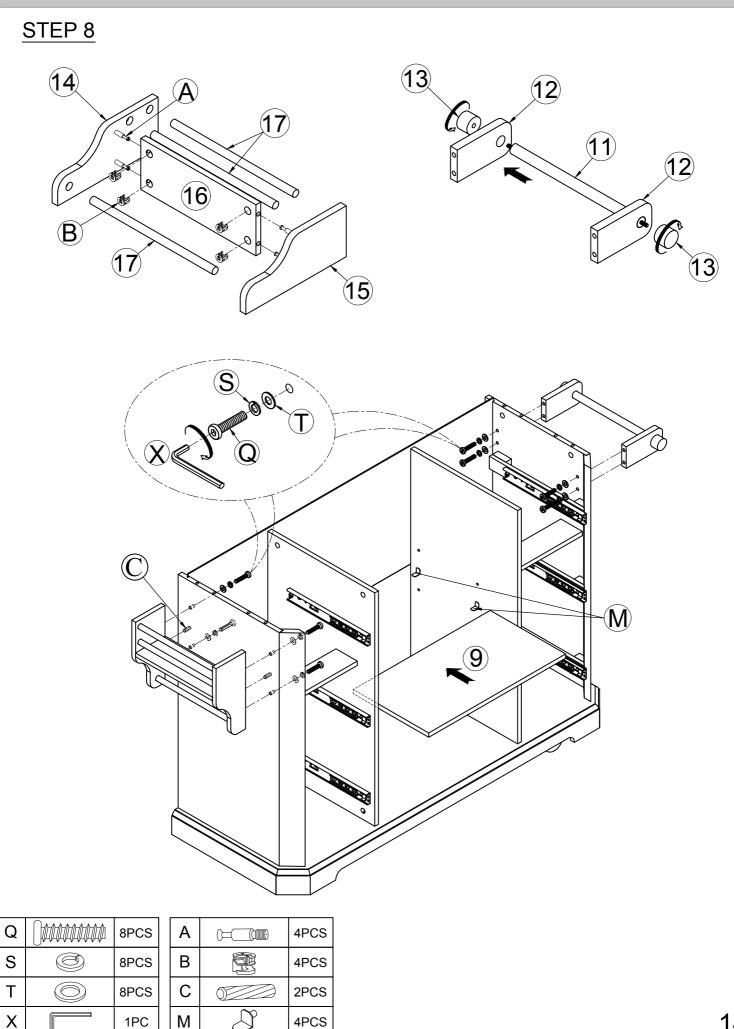


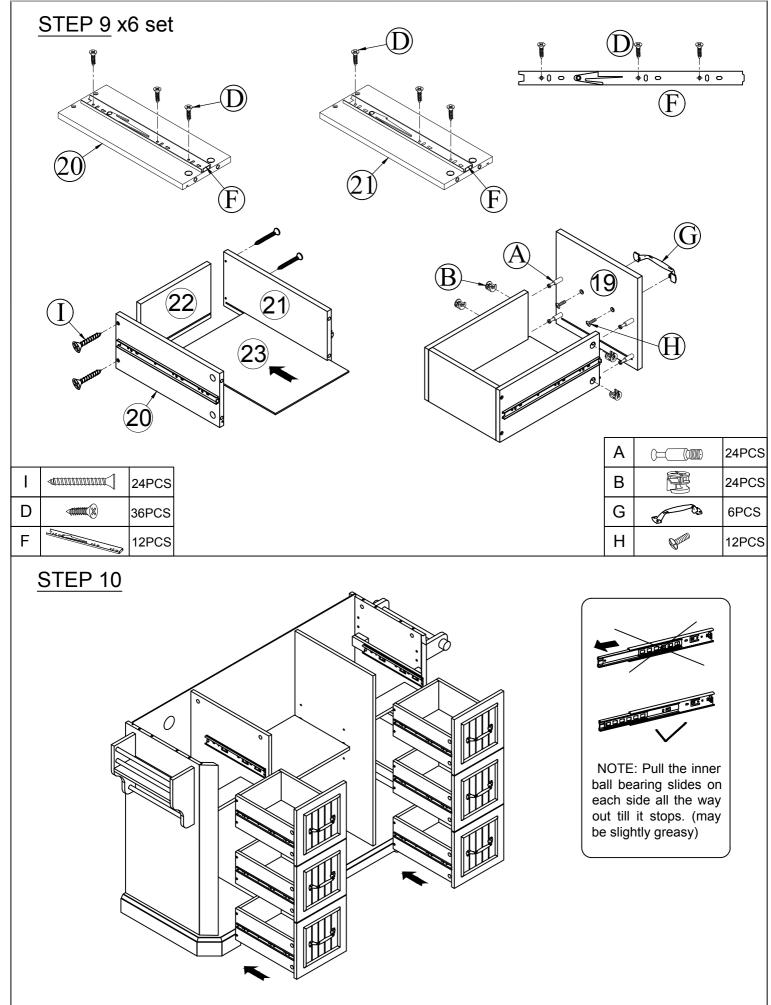





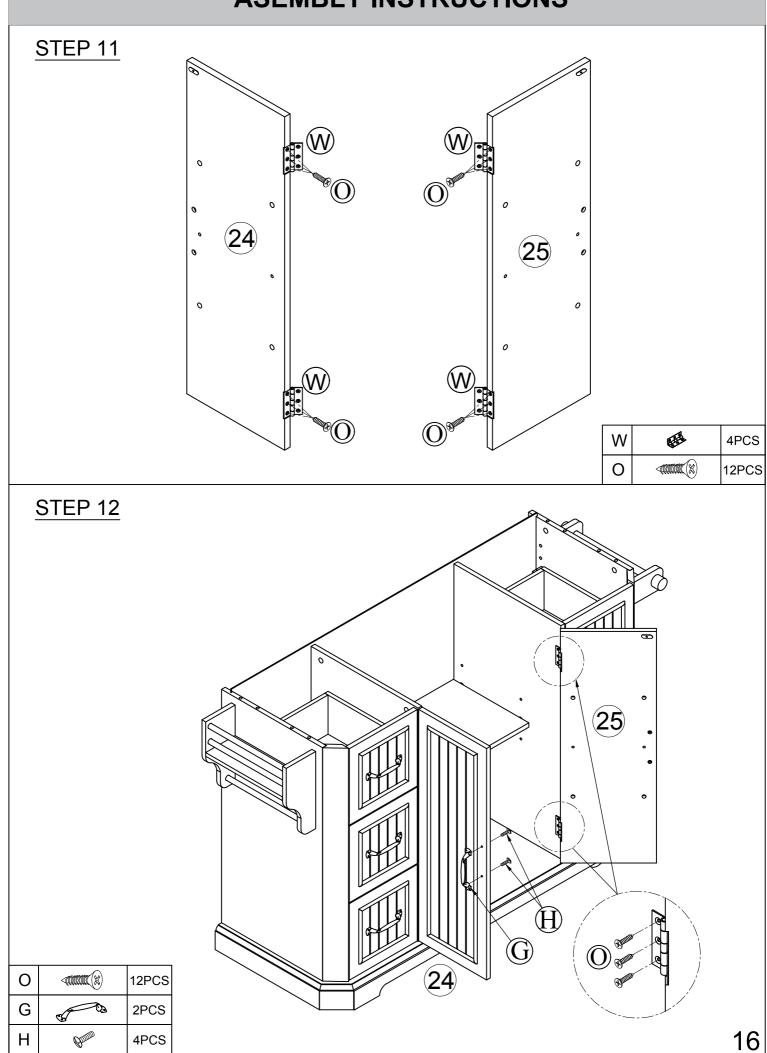


ASEMBLY INSTRUCTIONS STEP 13 x2set 26 29 A ø 27 (L Ø B 28 А 8PCS В 8PCS 0 8PCS L **STEP 14** 0 B 0 C A L 5 А 8PCS В 8PCS 17 L 0 4PCS

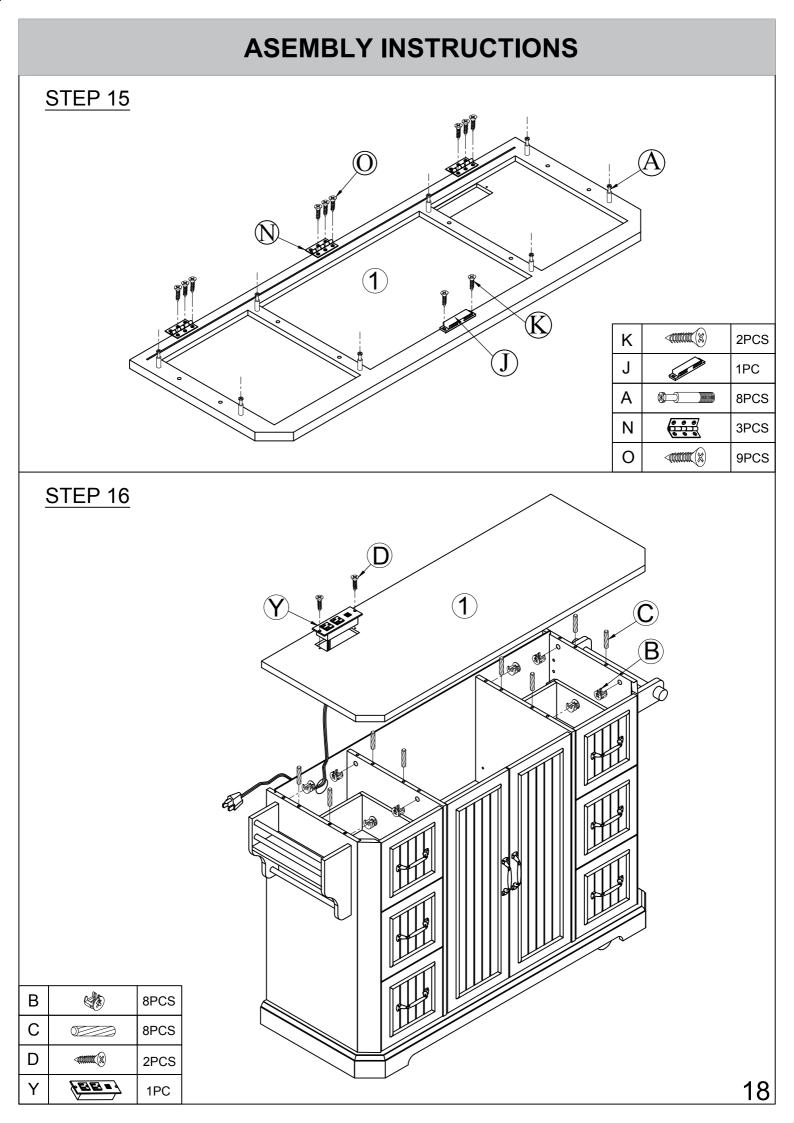

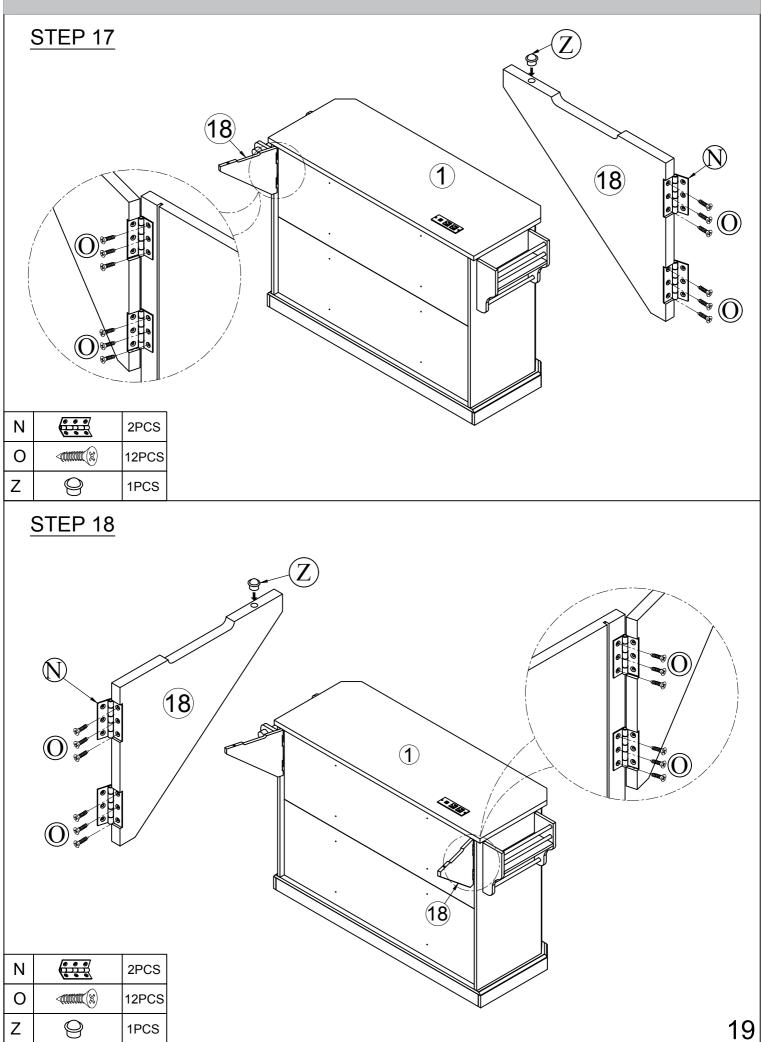

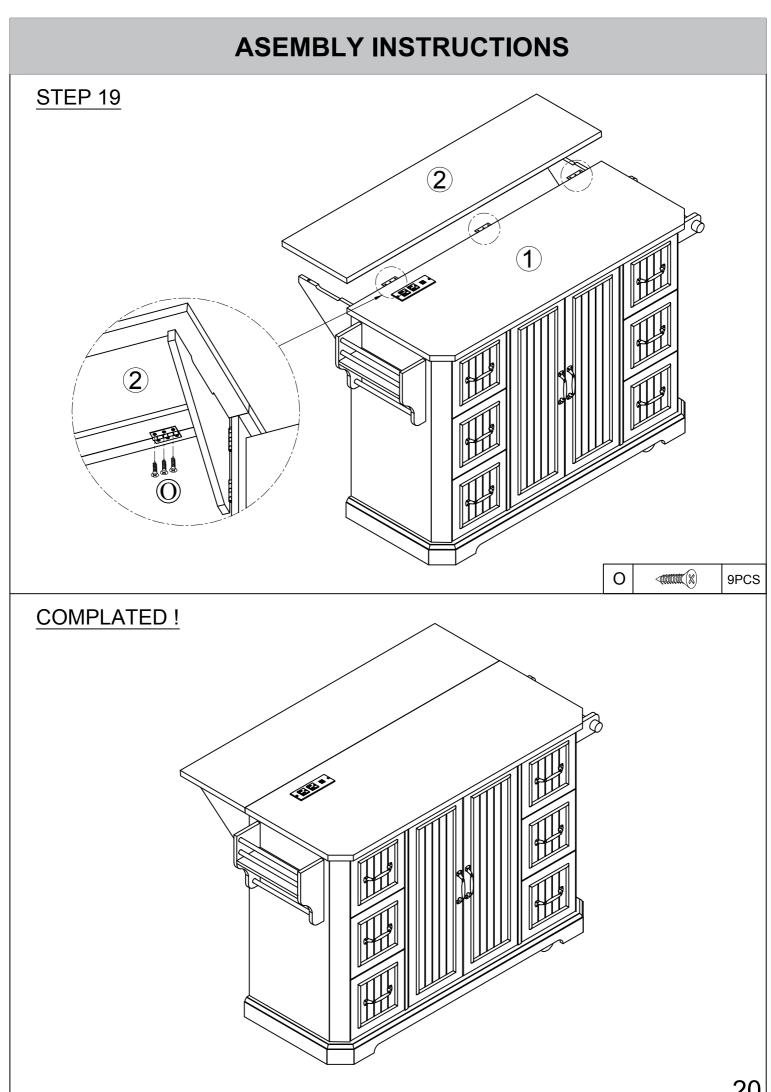

HINGE ADJUSTMENTS

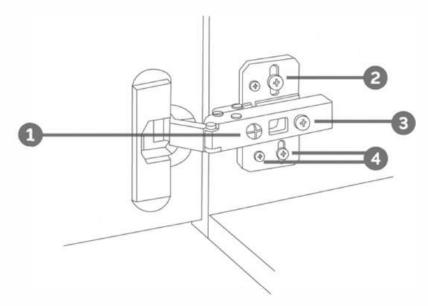


Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

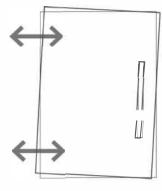

2 4 Height adjustment

While supporting the weight of the door, turn the screws **clockwise** to move the door up

anticlockwise to move the door down



If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw clockwise to decrease the gap between the door and the cabinet anticlockwise to increase the gap between the door and the cabinet

