 


AIR COOLER MANUAL

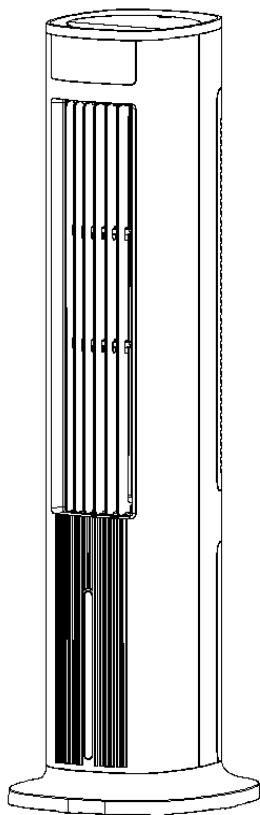

ITEM NO.: 6313-WHITE

MODEL NO.: FLG013E

FCC STATEMENT WARRANTY INFORMATION

FCC STATEMENT

POTENTIAL FOR RADIO/TELEVISION INTERFERENCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ⊙ Reorient or relocate the receiving antenna.
- ⊙ Increase the separation between the equipment and the receiver.
- ⊙ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ⊙ Consult the dealer or an experienced radio/TV technician for help.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notes regarding the operating manual

Symbols



Warning of electrical voltage

This symbol indicates dangers to the life and health of persons due to electrical voltage.



Warning

This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.



Caution

This signal word indicates a hazard with a low risk level which, if not avoided, can result in minor or moderate injury.

Note

This signal word indicates important information (e.g. material damage), but does not indicate hazards.



Info

Information marked with this symbol helps you to carry out your tasks quickly and safely.



Follow the manual

Information marked with this symbol indicates that the operating manual must be observed.

Safety

Read and save this manual before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use!

NOTE: FOR HOUSEHOLD USE ONLY. NOT INTENDED FOR COMMERCIAL USE.

TABLE OF CONTENTS



Warning

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and / or serious injury.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons or property, including the following:

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use this fan only as it is described in this manual.
- Do not use the device in potentially explosive rooms.
- Do not use the device in aggressive atmosphere.
- Be sure the fan is on a stable, even surface when operating to avoid overturning.
- Do not use fan without its base. The fan must operate standing upright.
- Let the device dry out after a wet clean. Do not operate it when wet.

- Do not use this fan outdoors or where there are bodies of water such as the bathroom or laundry room.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Do not use fan in windows. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has collect to avoid the potential of electrical hazard. Do not immerse unit, plug or cord in water or spray with liquids.
- Never insert any foreign objects such as fingers, pencils, etc. through the grille when fan is running.
- Disconnect fan from electrical outlet when moving from one location to another, when removing grilles or for cleaning.
- Do not cover the device during operation.
- Do not sit on the device.
- This appliance is not a toy! Keep away from children and animals.
- Do not leave the device unattended during operation
- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals).
- Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision. Do not allow cord to hang down from table or counter.
- Never use the device if electric cables or the power connection are damaged!
- The electrical connection must correspond to the specifications in chapter Technical data.
- Insert the mains plug into a properly secured mains socket.
- To disconnect, grip plug and pull form wall outlet. Never yank on cord.
- Do not run cord under carpeting. Do not cover with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.
- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner, contact a qualified electrician should this happen. NOTE: Repairs made by unqualified electricians will void this product's warranty. Defective power cables pose a serious health risk!
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical data chapter.
- Do not use fan near curtains, plants, window treatment, or where other objects can become caught in the blades.
- Make sure that the air inlet and outlet are not obstructed.
- Make sure that the suction side is kept free of dirt and loose objects.

- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Empty the water tank before transport and storage. Do not drink the water. Health hazard!
- Only fill the water tank with fresh drinking water, ice cubes made of fresh drinking water and / or suitable ice packs.
- Ice packs are not toys. Keep away from children and animals.
- Never open an ice pack. The liquid inside the ice packs can be harmful to health.
- Do not eat the ice that may form on the ice packs. Health hazard!
- Risk of fire. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.
- The appliance has a polarized plug(one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: There are no serviceable parts in this unit. Do not attempt to dissemble.

WARNING: To reduce risk of fire or electrical shock, do not use this fan with any solid-state speed control device.

Intended use

Only use the device for cooling the air in interior spaces while adhering to and following the technical data.

Intended use comprises cooling the air in:

- living spaces
- Museums
- warehouses and archives
- libraries
- call centres and computer rooms

Improper use

- Do not place the device on wet or flooded ground.
- Do not place any objects, e.g. clothing, on the device.
- Do not use the device outdoors.
- Any unauthorized modifications, alterations or structural changes to the device are forbidden.
- Any operation other than as described in this manual is prohibited.

Non-observance renders all claims for liability and guarantee null and void.

Personnel qualifications

People who use this device must:

- be aware of the dangers that occur when working with electric devices in damp areas.

Residual risks



Warning of electrical voltage

Work in the electrical components must only be carried out by an authorized specialist company!



Warning of electrical voltage

Before any work on the device, remove the mains plug from the mains socket!

Hold onto the mains plug while pulling the power cable out of the mains socket.



Warning

The liquid inside the ice packs can be harmful to health!

If the liquid was swallowed, immediately seek medical attention.

If the liquid came into contact with your eyes, rinse with water and immediately consult an ophthalmologist.



Warning

Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way!

Observe the personal qualifications!



Warning

The device is not a toy and does not belong in the hands of children.



Warning

Risk of suffocation!

Do not leave the packaging lying around. Children may use it as a dangerous toy.

Note

Do not operate the device without an inserted air filter!

Without the air filter, the inside of the device will be heavily contaminated. This could reduce the performance and result in damage to the device.

Behaviour in the event of an emergency

1. Switch off the device
2. In an emergency, disconnect the device from the mains feed-in: Hold onto the mains plug while pulling the power cable out of the mains socket.
3. Do not reconnect a defective device to the mains.

Information about the device

Description of the device

The air cooler lowers the room temperature to a comfortable degree by ventilating cooling.

The device is filled with cold water or optionally with ice cubes and /or ice packs in order to cool down the incoming warm air at the filter and to blow out the cold air thus generated via the fan.

Besides its cooling function, the device can also be used for air freshening: thanks to the dust-proof net and the honeycomb filter structure, the sucked-in air is filtered.

 
The discharge direction of the cooled air can be manually adjusted via the ventilation flaps as well as via the optionally selectable automatic swing mode.

The device can be operated via the control panel at the device or via the infrared remote control.

Moreover, using the timer function, the device can be switched off automatically with time delay.

The device is equipped with an overheating protection that switches off the air cooler in case of overheating.

Device Depiction

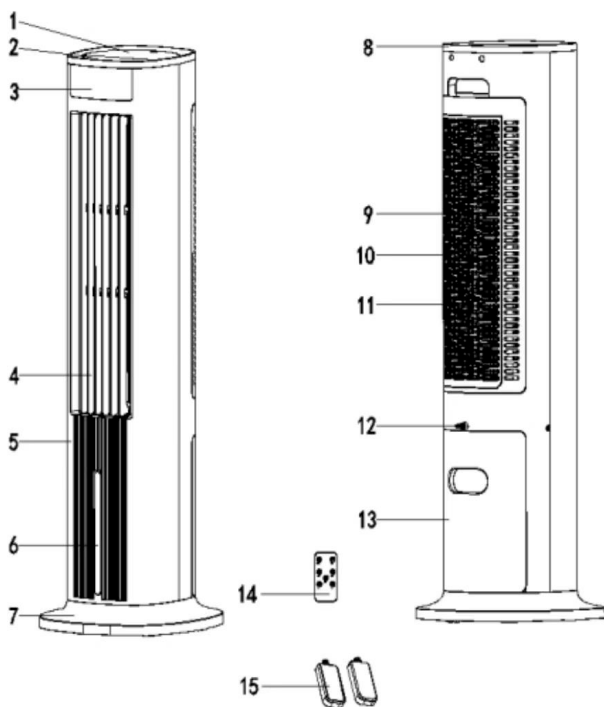

No.	Designation
1	upper tank cover
2	control panel
3	display panel
4	vertical swing leaves
5	front cover
6	water level window
7	pedestal
8	top cover
9	dust-proof net
10	honeycomb filter
11	honeycomb filter frame
12	water tank knob
13	bottom water tank
14	remote control
15	ice packs

Transport and storage

Note

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

Transport

To make the device easier to transport, it is fitted with wheels.

To make the device easier to transport, it is fitted with a carry handle.

Before transporting the device, observe the following:

- Switch the device off.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Do not use the power cable to drag the device.
- Only wheel the device on a level and smooth surface.

After transporting the device, observe the following:

- Set up the device in an upright position after transport.

Storage

Before storing the device, observe the following:

- Empty and clean the water tank prior to storage.
- Allow the honeycomb filter to dry prior to storage. Otherwise the device may distribute a musty smell after restart.

When the device is not being used, observe the following storage conditions:

- dry and protected from frost and heat
- in an upright position where it is protected from dust and direct sunlight
- with a cover to protect it from invasive dust if necessary
- Place no further devices or objects on top of the device to prevent it from being damaged.
- Remove batteries from the remote control.

Start-up

Do not use the air cooler near curtains or other inflammable places, the spacing is at least 0.5m.

Operation

- Avoid open doors and windows.

Instructions for use:

Installation method


Open the packing case and take out the cold fan, and put the cold fan on the horizontal ground; Check whether the parts in the packing box conform to the packing list in the instruction manual.


packing list

Name	quantity	unit
air cooler	1	Pc
Ice packs	2 big	Pcs
specification	1	Pc
remote control	1	Pc

Operating Instructions

  Control Panel

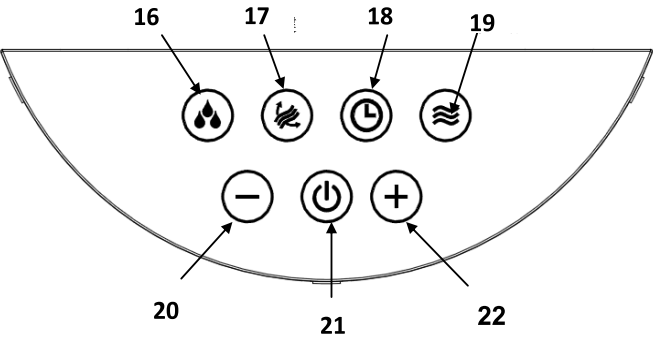

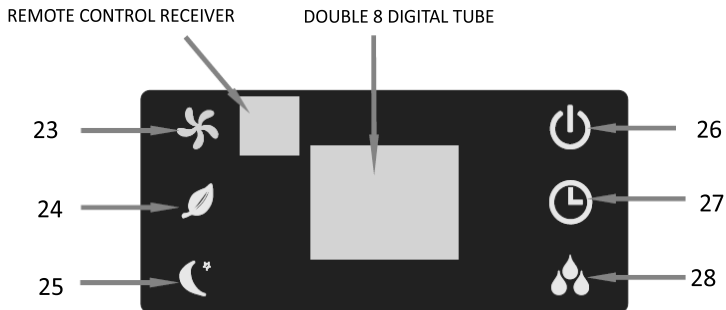

PANEL FUNCTION DIAGRAM

No.	Designation	Meaning
16	Cooling button	Switching the air cooling mode on or off
17	Oscillation button	Switching the swing function on or off
18	Timer button	Switching the timer function on or off 1h to 24h
19	Mode button	Selection button for normal nature and sleepmode
20	"-" BUTTON	Reduce the wind speed or timing adjustment
21	On/Off button	Switching the device on or off
22	"+" BUTTON	Improve the wind speed or timing adjustment
23	Mode LEDs: Normal wind mode	Indication of the selected operating mode: Normal wind mode / Natural wind mode/ sleep wind mode
24	Mode LEDs: Natural wind mode	
25	Mode LEDs: Sleep wind mode	
26	On/Off LED	Illuminated during operation
27	Timer LED	The digital screen displays the timing time
28	Cooling LED	Illuminated when air cooling mode is activated Less than the minimum water level indicator light will flash

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**.

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC

28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826